



F Commands

This chapter describes the Cisco NX-OS PIM commands that begin with F.

Review Draft -- Cisco Confidential

feature pim

To enable Protocol Independent Multicast (PIM), use the **feature pim** command. To disable PIM, use the **no** form of this command.

feature pim

no feature pim

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	Disabled
------------------------	----------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modified
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	You must enable the PIM feature before you can configure PIM. This command requires the LAN Base Services license.
-------------------------	---

Examples	This example shows how to enable a PIM configuration:
-----------------	---

```
switch(config)# feature pim
switch(config)#
```

Related Commands	Command	Description
	show running-configuration pim	Displays the PIM running configuration information.
	show feature	Displays the status of features on a switch.
	ip pim sparse-mode	Enables IPv4 PIM sparse mode on an interface.
