

# **E Commands**

This chapter describes the Cisco NX-OS security commands that begin with E.

# enable

To enable a user to move to a higher privilege level after being prompted for a secret password, use the **enable** command.

enable level

# **Syntax Description**

level Privilege level to which the user must log in. The only available leve	l is 15.
--	----------

### **Command Default**

Privilege level 15

### **Command Modes**

EXEC configuration mode

# **Command History**

Release	Modification
6.0(2)N1(1)	This command was introduced.

# **Usage Guidelines**

To use this command, you must enable the cumulative privilege of roles for command authorization on TACACS+ servers using the **feature privilege** command.

### **Examples**

This example shows how to enable the user to move to a higher privilege level after being prompted for a secret password:

switch# enable 15
switch#

### **Related Commands**

Command	Description
enable secret	Enables a secret password for a specific privilege level.
feature privilege	Enables the cumulative privilege of roles for command authorization on TACACS+ servers.
show privilege	Displays the current privilege level, username, and status of cumulative privilege support.
username	Enables a user to use privilege levels for authorization.

# enable secret

To enable a secret password for a specific privilege level, use the **enable secret** command. To disable the password, use the **no** form of this command.

enable secret [0 | 5] password [all | priv-lvl priv-lvl]

no enable secret [0 | 5] password [all | priv-lvl priv-lvl]

### **Syntax Description**

0	(Optional) Specifies that the password is in clear text.
5	(Optional) Specifies that the password is in encrypted format.
password	Password for user privilege escalation. It contains up to 64 alphanumeric, case-sensitive characters.
all	(Optional) Adds or removes all privilege level secrets.
priv-lvl priv-lvl	(Optional) Specifies the privilege level to which the secret belongs. The range is from 1 to 15.

# **Command Default**

Disabled

#### **Command Modes**

Global configuration mode

# **Command History**

Release	Modification
6.0(2)N1(1)	This command was introduced.

# **Usage Guidelines**

To use this command, you must enable the cumulative privilege of roles for command authorization on TACACS+ servers using the **feature privilege** command.

### **Examples**

This example shows how to enable a secret password for a specific privilege level:

```
switch# configure terminal
switch(config)# feature privilege
switch(config)# enable secret 5 def456 priv-lvl 15
switch(config)# username user2 priv-lvl 15
switch(config)#
```

#### **Related Commands**

Command	Description
enable	Enables the user to move to a higher privilege level after being prompted for a secret password.
feature privilege	Enables the cumulative privilege of roles for command authorization on TACACS+ servers.

Command	Description
show privilege	Displays the current privilege level, username, and status of cumulative privilege support.
username	Enables a user to use privilege levels for authorization.