



H Commands

This chapter describes the Cisco NX-OS security commands that begin with H.

hardware access-list lou resource threshold

To configure the threshold value for logical operation units (LOUs), use the **hardware access-list lou resource threshold** command. To remove the threshold value and revert to the default value, use the no form of this command.

hardware access-list lou resource threshold *value*

no hardware access-list lou resource threshold *value*

Syntax Description

<i>value</i>	Threshold value. Valid values are from 1 to 32. The default is 5.
--------------	---

Command Default

Threshold value of 5.

Command Modes

Global configuration mode

Command History

Release	Modification
6.0(2)N1(1)	This command was introduced.

Usage Guidelines

None.

Examples

The following example shows how to configure the maximum threshold value of 15 for LOUs.

```
switch# configuration terminal
switch(config)# hardware access-list lou resource threshold 15
```