



Preface

This preface describes the audience, organization, and conventions of the *Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference*. It also provides information on how to obtain related documentation.

This preface includes the following sections:

- [Audience, page xix](#)
- [This publication is for experienced users who configure and maintain Cisco NX-OS devices., page xix](#)
- [Organization, page xix](#)
- [Document Conventions, page xx](#)
- [Related Documentation, page xxi](#)
- [Obtaining Documentation and Submitting a Service Request, page xxi](#)

Audience

This publication is for experienced users who configure and maintain Cisco NX-OS devices.

Organization

This document is organized as follows:

Chapter Title	Description
BGP Commands	Describes the Cisco NX-OS Border Gateway Protocol (BGP) commands.
EIGRP Commands	Describes the Cisco NX-OS Enhanced Interior Gateway Routing Protocol (EIGRP) commands.
HSRP Commands	Describes the Cisco NX-OS Hot Standby Router Protocol (HSRP) commands.
Layer 3 Interfaces Commands	Describes the Cisco NX-OS Layer 3 interfaces commands.
Object Tracking Commands	Describes the Cisco NX-OS object tracking commands.
OSPF Commands	Describes the Cisco NX-OS Open Shortest Path First (OSPF) commands.

Chapter Title	Description
PBR Commands	Describes the Cisco NX-OS Policy Based Routing (PBR) commands.
RIP Commands	Describes the Cisco NX-OS Routing Information Protocol (RIP) commands.
Unicast RIB and FIB Commands	Describes the Cisco NX-OS unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) commands.
VRRP Commands	Describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

<code>screen font</code>	Terminal sessions and information that the switch displays are in screen font.
<code>boldface screen font</code>	Information you must enter is in boldface screen font.
<i><code>italic screen font</code></i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means reader *be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation

Documentation for the Cisco Nexus 6000 Series Switch is available at the following URL:

http://www.cisco.com/en/US/products/ps12806/tsd_products_support_series_home.html

The documentation set is divided into the following categories:

Release Notes

The release notes are available at the following URL:

http://www.cisco.com/en/US/products/ps12806/prod_release_notes_list.html

Installation and Upgrade Guides

The installation and upgrade guides are available at the following URL:

http://www.cisco.com/en/US/products/ps12806/prod_installation_guides_list.html

Command References

The command references are available at the following URL:

http://www.cisco.com/en/US/products/ps12806/prod_command_reference_list.html

Technical References

The technical references are available at the following URL:

http://www.cisco.com/en/US/products/ps12806/prod_technical_reference_list.html

Configuration Guides

The configuration guides are available at the following URL:

http://www.cisco.com/en/US/products/ps12806/products_installation_and_configuration_guides_list.html

Error and System Messages

The system message reference guide is available at the following URL:

http://www.cisco.com/en/US/products/ps12806/products_system_message_guides_list.html

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to nexus6k-docfeedback@cisco.com. We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at: <http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

