

## **C** Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with C.

## clear ip interface statistics

To clear IP interface statistics, use the clear ip interface statistics command.

clear ip interface statistics

Syntax Description	This command has 1	no arguments or keywords.
Command Default	None	
Command Modes	Any command mode	e
Command History	<b>Release</b> 6.0(2)N1(1)	Modification This command was introduced.
Examples	This example shows how to clear the IP interface statistics: switch# clear ip interface statistics	

Related Commands	Command	Description
	show ip interface	Displays IP interface information.

## clear vrrp

To clear the Virtual Router Redundancy Protocol (VRRP) statistics, use the clear vrrp command.

clear vrrp vr id interface {ethernet slot/port | port-channel number[.sub\_if\_number]}

Syntax Description	vr id	Clears VRRP statistics in a VRRP group on an interface. The range is from 1 to 255.
	interface	Specifies an Ethernet or EthreChannel interface or a subinterface.
	ethernet slot/port	Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128.
	port-channel number	Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096.
	.sub_if_number	(Optional) Subinterface number. The range is from 1 to 4093.
Command Default	None	
Command Modes	Any command mode	
	Release	Modification
	-	Modification This command was introduced.
Command History	<b>Release</b> 6.0(2)N1(1)	
Command History Examples	Release 6.0(2)N1(1) This example shows how	This command was introduced.
Command History	Release         6.0(2)N1(1)         This example shows how         switch(config)# clear	This command was introduced.

OL-30910-01