

F Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with F.

feature vrrp

To enable the Virtual Router Redundancy Protocol (VRRP), use the **feature vrrp** command. To disable VRRP, use the **no** form of this command.

feature vrrp

no feature vrrp

- Syntax Description This command has no arguments or keywords.
- Command Default Disabled

Command Modes Global configuration mode

 Release
 Modified

 6.0(2)N1(1)
 This command was introduced.

Usage Guidelines You must ena

You must enable the VRRP feature before you can configure VRRP. This command does not require a license.

٩, Note

Make sure the LAN Base Services license is installed on the switch to enable Layer 3 interfaces.

Examples

This example shows how to enable the VRRP feature:

switch# configure terminal
switch(config)# feature vrrp
switch(config)#

This example shows how to disable the VRRP feature:

switch# configure terminal
switch(config)# no feature vrrp
switch(config)#

Related Commands

s Command	Description
clear vrrp	Clears all the software counters for the specified virtual router.
show feature	Displays the status of features on a switch.
show vrrp	Displays VRRP configuration information.
vrrp	Configures a VRRP group on an interface.