

C Commands

This chapter describes the Cisco NX-OS unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) commands that begin with C.

Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference

clear forwarding route

To clear forwarding information, use the clear forwarding route command.

clear forwarding {ip | ipv4} route [* | prefix] [vrf vrf-name]

Syntax Description	ip	Clears an IPv4 route.
	ipv4	Clears an IPv4 route.
	*	(Optional) Clears all routes.
Command Default	prefix	(Optional) IPv4 prefix. The IPv4 format is x.x.x.x/length.
	vrf vrf-name	(Optional) Specifies a particular virtual routing and forwarding (VRF) instance. The VRF name can be any case-sensitive, alphanumeric string up to 32 characters.
	None	
Command Modes	Any command mode	
Command History	Release	Modification

clear forwarding inconsistency

To clear the Layer 3 inconsistency checker for the Forwarding Information Base (FIB), use the **clear forwarding inconsistency** command.

clear forwarding inconsistency

Syntax Description	This command has no arguments or keywords.		
Command Default	None		
Command Modes	Any command mode		
Command History	Release	Modification	
	6.0(2)N1(1)	This command was introduced.	
Examples	This example shows how to clear the Layer 3 inconsistency checker for all modules: switch# clear forwarding inconsistency module all		
Related Commands	Command	Description	
	show forwarding inconsistency	Displays information about the FIB inconsistencies.	
	test forwarding inconsistency	Triggers the forwarding inconsistency checker.	

clear ip adjacency statistics

To clear adjacency statistics, use the clear ip adjacency statistics command.

clear ip adjacency statistics

Syntax Description	This command has no arguments or keywords.	
Command Default	None	
Command Modes	Any command mod	e
Command History	Release 6.0(2)N1(1)	Modification This command was introduced.
Examples	This example shows how to clear the adjacency statistics: switch# clear ip adjacency statistics	
Related Commands	Command	Description

Related Commands	Command	Description
	show ip adjacency	Displays adjacency information.

Review Draft -- Cisco Confidential

clear ip route

To clear individual routes from the unicast Routing Information Base (RIB), use the **clear ip route** command.

clear ip route [* | addr | prefix]] [vrf vrf-name]

Syntax Description	*	(Optional) Clears all routes.
	addr	(Optional) Clears this route. The format is x.x.x.x.
	prefix	(Optional) Clears this prefix. The format is x.x.x.x/length.
	vrf vrf-name	(Optional) Specifies the virtual routing and forwarding (VRF) context name. The name can be any case-sensitive, alphanumeric string up to 32 characters.
Command Default	None	
Command Modes	Any command i	mode
Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.
Usage Guidelines	Use the clear ip	route command to clear individual routes from the route table.
<u> </u>	The * keyword	is severely disruptive to routing.
Examples	-	nows how to clear the individual route: # clear ip route 192.0.2.1
	Switch (coning)	
Related Commands	Command	Description
	show ip route	Displays entries in the route table.

clear sockets statistics

To clear the socket statistics, use the clear sockets statistics command.

clear sockets statistics [all | raw | tcp | udp]

l (Optiona	
w (Optiona	 Clears all the socket statistics. Clears the socket statistic for the raw IPv4 protocols.
· 1	1) Clears the socket statistic for the TCP IPv4 protocols.
dp (Optiona	l) Clears the socket statistic for the UDP IPv4 protocols.
one	
ny command mode	
elease	Modification
0(2)N1(1)	This command was introduced.
nis example shows how to	o clear the TCP socket statistics:
switch# clear sockets statistics tcp	
item cital bockets b	
ommand	Description
now sockets client	Displays information about the socket client information.
now sockets connection	Displays information about the socket connection.
now sockets statistics	Displays information about the socket statistics.
	dp (Optional one