



Show Commands

This chapter describes the Cisco NX-OS unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) **show** commands.

Review Draft -- Cisco Confidential

show forwarding

To display forwarding information, use the **show forwarding** command.

```
show forwarding [ip | ipv4] {adjacency | interfaces | route | trace [clear] | table id | pss | route}
[ethernet | port-channel | vlan slot] [vrf vrf-name]
```

Syntax Description	
ip	(Optional) Displays the IPv4 forwarding information.
ipv4	(Optional) Displays the IPv4 forwarding information.
adjacency	Displays the adjacency information.
interfaces	Displays the forwarding information for interfaces on a module.
route	Displays the forwarding information for routes on a module.
trace	Displays the forwarding trace buffer on a module.
clear	(Optional) Clears the forwarding trace buffer on a module.
table id	Displays the forwarding information for a route table. The <i>id</i> range is from 0 to 2147483647.
pss	Displays route information from persistent storage.
route	Displays route information from the IP routing table.
ethernet slot	(Optional) Displays information for the ethernet. The slot range depends on the hardware platform.
port-channel slot	(Optional) Displays information for the port-channel. The slot range depends on the hardware platform.
vlan	(Optional) Displays information for the vlan. The slot range depends on the hardware platform.
vrf vrf-name	(Optional) Specifies the name of the virtual routing and forwarding (VRF) instance. The <i>vrf-name</i> argument can be specified as any case-sensitive, alphanumeric string up to 32 characters. The strings “default” and “all” are reserved VRF names.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the show forwarding command on the supervisor to view forwarding information on a module. Optionally, you can use the attach module command to attach to a module and use the show forwarding command on the module.
-------------------------	---

Review Draft -- Cisco Confidential

Examples

This example shows how to display forwarding information for module 2:

```
switch# show forwarding route ethernet 2
```

Related Commands

Command	Description
show ip fib	Displays information about the FIB.

Review Draft -- Cisco Confidential

show forwarding distribution

To display forwarding distribution information, use the **show forwarding distribution** command.

show forwarding distribution [**clients** | **fib-state**]

Syntax Description	clients	(Optional) Displays the forwarding distribution information for unicast clients.
	fib-state	(Optional) Displays the forwarding distribution state for unicast Forwarding Information Base (FIB).

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples	This example shows how to display the forwarding information for unicast clients: switch# show forwarding distribution clients
-----------------	--

Related Commands	Command	Description
	show ip fib distribution	Displays distribution information about the FIB.

Review Draft -- Cisco Confidential

show forwarding distribution multicast

To display information about multicast Forwarding Information Base (FIB) distribution messages, use the **show forwarding distribution multicast** command.

show forwarding distribution multicast [messages]

Syntax Description	messages (Optional) Displays message information.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	This example shows how to display information about multicast distribution messages:
-----------------	--

```
switch(config)# show forwarding distribution multicast
Number of Multicast FIB Processes Active: 1
Slot      FIB State
  1        ACTIVE
switch#
```

Review Draft -- Cisco Confidential

show forwarding distribution multicast client

To display information about the multicast Forwarding Information Base (FIB) distribution client, use the **show forwarding distribution multicast client** command.

show forwarding distribution multicast client

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

Release	Modification
6.0(2)N1(1)	This command was introduced.

Usage Guidelines This command does not require a license.

Examples This example shows how to display information about the multicast FIB distribution client:

```
switch# show forwarding distribution multicast client
Client-name  Client-id  Shared Memory Name
mrib         1         mrib-mfdm
switch#
```

Review Draft -- Cisco Confidential

show forwarding distribution multicast outgoing-interface-list

To display information about the multicast Forwarding Information Base (FIB) outgoing interface (OIF) list, use the **show forwarding distribution multicast outgoing-interface-list** command.

show forwarding distribution multicast outgoing-interface-list {L2 | L3} [*index*]

Syntax Description	L2	Specifies the Layer 2 OIF list.
	L3	Specifies the Layer 3 OIF list.
	<i>index</i>	(Optional) OIF list index.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	<p>This example shows how to display information about the multicast OIF list for Layer 3:</p> <pre>switch# show forwarding distribution multicast outgoing-interface-list L3</pre>
-----------------	---

Review Draft -- Cisco Confidential

show forwarding distribution multicast route

To display information about the multicast Forwarding Information Base (FIB) distribution routes, use the **show forwarding distribution multicast route** command.

```
show forwarding distribution [ip | ipv4] multicast route [table id | vrf vrf_name] [[group
{ group-addr [mask] | group-prefix}] [source { source-addr [source-mask] | source-prefix}] |
summary]
```

Syntax Description	
ip	(Optional) Specifies IPV4 information.
ipv4	(Optional) Specifies IPV4 information.
table <i>id</i>	(Optional) Specifies the multicast routing table ID. The range is from 0 to 2147483647.
vrf <i>vrf_name</i>	(Optional) Specifies a virtual routing and forwarding (VRF) name. The name can be a maximum of 32 alphanumeric characters.
group	(Optional) Specifies an IPv4 multicast group.
<i>group-addr</i>	IPv4 multicast group address.
<i>mask</i>	(Optional) Mask for the group address.
<i>group-prefix</i>	(Optional) IPv4 multicast group prefix.
source	(Optional) Specifies an IPv4 multicast source.
<i>source-addr</i>	IPv4 source address.
<i>source-mask</i>	(Optional) Mask for the group address.
<i>source-prefix</i>	(Optional) IPv4 multicast source prefix.
summary	(Optional) Displays the route counts.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	<p>This example shows how to display information about all the multicast FIB distribution routes:</p> <pre>switch(config)# show forwarding distribution multicast route IPv4 Multicast Routing Table for table-id: 1 Total number of groups: 5 Legend: C = Control Route</pre>
-----------------	---

Review Draft -- Cisco Confidential

D = Drop Route
G = Local Group (directly connected receivers)
O = Drop on RPF Fail
P = Punt to supervisor
d = Decap Route

```
(*, 224.0.0.0/4), RPF Interface: NULL, flags: D
Received Packets: 0 Bytes: 0
Number of Outgoing Interfaces: 0
Null Outgoing Interface List
```

```
(*, 224.0.0.0/24), RPF Interface: NULL, flags: CP
Received Packets: 0 Bytes: 0
Number of Outgoing Interfaces: 0
Null Outgoing Interface List
```

```
(*, 224.0.1.39/32), RPF Interface: NULL, flags: CP
Received Packets: 0 Bytes: 0
Number of Outgoing Interfaces: 0
Null Outgoing Interface List
```

```
(*, 224.0.1.40/32), RPF Interface: NULL, flags: CP
Received Packets: 0 Bytes: 0
Number of Outgoing Interfaces: 0
Null Outgoing Interface List
```

```
(*, 232.0.0.0/8), RPF Interface: NULL, flags: D
Received Packets: 0 Bytes: 0
Number of Outgoing Interfaces: 0
Null Outgoing Interface List
```

switch#

Review Draft -- Cisco Confidential

show forwarding inconsistency

To display the results of the forwarding inconsistency checker, use the **show forwarding inconsistency** command.

show forwarding inconsistency [**ip** | **ipv4**] [**unicast**] **module** *slot* [**vrf** *vrf-name*]

Syntax Description	ip	(Optional) Displays the IPv4 forwarding inconsistency information.
	ipv4	(Optional) Displays the IPv4 forwarding inconsistency information.
	unicast	(Optional) Displays the forwarding inconsistency information for unicast routes
	module <i>slot</i>	Displays inconsistency information for the module. The slot range depends on the hardware platform.
	vrf <i>vrf-name</i>	(Optional) Displays inconsistency information for the virtual routing and forwarding (VRF) instance. The <i>vrf-name</i> argument can be specified as any case-sensitive, alphanumeric string up to 32 characters. The strings “default” and “all” are reserved VRF names.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the show forwarding inconsistency command to display the results of the test forwarding inconsistency command.
-------------------------	--

Examples	<p>This example shows how to display the forwarding inconsistency information for module 2:</p> <pre>switch# show forwarding inconsistency module 2</pre>
-----------------	---

Related Commands	Command	Description
	clear forwarding inconsistency	Clears the forwarding inconsistency checker.
	test forwarding inconsistency	Triggers the forwarding inconsistency checker.

Review Draft -- Cisco Confidential

show forwarding multicast outgoing-interface-list

To display information about the multicast Forwarding Information Base (FIB) outgoing interface (OIF) list, use the **show forwarding multicast outgoing-interface-list** command.

show forwarding multicast outgoing-interface-list [*index*]

Syntax Description	<i>index</i> (Optional) OIF list index. The OIF list index is from 1 to 65535.
--------------------	--

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
------------------	--

Examples	This example shows how to display information about the multicast FIB OIF list:
----------	---

```
switch# show forwarding multicast outgoing-interface-list
```

```
    Outgoing Interface List Index: 1
    Reference Count: 1
    Ethernet1/5
switch#
```

Related Commands	Command	Description
	clear ip igmp interface statistics	Clears the IGMP statistics for an interface.
	ip igmp static-oif	Binds a multicast group to the outgoing interface (OIF).

Review Draft -- Cisco Confidential

show forwarding multicast route

To display information about the IPv4 Forwarding Information Base (FIB) multicast routes, use the **show forwarding multicast route** command.

```
show forwarding [vrf {vrf-name | all}] [ip | ipv4] multicast route {[group {group-addr [group-mask] | group-prefix} | source {source-addr [source-mask] | source-prefix} | module num | vrf {vrf-name | all}} | summary [vrf {vrf-name | all}}]
```

Syntax Description		
vrf	(Optional) Displays information for a specified virtual routing and forwarding (VRF) instance.	
<i>vrf-name</i>	VRF name. The name can be a maximum of 32 alphanumeric characters and is case sensitive.	
all	Displays information for all VRFs.	
ip	(Optional) Specifies IPv4.	
ipv4	(Optional) Specifies IPv4.	
group	(Optional) Specifies an IPv4 multicast group address.	
<i>group-addr</i>	IPv4 multicast group address.	
<i>group-mask</i>	(Optional) IPv4 multicast group address mask.	
<i>group-prefix</i>	(Optional) IPv4 multicast group prefix.	
source	(Optional) Specifies an IPv4 multicast source address.	
<i>source-addr</i>	IPv4 multicast source address.	
<i>source-mask</i>	IPv4 multicast source address mask.	
<i>source-prefix</i>	IPv4 multicast source prefix.	
summary	Displays route counts.	

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	This example shows how to display information about the IPv4 multicast FIB routes:
-----------------	--

```
switch# show forwarding multicast route
```

```
IPv4 Multicast Routing table table-id:1
Total number of groups: 1
```

Review Draft -- Cisco Confidential

Legend:

C = Control Route
D = Drop Route
G = Local Group (directly connected receivers)
O = Drop on RPF failure
P = Punt to Supervisor
W = Wildcard
d = OTV Decap route

```
(*, 230.0.0.0/32), RPF Interface: NULL, flags: DG
Received Packets: 0 Bytes: 0
Number of Outgoing Interfaces: 1
Outgoing Interface List Index: 1
Ethernet1/5 Outgoing Packets:0 Bytes:0
```

switch#

This example shows how to display the summary information about the IPv4 multicast FIB routes:

switch# **show forwarding multicast route summary**

```
IPv4 Multicast Routing Table for Context "default"
Total number of routes: 1
Total number of (*,G) routes: 1
Total number of (S,G) routes: 0
Total number of (*,G-prefix) routes: 0
Group count: 1
Prefix insert fail count: 9
switch#
```

Related Commands

Command	Description
clear ip mroute	Clears the multicast routing table.

Review Draft -- Cisco Confidential

show ip adjacency

To display adjacency information, use the **show ip adjacency** command.

show ip adjacency [*ip-addr* | *interface*] [**detail**] [**non-best**] [**statistics**] [**summary**]
 [**vrf** *vrf-name* | **all** | **default** | **management**]

Syntax Description

<i>ip-addr</i>	(Optional) IPv4 source address. The format is x.x.x.x.
<i>interface</i>	(Optional) Interface. Use ? to determine the supported interface types.
detail	(Optional) Displays detailed adjacency information.
non-best	(Optional) Displays both the best and nonbest adjacency information.
statistics	(Optional) Displays adjacency statistics.
summary	(Optional) Displays a summary of the adjacency information.
vrf <i>vrf-name</i>	(Optional) Specifies the virtual router context (VRF) name. The name can be any case-sensitive, alphanumeric string up to 32 characters.
all	(Optional) Displays adjacency statistics for all VRF entries.
default	(Optional) Displays adjacency statistics for the default VRF.
management	(Optional) Displays adjacency statistics for the management VRF.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
6.0(2)N1(1)	This command was introduced.

Usage Guidelines

The counter values in the output of **show ip adjacency {statistics | detail}** command are cleared after a supervisor module switchover.

Examples

This example shows how to display a summary of the adjacency information:

```
switch# show ip adjacency summary
```

```
IP Adjacency Table for VRF default
Total number of entries: 1
Address      MAC Address      Pref Source      Interface
2.2.2.100    000a.000a.000a   1    Static      Ethernet1/2
switch#
```

Review Draft -- Cisco Confidential**Related Commands**

Command	Description
show forwarding adjacency	Displays forwarding adjacency information.

Review Draft -- Cisco Confidential

show ip adjacency summary

To display the IP adjacency summary, use the **show ip adjacency summary** command.

show ip adjacency summary

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	None
-----------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	This example shows how to display the IP adjacency summary:
-----------------	---

```
switch# show ip adjacency summary
I
IP AM Table - Adjacency Summary

  Static   : 1
  Dynamic  : 0
  Others   : 0
  Total    : 1

switch#
```

Related Commands	Command	Description
	ip arp timeout	Configures ARP.

Review Draft -- Cisco Confidential

show ip fib

To display forwarding information, use the **show ip fib** command.

show ip fib { **adjacency** | **interfaces** | **route** } **module** *slot*

Syntax Description	adjacency	Displays the adjacency information.
	interfaces	Displays the forwarding information for interfaces on a module.
	route	Displays the forwarding information for routes on a module.
	module <i>slot</i>	Displays information for the module. The slot range depends on the hardware platform.

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the show ip fib command on the supervisor to view forwarding information on a module. Optionally, you can use the attach module command to attach to a module and use the show ip fib command on the module.
------------------	---

Examples	This example shows how to display the forwarding information for module 1:
----------	--

```
switch# show ip fib route module 1
```

```
IPv4 routes for table default/base
```

```
-----+-----+-----  
Prefix      | Next-hop      | Interface  
-----+-----+-----  
0.0.0.0/32   | Drop          | Null0  
255.255.255.255/32 | Receive      | sup-eth1  
switch#
```

Related Commands	Command	Description
	show forwarding	Displays information about the FIB.

Review Draft -- Cisco Confidential

show ip fib distribution

To display forwarding distribution information, use the **show ip fib distribution** command.

show ip fib distribution [**clients** | **state**]

Syntax Description	clients	(Optional) Displays the forwarding distribution information for unicast clients.
	state	(Optional) Displays the forwarding distribution state for unicast FIB.

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples	<p>This example shows how to display the forwarding information for unicast clients:</p> <pre>switch# show ip fib distribution clients</pre>
----------	---

Related Commands	Command	Description
	show forwarding distribution	Displays distribution information about the FIB.

Review Draft -- Cisco Confidential

show ip load-sharing

To display IP load sharing information, use the **show ip load-sharing** command.

show ip load-sharing

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples	<p>This example shows how to display the IP load sharing information:</p> <pre>switch# show ip load-sharing</pre>
-----------------	---

Related Commands	Command	Description
	show ip load-sharing	Displays IP load sharing.

Review Draft -- Cisco Confidential

show ip process

To display formation about the IP process, use the **show ip process** command.

show ip process [*vrf vrf-name*]

Syntax Description	vrf vrf-name	(Optional) Specifies the name of the virtual routing and forwarding (VRF) instance. The <i>vrf-name</i> argument can be specified as any case-sensitive, alphanumeric string up to 32 characters. The strings “default” and “all” are reserved VRF names.
--------------------	---------------------	---

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples This example shows details about the IP process:

```
switch(config)# show ip process
VRF default
  VRF id is 1
  Base table id is 1
  Auto discard is disabled
  Auto discard is not added
  Auto Null broadcast is configured
  Auto Punt broadcast is configured
  Static discard is not configured
  Number of static default route configured is 0
  Number of ip unreachable configured is 0
  Iodlist: 73 74
  Local address list:  1.1.1.1          2.2.2.1          21.1.1.1
switch(config)#
```

Review Draft -- Cisco Confidential

show ip route

To display routes from the unicast Routing Information Base (RIB), use the **show ip route** command.

show ip route [**all** | *addr* | *hostname* | *prefix* | *route-type* | **interface** *type number* | **next-hop** *addr*]
[**vrf** *vrf-name*]

Syntax Description		
all	(Optional)	Displays all routes.
<i>addr</i>	(Optional)	IPv4 address. The format is x.x.x.x.
<i>hostname</i>		Hostname. The <i>name</i> can be any case-sensitive, alphanumeric string up to 80 characters.
<i>prefix</i>	(Optional)	IPv4 prefix. The format is x.x.x.x/length. The length range is from 1 to 32.
<i>route-type</i>	(Optional)	Type of route. Use ? to see the list of types.
interface <i>type number</i>	(Optional)	Displays the routes for an interface. Use ? to see the supported interfaces.
next-hop <i>addr</i>	(Optional)	Displays routes with this next-hop address. The format is x.x.x.x.
vrf <i>vrf-name</i>	(Optional)	Specifies the virtual router context (VRF) name. The name can be any case-sensitive, alphanumeric string up to 32 characters.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples This example shows how to display the route table:

```
switch(config)# show ip route all
```

Related Commands	Command	Description
	clear ip route	Clears entries in the route table.

Review Draft -- Cisco Confidential

show ip static-route

To display static routes from the unicast Routing Information Base (RIB), use the **show ip static-route** command.

show ip static-route [**vrf** {*vrf-name* | **all**}]

Syntax Description

vrf <i>vrf-name</i>	(Optional) Specifies the virtual router context (VRF) name. The name can be any case-sensitive, alphanumeric string up to 32 characters.
all	(Optional) Specifies all virtual router contexts (VRF) name.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
6.0(2)N1(1)	This command was introduced.

Examples

This example shows how to display the static routes:

```
switch(config)# show ip static-route
```

Related Commands

Command	Description
ip route	Configures a static route.

Review Draft -- Cisco Confidential

show routing

To display routing information, use the **show routing** command.

show routing [**ip** | **ipv4**] [*address* | *hostname* | *prefix* | *route-type* | **clients** | **hidden-nh** *interface type number* | **next-hop** *addr* | **recursive-next-hop** [*addr*]] [**vrf** *vrf-name*]

Syntax Description	
ip	(Optional) Displays the routing information for the network.
ipv4	(Optional) Displays the routing information for the IPv4 network.
<i>address</i>	(Optional) IPv4 address. IPv4 address format is x.x.x.x.
<i>hostname</i>	Hostname. The <i>name</i> can be any case-sensitive, alphanumeric string up to 80 characters.
<i>prefix</i>	(Optional) IPv4 prefix. IPv4 prefix format is x.x.x.x/length.
<i>route-type</i>	(Optional) Type of route. Use ? to see the list of types.
clients	(Optional) Displays the routing clients.
hidden-nh	(Optional) Displays hidden next-hop information.
interface <i>type number</i>	(Optional) Displays the routes for an interface. The interface can be one of the following: <ul style="list-style-type: none"> mgmt—Management interface. The default management interface is 0. vlan—VLAN interface. The VLAN interface number is from 1 to 4094.
next-hop <i>addr</i>	(Optional) Displays routes with this next-hop address. The format is x.x.x.x.
recursive next-hop <i>addr</i>	(Optional) Displays routes with this recursive next-hop address. The format is x.x.x.x.
vrf <i>vrf-name</i>	(Optional) Specifies the virtual router context (VRF) name. The VRF can be one of the following: <ul style="list-style-type: none"> <i>vrf-name</i>—VRF name. The name can be any case-sensitive, alphanumeric string up to 32 characters. all—Specifies all VRFs. default—Specifies the default VRF. management—Specifies the management VRF.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples	This example shows how to display the route table:
-----------------	--

Review Draft -- Cisco Confidential

```
switch(config)# show ip routing
```

Related Commands

Command	Description
clear ip route	Clears entries in the route table.

Review Draft -- Cisco Confidential

show routing memory estimate

To display an estimate of routing memory requirements, use the **show routing memory estimate** command.

show routing memory estimate [*routes num-routes* **next-hops** *num-hop-addresses*]

Syntax Description	routes	(Optional) Specifies the unicast Routing Information Base (RIB) memory estimate for the number of routes.
	<i>num-routes</i>	Number of routes. The range is from 1000 to 1,000,000.
	next-hops	(Optional) Specifies the unicast RIB memory estimate for the number of next hops per route.
	<i>num-hop-addresses</i>	Number of next-hop addresses per route. The range is from 1 to 16.

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the show routing memory estimate command to estimate the memory required for a selected number of routes and number of next-hop addresses per route.
------------------	---

Examples	<p>This example shows how to display the route table:</p> <pre>switch# show routing memory estimate routes 1000 next-hops 1 Shared memory estimates: Current max 32 MB; 27495 routes with 16 nhs in-use 1 MB; 11 routes with 1 nhs (average) Configured max 32 MB; 27495 routes with 16 nhs Estimate 0 MB; 1000 routes with 1 nhs</pre>
----------	---

Review Draft -- Cisco Confidential

show routing hash

To display the route selected for a particular source and destination address, use the **show routing hash** command.

show routing hash *source-addr dest-addr [source-port dest-port]] [vrf vrf-name]*

Syntax Description

<i>source-addr</i>	Source IPv4 address. IPv4 address format is x.x.x.x.
<i>dest-addr</i>	Destination IPv4 address. IPv4 address format is x.x.x.x.
<i>source-port</i>	(Optional) Source port. The range is from 1 to 65535.
<i>dest-port</i>	(Optional) Destination port. The range is from 1 to 65535.
vrf <i>vrf-name</i>	(Optional) Specifies the virtual router context (VRF) name. The name can be any case-sensitive, alphanumeric string up to 32 characters.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
6.0(2)N1(1)	This command was introduced.

Examples

This example shows how to display the route selected to reach 30.0.0.2 from 10.0.0.5:

```
switch# show routing hash 10.0.0.5 30.0.0.2
```

Related Commands

Command	Description
clear ip route	Clears entries in the route table.

Review Draft -- Cisco Confidential

show sockets client

To display information about the sockets clients, use the **show sockets client** command.

show sockets client [**pid** *id*] [**raw** | **tcp** | **udp**] [**detail**]

Syntax Description	pid <i>id</i>	(Optional) Displays the socket client information for a specific process. The <i>id</i> range is from 1 to 65535.
	raw	(Optional) Displays information about the raw client.
	tcp	(Optional) Displays information about the TCP client.
	udp	(Optional) Displays information about the UDP client.
	detail	(Optional) Displays information about the detailed client.

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples This example shows how to display the UDP socket client information:

```
switch# show sockets client udp

Total number of UDP clients: 9

client: syslogd, pid: 4367, sockets: 2

client: ntpd, pid: 4602, sockets: 3

client: ntp, pid: 4591, sockets: 2

client: radiusd, pid: 4586, sockets: 2

client: dhcp_snoop, pid: 5260, sockets: 1

client: pim, pid: 5296, sockets: 1

client: mcecm, pid: 5265, sockets: 1

client: snmpd, pid: 4609, sockets: 2

client: hsrp_engine, pid: 9588, sockets: 2

Statistics: Cancels 12777, Cancel-unblocks 11257, Cancel-misses 0
           Select-drops 1520, Select-wakes 11257,
switch#
```

Review Draft -- Cisco Confidential**Related Commands**

Command	Description
clear sockets statistics	Clears socket statistics.
show sockets connection	Displays information about the socket connection.
show sockets statistics	Displays information about the socket statistics.

Review Draft -- Cisco Confidential

show sockets connection

To display information about the sockets connection, use the **show sockets connection** command.

show sockets connection [**pid** *id*] [**local** *address* | **foreign** *address* | **raw** | **tcp** | **udp**] [**detail**]

Syntax Description	
pid <i>id</i>	(Optional) Displays the socket client information for a specific process. the <i>id</i> range is from 1 to 65535.
local <i>address</i>	(Optional) Displays information about all the TCP connections with the specified local address. The <i>address</i> can be an IPv4 address.
foreign <i>address</i>	(Optional) Displays information about all the TCP connections with the specified foreign address. The <i>address</i> can be an IPv4 address.
raw	(Optional) Displays information about the raw client.
tcp	(Optional) Displays information about the TCP client.
udp	(Optional) Displays information about the UDP client.
detail	(Optional) Displays information about the detailed client.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples This example shows how to display the TCP socket connection information:

```
switch# show sockets connection tcp

Total number of tcp sockets: 4
Active connections (including servers)
Protocol State/      Recv-Q/      Local Address(port) /
      Context      Send-Q      Remote Address(port)
tcp6      LISTEN      0            * (22)
      Wildcard      0            * (*)

tcp6      LISTEN      0            * (23)
      Wildcard      0            * (*)

tcp      LISTEN      0            * (161)
      Wildcard      0            * (*)

tcp      ESTABLISHED 0            172.29.231.33 (23)
      management 4            72.163.177.151 (1559)

switch#
```

Review Draft -- Cisco Confidential**Related Commands**

Command	Description
clear sockets statistics	Clears the socket statistics.
show sockets client	Displays information about the socket client.
show sockets statistics	Displays the socket statistics.

Review Draft -- Cisco Confidential

show sockets statistics

To display the socket statistics, use the **show sockets statistics** command.

show sockets statistics [**all** | **raw** | **rawsum** | **tcp** | **tcpsum** | **udp** | **udpsum**]

Syntax Description		
all	(Optional)	Displays all the socket statistics.
raw	(Optional)	Displays the socket statistics for the raw IPv4 protocol socket statistics.
rawsum	(Optional)	Displays a summary of the socket statistics for the raw IPv4 protocol socket statistics.
tcp	(Optional)	Displays the socket statistics for the TCP IPv4 protocol.
tcpsum	(Optional)	Displays a summary of the socket statistics for the TCP IPv4 protocols.
udp	(Optional)	Displays the socket statistics for the UDP IPv4 protocol.
udpsum	(Optional)	Displays a summary of the socket statistics for the UDP IPv4 protocols.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples This example shows how to display the TCP socket statistics:

```
switch# show sockets statistics tcp
TCP v4 Received:
  11622 packets total
  0 checksum error, 0 bad offset, 0 too short, 0 MD5 error
  8782 packets (33566 bytes) in sequence
  0 duplicate packets (0 bytes)
  0 partially dup packets (0 bytes)
  0 out-of-order packets (0 bytes)
  0 packets (0 bytes) with data after window
  0 packets after close
  0 window probe packets, 0 window update packets
  2 duplicate ack packets, 0 ack packets with unsent data
  9349 ack packets (890960 bytes)
TCP v4 Sent:
  9543 total, 0 urgent packets
  3 control packets
  9492 data packets (890955 bytes)
  0 data packets (0 bytes) retransmitted
  48 ack only packets
  0 window probe packets, 0 window update packets
TCP v4:
  0 connections initiated, 6 connections accepted, 6 connections established
  6 connections closed (including 2 dropped, 0 embryonic dropped)
```

Review Draft -- Cisco Confidential

```
0 total rxmt timeout, 0 connections dropped in rxmt timeout
0 keepalive timeout, 0 keepalive probe, 0 connections dropped in keepalive
switch#
```

Related Commands

Command	Description
clear sockets statistics	Clears socket statistics.
show sockets client	Displays information about the socket client.
show sockets connection	Displays information about the socket connection.