

I Commands

This chapter describes the Cisco NX-OS Hot Standby Router Protocol (HSRP) commands that begin with I.

ip (HSRP)

To assign a virtual address to an HSRP group, use the **ip** command. To disable HSRP in the group, use the **no** form of this command.

ip [autoconfig | ip-address [secondary]]

no ip [autoconfig | *ip-address* [secondary]]

autoconfig	(Optional) Generates a link-local address from the link-local prefix and a modified EUI-64 format Interface Identifier, where the EUI-64 Interface Identifier is created from the relevant HSRP virtual MAC address.	
ip-address	(Optional) Virtual IP address for the virtual router (HSRP group). The IP address must be in the same subnet as the interface IP address. You must configure the virtual IP address for at least one of the routers in the HSRP group. Other routers in the group will pick up this address. The IP address can be an IPv4 address.	
secondary	(Optional) Indicates that the IPv4 address is a secondary HSRP virtual address.	
Disabled		
HSRP configuration mode		
Release	Modification	
6.0(2)N1(1)	This command was introduced.	
Use the ip command to activate HSRP on the configured interface. If you configure a virtual IP address, that address is the designated virtual IP address for the entire HSRP group. For IPv4 groups, if you do not configure a virtual IP address, the gateway learns the virtual IP address from another gateway in the same HSRP group. To allow HSRP to elect an active virtual gateway (AVG), you must configure at least one gateway on the LAN with a virtual IP address.		
same HSRP grou	p. To allow HSRP to elect an active virtual gateway (AVG), you must configure at least	
same HSRP grou one gateway on t	p. To allow HSRP to elect an active virtual gateway (AVG), you must configure at least	
	<i>ip-address secondary</i> Disabled HSRP configurat Release 6.0(2)N1(1) Use the ip comma that address is the	

Note

You must configure all HSRP options before you use the **ip** command to assign a virtual IP address and activate the HSRP group so that you can avoid authentication error messages and unexpected state changes that can occur in other routers when a group is enabled first and then there is a delay before the configuration is created. We recommend that you always specify an IP address.

Examples

This example shows how to activate HSRP for group 10 on Ethernet interface 1/1. The virtual IP address used by the HSRP group is set to 192.0.2.10.

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if)# no switchport
switch(config-if)# ip address 192.0.2.32 255.255.255.0
switch(config-if)# hsrp 10
switch(config-if-hsrp)# ip 192.0.2.10
```

This example shows how to activate HSRP for group 10 on Ethernet interface 2/1. The virtual IP address used by the HSRP group will be learned from another gateway configured to be in the same HSRP group.

```
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# hsrp 10
switch(config-if-hsrp)#
```

This example shows how to activate HSRP for group 2 on Ethernet interface 1/1 and creates a secondary IP address on the interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if)# no switchport
switch(config-if)# ip address 20.20.20.1 255.255.255.0 secondary
switch(config-if)# ip address 10.10.10.1 255.255.255.0
switch(config-if)# hsrp 2
switch(config-if)# hsrp 10.10.10.2
switch(config-if-hsrp)# ip 10.10.10.2
switch(config-if-hsrp)# ip 20.20.20.2 secondary
```

Related Commands	Command	Description
	feature hsrp	Enables the HSRP configuration.
	show hsrp	Displays HSRP information.

ipv6 (HSRP)

To assign a virtual address to an HSRP group, use the **ip** command. To disable HSRP in the group, use the **no** form of this command.

ipv6 [autoconfig | ip-address [secondary]]

no ipv6 [autoconfig | *ip-address* [secondary]]

Syntax Description	autoconfig	(Optional) Generates a link-local address from the link-local prefix and a modified EUI-64 format Interface Identifier, where the EUI-64 Interface Identifier is created from the relevant HSRP virtual MAC address.	
	ipv6-address	(Optional) Virtual IPv6 address for the virtual router (HSRP group). The IPv6 address must be in the same subnet as the interface IPv6 address. You must configure the virtual IPv6 address for at least one of the routers in the HSRP group. Other routers in the group will pick up this address.	
	secondary	(Optional) Indicates that the IPv6 address is a secondary HSRP virtual address.	
Command Default	Disabled		
Command Modes	HSRP configurat	ion mode	
Command History	Release	Modification	
	6.0(2)N1(1)	This command was introduced.	
Usage Guidelines	Use the ipv6 command to activate HSRP on the configured interface. If you configure a virtual IPv6 address, that address is the designated virtual IPv6 address for the entire HSRP group. For IPv6 groups, if you do not configure a virtual IPv6 address, the gateway learns the virtual IPv6 address from another gateway in the same HSRP group. To allow HSRP to elect an active virtual gateway (AVG), you must configure at least one gateway on the LAN with a virtual IPv6 address.		
	Configuring the virtual IPv6 address on the AVG always overrides a virtual IPv6 address that is in use.		
	Address Resoluti requests to map a replies to the AR proxy ARP reque	ure the ipv6 command for an IPv6 HSRP group on an interface, the handling of proxy on Protocol (ARP) requests changes (unless proxy ARP was disabled). Hosts send ARP in IPv6 address to a MAC address. The HSRP gateway intercepts the ARP requests and P requests on behalf of the connected nodes. If a forwarder in the HSRP group is active, ests are answered using the MAC address of the first active forwarder in the group. If ctive, proxy ARP responses are suppressed.	
Note	and activate the H	ire all HSRP options before you use the ipv6 command to assign a virtual IPv6 address HSRP group so that you can avoid authentication error messages and unexpected state occur in other routers when a group is enabled first and then there is a delay before the	

Examples

This example shows how to activate HSRP for group 10 on Ethernet interface 1/1. The virtual IPv6 address used by the HSRP group is set to 192.0.2.10.

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if) # no switchport
switch(config-if)# ipv6 address 192.0.2.32 255.255.255.0
switch(config-if)# hsrp 10
switch(config-if-hsrp)# ipv6 192.0.2.10
```

This example shows how to activate HSRP for group 10 on Ethernet interface 2/1. The virtual IPv6 address used by the HSRP group will be learned from another gateway configured to be in the same HSRP group.

```
switch(config)# interface ethernet 2/1
switch(config-if) # no switchport
switch(config-if) # hsrp 10
switch(config-if-hsrp)#
```

This example shows how to activate HSRP for group 2 on Ethernet interface 1/1 and creates a secondary IPv6 address on the interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if) # no switchport
switch(config-if)# ipv6 address 20.20.20.1 255.255.255.0 secondary
switch(config-if)# ipv6 address 10.10.10.1 255.255.255.0
switch(config-if)# hsrp 2
switch(config-if-hsrp)# ipv6 10.10.10.2
switch(config-if-hsrp)# ipv6 20.20.20.2 secondary
```

Related Commands	Command	Description
	feature hsrp	Enables the HSRP configuration.
	show hsrp	Displays HSRP information.