

## **F** Commands

This chapter describes the Cisco NX-OS Routing Information Protocol (RIP) commands that begin with F.

## **Review Draft -- Cisco Confidential**

## feature rip

To enable the Routing Information Protocol (RIP), use the **feature rip** command. To disable RIP, use the **no** form of this command.

feature rip

no feature rip

- **Syntax Description** This command has no arguments or keywords.
- Command Default Disabled

**Command Modes** Global configuration mode

 Release
 Modified

 6.0(2)N1(1)
 This command was introduced.

**Usage Guidelines** You must enable the RIP feature before you can configure RIP.

This command does not require a license.

Note

Make sure the LAN Base Services license is installed on the switch to enable Layer 3 interfaces.

Examples

This example shows how to enable the RIP feature:

switch# configure terminal
switch(config)# feature rip
switch(config)#

This example shows how to disable the RIP feature:

switch# configure terminal
switch(config)# no feature rip
switch(config)#

Related Commands

nds	Command	Description
	router rip	Creates a RIP instance.
	show feature	Displays the status of features on a switch.
	show rip	Displays RIP configuration information.