

C Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with C.

Review Draft -- Cisco Confidential

clear ip interface statistics

To clear IP interface statistics, use the clear ip interface statistics command.

clear ip interface statistics

Syntax Description	This command has no arguments or keywords.		
Command Default	None		
Command Modes	Any command mod	e	
Command History	Release 6.0(2)N1(1)	Modification This command was introduced.	
Examples	This example shows how to clear the IP interface statistics: switch# clear ip interface statistics		
Related Commands	Command	Description	

Related Commands	Command	Description
	show ip interface	Displays IP interface information.

Review Draft -- Cisco Confidential

clear vrrp

To clear the Virtual Router Redundancy Protocol (VRRP) statistics, use the clear vrrp command.

clear vrrp vr id interface {ethernet slot/port | port-channel number[.sub_if_number]}

is from 1 to 255. interface Specifies an Ethernet or EthreChannel interface or a subinterface. ethernet slot/port Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128. port-channel number Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096. .sub_if_number (Optional) Subinterface number. The range is from 1 to 4093. Command Default None Command Modes Any command mode Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)#				
interface Specifies an Ethernet or EthreChannel interface or a subinterface. ethernet slot/port Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128. port-channel number Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096. .sub_if_number (Optional) Subinterface number. The range is from 1 to 4093. Command Default None Command History Release Modification 6.0(2)N1(1) This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command Description	Syntax Description	vr id		
ethernet slot/port Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128. port-channel number Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096. .sub_if_number (Optional) Subinterface number. The range is from 1 to 4093. Command Default None Command Modes Any command mode Command History Release Modification 6.0(2)N1(1) This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command			is from 1 to 255.	
from 1 to 255, and the port number is from 1 to 128. port-channel number Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096. .sub_if_number (Optional) Subinterface number. The range is from 1 to 4093. Command Default None Command Modes Any command mode Command History Release Modification 6.0(2)N1(1) This command was introduced. Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command Description		interface	Specifies an Ethernet or EthreChannel interface or a subinterface.	
EtherChannel number is from 1 to 4096. .sub_if_number (Optional) Subinterface number. The range is from 1 to 4093. Command Default None Command Modes Any command mode Command History Release Modification 6.0(2)N1(1) This command was introduced. Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Description		ethernet slot/port	Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128.	
Command Default None Command Modes Any command mode Command History Release Modification 6.0(2)N1(1) This command was introduced. Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 Related Commands Command Description		port-channel number		
Command Modes Any command mode Command History Release Modification 6.0(2)N1(1) This command was introduced. Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command Description		.sub_if_number	(Optional) Subinterface number. The range is from 1 to 4093.	
Command History Release Modification 6.0(2)N1(1) This command was introduced. Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config) # clear vrrp vr 1 interface ethernet 1/5 switch(config) # Related Commands Command Description	Command Default	None		
6.0(2)N1(1) This command was introduced. Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command Description	Command Modes	Any command mode		
Examples This example shows how to clear VRRP statistics from a specific Ethernet interface: switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command Description	Command History	Release	Modification	
switch(config)# clear vrrp vr 1 interface ethernet 1/5 switch(config)# Related Commands Command Description		6.0(2)N1(1)	This command was introduced.	
switch(config)# Related Commands Command Description	Examples	This example shows how to clear VRRP statistics from a specific Ethernet interface:		
	Related Commands	Command	Description	
			•	

Review Draft -- Cisco Confidential