

## **P** Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with P.

#### **Review Draft -- Cisco Confidential**

# preempt (VRRP)

To enable a high-priority backup virtual router to preempt the low-priority master virtual router, use the **preempt** command. To disable a high-priority backup virtual router from preempting the low-priority master virtual router, use the **no** form of this command.

	preempt			
	no preempt			
Syntax Description	This command has no arguments or keywords.			
Command Default	Enabled			
Command Modes	VRRP configuration mode			
Command History	Release	Modification		
,	6.0(2)N1(1)	This command was introduced.		
Usage Guidelines	VRRP enables you to preempt a virtual router backup that has taken over for a failing virtual router master with a high-priority virtual router backup that has become available.			
•	By default, a preemptive scheme is enabled. A backup high-priority virtual router that becomes available takes over for the backup virtual router that was elected to become the virtual router master. If you disable preemption, the backup virtual router that is elected to become the virtual router master remains the master until the original virtual router master recovers and becomes the master again.			
<u>Note</u>	This preemption does not apply to the primary IP address.			
•	If the virtual IP address is also the IP address for the interface, then preemption is applied. This command does not require a license.			
<u>Note</u>	Make sure the LAN	Base Services license is installed on the switch to enable Layer 3 interfaces.		
Examples	This example shows master virtual router	s how to enable the backup high-priority virtual router to preempt the low-priority r:		
	<pre>switch# configure switch(config)# in switch(config-if)# switch(config-if)# switch(config-if-v switch(config-if-v</pre>	nterface ethernet 2/1 # no switchport # vrrp 250 vrrp)# preempt		

Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference

<b>Related Commands</b>	Command	Description
	clear vrrp	Clears all the software counters for the specified virtual router.
	show vrrp	Displays VRRP configuration information.
	vrrp	Configures a VRRP group.

### priority (VRRP)

To set the priority for the Virtual Router Redundancy Protocol (VRRP), use the **priority** command. To revert to the default value, use the **no** form of this command.

priority level [forwarding-threshold lower lower-value upper-value]

no priority level [forwarding-threshold lower lower-value upper upper-value]

Syntax Description	level	Interface priority for a virtual router. The range of values is from 1 to 254. If this router is the owner of the IP addresses, then the value is automatically set to 254. The default is 100.	
	forwarding-threshold	(Optional) Sets the threshold used by a virtual port channel (vPC) to determine when to fail over to the vPC trunk.	
	lower lower-value	(Optional) Sets the low threshold value. The range is from 1 to 254. The default is 1.	
	<b>upper</b> upper-value	(Optional) Sets the upper threshold value. The range is from 1 to 254. The default is 254.	
Command Default	The default value is 100. address, the default valu	For switches whose interface IP address is the same as the primary virtual IP e is 254.	
Command Modes	VRRP configuration mode		
Command History	Release	Modification	
	6.0(2)N1(1)	This command was introduced.	
Usage Guidelines	The priority determines whether or not a VRRP router functions as a virtual router backup, the order of ascendancy for the VRRP router to become a virtual router master if the virtual router master fails, the role that each VRRP router plays, and what happens if the virtual router master fails.		
	If a VRRP router owns the IP address of the virtual router and the IP address of the physical interface, then this router functions as a virtual router master.		
	By default, a preemptive scheme is enabled. A backup high-priority virtual router that becomes available takes over for the backup virtual router that was elected to become the virtual router master. If you disable preemption, then the backup virtual router that is elected to become the virtual router master remains the master until the original virtual router master recovers and becomes the master again.		
	takes over for the backup disable preemption, then	b virtual router that was elected to become the virtual router master. If you the backup virtual router that is elected to become the virtual router master	
	takes over for the backup disable preemption, then	b virtual router that was elected to become the virtual router master. If you the backup virtual router that is elected to become the virtual router master the original virtual router master recovers and becomes the master again.	

Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference

```
switch(config-if)# no switchport
switch(config-if)# vrrp 250
switch(config-if-vrrp)# priority 2
switch(config-if-vrrp)#
```

#### Related Commands

Command	Description
feature vrrp	Enables VRRP.
preempt	Enables preemption on the virtual router.
show vrrp	Displays VRRP configuration information.
shutdown (VRRP)	Disables the VRRP configuration.
vrrp	Configures a VRRP group.