



This preface describes the audience, organization, and conventions of the *Book Title*, and how to obtain related documentation.

This chapter includes the following topics:

- [Audience, page -1](#)
- [Organization, page -1](#)
- [Document Conventions, page -2](#)
- [Related Documentation, page -2](#)

## Audience

This publication is for experienced users who configure and maintain Cisco Nexus 6000 Series switch.

## Organization

This reference is organized as follows:

Chapter	Description
<a href="#">Troubleshooting Overview</a>	Introduces the basic concepts, methodology, and general troubleshooting guidelines for problems that may occur when configuring and using the Cisco Nexus 6000 Series switch.
<a href="#">Troubleshooting FCoE Issues</a>	Describes how to identify and resolve problems that can occur with FCoE in the Cisco Nexus 6000 Series switch.
<a href="#">Troubleshooting Layer 2 Switching Issues</a>	Describes how to identify and resolve problems that can occur with Layer 2 switching in the Cisco Nexus 6000 Series switch.
<a href="#">Troubleshooting QoS Issues</a>	Describes how to identify and resolve problems that can occur with QoS in the Cisco Nexus 6000 Series switch.
<a href="#">Troubleshooting SAN Switching Issues</a>	Describes how to identify and resolve problems that can occur with SAN switching and the Cisco Nexus 6000 Series switch.
<a href="#">Troubleshooting Security Issues</a>	Describes how to identify and resolve problems that can occur with security in the Cisco Nexus 6000 Series switch.
<a href="#">Troubleshooting System Management Issues</a>	Describes how to identify and resolve problems that can occur with system management and the Cisco Nexus 6000 Series switch.

## Document Conventions

Command descriptions use these conventions:

Convention	Description
<b>boldface font</b>	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[ ]	Elements in square brackets are optional.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

screen font	Terminal sessions and information that the switch displays are in screen font.
<b>boldface screen font</b>	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:

**Note**

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.

**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

**Tip**

Means *the following information will help you solve a problem*.

## Related Documentation

Documentation for the Cisco Nexus 6000 Series Switch is available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps12806/tsd_products_support_series_home.html)

The documentation set is divided into the following categories:

## **REVIEW DRAFT – CISCO CONFIDENTIAL**

### **Release Notes**

The release notes are available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/ps12806/prod_release_notes_list.html)

### **Installation and Upgrade Guides**

The installation and upgrade guides are available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/prod\\_installation\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps12806/prod_installation_guides_list.html)

### **Command References**

The command references are available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/prod\\_command\\_reference\\_list.html](http://www.cisco.com/en/US/products/ps12806/prod_command_reference_list.html)

### **Technical References**

The technical references are available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/prod\\_technical\\_reference\\_list.html](http://www.cisco.com/en/US/products/ps12806/prod_technical_reference_list.html)

### **Configuration Guides**

The configuration guides are available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/products\\_installation\\_and\\_configuration\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps12806/products_installation_and_configuration_guides_list.html)

### **Error and System Messages**

The system message reference guide is available at the following URL:

[http://www.cisco.com/en/US/products/ps12806/products\\_system\\_message\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps12806/products_system_message_guides_list.html)

## **Documentation Feedback**

To provide technical feedback on this document, or to report an error or omission, please send your comments to [nexus6k-docfeedback@cisco.com](mailto:nexus6k-docfeedback@cisco.com). We appreciate your feedback.

***REVIEW DRAFT – CISCO CONFIDENTIAL***