



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
AAA methods [2-3](#)
abort command [2-524](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-91](#)
 MAC, displaying [2-327](#)
access mode [2-477](#)
access ports [2-477](#)
ACEs [2-61, 2-216](#)
ACLs
 deny [2-59](#)
 displaying [2-249](#)
 for non-IP protocols [2-139](#)
 IP [2-91](#)
 on Layer 2 interfaces [2-91](#)
 permit [2-214](#)
address aliasing [2-205](#)
aggregate-port learner [2-210](#)
allowed VLANs [2-492](#)
apply command [2-524](#)
archive download-sw command [2-5](#)
archive tar command [2-8](#)
archive upload-sw command [2-11](#)
audience [xv](#)
authorization state of controlled port [2-71](#)

autonegotiation of duplex mode [2-78](#)
auto qos voip command [2-13](#)

B

BackboneFast, for STP [2-418](#)
backup interfaces
 configuring [2-473](#)
 displaying [2-298](#)
boot (boot loader) command [A-2](#)
boot boothlpr command [2-17](#)
boot config-file command [2-18](#)
boot enable-break command [2-19](#)
boot helper command [2-20](#)
boot helper-config file command [2-21](#)
booting
 Cisco IOS image [2-24](#)
 displaying environment variables [2-257](#)
 interrupting [2-19](#)
 manually [2-22](#)
boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)
 helper image [2-20](#)
directories
 creating [A-15](#)
 displaying a list of [A-7](#)
 removing [A-19](#)
displaying
 available commands [A-12](#)
 memory heap utilization [A-14](#)
 version [A-26](#)

boot loader (continued)

environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsettling [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-16, A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-22](#)boot private-config-file command [2-23](#)boot system command [2-24](#)BPDU filtering, for spanning tree [2-419, 2-451](#)BPDU guard, for spanning tree [2-421, 2-451](#)broadcast storm control [2-468](#)

C

candidate switches

See clusters

cat (boot loader) command [A-4](#)caution, description [xvi](#)channel-group command [2-25](#)channel-protocol command [2-28](#)

Cisco Network Assistant

See Network Assistant [xvi](#)

Cisco SoftPhone

- auto-QoS configuration [2-13](#)
- trusting packets sent from [2-197](#)

class command [2-29](#)class-map command [2-31](#)

class maps

- creating [2-31](#)
- defining the match criteria [2-157](#)
- displaying [2-261](#)

class of service

See CoS

clear ip dhcp snooping database command [2-33](#)clear lacp command [2-34](#)clear mac address-table command [2-35](#)clear pagp command [2-36](#)clear port-security command [2-37](#)clear spanning-tree counters command [2-39](#)clear spanning-tree detected-protocols command [2-40](#)clear vmps statistics command [2-41](#)clear vtp counters command [2-42](#)cluster commander-address command [2-43](#)cluster discovery hop-count command [2-45](#)cluster enable command [2-46](#)cluster holdtime command [2-48](#)cluster member command [2-49](#)cluster outside-interface command [2-51](#)cluster requirements [xvi](#)cluster run command [2-52](#)

clusters

- adding candidates [2-49](#)
- binding to HSRP group [2-53](#)
- building manually [2-49](#)
- communicating with
 - devices outside the cluster [2-51](#)
 - members by using Telnet [2-229](#)
- debug messages, display [B-5](#)

clusters (continued)

displaying

candidate switches [2-264](#)debug messages [B-5](#)member switches [2-266](#)status [2-262](#)hop-count limit for extended discovery [2-45](#)HSRP standby groups [2-53](#)redundancy [2-53](#)SNMP trap [2-409](#)cluster standby-group command [2-53](#)cluster timer command [2-55](#)command modes defined [1-1](#)

command switch

See clusters

configuration, initial

See getting started guide and hardware installation guide

configuration files

password recovery disable considerations [A-1](#)specifying the name [2-18, 2-23](#)configuring multiple interfaces [2-87](#)

config-vlan mode

commands [2-513](#)description [1-4](#)entering [2-512](#)summary [1-2](#)

conventions

command [xv](#)for examples [xvi](#)publication [xv](#)text [xv](#)copy (boot loader) command [A-5](#)

CoS

assigning default value to incoming packets [2-167](#)overriding the incoming value [2-167](#)CoS-to-DSCP map [2-171](#)CPU ASIC statistics, displaying [2-268](#)**D**debug auto qos command [B-2](#)debug backup command [B-4](#)debug cluster command [B-5](#)debug dot1x command [B-7](#)debug dtp command [B-8](#)debug etherchannel command [B-9](#)debug interface command [B-11](#)debug ip dhcp snooping command [B-10](#)debug ip igmp filter command [B-12](#)debug ip igmp max-groups command [B-13](#)debug ip igmp snooping command [B-14](#)debug lacp command [B-15](#)debug mac-notification command [B-16](#)debug matm command [B-17](#)debug monitor command [B-18](#)debug mvrdbg command [B-19](#)debug nvram command [B-20](#)debug pagp command [B-21](#)debug platform acl command [B-22](#)debug platform backup interface command [B-23](#)debug platform cpu-queues command [B-24](#)debug platform dot1x command [B-26](#)debug platform etherchannel command [B-27](#)debug platform forw-tcam command [B-28](#)debug platform ip dhcp command [B-29](#)debug platform ip igmp snooping command [B-30](#)debug platform led command [B-32](#)debug platform matm command [B-33](#)debug platform messaging application command [B-34](#)debug platform phy command [B-35](#)debug platform pm command [B-37](#)debug platform port-asic command [B-39](#)debug platform port-security command [B-40](#)debug platform qos-acl-tcam command [B-41](#)debug platform resource-manager command [B-42](#)debug platform snmp command [B-43](#)debug platform span command [B-44](#)

debug platform supervisor-asic command [B-45](#)
 debug platform sw-bridge command [B-46](#)
 debug platform tcam command [B-47](#)
 debug platform udlld command [B-49](#)
 debug platform vlan command [B-50](#)
 debug pm command [B-51](#)
 debug port-security command [B-53](#)
 debug qos-manager command [B-54](#)
 debug spanning-tree backbonefast command [B-57](#)
 debug spanning-tree bpdu command [B-58](#)
 debug spanning-tree bpdu-opt command [B-59](#)
 debug spanning-tree command [B-55](#)
 debug spanning-tree mstp command [B-60](#)
 debug spanning-tree switch command [B-62](#)
 debug spanning-tree uplinkfast command [B-64](#)
 debug sw-vlan command [B-65](#)
 debug sw-vlan ifs command [B-67](#)
 debug sw-vlan notification command [B-68](#)
 debug sw-vlan vtp command [B-70](#)
 debug udld command [B-72](#)
 debug vqpc command [B-74](#)
 define interface-range command [2-56](#)
 delete (boot loader) command [A-6](#)
 delete command [2-58](#)
 deny command [2-59](#)
 detect mechanism, causes [2-79](#)
 device manager requirements [xvi](#)
 DHCP snooping
 accepting untrusted packets from edge switch [2-102](#)
 enabling
 on a VLAN [2-107](#)
 option 82 [2-100, 2-102](#)
 trust on an interface [2-105](#)
 error recovery timer [2-81](#)
 rate limiting [2-104](#)

DHCP snooping binding database
 binding file, configuring [2-98](#)
 bindings
 adding [2-96](#)
 deleting [2-96](#)
 displaying [2-309](#)
 clearing database agent statistics [2-33](#)
 database agent, configuring [2-98](#)
 displaying
 binding entries [2-309](#)
 database agent status [2-311](#)
 renewing [2-233](#)
 dir (boot loader) command [A-7](#)
 directories, deleting [2-58](#)
 documentation, related [xvi](#)
 document conventions [xv](#)
 domain name, VTP [2-531, 2-535](#)
 dot1x command [2-62](#)
 dot1x default command [2-64](#)
 dot1x guest-vlan command [2-65](#)
 dot1x host-mode command [2-67](#)
 dot1x initialize command [2-68](#)
 dot1x max-req command [2-69, 2-70](#)
 dot1x port-control command [2-71](#)
 dot1x re-authenticate command [2-73](#)
 dot1x reauthentication command [2-74](#)
 dot1x timeout command [2-75](#)
 DSCP-to-CoS map [2-171](#)
 DSCP-to-DSCP-mutation map [2-171](#)
 DTP [2-478](#)
 DTP flap
 error detection for [2-79](#)
 error recovery timer [2-81](#)
 DTP negotiation [2-479](#)

- dual-purpose uplink ports
 - displaying configurable options [2-300](#)
 - displaying the active media [2-304](#)
 - selecting the type [2-161](#)
- duplex command [2-77](#)
- dynamic-access ports
 - configuring [2-471](#)
 - restrictions [2-472](#)
- dynamic auto VLAN membership mode [2-477](#)
- dynamic desirable VLAN membership mode [2-477](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-70](#)
 - response time before retransmitting [2-75](#)
- environment variables, displaying [2-257](#)
- errdisable detect cause command [2-79](#)
- errdisable recovery command [2-81](#)
- error conditions, displaying [2-289](#)
- error disable detection [2-79](#)
- error-disabled interfaces, displaying [2-298](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-25](#)
 - creating port-channel logical interface [2-85](#)
 - debug EtherChannel/PAgP, display [B-9](#)
 - debug platform-specific events, display [B-27](#)
 - displaying [2-293](#)
 - interface information, displaying [2-298](#)
 - LACP
 - clearing channel-group information [2-34](#)
 - debug messages, display [B-15](#)
 - displaying [2-323](#)
 - modes [2-25](#)

- EtherChannel (continued)
 - LACP (continued)
 - port priority for hot-standby ports [2-131](#)
 - restricting a protocol [2-28](#)
 - system priority [2-133](#)
 - load-distribution methods [2-224](#)
 - PAgP
 - aggregate-port learner [2-210](#)
 - clearing channel-group information [2-36](#)
 - debug messages, display [B-21](#)
 - displaying [2-370](#)
 - error detection for [2-79](#)
 - error recovery timer [2-81](#)
 - learn method [2-210](#)
 - modes [2-25](#)
 - physical-port learner [2-210](#)
 - priority of interface for transmitted traffic [2-212](#)
- Ethernet controller, internal register display [2-270](#)
- Ethernet statistics, collecting [2-235](#)
- examples, conventions for [xvi](#)
- exit command [2-524](#)
- extended discovery of candidate switches [2-45](#)
- extended-range VLANs
 - and allowed VLAN list [2-492](#)
 - and pruning-eligible list [2-492](#)
 - configuring [2-512](#)
- extended system ID for STP [2-427](#)

F

- fan information, displaying [2-286](#)
- file name, VTP [2-531](#)
- files, deleting [2-58](#)
- flash_init (boot loader) command [A-9](#)
- Flex Links
 - configuring [2-473](#)
 - displaying [2-298](#)
- flowcontrol command [2-83](#)

format (boot loader) command [A-10](#)
 forwarding results, display [C-5](#)
 frame forwarding information, displaying [C-5](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-249](#)
 help (boot loader) command [A-12](#)
 hop-count limit for clusters [2-45](#)
 host connection, port configuration [2-476](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-53](#)
 standby group [2-53](#)

I

IEEE 802.1x
 and switchport modes [2-478](#)
 violation error recovery [2-81](#)
 See also port-based authentication
 IGMP filters
 applying [2-108](#)
 debug messages, display [B-12](#)
 IGMP groups, setting maximum [2-109](#)
 IGMP maximum groups, debugging [B-13](#)
 IGMP profiles
 creating [2-111](#)
 displaying [2-313](#)
 IGMP snooping
 adding ports as a static member of a group [2-127](#)
 displaying [2-314, 2-319, 2-321](#)

IGMP snooping (continued)
 enabling [2-113](#)
 enabling the configurable-leave timer [2-115](#)
 enabling the Immediate-Leave feature [2-124](#)
 flooding query count [2-121](#)
 interface topology change notification behavior [2-123](#)
 multicast table [2-317](#)
 querier [2-117](#)
 query solicitation [2-121](#)
 report suppression [2-119](#)
 switch topology change notification behavior [2-121](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-207](#)
 immediate-leave processing [2-124](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-85](#)
 interface range command [2-87](#)
 interface-range macros [2-56](#)
 interfaces
 assigning Ethernet interface to channel group [2-25](#)
 configuring [2-77](#)
 configuring multiple [2-87](#)
 creating port-channel logical [2-85](#)
 debug messages, display [B-11](#)
 disabling [2-407](#)
 displaying the MAC address table [2-339](#)
 restarting [2-407](#)
 interface speed, configuring [2-460](#)
 interface vlan command [2-90](#)
 internal registers, displaying [2-270, 2-277](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [2-79](#)
 error recovery timer [2-81](#)
 ip access-group command [2-91](#)

ip address command [2-93](#)
 IP addresses, setting [2-93](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [2-96](#)
 ip dhcp snooping command [2-95](#)
 ip dhcp snooping database command [2-98](#)
 ip dhcp snooping information option allow-untrusted command [2-102](#)
 ip dhcp snooping information option command [2-100](#)
 ip dhcp snooping limit rate command [2-104](#)
 ip dhcp snooping trust command [2-105](#)
 ip dhcp snooping verify command [2-106](#)
 ip dhcp snooping vlan command [2-107](#)
 ip igmp filter command [2-108](#)
 ip igmp max-groups command [2-109](#)
 ip igmp profile command [2-111](#)
 ip igmp snooping command [2-113](#)
 ip igmp snooping last-member-query-interval command [2-115](#)
 ip igmp snooping querier command [2-117](#)
 ip igmp snooping report-suppression command [2-119](#)
 ip igmp snooping tcn command [2-121](#)
 ip igmp snooping tcn flood command [2-123](#)
 ip igmp snooping vlan immediate-leave command [2-124](#)
 ip igmp snooping vlan mrouter command [2-125](#)
 ip igmp snooping vlan static command [2-127](#)
 IP multicast addresses [2-204](#)
 IP phones
 auto-QoS configuration [2-13](#)
 trusting packets sent from [2-197](#)
 IP-precedence-to-DSCP map [2-171](#)
 IP source guard
 displaying
 dynamic binding entries only [2-309](#)
 ip ssh command [2-129](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [2-131](#)
 lacp system-priority command [2-133](#)
 Layer 2 traceroute
 IP addresses [2-503](#)
 MAC addresses [2-500](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-79](#)
 error recovery timer [2-81](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-224](#)
 logging file command [2-135](#)
 logical interface [2-85](#)
 loopback error
 detection for [2-79](#)
 recovery timer [2-81](#)
 loop guard, for spanning tree [2-428, 2-432](#)

M

mac access-group command [2-137](#)
 MAC access-groups, displaying [2-327](#)
 MAC access list configuration mode [2-139](#)
 mac access-list extended command [2-139](#)

- MAC access lists [2-59](#)
- MAC addresses
 - displaying
 - aging time [2-333](#)
 - all [2-331](#)
 - dynamic [2-337](#)
 - notification settings [2-341](#)
 - number of addresses in a VLAN [2-335](#)
 - per interface [2-339](#)
 - per VLAN [2-345](#)
 - static [2-343](#)
 - static and dynamic entries [2-329](#)
 - dynamic
 - aging time [2-141](#)
 - deleting [2-35](#)
 - displaying [2-337](#)
 - enabling MAC address notification [2-142](#)
 - static
 - adding and removing [2-144](#)
 - displaying [2-343](#)
 - dropping on an interface [2-145](#)
 - tables [2-331](#)
- MAC address notification, debugging [B-16](#)
- mac address-table aging-time [2-137](#)
- mac address-table aging-time command [2-141](#)
- mac address-table notification command [2-142](#)
- mac address-table static command [2-144](#)
- mac address-table static drop command [2-145](#)
- macro apply command [2-147](#)
- macro description command [2-150](#)
- macro global command [2-151](#)
- macro global description command [2-154](#)
- macro name command [2-155](#)
- macros
 - adding a description [2-150](#)
 - adding a global description [2-154](#)
 - applying [2-151](#)
 - creating [2-155](#)
 - displaying [2-372](#)
 - macros (continued)
 - interface range [2-56, 2-87](#)
 - specifying parameter values [2-151](#)
 - tracing [2-151](#)
- manual
 - audience [xv](#)
 - purpose of [xv](#)
- maps
 - QoS
 - defining [2-171](#)
 - displaying [2-355](#)
- match (class-map configuration) command [2-157](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-159](#)
- media-type command [2-161](#)
- member switches
 - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-165](#)
- mls qos command [2-163](#)
- mls qos cos command [2-167](#)
- mls qos dscp-mutation command [2-169](#)
- mls qos map command [2-171](#)
- mls qos queue-set output buffers command [2-175](#)
- mls qos queue-set output threshold command [2-177](#)
- mls qos rewrite ip dscp command [2-179](#)
- mls qos srr-queue input bandwidth command [2-181](#)
- mls qos srr-queue input buffers command [2-183](#)
- mls qos-srr-queue input cos-map command [2-185](#)
- mls qos srr-queue input dscp-map command [2-187](#)
- mls qos srr-queue input priority-queue command [2-189](#)
- mls qos srr-queue input threshold command [2-191](#)
- mls qos-srr-queue output cos-map command [2-193](#)
- mls qos srr-queue output dscp-map command [2-195](#)
- mls qos trust command [2-197](#)
- mode, MVR [2-204](#)
- Mode button, and password recovery [2-238](#)

- modes, commands [1-1](#)
- monitor session command [2-199](#)
- more (boot loader) command [A-16](#)
- MSTP
 - interoperability [2-40](#)
 - link type [2-430](#)
 - MST region
 - aborting changes [2-436](#)
 - applying changes [2-436](#)
 - configuration name [2-436](#)
 - configuration revision number [2-436](#)
 - current or pending display [2-436](#)
 - MST configuration mode [2-436](#)
 - VLANs-to-instance mapping [2-436](#)
 - path cost [2-438](#)
 - protocol mode [2-434](#)
 - restart protocol migration process [2-40](#)
 - root port
 - loop guard [2-428](#)
 - preventing from becoming designated [2-428](#)
 - restricting which can be root [2-428](#)
 - root guard [2-428](#)
 - root switch
 - affects of extended system ID [2-427](#)
 - hello-time [2-441, 2-447](#)
 - interval between BPDU messages [2-442](#)
 - interval between hello BPDU messages [2-441, 2-447](#)
 - max-age [2-442](#)
 - maximum hop count before discarding BPDU [2-443](#)
 - port priority for selection of [2-444](#)
 - primary or secondary [2-447](#)
 - switch priority [2-446](#)
 - state changes
 - blocking to forwarding state [2-453](#)
 - enabling BPDU filtering [2-419, 2-451](#)
 - enabling BPDU guard [2-421, 2-451](#)
 - enabling Port Fast [2-451, 2-453](#)
 - forward-delay time [2-440](#)
 - MSTP (continued)
 - state changes (continued)
 - length of listening and learning states [2-440](#)
 - rapid transition to forwarding [2-430](#)
 - shutting down Port Fast-enabled ports [2-451](#)
 - state information display [2-383](#)
- MTU
 - configuring size [2-497](#)
 - displaying global setting [2-391](#)
- multicast group address, MVR [2-207](#)
- multicast groups, MVR [2-205](#)
- multicast router learning method [2-125](#)
- multicast router ports, configuring [2-125](#)
- multicast storm control [2-468](#)
- multicast VLAN, MVR [2-204](#)
- multicast VLAN registration
 - See MVR
- multiple hosts on authorized port [2-67](#)
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [2-205](#)
 - configuring [2-204](#)
 - configuring interfaces [2-207](#)
 - debug messages, display [B-19](#)
 - displaying [2-364](#)
 - displaying interface information [2-366](#)
 - members, displaying [2-368](#)
- mvr (global configuration) command [2-204](#)
- mvr (interface configuration) command [2-207](#)
- mvr vlan group command [2-208](#)

N

- native VLANs [2-492](#)
- Network Assistant requirements [xvi](#)
- nonegotiate
 - DTP messaging [2-479](#)

nonegotiate, speed [2-460](#)
 non-IP protocols
 denying [2-59](#)
 forwarding [2-214](#)
 non-IP traffic access lists [2-139](#)
 non-IP traffic forwarding
 denying [2-59](#)
 permitting [2-214](#)
 normal-range VLANs [2-512, 2-517](#)
 note, description [xvi](#)
 no vlan command [2-512, 2-521](#)

P

PAgP
 See EtherChannel
 pagp learn-method command [2-210](#)
 pagp port-priority command [2-212](#)
 password, VTP [2-531, 2-535](#)
 password-recovery mechanism, enabling and
 disabling [2-238](#)
 permit (MAC access-list configuration) command [2-214](#)
 per-VLAN spanning-tree plus
 See STP
 physical-port learner [2-210](#)
 PID, displaying [2-307](#)
 PIM-DVMRP, as multicast router learning method [2-125](#)
 police aggregate command [2-219](#)
 police command [2-217](#)
 policed-DSCP map [2-171](#)
 policy-map command [2-221](#)
 policy maps
 applying to an interface [2-240, 2-244](#)
 creating [2-221](#)
 displaying [2-375](#)
 policers
 displaying [2-348](#)
 for a single class [2-217](#)
 policy maps (continued)
 policers (continued)
 for multiple classes [2-165, 2-219](#)
 policed-DSCP map [2-171](#)
 traffic classification
 defining the class [2-29](#)
 defining trust states [2-505](#)
 setting DSCP or IP precedence values [2-242](#)
 Port Aggregation Protocol
 See EtherChannel
 port-based authentication
 AAA method list [2-3](#)
 debug messages, display [B-7](#)
 enabling IEEE 802.1x
 globally [2-62](#)
 per interface [2-71](#)
 guest VLAN [2-65](#)
 host modes [2-67](#)
 IEEE 802.1x AAA accounting methods [2-1](#)
 initialize an interface [2-68](#)
 manual control of authorization state [2-71](#)
 multiple hosts on authorized port [2-67](#)
 periodic re-authentication
 enabling [2-74](#)
 time between attempts [2-75](#)
 quiet period between failed authentication
 exchanges [2-75](#)
 re-authenticating IEEE 802.1x-enabled ports [2-73](#)
 resetting configurable IEEE 802.1x parameters [2-64](#)
 switch-to-authentication server retransmission
 time [2-75](#)
 switch-to-client frame-retransmission
 number [2-69 to 2-70](#)
 switch-to-client retransmission time [2-75](#)
 port-channel load-balance command [2-224](#)
 Port Fast, for spanning tree [2-453](#)
 port ranges, defining [2-56](#)
 ports, debugging [B-51](#)
 ports, protected [2-490](#)

port security

- aging [2-486](#)
- debug messages, display [B-53](#)
- enabling [2-481](#)
- violation error recovery [2-81](#)

port trust states for QoS [2-197](#)

port types, MVR [2-207](#)

power information, displaying [2-286](#)

priority-queue command [2-226](#)

privileged EXEC mode [1-2, 1-3](#)

product identification information, displaying [2-307](#)

protected ports, displaying [2-303](#)

pruning

- VLANs [2-492](#)
- VTP
 - displaying interface information [2-298](#)
 - enabling [2-531, 2-535](#)

pruning-eligible VLAN list [2-493](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [2-13](#)
- debug messages, display [B-2](#)
- displaying [2-253](#)

class maps

- creating [2-31](#)
- defining the match criteria [2-157](#)
- displaying [2-261](#)

defining the CoS value for an incoming packet [2-167](#)

displaying configuration information [2-253, 2-347](#)

DSCP transparency [2-179](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-169](#)
- defining DSCP-to-DSCP-mutation map [2-171](#)

QoS (continued)

egress queues

- allocating buffers [2-175](#)
- defining the CoS output queue threshold map [2-193](#)
- defining the DSCP output queue threshold map [2-195](#)
- displaying buffer allocations [2-351](#)
- displaying CoS output queue threshold map [2-355](#)
- displaying DSCP output queue threshold map [2-355](#)
- displaying queueing strategy [2-351](#)
- displaying queue-set settings [2-358](#)
- enabling bandwidth shaping and scheduling [2-464](#)
- enabling bandwidth sharing and scheduling [2-466](#)
- limiting the maximum output on a port [2-462](#)
- mapping a port to a queue-set [2-228](#)
- mapping CoS values to a queue and threshold [2-193](#)
- mapping DSCP values to a queue and threshold [2-195](#)
- setting maximum and reserved memory allocations [2-177](#)
- setting WTD thresholds [2-177](#)

enabling [2-163](#)

ingress queues

- allocating buffers [2-183](#)
- assigning SRR scheduling weights [2-181](#)
- defining the CoS input queue threshold map [2-185](#)
- defining the DSCP input queue threshold map [2-187](#)
- displaying buffer allocations [2-351](#)
- displaying CoS input queue threshold map [2-355](#)
- displaying DSCP input queue threshold map [2-355](#)
- displaying queueing strategy [2-351](#)
- displaying settings for [2-349](#)
- enabling the priority queue [2-189](#)
- mapping CoS values to a queue and threshold [2-185](#)
- mapping DSCP values to a queue and threshold [2-187](#)
- setting WTD thresholds [2-191](#)

maps

- defining [2-171, 2-185, 2-187, 2-193, 2-195](#)
- displaying [2-355](#)

QoS (continued)

policy maps

applying an aggregate policer [2-219](#)applying to an interface [2-240, 2-244](#)creating [2-221](#)defining policers [2-165, 2-217](#)displaying policers [2-348](#)displaying policy maps [2-375](#)policed-DSCP map [2-171](#)setting DSCP or IP precedence values [2-242](#)traffic classifications [2-29](#)trust states [2-505](#)port trust states [2-197](#)queues, enabling the expedite [2-226](#)

statistics

in-profile and out-of-profile packets [2-351](#)packets enqueued or dropped [2-351](#)sent and received CoS values [2-351](#)sent and received DSCP values [2-351](#)trusted boundary for IP phones [2-197](#)

quality of service

See QoS

querytime, MVR [2-204](#)queue-set command [2-228](#)

R

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-229](#)re-authenticating IEEE 802.1x-enabled ports [2-73](#)

re-authentication

periodic [2-74](#)time between attempts [2-75](#)receiver ports, MVR [2-207](#)receiving flow-control packets [2-83](#)

recovery mechanism

causes [2-81](#)display [2-259, 2-287, 2-291](#)timer interval [2-81](#)redundancy for cluster switches [2-53](#)remote-span command [2-231](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)renew ip dhcp snooping database command [2-233](#)

requirements

cluster [xvi](#)device manager [xvi](#)Network Assistant [xvi](#)reset (boot loader) command [A-18](#)reset command [2-524](#)resource templates, displaying [2-380](#)rmdir (boot loader) command [A-19](#)rmon collection stats command [2-235](#)root guard, for spanning tree [2-428](#)

RSPAN

configuring [2-199](#)displaying [2-361](#)filter RSPAN traffic [2-199](#)remote-span command [2-231](#)

sessions

add interfaces to [2-199](#)displaying [2-361](#)start new [2-199](#)

Ssdm prefer command [2-236](#)

SDM templates

displaying [2-380](#)secure ports, limitations [2-483](#)sending flow-control packets [2-83](#)service password-recovery command [2-238](#)

- service-policy command [2-240](#)
- set (boot loader) command [A-20](#)
- set command [2-242](#)
- setup command [2-244](#)
- setup express command [2-247](#)
- show access-lists command [2-249](#)
- show archive status command [2-252](#)
- show auto qos command [2-253](#)
- show boot command [2-257](#)
- show cable-diagnostics tdr command [2-259](#)
- show changes command [2-524](#)
- show class-map command [2-261](#)
- show cluster candidates command [2-264](#)
- show cluster command [2-262](#)
- show cluster members command [2-266](#)
- show controllers cpu-interface command [2-268](#)
- show controllers ethernet-controller command [2-270](#)
- show controllers team command [2-277](#)
- show controller utilization command [2-279](#)
- show current command [2-524](#)
- show dot1x command [2-281](#)
- show dtp [2-284](#)
- show env command [2-286](#)
- show errdisable detect command [2-287](#)
- show errdisable flap-values command [2-289](#)
- show errdisable recovery command [2-291](#)
- show etherchannel command [2-293](#)
- show flowcontrol command [2-296](#)
- show interfaces command [2-298](#)
- show interfaces counters command [2-305](#)
- show inventory command [2-307](#)
- show ip dhcp snooping binding command [2-309](#)
- show ip dhcp snooping command [2-308](#)
- show ip dhcp snooping database command [2-311](#)
- show ip igmp profile command [2-313](#)
- show ip igmp snooping command [2-314](#)
- show ip igmp snooping groups command [2-317](#)
- show ip igmp snooping mrouter command [2-319](#)
- show ip igmp snooping querier command [2-321](#)
- show lacp command [2-323](#)
- show mac access-group command [2-327](#)
- show mac address-table address command [2-331](#)
- show mac address-table aging time command [2-333](#)
- show mac address-table command [2-329](#)
- show mac address-table count command [2-335](#)
- show mac address-table dynamic command [2-337](#)
- show mac address-table interface command [2-339](#)
- show mac address-table notification command [2-341](#)
- show mac address-table static command [2-343](#)
- show mac address-table vlan command [2-345](#)
- show mls qos aggregate-policer command [2-348](#)
- show mls qos command [2-347](#)
- show mls qos input-queue command [2-349](#)
- show mls qos interface command [2-351](#)
- show mls qos maps command [2-355](#)
- show mls qos queue-set command [2-358](#)
- show mls qos vlan command [2-360](#)
- show monitor command [2-361](#)
- show mvr command [2-364](#)
- show mvr interface command [2-366](#)
- show mvr members command [2-368](#)
- show pagp command [2-370](#)
- show parser macro command [2-372](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)

- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-375](#)
- show port security command [2-377](#)
- show proposed command [2-524](#)
- show sdm prefer command [2-380](#)
- show setup express command [2-382](#)
- show spanning-tree command [2-383](#)
- show storm-control command [2-389](#)
- show system mtu command [2-391](#)
- show trust command [2-505](#)
- show udd command [2-392](#)
- show version command [2-395](#)
- show vlan command [2-397](#)
- show vlan command, fields [2-398](#)
- show vmps command [2-400](#)
- show vtp command [2-403](#)
- shutdown command [2-407](#)
- shutdown vlan command [2-408](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-412](#)
- SNMP informs, enabling the sending of [2-409](#)
- snmp-server enable traps command [2-409](#)
- snmp-server host command [2-412](#)
- snmp trap mac-notification command [2-416](#)
- SNMP traps
 - enabling MAC address notification trap [2-416](#)
 - enabling the MAC address notification feature [2-412](#)
 - enabling the sending of [2-409](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-58](#)
 - downloading [2-5](#)
 - software images (continued)
 - upgrading [2-5](#)
 - uploading [2-11](#)
- software version, displaying [2-395](#)
- source ports, MVR [2-207](#)
- SPAN
 - configuring [2-199](#)
 - debug messages, display [B-18](#)
 - displaying [2-361](#)
 - filter SPAN traffic [2-199](#)
 - sessions
 - add interfaces to [2-199](#)
 - displaying [2-361](#)
 - start new [2-199](#)
- spanning-tree backbonefast command [2-418](#)
- spanning-tree bpduguard command [2-421](#)
- spanning-tree bpduguard command [2-421](#)
- spanning-tree cost command [2-423](#)
- spanning-tree etherchannel command [2-425](#)
- spanning-tree extend system-id command [2-427](#)
- spanning-tree guard command [2-428](#)
- spanning-tree link-type command [2-430](#)
- spanning-tree loopguard default command [2-432](#)
- spanning-tree mode command [2-434](#)
- spanning-tree mst configuration command [2-436](#)
- spanning-tree mst cost command [2-438](#)
- spanning-tree mst forward-time command [2-440](#)
- spanning-tree mst hello-time command [2-441](#)
- spanning-tree mst max-age command [2-442](#)
- spanning-tree mst max-hops command [2-443](#)
- spanning-tree mst port-priority command [2-444](#)
- spanning-tree mst priority command [2-446](#)
- spanning-tree mst root command [2-447](#)
- spanning-tree portfast (global configuration)
 - command [2-451](#)
- spanning-tree portfast (interface configuration)
 - command [2-453](#)
- spanning-tree port-priority command [2-449](#)

Spanning Tree Protocol

See STP

spanning-tree uplinkfast command [2-455](#)spanning-tree vlan command [2-457](#)speed command [2-460](#)srr-queue bandwidth limit command [2-462](#)srr-queue bandwidth shape command [2-464](#)srr-queue bandwidth share command [2-466](#)SSH, configuring version [2-129](#)static-access ports, configuring [2-471](#)statistics, Ethernet group [2-235](#)sticky learning, enabling [2-481](#)storm-control command [2-468](#)

STP

BackboneFast [2-418](#)counters, clearing [2-39](#)

debug messages, display

BackboneFast events [B-57](#)MSTP [B-60](#)optimized BPDUs handling [B-59](#)spanning-tree activity [B-55](#)switch shim [B-62](#)transmitted and received BPDUs [B-58](#)UplinkFast [B-64](#)detection of indirect link failures [2-418](#)EtherChannel misconfiguration [2-425](#)extended system ID [2-427](#)path cost [2-423](#)protocol modes [2-434](#)

root port

accelerating choice of new [2-455](#)loop guard [2-428](#)preventing from becoming designated [2-428](#)restricting which can be root [2-428](#)root guard [2-428](#)UplinkFast [2-455](#)

root switch

affects of extended system ID [2-427, 2-458](#)hello-time [2-457](#)

STP (continued)

root switch (continued)

interval between BPDU messages [2-457](#)interval between hello BPDU messages [2-457](#)max-age [2-457](#)port priority for selection of [2-449](#)primary or secondary [2-457](#)switch priority [2-457](#)

state changes

blocking to forwarding state [2-453](#)enabling BPDU filtering [2-419, 2-451](#)enabling BPDU guard [2-421, 2-451](#)enabling Port Fast [2-451, 2-453](#)enabling timer to recover from error state [2-81](#)forward-delay time [2-457](#)length of listening and learning states [2-457](#)shutting down Port Fast-enabled ports [2-451](#)state information display [2-383](#)VLAN options [2-446, 2-457](#)

Switched Port Analyzer

See SPAN

switchport access command [2-471](#)switchport backup interface command [2-473](#)switchport block command [2-475](#)switchport host command [2-476](#)switchport mode command [2-477](#)switchport nonegotiate command [2-479](#)switchport port-security aging command [2-486](#)switchport port-security command [2-481](#)switchport priority extend command [2-488](#)switchport protected command [2-490](#)switchports, displaying [2-298](#)switchport trunk command [2-492](#)switchport voice vlan command [2-495](#)system message logging, save message to flash [2-135](#)system mtu command [2-497](#)system resource templates [2-236](#)

T

tar files, creating, listing, and extracting [2-8](#)

TDR, running [2-499](#)

Telnet, using to communicate to cluster switches [2-229](#)

temperature information, displaying [2-286](#)

templates, SDM [2-236](#)

templates, system resources [2-236](#)

test cable-diagnostics tdr command [2-499](#)

traceroute mac command [2-500](#)

traceroute mac ip command [2-503](#)

trunking, VLAN mode [2-477](#)

trunk mode [2-477](#)

trunk ports [2-477](#)

trunks, to non-DTP device [2-478](#)

trusted boundary for QoS [2-197](#)

trusted port states for QoS [2-197](#)

type (boot loader) command [A-23](#)

U

UDLD

- aggressive mode [2-507, 2-509](#)
- debug messages, display [B-72](#)
- enable globally [2-507](#)
- enable per interface [2-509](#)
- error recovery timer [2-81](#)
- message timer [2-507](#)
- normal mode [2-507, 2-509](#)
- reset a shutdown interface [2-511](#)
- status [2-392](#)

udld command [2-507](#)

udld port command [2-509](#)

udld reset command [2-511](#)

unicast storm control [2-468](#)

UniDirectional Link Detection

- See UDLD

unknown multicast traffic, preventing [2-475](#)

unknown unicast traffic, preventing [2-475](#)

unset (boot loader) command [A-24](#)

upgrading

- software images [2-5](#)
- monitoring status of [2-252](#)

upgrading information

- See release notes

UplinkFast, for STP [2-455](#)

user EXEC mode [1-2](#)

V

version (boot loader) command [A-26](#)

vlan (global configuration) command [2-512](#)

vlan (VLAN configuration) command [2-517](#)

VLAN configuration

- rules [2-515, 2-519](#)
- saving [2-512, 2-521](#)

VLAN configuration mode

- commands
 - VLAN [2-517](#)
 - VTP [2-535](#)
- description [1-4](#)
- entering [2-523](#)
- summary [1-2](#)

vlan database command [2-523](#)

VLAN ID range [2-512, 2-517](#)

VLAN Query Protocol

- See VQP

VLANs

- adding [2-512](#)
- configuring [2-512, 2-517](#)
- debug messages, display
 - ISL [B-68](#)
 - VLAN IOS file system error tests [B-67](#)
 - VLAN manager activity [B-65](#)
 - VTP [B-70](#)
- displaying configurations [2-397](#)
- extended-range [2-512](#)

VLANs (continued)

MAC addresses

displaying [2-345](#)number of [2-335](#)media types [2-514, 2-519](#)normal-range [2-512, 2-517](#)restarting [2-408](#)saving the configuration [2-512](#)shutting down [2-408](#)SNMP traps for VTP [2-410, 2-413](#)suspending [2-408](#)variables [2-517](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-529](#)displaying [2-400](#)error recovery timer [2-81](#)reconfirming dynamic VLAN assignments [2-526](#)vmmps reconfirm (global configuration) command [2-527](#)vmmps reconfirm (privileged EXEC) command [2-526](#)vmmps retry command [2-528](#)vmmps server command [2-529](#)

voice VLAN

configuring [2-495](#)setting port priority [2-488](#)

VQP

and dynamic-access ports [2-472](#)clearing client statistics [2-41](#)displaying information [2-400](#)per-server retry count [2-528](#)reconfirmation interval [2-527](#)reconfirming dynamic VLAN assignments [2-526](#)

VTP

changing characteristics [2-531](#)clearing pruning counters [2-42](#)

configuring

domain name [2-531, 2-535](#)file name [2-531](#)mode [2-531, 2-535](#)password [2-531, 2-535](#)counters display fields [2-404](#)displaying information [2-403](#)

enabling

pruning [2-531, 2-535](#)Version 2 [2-531, 2-535](#)mode [2-531, 2-535](#)pruning [2-531, 2-535](#)saving the configuration [2-512, 2-521](#)statistics [2-403](#)status [2-403](#)status display fields [2-405](#)vtp (global configuration) command [2-531](#)vtp (VLAN configuration) command [2-535](#)

