



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
AAA methods [2-3](#)
abort command [2-539](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-98](#)
 MAC, displaying [2-336](#)
access mode [2-492](#)
access ports [2-492](#)
ACEs [2-62](#), [2-225](#)
ACLs
 deny [2-60](#)
 displaying [2-257](#)
 for non-IP protocols [2-146](#)
 IP [2-98](#)
 on Layer 2 interfaces [2-98](#)
 permit [2-223](#)
address aliasing [2-214](#)
aggregate-port learner [2-219](#)
allowed VLANs [2-507](#)
apply command [2-539](#)
archive download-sw command [2-5](#)
archive tar command [2-8](#)
archive upload-sw command [2-11](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan

auth-fail max-attempts

 See dot1x auth-fail max-attempts

auth-fail vlan

 See dot1x auth-fail vlan

authorization state of controlled port [2-78](#)

autonegotiation of duplex mode [2-85](#)

auto qos voip command [2-13](#)

B

BackboneFast, for STP [2-430](#)

backup interfaces

 configuring [2-488](#)

 displaying [2-306](#)

boot (boot loader) command [A-2](#)

boot bootlpr command [2-17](#)

boot config-file command [2-18](#)

boot enable-break command [2-19](#)

boot helper command [2-20](#)

boot helper-config file command [2-21](#)

booting

 Cisco IOS image [2-24](#)

 displaying environment variables [2-265](#)

 interrupting [2-19](#)

 manually [2-22](#)

boot loader

 accessing [A-1](#)

 booting

 Cisco IOS image [A-2](#)

 helper image [2-20](#)

 directories

 creating [A-15](#)

 displaying a list of [A-7](#)

boot loader (continued)
 directories (continued)
 removing [A-19](#)
 displaying
 available commands [A-12](#)
 memory heap utilization [A-14](#)
 version [A-26](#)
 environment variables
 described [A-20](#)
 displaying settings [A-20](#)
 location of [A-21](#)
 setting [A-20](#)
 unsetting [A-24](#)
 files
 copying [A-5](#)
 deleting [A-6](#)
 displaying a list of [A-7](#)
 displaying the contents of [A-4, A-16, A-23](#)
 renaming [A-17](#)
 file system
 formatting [A-10](#)
 initializing flash [A-9](#)
 running a consistency check [A-11](#)
 loading helper images [A-13](#)
 prompt [A-1](#)
 resetting the system [A-18](#)
 boot manual command [2-22](#)
 boot private-config-file command [2-23](#)
 boot system command [2-24](#)
 BPDU filtering, for spanning tree [2-431, 2-465](#)
 BPDU guard, for spanning tree [2-433, 2-465](#)
 broadcast storm control [2-483](#)

C

candidate switches
 See clusters
 cat (boot loader) command [A-4](#)
 caution, description [xx](#)

channel-group command [2-25](#)
 channel-protocol command [2-28](#)
 Cisco Network Assistant
 See Network Assistant [xx](#)
 Cisco SoftPhone
 auto-QoS configuration [2-13](#)
 trusting packets sent from [2-206](#)
 class command [2-29](#)
 class-map command [2-31](#)
 class maps
 creating [2-31](#)
 defining the match criteria [2-166](#)
 displaying [2-269](#)
 class of service
 See CoS
 clear ip dhcp snooping database command [2-33](#)
 clear lacp command [2-34](#)
 clear mac address-table command [2-35, 2-36](#)
 clear pagp command [2-37](#)
 clear port-security command [2-38](#)
 clear spanning-tree counters command [2-40](#)
 clear spanning-tree detected-protocols command [2-41](#)
 clear vmps statistics command [2-42](#)
 clear vtp counters command [2-43](#)
 cluster commander-address command [2-44](#)
 cluster discovery hop-count command [2-46](#)
 cluster enable command [2-47](#)
 cluster holdtime command [2-49](#)
 cluster member command [2-50](#)
 cluster outside-interface command [2-52](#)
 cluster requirements [xxi](#)
 cluster run command [2-53](#)
 clusters
 adding candidates [2-50](#)
 binding to HSRP group [2-54](#)
 building manually [2-50](#)
 communicating with
 devices outside the cluster [2-52](#)
 members by using Telnet [2-237](#)

clusters (continued)

- debug messages, display [B-5](#)
- displaying
 - candidate switches [2-272](#)
 - debug messages [B-5](#)
 - member switches [2-274](#)
 - status [2-270](#)
- hop-count limit for extended discovery [2-46](#)
- HSRP standby groups [2-54](#)
- redundancy [2-54](#)
- SNMP trap [2-421](#)
- cluster standby-group command [2-54](#)
- cluster timer command [2-56](#)
- command modes defined [1-1](#)
- command switch
 - See clusters
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-18, 2-23](#)
- configuring multiple interfaces [2-95](#)
- config-vlan mode
 - commands [2-528](#)
 - description [1-4](#)
 - entering [2-527](#)
 - summary [1-2](#)
- conventions
 - command [xix](#)
 - for examples [xx](#)
 - publication [xix](#)
 - text [xix](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-176](#)
 - overriding the incoming value [2-176](#)
- CoS-to-DSCP map [2-180](#)
- CPU ASIC statistics, displaying [2-276](#)
- crashinfo files [2-90](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-8](#)
- debug etherchannel command [B-9](#)
- debug interface command [B-11](#)
- debug ip dhcp snooping command [B-10](#)
- debug ip igmp filter command [B-12](#)
- debug ip igmp max-groups command [B-13](#)
- debug ip igmp snooping command [B-14](#)
- debug lacp command [B-15](#)
- debug mac-notification command [B-16](#)
- debug matm command [B-17](#)
- debug matm move update command [B-18](#)
- debug monitor command [B-19](#)
- debug mvrdbg command [B-20](#)
- debug nvram command [B-21](#)
- debug pagp command [B-22](#)
- debug platform acl command [B-23](#)
- debug platform backup interface command [B-24](#)
- debug platform cpu-queues command [B-25](#)
- debug platform dot1x command [B-27](#)
- debug platform etherchannel command [B-28](#)
- debug platform forw-tcam command [B-29](#)
- debug platform ip dhcp command [B-30](#)
- debug platform ip igmp snooping command [B-31](#)
- debug platform led command [B-33](#)
- debug platform matm command [B-34](#)
- debug platform messaging application command [B-36](#)
- debug platform phy command [B-37](#)
- debug platform pm command [B-39](#)
- debug platform port-asic command [B-41](#)
- debug platform port-security command [B-42](#)
- debug platform qos-acl-tcam command [B-43](#)
- debug platform resource-manager command [B-44](#)
- debug platform snmp command [B-45](#)

debug platform span command [B-46](#)
 debug platform supervisor-asic command [B-47](#)
 debug platform sw-bridge command [B-48](#)
 debug platform tcam command [B-49](#)
 debug platform uddl command [B-51](#)
 debug platform vlan command [B-52](#)
 debug pm command [B-53](#)
 debug port-security command [B-55](#)
 debug qos-manager command [B-56](#)
 debug spanning-tree backbonefast command [B-59](#)
 debug spanning-tree bpdu command [B-60](#)
 debug spanning-tree bpdu-opt command [B-61](#)
 debug spanning-tree command [B-57](#)
 debug spanning-tree mstp command [B-62](#)
 debug spanning-tree switch command [B-64](#)
 debug spanning-tree uplinkfast command [B-66](#)
 debug sw-vlan command [B-67](#)
 debug sw-vlan ifs command [B-69](#)
 debug sw-vlan notification command [B-70](#)
 debug sw-vlan vtp command [B-72](#)
 debug uddl command [B-74](#)
 debug vqpc command [B-76](#)
 define interface-range command [2-57](#)
 delete (boot loader) command [A-6](#)
 delete command [2-59](#)
 deny command [2-60](#)
 detect mechanism, causes [2-86](#)
 device manager requirements [xx](#)
 DHCP snooping
 accepting untrusted packets from edge switch [2-109](#)
 enabling
 on a VLAN [2-114](#)
 option 82 [2-107, 2-109](#)
 trust on an interface [2-112](#)
 error recovery timer [2-88](#)
 rate limiting [2-111](#)

DHCP snooping binding database
 binding file, configuring [2-105](#)
 bindings
 adding [2-103](#)
 deleting [2-103](#)
 displaying [2-318](#)
 clearing database agent statistics [2-33](#)
 database agent, configuring [2-105](#)
 displaying
 binding entries [2-318](#)
 database agent status [2-320](#)
 renewing [2-241](#)
 dir (boot loader) command [A-7](#)
 directories, deleting [2-59](#)
 documentation, related [xx](#)
 document conventions [xix](#)
 domain name, VTP [2-546, 2-550](#)
 dot1x auth-fail max-attempts [2-65](#)
 dot1x auth-fail vlan [2-67](#)
 dot1x command [2-63](#)
 dot1x control-direction command [2-69](#)
 dot1x default command [2-71](#)
 dot1x guest-vlan command [2-72](#)
 dot1x host-mode command [2-74](#)
 dot1x initialize command [2-75](#)
 dot1x max-req command [2-76, 2-77](#)
 dot1x port-control command [2-78](#)
 dot1x re-authenticate command [2-80](#)
 dot1x reauthentication command [2-81](#)
 dot1x timeout command [2-82](#)
 DSCP-to-CoS map [2-180](#)
 DSCP-to-DSCP-mutation map [2-180](#)
 DTP [2-493](#)
 DTP flap
 error detection for [2-86](#)
 error recovery timer [2-88](#)
 DTP negotiation [2-494](#)

- dual-purpose uplink ports
 - displaying configurable options [2-309](#)
 - displaying the active media [2-312](#)
 - selecting the type [2-170](#)
- duplex command [2-84](#)
- dynamic-access ports
 - configuring [2-486](#)
 - restrictions [2-487](#)
- dynamic auto VLAN membership mode [2-492](#)
- dynamic desirable VLAN membership mode [2-492](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-77](#)
 - response time before retransmitting [2-82](#)
- environment variables, displaying [2-265](#)
- errdisable detect cause command [2-86](#)
- errdisable recovery command [2-88](#)
- error conditions, displaying [2-297](#)
- error disable detection [2-86](#)
- error-disabled interfaces, displaying [2-306](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-25](#)
 - creating port-channel logical interface [2-93](#)
 - debug EtherChannel/PAgP, display [B-9](#)
 - debug platform-specific events, display [B-28](#)
 - displaying [2-301](#)
 - interface information, displaying [2-306](#)
 - LACP
 - clearing channel-group information [2-34](#)
 - debug messages, display [B-15](#)
 - displaying [2-332](#)
 - modes [2-25](#)
 - port priority for hot-standby ports [2-138](#)

- EtherChannel (continued)
 - LACP (continued)
 - restricting a protocol [2-28](#)
 - system priority [2-140](#)
 - load-distribution methods [2-232](#)
 - PAgP
 - aggregate-port learner [2-219](#)
 - clearing channel-group information [2-37](#)
 - debug messages, display [B-22](#)
 - displaying [2-381](#)
 - error detection for [2-86](#)
 - error recovery timer [2-88](#)
 - learn method [2-219](#)
 - modes [2-25](#)
 - physical-port learner [2-219](#)
 - priority of interface for transmitted traffic [2-221](#)
- Ethernet controller, internal register display [2-278](#)
- Ethernet statistics, collecting [2-243](#)
- examples, conventions for [xx](#)
- exception crashinfo command [2-90](#)
- exit command [2-539](#)
- extended discovery of candidate switches [2-46](#)
- extended-range VLANs
 - and allowed VLAN list [2-507](#)
 - and pruning-eligible list [2-507](#)
 - configuring [2-527](#)
- extended system ID for STP [2-439](#)

F

- fan information, displaying [2-294](#)
- file name, VTP [2-546](#)
- files, deleting [2-59](#)
- flash_init (boot loader) command [A-9](#)
- Flex Links
 - configuring [2-488](#)
 - displaying [2-306](#)
- flowcontrol command [2-91](#)
- format (boot loader) command [A-10](#)

forwarding results, display [C-5](#)
 frame forwarding information, displaying [C-5](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-257](#)
 help (boot loader) command [A-12](#)
 hop-count limit for clusters [2-46](#)
 host connection, port configuration [2-491](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-54](#)
 standby group [2-54](#)

I

IEEE 802.1x
 and switchport modes [2-493](#)
 violation error recovery [2-88](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-66](#)
 IGMP filters
 applying [2-115](#)
 debug messages, display [B-12](#)
 IGMP groups, setting maximum [2-116](#)
 IGMP maximum groups, debugging [B-13](#)
 IGMP profiles
 creating [2-118](#)
 displaying [2-322](#)

IGMP snooping
 adding ports as a static member of a group [2-134](#)
 displaying [2-323, 2-328, 2-330](#)
 enabling [2-120](#)
 enabling the configurable-leave timer [2-122](#)
 enabling the Immediate-Leave feature [2-131](#)
 flooding query count [2-128](#)
 interface topology change notification behavior [2-130](#)
 multicast table [2-326](#)
 querier [2-124](#)
 query solicitation [2-128](#)
 report suppression [2-126](#)
 switch topology change notification behavior [2-128](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-216](#)
 immediate-leave processing [2-131](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-93](#)
 interface range command [2-95](#)
 interface-range macros [2-57](#)
 interfaces
 assigning Ethernet interface to channel group [2-25](#)
 configuring [2-84](#)
 configuring multiple [2-95](#)
 creating port-channel logical [2-93](#)
 debug messages, display [B-11](#)
 disabling [2-419](#)
 displaying the MAC address table [2-348](#)
 restarting [2-419](#)
 interface speed, configuring [2-475](#)
 interface vlan command [2-97](#)
 internal registers, displaying [2-278, 2-285](#)
 Internet Group Management Protocol
 See IGMP

invalid GBIC

- error detection for [2-86](#)
- error recovery timer [2-88](#)

ip access-group command [2-98](#)

ip address command [2-100](#)

IP addresses, setting [2-100](#)

IP DHCP snooping

- See DHCP snooping

ip dhcp snooping binding command [2-103](#)

ip dhcp snooping command [2-102](#)

ip dhcp snooping database command [2-105](#)

ip dhcp snooping information option allow-untrusted command [2-109](#)

ip dhcp snooping information option command [2-107](#)

ip dhcp snooping limit rate command [2-111](#)

ip dhcp snooping trust command [2-112](#)

ip dhcp snooping verify command [2-113](#)

ip dhcp snooping vlan command [2-114](#)

ip igmp filter command [2-115](#)

ip igmp max-groups command [2-116](#)

ip igmp profile command [2-118](#)

ip igmp snooping command [2-120](#)

ip igmp snooping last-member-query-interval command [2-122](#)

ip igmp snooping querier command [2-124](#)

ip igmp snooping report-suppression command [2-126](#)

ip igmp snooping tcn command [2-128](#)

ip igmp snooping tcn flood command [2-130](#)

ip igmp snooping vlan immediate-leave command [2-131](#)

ip igmp snooping vlan mrouter command [2-132](#)

ip igmp snooping vlan static command [2-134](#)

IP multicast addresses [2-213](#)

IP phones

- auto-QoS configuration [2-13](#)
- trusting packets sent from [2-206](#)

IP-precedence-to-DSCP map [2-180](#)

IP source guard

- displaying
 - dynamic binding entries only [2-318](#)

ip ssh command [2-136](#)

J

jumbo frames

- See MTU

L

LACP

- See EtherChannel

lacp port-priority command [2-138](#)

lacp system-priority command [2-140](#)

Layer 2 traceroute

- IP addresses [2-518](#)
- MAC addresses [2-515](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

- See EtherChannel

link flap

- error detection for [2-86](#)
- error recovery timer [2-88](#)

load_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-232](#)

logging file command [2-142](#)

logical interface [2-93](#)

loopback error

- detection for [2-86](#)
- recovery timer [2-88](#)

loop guard, for spanning tree [2-440, 2-444](#)

M

- mac access-group command [2-144](#)
- MAC access-groups, displaying [2-336](#)
- MAC access list configuration mode [2-146](#)
- mac access-list extended command [2-146](#)
- MAC access lists [2-60](#)
- MAC addresses
 - displaying
 - aging time [2-342](#)
 - all [2-340](#)
 - dynamic [2-346](#)
 - MAC address-table move updates [2-350](#)
 - notification settings [2-352](#)
 - number of addresses in a VLAN [2-344](#)
 - per interface [2-348](#)
 - per VLAN [2-356](#)
 - static [2-354](#)
 - static and dynamic entries [2-338](#)
 - dynamic
 - aging time [2-148](#)
 - deleting [2-35](#)
 - displaying [2-346](#)
 - enabling MAC address notification [2-151](#)
 - enabling MAC address-table move update [2-149](#)
 - static
 - adding and removing [2-153](#)
 - displaying [2-354](#)
 - dropping on an interface [2-154](#)
 - tables [2-340](#)
- MAC address notification, debugging [B-16](#)
- mac address-table aging-time [2-144](#)
- mac address-table aging-time command [2-148](#)
- mac address-table move update command [2-149](#)
- mac address-table notification command [2-151](#)
- mac address-table static command [2-153](#)
- mac address-table static drop command [2-154](#)
- macro apply command [2-156](#)
- macro description command [2-159](#)
- macro global command [2-160](#)
- macro global description command [2-163](#)
- macro name command [2-164](#)
- macros
 - adding a description [2-159](#)
 - adding a global description [2-163](#)
 - applying [2-160](#)
 - creating [2-164](#)
 - displaying [2-383](#)
 - interface range [2-57, 2-95](#)
 - specifying parameter values [2-160](#)
 - tracing [2-160](#)
- manual
 - audience [xix](#)
 - purpose of [xix](#)
- maps
 - QoS
 - defining [2-180](#)
 - displaying [2-366](#)
- match (class-map configuration) command [2-166](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-168](#)
- media-type command [2-170](#)
- member switches
 - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-174](#)
- mls qos command [2-172](#)
- mls qos cos command [2-176](#)
- mls qos dscp-mutation command [2-178](#)
- mls qos map command [2-180](#)
- mls qos queue-set output buffers command [2-184](#)
- mls qos queue-set output threshold command [2-186](#)
- mls qos rewrite ip dscp command [2-188](#)
- mls qos srr-queue input bandwidth command [2-190](#)
- mls qos srr-queue input buffers command [2-192](#)
- mls qos-srr-queue input cos-map command [2-194](#)

- mls qos srr-queue input dscp-map command [2-196](#)
- mls qos srr-queue input priority-queue command [2-198](#)
- mls qos srr-queue input threshold command [2-200](#)
- mls qos-srr-queue output cos-map command [2-202](#)
- mls qos srr-queue output dscp-map command [2-204](#)
- mls qos trust command [2-206](#)
- mode, MVR [2-213](#)
- Mode button, and password recovery [2-246](#)
- modes, commands [1-1](#)
- monitor session command [2-208](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-395](#)
 - interoperability [2-41](#)
 - link type [2-442](#)
- MST region
 - aborting changes [2-448](#)
 - applying changes [2-448](#)
 - configuration name [2-448](#)
 - configuration revision number [2-448](#)
 - current or pending display [2-448](#)
 - displaying [2-395](#)
 - MST configuration mode [2-448](#)
 - VLANs-to-instance mapping [2-448](#)
- path cost [2-450](#)
- protocol mode [2-446](#)
- restart protocol migration process [2-41](#)
- root port
 - loop guard [2-440](#)
 - preventing from becoming designated [2-440](#)
 - restricting which can be root [2-440](#)
 - root guard [2-440](#)
- root switch
 - affects of extended system ID [2-439](#)
 - hello-time [2-453, 2-461](#)
 - interval between BPDU messages [2-454](#)
 - interval between hello BPDU messages [2-453, 2-461](#)
 - max-age [2-454](#)
 - maximum hop count before discarding BPDU [2-455](#)

- MSTP (continued)
 - root switch (continued)
 - port priority for selection of [2-457](#)
 - primary or secondary [2-461](#)
 - switch priority [2-460](#)
 - state changes
 - blocking to forwarding state [2-467](#)
 - enabling BPDU filtering [2-431, 2-465](#)
 - enabling BPDU guard [2-433, 2-465](#)
 - enabling Port Fast [2-465, 2-467](#)
 - forward-delay time [2-452](#)
 - length of listening and learning states [2-452](#)
 - rapid transition to forwarding [2-442](#)
 - shutting down Port Fast-enabled ports [2-465](#)
 - state information display [2-394](#)
- MTU
 - configuring size [2-512](#)
 - displaying global setting [2-402](#)
- multicast group address, MVR [2-216](#)
- multicast groups, MVR [2-214](#)
- multicast router learning method [2-132](#)
- multicast router ports, configuring [2-132](#)
- multicast storm control [2-483](#)
- multicast VLAN, MVR [2-213](#)
- multicast VLAN registration
 - See MVR
- multiple hosts on authorized port [2-74](#)
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [2-214](#)
 - configuring [2-213](#)
 - configuring interfaces [2-216](#)
 - debug messages, display [B-20](#)
 - displaying [2-375](#)
 - displaying interface information [2-377](#)
 - members, displaying [2-379](#)
- mvr (global configuration) command [2-213](#)

mvr (interface configuration) command [2-216](#)
 mvr vlan group command [2-217](#)

N

native VLANs [2-507](#)
 Network Assistant requirements **xx**
 negotiate
 DTP messaging [2-494](#)
 negotiate, speed [2-475](#)
 non-IP protocols
 denying [2-60](#)
 forwarding [2-223](#)
 non-IP traffic access lists [2-146](#)
 non-IP traffic forwarding
 denying [2-60](#)
 permitting [2-223](#)
 normal-range VLANs [2-527, 2-532](#)
 note, description **xx**
 no vlan command [2-527, 2-536](#)

P

PAgP
 See EtherChannel
 pagp learn-method command [2-219](#)
 pagp port-priority command [2-221](#)
 password, VTP [2-546, 2-550](#)
 password-recovery mechanism, enabling and
 disabling [2-246](#)
 permit (MAC access-list configuration) command [2-223](#)
 per-VLAN spanning-tree plus
 See STP
 physical-port learner [2-219](#)
 PID, displaying [2-316](#)
 PIM-DVMRP, as multicast router learning method [2-132](#)
 police aggregate command [2-228](#)
 police command [2-226](#)
 policed-DSCP map [2-180](#)

policy-map command [2-230](#)
 policy maps
 applying to an interface [2-248, 2-252](#)
 creating [2-230](#)
 displaying [2-386](#)
 policers
 displaying [2-359](#)
 for a single class [2-226](#)
 for multiple classes [2-174, 2-228](#)
 policed-DSCP map [2-180](#)
 traffic classification
 defining the class [2-29](#)
 defining trust states [2-520](#)
 setting DSCP or IP precedence values [2-250](#)
 Port Aggregation Protocol
 See EtherChannel
 port-based authentication
 AAA method list [2-3](#)
 debug messages, display [B-7](#)
 enabling IEEE 802.1x
 globally [2-63](#)
 per interface [2-78](#)
 guest VLAN [2-72](#)
 host modes [2-74](#)
 IEEE 802.1x AAA accounting methods [2-1](#)
 initialize an interface [2-75](#)
 manual control of authorization state [2-78](#)
 multiple hosts on authorized port [2-74](#)
 periodic re-authentication
 enabling [2-81](#)
 time between attempts [2-82](#)
 quiet period between failed authentication
 exchanges [2-82](#)
 re-authenticating IEEE 802.1x-enabled ports [2-80](#)
 resetting configurable IEEE 802.1x parameters [2-71](#)
 switch-to-authentication server retransmission
 time [2-82](#)
 switch-to-client frame-retransmission
 number [2-76 to 2-77](#)
 switch-to-client retransmission time [2-82](#)

- port-channel load-balance command [2-232](#)
- Port Fast, for spanning tree [2-467](#)
- port ranges, defining [2-57](#)
- ports, debugging [B-53](#)
- ports, protected [2-505](#)
- port security
 - aging [2-501](#)
 - debug messages, display [B-55](#)
 - enabling [2-496](#)
 - violation error recovery [2-88](#)
- port trust states for QoS [2-206](#)
- port types, MVR [2-216](#)
- power information, displaying [2-294](#)
- priority-queue command [2-234](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-316](#)
- protected ports, displaying [2-311](#)
- pruning
 - VLANs [2-507](#)
 - VTP
 - displaying interface information [2-306](#)
 - enabling [2-546, 2-550](#)
- pruning-eligible VLAN list [2-508](#)
- PVST+
 - See STP

Q

QoS

- auto-QoS
 - configuring [2-13](#)
 - debug messages, display [B-2](#)
 - displaying [2-261](#)
- class maps
 - creating [2-31](#)
 - defining the match criteria [2-166](#)
 - displaying [2-269](#)
- defining the CoS value for an incoming packet [2-176](#)
- displaying configuration information [2-261, 2-358](#)

QoS (continued)

- DSCP transparency [2-188](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-178](#)
 - defining DSCP-to-DSCP-mutation map [2-180](#)
- egress queues
 - allocating buffers [2-184](#)
 - defining the CoS output queue threshold map [2-202](#)
 - defining the DSCP output queue threshold map [2-204](#)
 - displaying buffer allocations [2-362](#)
 - displaying CoS output queue threshold map [2-366](#)
 - displaying DSCP output queue threshold map [2-366](#)
 - displaying queueing strategy [2-362](#)
 - displaying queue-set settings [2-369](#)
 - enabling bandwidth shaping and scheduling [2-479](#)
 - enabling bandwidth sharing and scheduling [2-481](#)
 - limiting the maximum output on a port [2-477](#)
 - mapping a port to a queue-set [2-236](#)
 - mapping CoS values to a queue and threshold [2-202](#)
 - mapping DSCP values to a queue and threshold [2-204](#)
 - setting maximum and reserved memory allocations [2-186](#)
 - setting WTD thresholds [2-186](#)
- enabling [2-172](#)
- ingress queues
 - allocating buffers [2-192](#)
 - assigning SRR scheduling weights [2-190](#)
 - defining the CoS input queue threshold map [2-194](#)
 - defining the DSCP input queue threshold map [2-196](#)
 - displaying buffer allocations [2-362](#)
 - displaying CoS input queue threshold map [2-366](#)
 - displaying DSCP input queue threshold map [2-366](#)
 - displaying queueing strategy [2-362](#)
 - displaying settings for [2-360](#)
 - enabling the priority queue [2-198](#)
 - mapping CoS values to a queue and threshold [2-194](#)
 - mapping DSCP values to a queue and threshold [2-196](#)
 - setting WTD thresholds [2-200](#)

QoS (continued)

maps

defining [2-180, 2-194, 2-196, 2-202, 2-204](#)

displaying [2-366](#)

policy maps

applying an aggregate policer [2-228](#)

applying to an interface [2-248, 2-252](#)

creating [2-230](#)

defining policers [2-174, 2-226](#)

displaying policers [2-359](#)

displaying policy maps [2-386](#)

policed-DSCP map [2-180](#)

setting DSCP or IP precedence values [2-250](#)

traffic classifications [2-29](#)

trust states [2-520](#)

port trust states [2-206](#)

queues, enabling the expedite [2-234](#)

statistics

in-profile and out-of-profile packets [2-362](#)

packets enqueued or dropped [2-362](#)

sent and received CoS values [2-362](#)

sent and received DSCP values [2-362](#)

trusted boundary for IP phones [2-206](#)

quality of service

See QoS

querytime, MVR [2-213](#)

queue-set command [2-236](#)

R

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-237](#)

re-authenticating IEEE 802.1x-enabled ports [2-80](#)

re-authentication

periodic [2-81](#)

time between attempts [2-82](#)

receiver ports, MVR [2-216](#)

receiving flow-control packets [2-91](#)

recovery mechanism

causes [2-88](#)

display [2-267, 2-295, 2-299](#)

timer interval [2-88](#)

redundancy for cluster switches [2-54](#)

remote-span command [2-239](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)

renew ip dhcp snooping database command [2-241](#)

requirements

cluster [xxi](#)

device manager [xx](#)

Network Assistant [xx](#)

reset (boot loader) command [A-18](#)

reset command [2-539](#)

resource templates, displaying [2-391](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-243](#)

root guard, for spanning tree [2-440](#)

RSPAN

configuring [2-208](#)

displaying [2-372](#)

filter RSPAN traffic [2-208](#)

remote-span command [2-239](#)

sessions

add interfaces to [2-208](#)

displaying [2-372](#)

start new [2-208](#)

S

- sdm prefer command [2-244](#)
- SDM templates
 - displaying [2-391](#)
- secure ports, limitations [2-498](#)
- sending flow-control packets [2-91](#)
- service password-recovery command [2-246](#)
- service-policy command [2-248](#)
- set (boot loader) command [A-20](#)
- set command [2-250](#)
- setup command [2-252](#)
- setup express command [2-255](#)
- show access-lists command [2-257](#)
- show archive status command [2-260](#)
- show auto qos command [2-261](#)
- show boot command [2-265](#)
- show cable-diagnostics tdr command [2-267](#)
- show changes command [2-539](#)
- show class-map command [2-269](#)
- show cluster candidates command [2-272](#)
- show cluster command [2-270](#)
- show cluster members command [2-274](#)
- show controllers cpu-interface command [2-276](#)
- show controllers ethernet-controller command [2-278](#)
- show controllers tcam command [2-285](#)
- show controller utilization command [2-287](#)
- show current command [2-539](#)
- show dot1x command [2-289](#)
- show dtp [2-292](#)
- show env command [2-294](#)
- show errdisable detect command [2-295](#)
- show errdisable flap-values command [2-297](#)
- show errdisable recovery command [2-299](#)
- show etherchannel command [2-301](#)
- show flowcontrol command [2-304](#)
- show interfaces command [2-306](#)
- show interfaces counters command [2-314](#)
- show inventory command [2-316](#)
- show ip dhcp snooping binding command [2-318](#)
- show ip dhcp snooping command [2-317](#)
- show ip dhcp snooping database command [2-320](#)
- show ip igmp profile command [2-322](#)
- show ip igmp snooping command [2-323](#)
- show ip igmp snooping groups command [2-326](#)
- show ip igmp snooping mrouter command [2-328](#)
- show ip igmp snooping querier command [2-330](#)
- show lacp command [2-332](#)
- show mac access-group command [2-336](#)
- show mac address-table address command [2-340](#)
- show mac address-table aging time command [2-342](#)
- show mac address-table command [2-338](#)
- show mac address-table count command [2-344](#)
- show mac address-table dynamic command [2-346](#)
- show mac address-table interface command [2-348](#)
- show mac address-table move update command [2-350](#)
- show mac address-table notification command [2-36, 2-352, B-18](#)
- show mac address-table static command [2-354](#)
- show mac address-table vlan command [2-356](#)
- show mls qos aggregate-policer command [2-359](#)
- show mls qos command [2-358](#)
- show mls qos input-queue command [2-360](#)
- show mls qos interface command [2-362](#)
- show mls qos maps command [2-366](#)
- show mls qos queue-set command [2-369](#)
- show mls qos vlan command [2-371](#)
- show monitor command [2-372](#)
- show mvr command [2-375](#)
- show mvr interface command [2-377](#)
- show mvr members command [2-379](#)
- show pagp command [2-381](#)
- show parser macro command [2-383](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)

- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform tcam command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-386](#)
- show port security command [2-388](#)
- show proposed command [2-539](#)
- show sdm prefer command [2-391](#)
- show setup express command [2-393](#)
- show spanning-tree command [2-394](#)
- show storm-control command [2-400](#)
- show system mtu command [2-402](#)
- show trust command [2-520](#)
- show udd command [2-403](#)
- show version command [2-406](#)
- show vlan command [2-408](#)
- show vlan command, fields [2-409](#)
- show vmps command [2-411](#)
- show vtp command [2-414](#)
- shutdown command [2-419](#)
- shutdown vlan command [2-420](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-424](#)
- SNMP informs, enabling the sending of [2-421](#)
- snmp-server enable traps command [2-421](#)
- snmp-server host command [2-424](#)
- snmp trap mac-notification command [2-428](#)
- SNMP traps
 - enabling MAC address notification trap [2-428](#)
 - enabling the MAC address notification feature [2-151](#)
 - enabling the sending of [2-421](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-59](#)
 - downloading [2-5](#)
 - upgrading [2-5](#)
 - uploading [2-11](#)
- software version, displaying [2-406](#)
- source ports, MVR [2-216](#)
- SPAN
 - configuring [2-208](#)
 - debug messages, display [B-19](#)
 - displaying [2-372](#)
 - filter SPAN traffic [2-208](#)
 - sessions
 - add interfaces to [2-208](#)
 - displaying [2-372](#)
 - start new [2-208](#)
- spanning [2-469](#)
- spanning-tree backbonefast command [2-430](#)
- spanning-tree bpdupfilter command [2-431](#)
- spanning-tree bpduguard command [2-433](#)
- spanning-tree cost command [2-435](#)
- spanning-tree etherchannel command [2-437](#)
- spanning-tree extend system-id command [2-439](#)
- spanning-tree guard command [2-440](#)
- spanning-tree link-type command [2-442](#)
- spanning-tree loopguard default command [2-444](#)
- spanning-tree mode command [2-446](#)
- spanning-tree mst configuration command [2-448](#)
- spanning-tree mst cost command [2-450](#)
- spanning-tree mst forward-time command [2-452](#)
- spanning-tree mst hello-time command [2-453](#)
- spanning-tree mst max-age command [2-454](#)
- spanning-tree mst max-hops command [2-455](#)

- spanning-tree mst port-priority command [2-457](#)
- spanning-tree mst pre-standard command [2-459](#)
- spanning-tree mst priority command [2-460](#)
- spanning-tree mst root command [2-461](#)
- spanning-tree portfast (global configuration) command [2-465](#)
- spanning-tree portfast (interface configuration) command [2-467](#)
- spanning-tree port-priority command [2-463](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-469](#)
- spanning-tree uplinkfast command [2-470](#)
- spanning-tree vlan command [2-472](#)
- speed command [2-475](#)
- srr-queue bandwidth limit command [2-477](#)
- srr-queue bandwidth shape command [2-479](#)
- srr-queue bandwidth share command [2-481](#)
- SSH, configuring version [2-136](#)
- static-access ports, configuring [2-486](#)
- statistics, Ethernet group [2-243](#)
- sticky learning, enabling [2-496](#)
- storm-control command [2-483](#)
- STP
 - BackboneFast [2-430](#)
 - counters, clearing [2-40](#)
 - debug messages, display
 - BackboneFast events [B-59](#)
 - MSTP [B-62](#)
 - optimized BPDUs handling [B-61](#)
 - spanning-tree activity [B-57](#)
 - switch shim [B-64](#)
 - transmitted and received BPDUs [B-60](#)
 - UplinkFast [B-66](#)
 - detection of indirect link failures [2-430](#)
 - EtherChannel misconfiguration [2-437](#)
 - extended system ID [2-439](#)
 - path cost [2-435](#)
 - protocol modes [2-446](#)

STP (continued)

- root port
 - accelerating choice of new [2-470](#)
 - loop guard [2-440](#)
 - preventing from becoming designated [2-440](#)
 - restricting which can be root [2-440](#)
 - root guard [2-440](#)
 - UplinkFast [2-470](#)
- root switch
 - affects of extended system ID [2-439, 2-473](#)
 - hello-time [2-472](#)
 - interval between BPDU messages [2-472](#)
 - interval between hello BPDU messages [2-472](#)
 - max-age [2-472](#)
 - port priority for selection of [2-463](#)
 - primary or secondary [2-472](#)
 - switch priority [2-472](#)
- state changes
 - blocking to forwarding state [2-467](#)
 - enabling BPDU filtering [2-431, 2-465](#)
 - enabling BPDU guard [2-433, 2-465](#)
 - enabling Port Fast [2-465, 2-467](#)
 - enabling timer to recover from error state [2-88](#)
 - forward-delay time [2-472](#)
 - length of listening and learning states [2-472](#)
 - shutting down Port Fast-enabled ports [2-465](#)
- state information display [2-394](#)
- VLAN options [2-460, 2-472](#)
- Switched Port Analyzer
 - See SPAN
- switchport access command [2-486](#)
- switchport backup interface command [2-488](#)
- switchport block command [2-490](#)
- switchport host command [2-491](#)
- switchport mode command [2-492](#)
- switchport nonegotiate command [2-494](#)
- switchport port-security aging command [2-501](#)
- switchport port-security command [2-496](#)
- switchport priority extend command [2-503](#)

switchport protected command [2-505](#)
 switchports, displaying [2-306](#)
 switchport trunk command [2-507](#)
 switchport voice vlan command [2-510](#)
 system message logging, save message to flash [2-142](#)
 system mtu command [2-512](#)
 system resource templates [2-244](#)

T

tar files, creating, listing, and extracting [2-8](#)
 TDR, running [2-514](#)
 Telnet, using to communicate to cluster switches [2-237](#)
 temperature information, displaying [2-294](#)
 templates, SDM [2-244](#)
 templates, system resources [2-244](#)
 test cable-diagnostics tdr command [2-514](#)
 traceroute mac command [2-515](#)
 traceroute mac ip command [2-518](#)
 trunking, VLAN mode [2-492](#)
 trunk mode [2-492](#)
 trunk ports [2-492](#)
 trunks, to non-DTP device [2-493](#)
 trusted boundary for QoS [2-206](#)
 trusted port states for QoS [2-206](#)
 type (boot loader) command [A-23](#)

U

UDLD

aggressive mode [2-522, 2-524](#)
 debug messages, display [B-74](#)
 enable globally [2-522](#)
 enable per interface [2-524](#)
 error recovery timer [2-88](#)
 message timer [2-522](#)
 normal mode [2-522, 2-524](#)
 reset a shutdown interface [2-526](#)

UDLD (continued)

status [2-403](#)
 udd command [2-522](#)
 udd port command [2-524](#)
 udd reset command [2-526](#)
 unicast storm control [2-483](#)
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing [2-490](#)
 unknown unicast traffic, preventing [2-490](#)
 unset (boot loader) command [A-24](#)
 upgrading
 software images [2-5](#)
 monitoring status of [2-260](#)
 upgrading information
 See release notes
 UplinkFast, for STP [2-470](#)
 user EXEC mode [1-2](#)

V

version (boot loader) command [A-26](#)
 VLAN
 enabling guest VLAN supplicant [2-66](#)
 vlan (global configuration) command [2-527](#)
 vlan (VLAN configuration) command [2-532](#)
 VLAN configuration
 rules [2-530, 2-534](#)
 saving [2-527, 2-536](#)
 VLAN configuration mode
 commands
 VLAN [2-532](#)
 VTP [2-550](#)
 description [1-4](#)
 entering [2-538](#)
 summary [1-2](#)
 vlan database command [2-538](#)
 VLAN ID range [2-527, 2-532](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-527](#)

configuring [2-527, 2-532](#)

debug messages, display

ISL [B-70](#)

VLAN IOS file system error tests [B-69](#)

VLAN manager activity [B-67](#)

VTP [B-72](#)

displaying configurations [2-408](#)

extended-range [2-527](#)

MAC addresses

displaying [2-356](#)

number of [2-344](#)

media types [2-529, 2-534](#)

normal-range [2-527, 2-532](#)

restarting [2-420](#)

saving the configuration [2-527](#)

shutting down [2-420](#)

SNMP traps for VTP [2-422, 2-425](#)

suspending [2-420](#)

variables [2-532](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-544](#)

displaying [2-411](#)

error recovery timer [2-88](#)

reconfirming dynamic VLAN assignments [2-541](#)

vmmps reconfirm (global configuration) command [2-542](#)

vmmps reconfirm (privileged EXEC) command [2-541](#)

vmmps retry command [2-543](#)

vmmps server command [2-544](#)

voice VLAN

configuring [2-510](#)

setting port priority [2-503](#)

VQP

and dynamic-access ports [2-487](#)

clearing client statistics [2-42](#)

displaying information [2-411](#)

per-server retry count [2-543](#)

reconfirmation interval [2-542](#)

reconfirming dynamic VLAN assignments [2-541](#)

VTP

changing characteristics [2-546](#)

clearing pruning counters [2-43](#)

configuring

domain name [2-546, 2-550](#)

file name [2-546](#)

mode [2-546, 2-550](#)

password [2-546, 2-550](#)

counters display fields [2-415](#)

displaying information [2-414](#)

enabling

pruning [2-546, 2-550](#)

Version 2 [2-546, 2-550](#)

mode [2-546, 2-550](#)

pruning [2-546, 2-550](#)

saving the configuration [2-527, 2-536](#)

statistics [2-414](#)

status [2-414](#)

status display fields [2-417](#)

vtp (global configuration) command [2-546](#)

vtp (VLAN configuration) command [2-550](#)

