



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-568](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-109](#)
 MAC, displaying [2-359](#)
access mode [2-521](#)
access ports [2-521](#)
ACEs [2-65](#), [2-239](#)
ACLs
 deny [2-63](#)
 displaying [2-275](#)
 for non-IP protocols [2-160](#)
 IP [2-109](#)
 on Layer 2 interfaces [2-109](#)
 permit [2-237](#)
address aliasing [2-228](#)
aggregate-port learner [2-233](#)
allowed VLANs [2-535](#)
apply command [2-568](#)
archive download-sw command [2-6](#)
archive tar command [2-9](#)
archive upload-sw command [2-12](#)
audience [xv](#)

authentication failed VLAN

 See dot1x auth-fail vlan

auth-fail max-attempts

 See dot1x auth-fail max-attempts

auth-fail vlan

 See dot1x auth-fail vlan

authorization state of controlled port [2-88](#)

autonegotiation of duplex mode [2-96](#)

auto qos voip command [2-14](#)

B

BackboneFast, for STP [2-458](#)

backup interfaces

 configuring [2-516](#)

 displaying [2-328](#)

boot (boot loader) command [A-2](#)

boot bootlpr command [2-18](#)

boot config-file command [2-19](#)

boot enable-break command [2-20](#)

boot helper command [2-21](#)

boot helper-config file command [2-22](#)

booting

 Cisco IOS image [2-25](#)

 displaying environment variables [2-283](#)

 interrupting [2-20](#)

 manually [2-23](#)

boot loader

 accessing [A-1](#)

 booting

 Cisco IOS image [A-2](#)

 helper image [2-21](#)

boot loader (continued)

directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-26](#)

environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsettling [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-16, A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-23](#)boot private-config-file command [2-24](#)boot system command [2-25](#)BPDU filtering, for spanning tree [2-459, 2-493](#)BPDU guard, for spanning tree [2-461, 2-493](#)broadcast storm control [2-511](#)**C**

candidate switches

See clusters

cat (boot loader) command [A-4](#)caution, description [xvi](#)channel-group command [2-26](#)channel-protocol command [2-29](#)

Cisco Network Assistant

See Network Assistant [xvi](#)

Cisco SoftPhone

auto-QoS configuration [2-14](#)

trusting packets sent from [2-220](#)

class command [2-30](#)class-map command [2-32](#)

class maps

- creating [2-32](#)
- defining the match criteria [2-180](#)
- displaying [2-287](#)

class of service

See CoS

clear dot1x command [2-34](#)clear eap command [2-35](#)clear ip dhcp snooping database command [2-36](#)clear lacp command [2-37](#)clear mac address-table command [2-38, 2-39](#)clear pagp command [2-40](#)clear port-security command [2-41](#)clear spanning-tree counters command [2-43](#)clear spanning-tree detected-protocols command [2-44](#)clear vmps statistics command [2-45](#)clear vtp counters command [2-46](#)cluster commander-address command [2-47](#)cluster discovery hop-count command [2-49](#)cluster enable command [2-50](#)cluster holdtime command [2-52](#)cluster member command [2-53](#)cluster outside-interface command [2-55](#)cluster requirements [xvi](#)cluster run command [2-56](#)

clusters

- adding candidates [2-63](#)
- binding to HSRP group [2-57](#)

clusters (continued)

- building manually [2-53](#)
- communicating with
 - devices outside the cluster [2-55](#)
 - members by using Telnet [2-255](#)
- debug messages, display [B-5](#)
- displaying
 - candidate switches [2-290](#)
 - debug messages [B-5](#)
 - member switches [2-292](#)
 - status [2-288](#)
- hop-count limit for extended discovery [2-49](#)
- HSRP standby groups [2-57](#)
- redundancy [2-57](#)
- SNMP trap [2-449](#)
- cluster standby-group command [2-57](#)
- cluster timer command [2-59](#)
- command modes defined [1-1](#)
- command switch
 - See clusters
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-19, 2-24](#)
- configuring multiple interfaces [2-106](#)
- config-vlan mode
 - commands [2-556](#)
 - description [1-4](#)
 - entering [2-555](#)
 - summary [1-2](#)
- conventions
 - command [xv](#)
 - for examples [xvi](#)
 - publication [xv](#)
 - text [xv](#)
- copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-190](#)
- overriding the incoming value [2-190](#)

CoS-to-DSCP map [2-194](#)

CPU ASIC statistics, displaying [2-294](#)

crashinfo files [2-101](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-8](#)
- debug eap command [B-9](#)
- debug etherchannel command [B-10](#)
- debug interface command [B-12](#)
- debug ip dhcp snooping command [B-11](#)
- debug ip igmp filter command [B-13](#)
- debug ip igmp max-groups command [B-14](#)
- debug ip igmp snooping command [B-15](#)
- debug lacp command [B-16](#)
- debug mac-notification command [B-17](#)
- debug matm command [B-18](#)
- debug matm move update command [B-19](#)
- debug monitor command [B-20](#)
- debug mvrdbg command [B-21](#)
- debug nvram command [B-22](#)
- debug pagp command [B-23](#)
- debug platform acl command [B-24](#)
- debug platform backup interface command [B-25](#)
- debug platform cpu-queues command [B-26](#)
- debug platform dot1x command [B-28](#)
- debug platform etherchannel command [B-29](#)
- debug platform forw-tcam command [B-30](#)
- debug platform ip dhcp command [B-31](#)
- debug platform ip igmp snooping command [B-32](#)
- debug platform led command [B-34](#)
- debug platform matm command [B-35](#)

- debug platform messaging application command [B-36](#)
- debug platform phy command [B-37](#)
- debug platform pm command [B-39](#)
- debug platform port-asic command [B-41](#)
- debug platform port-security command [B-42](#)
- debug platform qos-acl-tcam command [B-43](#)
- debug platform resource-manager command [B-44](#)
- debug platform snmp command [B-45](#)
- debug platform span command [B-46](#)
- debug platform supervisor-asic command [B-47](#)
- debug platform sw-bridge command [B-48](#)
- debug platform tcam command [B-49](#)
- debug platform udd command [B-51](#)
- debug platform vlan command [B-52](#)
- debug pm command [B-53](#)
- debug port-security command [B-55](#)
- debug qos-manager command [B-56](#)
- debug spanning-tree backbonefast command [B-59](#)
- debug spanning-tree bpdu command [B-60](#)
- debug spanning-tree bpdu-opt command [B-61](#)
- debug spanning-tree command [B-57](#)
- debug spanning-tree mstp command [B-62](#)
- debug spanning-tree switch command [B-64](#)
- debug spanning-tree uplinkfast command [B-66](#)
- debug sw-vlan command [B-67](#)
- debug sw-vlan ifs command [B-69](#)
- debug sw-vlan notification command [B-70](#)
- debug sw-vlan vtp command [B-72](#)
- debug udd command [B-74](#)
- debug vqpc command [B-76](#)
- define interface-range command [2-60](#)
- delete (boot loader) command [A-6](#)
- delete command [2-62](#)
- deny command [2-63](#)
- detect mechanism, causes [2-97](#)
- device manager requirements [xvi](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-120](#)
 - enabling
 - DHCP snooping (continued)
 - on a VLAN [2-125](#)
 - option 82 [2-118, 2-120](#)
 - trust on an interface [2-123](#)
 - error recovery timer [2-99](#)
 - rate limiting [2-122](#)
- DHCP snooping binding database
 - binding file, configuring [2-116](#)
 - bindings
 - adding [2-114](#)
 - deleting [2-114](#)
 - displaying [2-339](#)
 - clearing database agent statistics [2-36](#)
 - database agent, configuring [2-116](#)
 - displaying
 - binding entries [2-339](#)
 - database agent status [2-341](#)
 - renewing [2-259](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-62](#)
- documentation, related [xvi](#)
- document conventions [xv](#)
- domain name, VTP [2-575, 2-579](#)
- dot1x auth-fail max-attempts [2-68](#)
- dot1x auth-fail vlan [2-70](#)
- dot1x command [2-66](#)
- dot1x control-direction command [2-72](#)
- dot1x critical global configuration command [2-74](#)
- dot1x critical interface configuration command [2-76](#)
- dot1x default command [2-78](#)
- dot1x guest-vlan command [2-79](#)
- dot1x host-mode command [2-81](#)
- dot1x initialize command [2-82](#)
- dot1x mac-auth-bypass command [2-83](#)
- dot1x max-reauth-req command [2-85](#)
- dot1x max-req command [2-86](#)
- dot1x pae command [2-87](#)
- dot1x port-control command [2-88](#)
- dot1x re-authenticate command [2-90](#)

dot1x reauthentication command [2-91](#)

dot1x timeout command [2-92](#)

DSCP-to-CoS map [2-194](#)

DSCP-to-DSCP-mutation map [2-194](#)

DTP [2-522](#)

DTP flap

error detection for [2-97](#)

error recovery timer [2-99](#)

DTP negotiation [2-523](#)

dual-purpose uplink ports

displaying configurable options [2-330](#)

displaying the active media [2-334](#)

selecting the type [2-184](#)

duplex command [2-95](#)

dynamic-access ports

configuring [2-514](#)

restrictions [2-515](#)

dynamic auto VLAN membership mode [2-521](#)

dynamic desirable VLAN membership mode [2-521](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-86](#)

response time before retransmitting [2-92](#)

environment variables, displaying [2-283](#)

errdisable detect cause command [2-97](#)

errdisable recovery command [2-99](#)

error conditions, displaying [2-319](#)

error disable detection [2-97](#)

error-disabled interfaces, displaying [2-328](#)

EtherChannel

assigning Ethernet interface to channel group [2-26](#)

creating port-channel logical interface [2-104](#)

debug EtherChannel/PAgP, display [B-10](#)

EtherChannel (continued)

debug platform-specific events, display [B-29](#)

displaying [2-323](#)

interface information, displaying [2-328](#)

LACP

clearing channel-group information [2-37](#)

debug messages, display [B-16](#)

displaying [2-353](#)

modes [2-26](#)

port priority for hot-standby ports [2-149](#)

restricting a protocol [2-29](#)

system priority [2-151](#)

load-distribution methods [2-246](#)

PAgP

aggregate-port learner [2-233](#)

clearing channel-group information [2-40](#)

debug messages, display [B-23](#)

displaying [2-403](#)

error detection for [2-97](#)

error recovery timer [2-99](#)

learn method [2-233](#)

modes [2-26](#)

physical-port learner [2-233](#)

priority of interface for transmitted traffic [2-235](#)

Ethernet controller, internal register display [2-296](#)

Ethernet statistics, collecting [2-261](#)

examples, conventions for [xvi](#)

exception crashinfo command [2-101](#)

exit command [2-568](#)

extended discovery of candidate switches [2-49](#)

extended-range VLANs

and allowed VLAN list [2-535](#)

and pruning-eligible list [2-535](#)

configuring [2-555](#)

extended system ID for STP [2-467](#)

F

fan information, displaying [2-316](#)
 file name, VTP [2-575](#)
 files, deleting [2-62](#)
 flash_init (boot loader) command [A-9](#)
 Flex Links
 configuring [2-516](#)
 displaying [2-328](#)
 flowcontrol command [2-102](#)
 format (boot loader) command [A-10](#)
 forwarding results, display [C-5](#)
 frame forwarding information, displaying [C-5](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-275](#)
 help (boot loader) command [A-12](#)
 hop-count limit for clusters [2-49](#)
 host connection, port configuration [2-520](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-57](#)
 standby group [2-57](#)

I

IEEE 802.1x
 and switchport modes [2-522](#)
 violation error recovery [2-99](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-69](#)
 IGMP filters
 applying [2-126](#)
 debug messages, display [B-13](#)
 IGMP groups, setting maximum [2-127](#)
 IGMP maximum groups, debugging [B-14](#)
 IGMP profiles
 creating [2-129](#)
 displaying [2-343](#)
 IGMP snooping
 adding ports as a static member of a group [2-145](#)
 displaying [2-344, 2-349, 2-351](#)
 enabling [2-131](#)
 enabling the configurable-leave timer [2-133](#)
 enabling the Immediate-Leave feature [2-142](#)
 flooding query count [2-139](#)
 interface topology change notification behavior [2-141](#)
 multicast table [2-347](#)
 querier [2-135](#)
 query solicitation [2-139](#)
 report suppression [2-137](#)
 switch topology change notification behavior [2-139](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-230](#)
 immediate-leave processing [2-142](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-104](#)
 interface range command [2-106](#)
 interface-range macros [2-60](#)
 interfaces
 assigning Ethernet interface to channel group [2-26](#)
 configuring [2-95](#)
 configuring multiple [2-106](#)
 creating port-channel logical [2-104](#)
 debug messages, display [B-12](#)

interfaces (continued)
 disabling [2-447](#)
 displaying the MAC address table [2-371](#)
 restarting [2-447](#)
 interface speed, configuring [2-503](#)
 interface vlan command [2-108](#)
 internal registers, displaying [2-296, 2-303](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [2-97](#)
 error recovery timer [2-99](#)
 ip access-group command [2-109](#)
 ip address command [2-111](#)
 IP addresses, setting [2-111](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [2-114](#)
 ip dhcp snooping command [2-113](#)
 ip dhcp snooping database command [2-116](#)
 ip dhcp snooping information option allow-untrusted command [2-120](#)
 ip dhcp snooping information option command [2-118](#)
 ip dhcp snooping limit rate command [2-122](#)
 ip dhcp snooping trust command [2-123](#)
 ip dhcp snooping verify command [2-124](#)
 ip dhcp snooping vlan command [2-125](#)
 ip igmp filter command [2-126](#)
 ip igmp max-groups command [2-127](#)
 ip igmp profile command [2-129](#)
 ip igmp snooping command [2-131](#)
 ip igmp snooping last-member-query-interval command [2-133](#)
 ip igmp snooping querier command [2-135](#)
 ip igmp snooping report-suppression command [2-137](#)
 ip igmp snooping tcn command [2-139](#)
 ip igmp snooping tcn flood command [2-141](#)
 ip igmp snooping vlan immediate-leave command [2-142](#)
 ip igmp snooping vlan mrouter command [2-143](#)

ip igmp snooping vlan static command [2-145](#)
 IP multicast addresses [2-227](#)
 IP phones
 auto-QoS configuration [2-14](#)
 trusting packets sent from [2-220](#)
 IP-precedence-to-DSCP map [2-194](#)
 IP source guard
 displaying
 dynamic binding entries only [2-339](#)
 ip ssh command [2-147](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [2-149](#)
 lacp system-priority command [2-151](#)
 Layer 2 traceroute
 IP addresses [2-546](#)
 MAC addresses [2-543](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-97](#)
 error recovery timer [2-99](#)
 link state group command [2-153](#)
 link state track command [2-155](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-246](#)
 logging file command [2-156](#)
 logical interface [2-104](#)

loopback error

detection for [2-97](#)

recovery timer [2-99](#)

loop guard, for spanning tree [2-468, 2-472](#)

M

mac access-group command [2-158](#)

MAC access-groups, displaying [2-359](#)

MAC access list configuration mode [2-160](#)

mac access-list extended command [2-160](#)

MAC access lists [2-63](#)

MAC addresses

displaying

aging time [2-365](#)

all [2-363](#)

dynamic [2-369](#)

MAC address-table move updates [2-373](#)

notification settings [2-375](#)

number of addresses in a VLAN [2-367](#)

per interface [2-371](#)

per VLAN [2-379](#)

static [2-377](#)

static and dynamic entries [2-361](#)

dynamic

aging time [2-162](#)

deleting [2-38](#)

displaying [2-369](#)

enabling MAC address notification [2-165](#)

enabling MAC address-table move update [2-163](#)

static

adding and removing [2-167](#)

displaying [2-377](#)

dropping on an interface [2-168](#)

tables [2-363](#)

MAC address notification, debugging [B-17](#)

mac address-table aging-time [2-158](#)

mac address-table aging-time command [2-162](#)

mac address-table move update command [2-163](#)

mac address-table notification command [2-165](#)

mac address-table static command [2-167](#)

mac address-table static drop command [2-168](#)

macro apply command [2-170](#)

macro description command [2-173](#)

macro global command [2-174](#)

macro global description command [2-177](#)

macro name command [2-178](#)

macros

adding a description [2-173](#)

adding a global description [2-177](#)

applying [2-174](#)

creating [2-178](#)

displaying [2-405](#)

interface range [2-60, 2-106](#)

specifying parameter values [2-174](#)

tracing [2-174](#)

manual

audience [xv](#)

purpose of [xv](#)

maps

QoS

defining [2-194](#)

displaying [2-389](#)

match (class-map configuration) command [2-180](#)

maximum transmission unit

See MTU

mdix auto command [2-182](#)

media-type command [2-184](#)

member switches

See clusters

memory (boot loader) command [A-14](#)

mkdir (boot loader) command [A-15](#)

mls qos aggregate-policer command [2-188](#)

mls qos command [2-186](#)

mls qos cos command [2-190](#)

mls qos dscp-mutation command [2-192](#)

mls qos map command [2-194](#)

mls qos queue-set output buffers command [2-198](#)

- mls qos queue-set output threshold command [2-200](#)
- mls qos rewrite ip dscp command [2-202](#)
- mls qos srr-queue input bandwidth command [2-204](#)
- mls qos srr-queue input buffers command [2-206](#)
- mls qos srr-queue input cos-map command [2-208](#)
- mls qos srr-queue input dscp-map command [2-210](#)
- mls qos srr-queue input priority-queue command [2-212](#)
- mls qos srr-queue input threshold command [2-214](#)
- mls qos srr-queue output cos-map command [2-216](#)
- mls qos srr-queue output dscp-map command [2-218](#)
- mls qos trust command [2-220](#)
- mode, MVR [2-227](#)
- Mode button, and password recovery [2-264](#)
- modes, commands [1-1](#)
- monitor session command [2-222](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-417, 2-418, 2-419, 2-420, 2-421, 2-422](#)
 - interoperability [2-44](#)
 - link type [2-470](#)
 - MST region
 - aborting changes [2-476](#)
 - applying changes [2-476](#)
 - configuration name [2-476](#)
 - configuration revision number [2-476](#)
 - current or pending display [2-476](#)
 - displaying [2-417, 2-418, 2-419, 2-420, 2-421, 2-422](#)
 - MST configuration mode [2-476](#)
 - VLANs-to-instance mapping [2-476](#)
 - path cost [2-478](#)
 - protocol mode [2-474](#)
 - restart protocol migration process [2-44](#)
 - root port
 - loop guard [2-468](#)
 - preventing from becoming designated [2-468](#)
 - restricting which can be root [2-468](#)
 - root guard [2-468](#)
 - root switch
 - affects of extended system ID [2-467](#)
 - hello-time [2-481, 2-489](#)
 - interval between BPDU messages [2-482](#)
 - interval between hello BPDU messages [2-481, 2-489](#)
 - max-age [2-482](#)
 - maximum hop count before discarding BPDU [2-483](#)
 - port priority for selection of [2-485](#)
 - primary or secondary [2-489](#)
 - switch priority [2-488](#)
 - state changes
 - blocking to forwarding state [2-495](#)
 - enabling BPDU filtering [2-459, 2-493](#)
 - enabling BPDU guard [2-461, 2-493](#)
 - enabling Port Fast [2-493, 2-495](#)
 - forward-delay time [2-480](#)
 - length of listening and learning states [2-480](#)
 - rapid transition to forwarding [2-470](#)
 - shutting down Port Fast-enabled ports [2-493](#)
 - state information display [2-416](#)
- MTU
 - configuring size [2-540](#)
 - displaying global setting [2-429](#)
- multicast group address, MVR [2-230](#)
- multicast groups, MVR [2-228](#)
- multicast router learning method [2-143](#)
- multicast router ports, configuring [2-143](#)
- multicast storm control [2-511](#)
- multicast VLAN, MVR [2-227](#)
- multicast VLAN registration
 - See MVR
- multiple hosts on authorized port [2-81](#)
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [2-228](#)
 - configuring [2-227](#)
 - configuring interfaces [2-230](#)
 - debug messages, display [B-21](#)

MVR (continued)

- displaying [2-397](#)
- displaying interface information [2-399](#)
- members, displaying [2-401](#)
- mvr (global configuration) command [2-227](#)
- mvr (interface configuration) command [2-230](#)
- mvr vlan group command [2-231](#)

N

- native VLANs [2-535](#)
- Network Assistant requirements [xvi](#)
- nonegotiate
 - DTP messaging [2-523](#)
- nonegotiate, speed [2-503](#)
- non-IP protocols
 - denying [2-63](#)
 - forwarding [2-237](#)
- non-IP traffic access lists [2-160](#)
- non-IP traffic forwarding
 - denying [2-63](#)
 - permitting [2-237](#)
- normal-range VLANs [2-555, 2-561](#)
- note, description [xvi](#)
- no vlan command [2-555, 2-565](#)

P

PAgP

- See EtherChannel
- pagp learn-method command [2-233](#)
- pagp port-priority command [2-235](#)
- password, VTP [2-575, 2-579](#)
- password-recovery mechanism, enabling and disabling [2-264](#)
- permit (MAC access-list configuration) command [2-237](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [2-233](#)

- PID, displaying [2-337](#)
- PIM-DVMRP, as multicast router learning method [2-143](#)
- police aggregate command [2-242](#)
- police command [2-240](#)
- policed-DSCP map [2-194](#)
- policy-map command [2-244](#)
- policy maps
 - applying to an interface [2-266, 2-270](#)
 - creating [2-244](#)
 - displaying [2-408](#)
- policers
 - displaying [2-382](#)
 - for a single class [2-240](#)
 - for multiple classes [2-188, 2-242](#)
 - policed-DSCP map [2-194](#)
- traffic classification
 - defining the class [2-30](#)
 - defining trust states [2-548](#)
 - setting DSCP or IP precedence values [2-268](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - debug messages, display [B-7](#)
 - enabling IEEE 802.1x
 - globally [2-66](#)
 - per interface [2-88](#)
 - guest VLAN [2-79](#)
 - host modes [2-81](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-82](#)
 - MAC authentication bypass [2-83](#)
 - manual control of authorization state [2-88](#)
 - multiple hosts on authorized port [2-81](#)
 - PAE as authenticator [2-87](#)
 - periodic re-authentication
 - enabling [2-91](#)
 - time between attempts [2-92](#)

- port-based authentication (continued)
 - quiet period between failed authentication exchanges [2-92](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-90](#)
 - resetting configurable IEEE 802.1x parameters [2-78](#)
 - switch-to-authentication server retransmission time [2-92](#)
 - switch-to-client frame-retransmission number [2-85 to 2-86](#)
 - switch-to-client retransmission time [2-92](#)
- port-channel load-balance command [2-246](#)
- Port Fast, for spanning tree [2-495](#)
- port ranges, defining [2-60](#)
- ports, debugging [B-53](#)
- ports, protected [2-534](#)
- port security
 - aging [2-530](#)
 - debug messages, display [B-55](#)
 - enabling [2-525](#)
 - violation error recovery [2-99](#)
- port trust states for QoS [2-220](#)
- port types, MVR [2-230](#)
- power information, displaying [2-316](#)
- priority-queue command [2-248](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-337](#)
- protected ports, displaying [2-333](#)
- pruning
 - VLANs [2-535](#)
 - VTP
 - displaying interface information [2-328](#)
 - enabling [2-575, 2-579](#)
- pruning-eligible VLAN list [2-536](#)
- PVST+
 - See STP

Q

QoS

- auto-QoS
 - configuring [2-14](#)
 - debug messages, display [B-2](#)
 - displaying [2-279](#)
- class maps
 - creating [2-32](#)
 - defining the match criteria [2-180](#)
 - displaying [2-287](#)
- defining the CoS value for an incoming packet [2-190](#)
- displaying configuration information [2-279, 2-381](#)
- DSCP transparency [2-202](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-192](#)
 - defining DSCP-to-DSCP-mutation map [2-194](#)
- egress queues
 - allocating buffers [2-198](#)
 - defining the CoS output queue threshold map [2-216](#)
 - defining the DSCP output queue threshold map [2-218](#)
 - displaying buffer allocations [2-385](#)
 - displaying CoS output queue threshold map [2-389](#)
 - displaying DSCP output queue threshold map [2-389](#)
 - displaying queueing strategy [2-385](#)
 - displaying queue-set settings [2-392](#)
 - enabling bandwidth shaping and scheduling [2-507](#)
 - enabling bandwidth sharing and scheduling [2-509](#)
 - limiting the maximum output on a port [2-505](#)
 - mapping a port to a queue-set [2-250](#)
 - mapping CoS values to a queue and threshold [2-216](#)
 - mapping DSCP values to a queue and threshold [2-218](#)
 - setting maximum and reserved memory allocations [2-200](#)
 - setting WTD thresholds [2-200](#)
- enabling [2-186](#)
- ingress queues
 - allocating buffers [2-206](#)
 - assigning SRR scheduling weights [2-204](#)

ingress queues (continued)

- defining the CoS input queue threshold map [2-208](#)
- defining the DSCP input queue threshold map [2-210](#)
- displaying buffer allocations [2-385](#)
- displaying CoS input queue threshold map [2-389](#)
- displaying DSCP input queue threshold map [2-389](#)
- displaying queueing strategy [2-385](#)
- displaying settings for [2-383](#)
- enabling the priority queue [2-212](#)
- mapping CoS values to a queue and threshold [2-208](#)
- mapping DSCP values to a queue and threshold [2-210](#)
- setting WTD thresholds [2-214](#)

maps

- defining [2-194](#), [2-208](#), [2-210](#), [2-216](#), [2-218](#)
- displaying [2-389](#)

policy maps

- applying an aggregate policer [2-242](#)
- applying to an interface [2-266](#), [2-270](#)
- creating [2-244](#)
- defining policers [2-188](#), [2-240](#)
- displaying policers [2-382](#)
- displaying policy maps [2-408](#)
- policed-DSCP map [2-194](#)
- setting DSCP or IP precedence values [2-268](#)
- traffic classifications [2-30](#)
- trust states [2-548](#)

port trust states [2-220](#)queues, enabling the expedite [2-248](#)

statistics

- in-profile and out-of-profile packets [2-385](#)
- packets enqueued or dropped [2-385](#)
- sent and received CoS values [2-385](#)
- sent and received DSCP values [2-385](#)

trusted boundary for IP phones [2-220](#)

quality of service

See QoS

querytime, MVR [2-227](#)queue-set command [2-250](#)**R**

- radius-server dead-criteria command [2-251](#)
- radius-server host command [2-253](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-255](#)
- re-authenticating IEEE 802.1x-enabled ports [2-90](#)
- re-authentication
 - periodic [2-91](#)
 - time between attempts [2-92](#)
- receiver ports, MVR [2-230](#)
- receiving flow-control packets [2-102](#)
- recovery mechanism
 - causes [2-99](#)
 - display [2-285](#), [2-317](#), [2-321](#)
 - timer interval [2-99](#)
- redundancy for cluster switches [2-57](#)
- remote-span command [2-257](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-259](#)
- requirements
 - cluster [xvi](#)
 - device manager [xvi](#)
 - Network Assistant [xvi](#)
- reset (boot loader) command [A-18](#)
- reset command [2-568](#)
- resource templates, displaying [2-413](#)
- restricted VLAN
 - See dot1x auth-fail vlan
- rmdir (boot loader) command [A-19](#)
- rmon collection stats command [2-261](#)
- root guard, for spanning tree [2-468](#)

RSPAN

- configuring [2-222](#)
- displaying [2-395](#)
- filter RSPAN traffic [2-222](#)
- remote-span command [2-257](#)
- sessions
 - add interfaces to [2-222](#)
 - displaying [2-395](#)
 - start new [2-222](#)

S

- sdm prefer command [2-262](#)
- SDM templates
 - displaying [2-413](#)
- secure ports, limitations [2-527](#)
- sending flow-control packets [2-102](#)
- service password-recovery command [2-264](#)
- service-policy command [2-266](#)
- set (boot loader) command [A-20](#)
- set command [2-268](#)
- setup command [2-270](#)
- setup express command [2-273](#)
- show access-lists command [2-275](#)
- show archive status command [2-278](#)
- show auto qos command [2-279](#)
- show boot command [2-283](#)
- show cable-diagnostics tdr command [2-285](#)
- show changes command [2-568](#)
- show class-map command [2-287](#)
- show cluster candidates command [2-290](#)
- show cluster command [2-288](#)
- show cluster members command [2-292](#)
- show controllers cpu-interface command [2-294](#)
- show controllers ethernet-controller command [2-296](#)
- show controllers team command [2-303](#)
- show controller utilization command [2-305](#)
- show current command [2-568](#)
- show dot1x command [2-307](#)
- show dtp [2-311](#)
- show eap command [2-313](#)
- show env command [2-316](#)
- show errdisable detect command [2-317](#)
- show errdisable flap-values command [2-319](#)
- show errdisable recovery command [2-321](#)
- show etherchannel command [2-323](#)
- show flowcontrol command [2-326](#)
- show interfaces command [2-328](#)
- show interfaces counters command [2-335](#)
- show inventory command [2-337](#)
- show ip dhcp snooping binding command [2-339](#)
- show ip dhcp snooping command [2-338](#)
- show ip dhcp snooping database command [2-341](#)
- show ip igmp profile command [2-343](#)
- show ip igmp snooping command [2-344](#)
- show ip igmp snooping groups command [2-347](#)
- show ip igmp snooping mrouter command [2-349](#)
- show ip igmp snooping querier command [2-351](#)
- show lacp command [2-353](#)
- show link state group command [2-357](#)
- show mac access-group command [2-359](#)
- show mac address-table address command [2-363](#)
- show mac address-table aging time command [2-365](#)
- show mac address-table command [2-361](#)
- show mac address-table count command [2-367](#)
- show mac address-table dynamic command [2-369](#)
- show mac address-table interface command [2-371](#)
- show mac address-table move update command [2-373](#)
- show mac address-table notification command [2-39, 2-375, B-19](#)
- show mac address-table static command [2-377](#)
- show mac address-table vlan command [2-379](#)
- show mls qos aggregate-policer command [2-382](#)
- show mls qos command [2-381](#)
- show mls qos input-queue command [2-383](#)
- show mls qos interface command [2-385](#)
- show mls qos maps command [2-389](#)
- show mls qos queue-set command [2-392](#)

- show mls qos vlan command [2-394](#)
- show monitor command [2-395](#)
- show mvr command [2-397](#)
- show mvr interface command [2-399](#)
- show mvr members command [2-401](#)
- show pagp command [2-403](#)
- show parser macro command [2-405](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-30](#)
- show policy-map command [2-408](#)
- show port security command [2-410](#)
- show proposed command [2-568](#)
- show sdm prefer command [2-413](#)
- show setup express command [2-415](#)
- show spanning-tree command [2-416](#)
- show storm-control command [2-427](#)
- show system mtu command [2-429](#)
- show trust command [2-548](#)
- show udd command [2-430](#)
- show version command [2-433](#)
- show vlan command [2-435](#)
- show vlan command, fields [2-437](#)
- show vmps command [2-439](#)
- show vtp command [2-442](#)
- shutdown command [2-447](#)
- shutdown vlan command [2-448](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-452](#)
- SNMP informs, enabling the sending of [2-449](#)
- snmp-server enable traps command [2-449](#)
- snmp-server host command [2-452](#)
- snmp trap mac-notification command [2-456](#)
- SNMP traps
 - enabling MAC address notification trap [2-456](#)
 - enabling the MAC address notification feature [2-165](#)
 - enabling the sending of [2-449](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-62](#)
 - downloading [2-6](#)
 - upgrading [2-6](#)
 - uploading [2-12](#)
- software version, displaying [2-433](#)
- source ports, MVR [2-230](#)
- SPAN
 - configuring [2-222](#)
 - debug messages, display [B-20](#)
 - displaying [2-395](#)
 - filter SPAN traffic [2-222](#)
 - sessions
 - add interfaces to [2-222](#)
 - displaying [2-395](#)
 - start new [2-222](#)
- spanning [2-497](#)
- spanning-tree backbonefast command [2-458](#)
- spanning-tree bpduguard command [2-461](#)
- spanning-tree bpduguard command [2-461](#)
- spanning-tree cost command [2-463](#)

- spanning-tree etherchannel command [2-465](#)
- spanning-tree extend system-id command [2-467](#)
- spanning-tree guard command [2-468](#)
- spanning-tree link-type command [2-470](#)
- spanning-tree loopguard default command [2-472](#)
- spanning-tree mode command [2-474](#)
- spanning-tree mst configuration command [2-476](#)
- spanning-tree mst cost command [2-478](#)
- spanning-tree mst forward-time command [2-480](#)
- spanning-tree mst hello-time command [2-481](#)
- spanning-tree mst max-age command [2-482](#)
- spanning-tree mst max-hops command [2-483](#)
- spanning-tree mst port-priority command [2-485](#)
- spanning-tree mst pre-standard command [2-487](#)
- spanning-tree mst priority command [2-488](#)
- spanning-tree mst root command [2-489](#)
- spanning-tree portfast (global configuration) command [2-493](#)
- spanning-tree portfast (interface configuration) command [2-495](#)
- spanning-tree port-priority command [2-491](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-497](#)
- spanning-tree uplinkfast command [2-498](#)
- spanning-tree vlan command [2-500](#)
- speed command [2-503](#)
- srr-queue bandwidth limit command [2-505](#)
- srr-queue bandwidth shape command [2-507](#)
- srr-queue bandwidth share command [2-509](#)
- SSH, configuring version [2-147](#)
- static-access ports, configuring [2-514](#)
- statistics, Ethernet group [2-261](#)
- sticky learning, enabling [2-525](#)
- storm-control command [2-511](#)
- STP
 - BackboneFast [2-458](#)
 - counters, clearing [2-43](#)
 - debug messages, display
 - (continued)
 - BackboneFast events [B-59](#)
 - MSTP [B-62](#)
 - optimized BPDUs handling [B-61](#)
 - spanning-tree activity [B-57](#)
 - switch shim [B-64](#)
 - transmitted and received BPDUs [B-60](#)
 - UplinkFast [B-66](#)
 - detection of indirect link failures [2-458](#)
 - EtherChannel misconfiguration [2-465](#)
 - extended system ID [2-467](#)
 - path cost [2-463](#)
 - protocol modes [2-474](#)
 - root port
 - accelerating choice of new [2-498](#)
 - loop guard [2-468](#)
 - preventing from becoming designated [2-468](#)
 - restricting which can be root [2-468](#)
 - root guard [2-468](#)
 - UplinkFast [2-498](#)
 - root switch
 - affects of extended system ID [2-467, 2-501](#)
 - hello-time [2-500](#)
 - interval between BDPU messages [2-500](#)
 - interval between hello BPDU messages [2-500](#)
 - max-age [2-500](#)
 - port priority for selection of [2-491](#)
 - primary or secondary [2-500](#)
 - switch priority [2-500](#)
 - state changes
 - blocking to forwarding state [2-495](#)
 - enabling BPDU filtering [2-459, 2-493](#)
 - enabling BPDU guard [2-461, 2-493](#)
 - enabling Port Fast [2-493, 2-495](#)
 - enabling timer to recover from error state [2-99](#)
 - forward-delay time [2-500](#)
 - length of listening and learning states [2-500](#)
 - shutting down Port Fast-enabled ports [2-493](#)

STP (continued)

state information display [2-416](#)VLAN options [2-488, 2-500](#)

Switched Port Analyzer

See SPAN

switchport access command [2-514](#)switchport backup interface command [2-516](#)switchport block command [2-519](#)switchport host command [2-520](#)switchport mode command [2-521](#)switchport nonegotiate command [2-523](#)switchport port-security aging command [2-530](#)switchport port-security command [2-525](#)switchport priority extend command [2-532](#)switchport protected command [2-534](#)switchports, displaying [2-328](#)switchport trunk command [2-535](#)switchport voice vlan command [2-538](#)system message logging, save message to flash [2-156](#)system mtu command [2-540](#)system resource templates [2-262](#)

Ttar files, creating, listing, and extracting [2-9](#)TDR, running [2-542](#)Telnet, using to communicate to cluster switches [2-255](#)temperature information, displaying [2-316](#)templates, SDM [2-262](#)templates, system resources [2-262](#)test cable-diagnostics tdr command [2-542](#)traceroute mac command [2-543](#)traceroute mac ip command [2-546](#)trunking, VLAN mode [2-521](#)trunk mode [2-521](#)trunk ports [2-521](#)trunks, to non-DTP device [2-522](#)trusted boundary for QoS [2-220](#)trusted port states for QoS [2-220](#)type (boot loader) command [A-23](#)

U

UDLD

aggressive mode [2-550, 2-552](#)debug messages, display [B-74](#)enable globally [2-550](#)enable per interface [2-552](#)error recovery timer [2-99](#)message timer [2-550](#)normal mode [2-550, 2-552](#)reset a shutdown interface [2-554](#)status [2-430](#)udld command [2-550](#)udld port command [2-552](#)udld reset command [2-554](#)unicast storm control [2-511](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-519](#)unknown unicast traffic, preventing [2-519](#)unset (boot loader) command [A-24](#)

upgrading

software images [2-6](#)monitoring status of [2-278](#)

upgrading information

See release notes

UplinkFast, for STP [2-498](#)user EXEC mode [1-2](#)

Vversion (boot loader) command [A-26](#)

VLAN

enabling guest VLAN supplicant [2-69](#)vlan (global configuration) command [2-555](#)

vlan (VLAN configuration) command [2-561](#)

VLAN configuration

rules [2-558, 2-563](#)

saving [2-555, 2-565](#)

VLAN configuration mode

commands

VLAN [2-561](#)

VTP [2-579](#)

description [1-4](#)

entering [2-567](#)

summary [1-2](#)

vlan database command [2-567](#)

VLAN ID range [2-555, 2-561](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-555](#)

configuring [2-555, 2-561](#)

debug messages, display

ISL [B-70](#)

VLAN IOS file system error tests [B-69](#)

VLAN manager activity [B-67](#)

VTP [B-72](#)

displaying configurations [2-435](#)

extended-range [2-555](#)

MAC addresses

displaying [2-379](#)

number of [2-367](#)

media types [2-558, 2-563](#)

normal-range [2-555, 2-561](#)

restarting [2-448](#)

saving the configuration [2-555](#)

shutting down [2-448](#)

SNMP traps for VTP [2-450, 2-453](#)

suspending [2-448](#)

variables [2-561](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-573](#)

displaying [2-439](#)

error recovery timer [2-99](#)

reconfirming dynamic VLAN assignments [2-570](#)

vmmps reconfirm (global configuration) command [2-571](#)

vmmps reconfirm (privileged EXEC) command [2-570](#)

vmmps retry command [2-572](#)

vmmps server command [2-573](#)

voice VLAN

configuring [2-538](#)

setting port priority [2-532](#)

VQP

and dynamic-access ports [2-515](#)

clearing client statistics [2-45](#)

displaying information [2-439](#)

per-server retry count [2-572](#)

reconfirmation interval [2-571](#)

reconfirming dynamic VLAN assignments [2-570](#)

VTP

changing characteristics [2-575](#)

clearing pruning counters [2-46](#)

configuring

domain name [2-575, 2-579](#)

file name [2-575](#)

mode [2-575, 2-579](#)

password [2-575, 2-579](#)

counters display fields [2-443](#)

displaying information [2-442](#)

enabling

pruning [2-575, 2-579](#)

Version 2 [2-575, 2-579](#)

mode [2-575, 2-579](#)

pruning [2-575, 2-579](#)

saving the configuration [2-555, 2-565](#)

statistics [2-442](#)

status [2-442](#)

status display fields [2-445](#)

vtp (global configuration) command [2-575](#)

vtp (VLAN configuration) command [2-579](#)