



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-431](#)
access mode [2-386](#)
access ports [2-386](#)
aggregate-port learner [2-157](#)
allowed VLANs [2-398](#)
apply command [2-431](#)
archive download-sw command [2-6](#)
archive tar command [2-8](#)
archive upload-sw command [2-11](#)
audience [xiii](#)
authorization state of controlled port [2-65](#)
autonegotiation of duplex mode [2-72](#)

B

BackboneFast, for STP [2-331](#)
backup interfaces
 displaying [2-230](#)
boot (boot loader) command [A-2](#)
boot boothlpr command [2-13](#)
boot config-file command [2-14](#)
boot enable-break command [2-15](#)
boot helper command [2-16](#)
boot helper-config file command [2-17](#)

booting

 Cisco IOS image [2-20](#)
 displaying environment variables [2-184](#)
 interrupting [2-15](#)
 manually [2-18](#)

boot loader

 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)
 helper image [2-16](#)

directories

 creating [A-15](#)
 displaying a list of [A-7](#)
 removing [A-19](#)

displaying

 available commands [A-12](#)
 memory heap utilization [A-14](#)
 version [A-26](#)

environment variables

 described [A-20](#)
 displaying settings [A-20](#)
 location of [A-21](#)
 setting [A-20](#)
 unsetting [A-24](#)

files

 copying [A-5](#)
 deleting [A-6](#)
 displaying a list of [A-7](#)
 displaying the contents of [A-4, A-16, A-23](#)
 renaming [A-17](#)

boot loader (continued)

- file system

- formatting [A-10](#)

- initializing flash [A-9](#)

- running a consistency check [A-11](#)

- loading helper images [A-13](#)

- prompt [A-1](#)

- resetting the system [A-18](#)

- boot manual command [2-18](#)

- boot private-config-file command [2-19](#)

- boot system command [2-20](#)

- BPDU filtering, for spanning tree [2-332, 2-367](#)

- BPDU guard, for spanning tree [2-334, 2-367](#)

- broadcast storm control [2-379](#)

C

- candidate switches

- See clusters

- cat (boot loader) command [A-4](#)

- caution, description [xiv](#)

- channel-group command [2-21](#)

- channel-protocol command [2-24](#)

- Cisco Network Assistant

- See Network Assistant [xiv](#)

- class of service

- See CoS

- clear dot1x command [2-25](#)

- clear eap sessions command [2-26](#)

- clear errdisable interface [2-27](#)

- clear lacp command [2-28](#)

- clear mac address-table command [2-29](#)

- clear pagp command [2-30](#)

- clear port-security command [2-31](#)

- clear spanning-tree counters command [2-33](#)

- clear spanning-tree detected-protocols command [2-34](#)

- clear vmps statistics command [2-35](#)

- clear vtp counters command [2-36](#)

- cluster commander-address command [2-37](#)

- cluster discovery hop-count command [2-39](#)

- cluster enable command [2-40](#)

- cluster holdtime command [2-41](#)

- cluster member command [2-42](#)

- cluster outside-interface command [2-44](#)

- cluster requirements [xiv](#)

- cluster run command [2-45](#)

- clusters

- adding candidates [2-42](#)

- binding to HSRP group [2-46](#)

- building manually [2-42](#)

- communicating with

- devices outside the cluster [2-44](#)

- members by using Telnet [2-169](#)

- debug messages, display [B-2](#)

- displaying

- candidate switches [2-190](#)

- debug messages [B-2](#)

- member switches [2-192](#)

- status [2-188](#)

- hop-count limit for extended discovery [2-39](#)

- HSRP standby groups [2-46](#)

- redundancy [2-46](#)

- SNMP trap [2-321](#)

- cluster standby-group command [2-46](#)

- cluster timer command [2-48](#)

- command modes defined [1-1](#)

- command switch

- See clusters

- configuration, initial

- See getting started guide and hardware installation guide

- configuration files

- password recovery disable considerations [A-1](#)

- specifying the name [2-14, 2-19](#)

- configuring multiple interfaces [2-84](#)

config-vlan mode

- commands [2-420](#)
- description [1-4](#)
- entering [2-419](#)
- summary [1-2](#)

conventions

- command [xiii](#)
- for examples [xiv](#)
- publication [xiii](#)
- text [xiii](#)

copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-141](#)
- overriding the incoming value [2-141](#)

CPU ASIC statistics, displaying [2-194](#)

crashinfo files [2-77](#)

D

debug cluster command [B-2](#)

debug dot1x command [B-4](#)

debug dtp command [B-5](#)

debug eap command [B-6](#)

debug etherchannel command [B-7](#)

debug interface command [B-8](#)

debug ip igmp filter command [B-9](#)

debug ip igmp max-groups command [B-10](#)

debug ip igmp snooping command [B-11](#)

debug lacp command [B-12](#)

debug mac-notification command [B-13](#)

debug matm command [B-14](#)

debug monitor command [B-15](#)

debug nvram command [B-16](#)

debug pagp command [B-17](#)

debug platform cpu-queues command [B-18](#)

debug platform dot1x command [B-20](#)

debug platform etherchannel command [B-21](#)

debug platform forw-tcam command [B-22](#)

debug platform ip dhcp command [B-23](#)

debug platform ip igmp snooping command [B-24](#)

debug platform led command [B-26](#)

debug platform matm command [B-27](#)

debug platform messaging application command [B-28](#)

debug platform phy command [B-29](#)

debug platform pm command [B-31](#)

debug platform port-asic command [B-33](#)

debug platform port-security command [B-34](#)

debug platform qos-acl-tcam command [B-35](#)

debug platform resource-manager command [B-36](#)

debug platform snmp command [B-37](#)

debug platform span command [B-38](#)

debug platform supervisor-asic command [B-39](#)

debug platform sw-bridge command [B-40](#)

debug platform tcam command [B-41](#)

debug platform udd command [B-43](#)

debug platform vlan command [B-44](#)

debug pm command [B-45](#)

debug port-security command [B-47](#)

debug qos-manager command [B-48](#)

debug spanning-tree backbonefast command [B-51](#)

debug spanning-tree bpd command [B-52](#)

debug spanning-tree bpd-opt command [B-53](#)

debug spanning-tree command [B-49](#)

debug spanning-tree mstp command [B-54](#)

debug spanning-tree switch command [B-56](#)

debug spanning-tree uplinkfast command [B-58](#)

debug sw-vlan command [B-59](#)

debug sw-vlan ifs command [B-61](#)

debug sw-vlan notification command [B-62](#)

debug sw-vlan vtp command [B-63](#)

debug udd command [B-65](#)

debug vqpc command [B-67](#)

define interface-range command [2-49](#)

delete (boot loader) command [A-6](#)

delete command [2-51](#)

detect mechanism, causes [2-73](#)

device manager requirements [xiv](#)

DHCP snooping

error recovery timer [2-75](#)

dir (boot loader) command [A-7](#)

directories, deleting [2-51](#)

documentation, related [xiv](#)

document conventions [xiii](#)

domain name, VTP [2-438, 2-442](#)

dot1x command [2-52](#)

dot1x default command [2-54](#)

dot1x fallback command [2-55](#)

dot1x guest-vlan command [2-56](#)

dot1x host-mode command [2-58](#)

dot1x initialize command [2-59](#)

dot1x mac-auth-bypass command [2-60](#)

dot1x max-reauth-req command [2-62](#)

dot1x max-req command [2-63](#)

dot1x pae command [2-64](#)

dot1x port-control command [2-65](#)

dot1x re-authenticate command [2-67](#)

dot1x reauthentication command [2-68](#)

dot1x timeout command [2-69](#)

DTP [2-387](#)

DTP flap

error detection for [2-73](#)

error recovery timer [2-75](#)

DTP negotiation [2-388](#)

dual-purpose uplink ports

displaying configurable options [2-233](#)

displaying the active media [2-237](#)

dual-purpose uplink ports, selecting the type [2-137](#)

duplex command [2-71](#)

dynamic-access ports

configuring [2-382](#)

restrictions [2-383](#)

dynamic auto VLAN membership mode [2-386](#)

dynamic desirable VLAN membership mode [2-386](#)

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-63](#)

response time before retransmitting [2-69](#)

environment variables, displaying [2-184](#)

errdisable detect cause command [2-73](#)

errdisable recovery command [2-75](#)

error conditions, displaying [2-219](#)

error disable detection [2-73](#)

error-disabled interfaces, displaying [2-230](#)

EtherChannel

assigning Ethernet interface to channel group [2-21](#)

creating port-channel logical interface [2-82](#)

debug EtherChannel/PAgP, display [B-7](#)

debug platform-specific events, display [B-21](#)

displaying [2-223](#)

interface information, displaying [2-230](#)

LACP

clearing channel-group information [2-28](#)

debug messages, display [B-12](#)

displaying [2-252](#)

modes [2-21](#)

port priority for hot-standby ports [2-113](#)

restricting a protocol [2-24](#)

system priority [2-115](#)

load-distribution methods [2-161](#)

PAgP

aggregate-port learner [2-157](#)

clearing channel-group information [2-30](#)

debug messages, display [B-17](#)

displaying [2-283](#)

error detection for [2-73](#)

error recovery timer [2-75](#)

learn method [2-157](#)

modes [2-21](#)

physical-port learner [2-157](#)

priority of interface for transmitted traffic [2-159](#)

Ethernet controller, internal register display [2-196](#)

Ethernet statistics, collecting [2-171](#)
 examples, conventions for [xiv](#)
 exception crashinfo command [2-77](#)
 exit command [2-431](#)
 extended discovery of candidate switches [2-39](#)
 extended-range VLANs
 and allowed VLAN list [2-398](#)
 and pruning-eligible list [2-398](#)
 configuring [2-419](#)
 extended system ID for STP [2-340](#)

F

fallback profile command [2-78](#)
 fallback profiles, displaying [2-226](#)
 fan information, displaying [2-216](#)
 file name, VTP [2-438](#)
 files, deleting [2-51](#)
 flash_init (boot loader) command [A-9](#)
 Flex Links
 displaying [2-230](#)
 flowcontrol command [2-80](#)
 format (boot loader) command [A-10](#)
 forwarding results, display [C-3](#)
 frame forwarding information, displaying [C-3](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

help (boot loader) command [A-12](#)
 hop-count limit for clusters [2-39](#)
 host connection, port configuration [2-385](#)
 Hot Standby Router Protocol
 See HSRP

HSRP

binding HSRP group to cluster [2-46](#)
 standby group [2-46](#)

IEEE 802.1x

and switchport modes [2-387](#)
 violation error recovery [2-75](#)
 See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-55, 2-79](#)

IGMP filters

applying [2-90](#)
 debug messages, display [B-9](#)

IGMP groups, setting maximum [2-91](#)

IGMP maximum groups, debugging [B-10](#)

IGMP profiles

creating [2-93](#)
 displaying [2-242](#)

IGMP snooping

adding ports as a static member of a group [2-109](#)
 displaying [2-243, 2-248, 2-250](#)
 enabling [2-95](#)
 enabling the configurable-leave timer [2-97](#)
 enabling the Immediate-Leave feature [2-106](#)
 flooding query count [2-103](#)
 interface topology change notification behavior [2-105](#)
 multicast table [2-246](#)
 querier [2-99](#)
 query solicitation [2-103](#)
 report suppression [2-101](#)
 switch topology change notification behavior [2-103](#)

images

See software images

immediate-leave processing [2-106](#)

initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-82](#)
 interface range command [2-84](#)
 interface-range macros [2-49](#)
 interfaces
 assigning Ethernet interface to channel group [2-21](#)
 configuring [2-71](#)
 configuring multiple [2-84](#)
 creating port-channel logical [2-82](#)
 debug messages, display [B-8](#)
 disabling [2-319](#)
 displaying the MAC address table [2-266](#)
 restarting [2-319](#)
 interface speed, configuring [2-377](#)
 interface vlan command [2-87](#)
 internal registers, displaying [2-196, 2-203](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [2-73](#)
 error recovery timer [2-75](#)
 ip address command [2-88](#)
 IP addresses, setting [2-88](#)
 ip igmp filter command [2-90](#)
 ip igmp max-groups command [2-91](#)
 ip igmp profile command [2-93](#)
 ip igmp snooping command [2-95](#)
 ip igmp snooping last-member-query-interval command [2-97](#)
 ip igmp snooping querier command [2-99](#)
 ip igmp snooping report-suppression command [2-101](#)
 ip igmp snooping tcn command [2-103](#)
 ip igmp snooping tcn flood command [2-105](#)
 ip igmp snooping vlan immediate-leave command [2-106](#)
 ip igmp snooping vlan mrouter command [2-107](#)
 ip igmp snooping vlan static command [2-109](#)
 ip ssh command [2-111](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [2-113](#)
 lacp system-priority command [2-115](#)
 Layer 2 traceroute
 IP addresses [2-410](#)
 MAC addresses [2-407](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-73](#)
 error recovery timer [2-75](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-161](#)
 logging event command [2-117](#)
 logging file command [2-118](#)
 logical interface [2-82](#)
 loopback error
 detection for [2-73](#)
 recovery timer [2-75](#)
 loop guard, for spanning tree [2-342, 2-346](#)

M

MAC addresses

displaying

- aging time [2-260](#)
- all [2-258](#)
- dynamic [2-264](#)
- notification settings [2-268](#)
- number of addresses in a VLAN [2-262](#)
- per interface [2-266](#)
- per VLAN [2-272](#)
- static [2-270](#)
- static and dynamic entries [2-256](#)

dynamic

- aging time [2-120](#)
- deleting [2-29](#)
- displaying [2-264](#)

enabling MAC address notification [2-121](#)

static

- adding and removing [2-123](#)
- displaying [2-270](#)
- dropping on an interface [2-124](#)

tables [2-258](#)

MAC address notification, debugging [B-13](#)

- mac address-table aging-time [2-120](#)
- mac address-table aging-time command [2-120](#)
- mac address-table notification command [2-121](#)
- mac address-table static command [2-123](#)
- mac address-table static drop command [2-124](#)
- macro apply command [2-126](#)
- macro description command [2-129](#)
- macro global command [2-130](#)
- macro global description command [2-133](#)
- macro name command [2-134](#)

macros

- adding a description [2-129](#)
- adding a global description [2-133](#)
- applying [2-130](#)
- creating [2-134](#)
- displaying [2-285](#)
- interface range [2-49, 2-84](#)
- specifying parameter values [2-130](#)
- tracing [2-130](#)

manual

- audience [xiii](#)
- purpose of [xiii](#)

maps

QoS

- displaying [2-279](#)

maximum transmission unit

See MTU

mdix auto command [2-136](#)

media-type command [2-137](#)

member switches

See clusters

memory (boot loader) command [A-14](#)

mkdir (boot loader) command [A-15](#)

mls qos command [2-139](#)

mls qos cos command [2-141](#)

mls qos rewrite ip dscp command [2-143](#)

mls qos-srr-queue input cos-map command [2-145](#)

mls qos srr-queue input priority-queue command [2-147](#)

mls qos-srr-queue output cos-map command [2-149](#)

mls qos trust command [2-151](#)

Mode button, and password recovery [2-174](#)

modes, commands [1-1](#)

monitor session command [2-152](#)

more (boot loader) command [A-16](#)

MSTP

- displaying [2-295, 2-296](#)
- interoperability [2-34](#)
- link type [2-344](#)
- MST region
 - aborting changes [2-350](#)
 - applying changes [2-350](#)
 - configuration name [2-350](#)
 - configuration revision number [2-350](#)
 - current or pending display [2-350](#)
 - displaying [2-295, 2-296](#)
 - MST configuration mode [2-350](#)
 - VLANs-to-instance mapping [2-350](#)
- path cost [2-352](#)
- protocol mode [2-348](#)
- restart protocol migration process [2-34](#)
- root port
 - loop guard [2-342](#)
 - preventing from becoming designated [2-342](#)
 - restricting which can be root [2-342](#)
 - root guard [2-342](#)
- root switch
 - affects of extended system ID [2-340](#)
 - hello-time [2-355, 2-363](#)
 - interval between BPDU messages [2-356](#)
 - interval between hello BPDU messages [2-355, 2-363](#)
 - max-age [2-356](#)
 - maximum hop count before discarding BPDU [2-357](#)
 - port priority for selection of [2-359](#)
 - primary or secondary [2-363](#)
 - switch priority [2-362](#)

MSTP (continued)

- state changes
 - blocking to forwarding state [2-369](#)
 - enabling BPDU filtering [2-332, 2-367](#)
 - enabling BPDU guard [2-334, 2-367](#)
 - enabling Port Fast [2-367, 2-369](#)
 - forward-delay time [2-354](#)
 - length of listening and learning states [2-354](#)
 - rapid transition to forwarding [2-344](#)
 - shutting down Port Fast-enabled ports [2-367](#)
- state information display [2-294](#)

MTU

- configuring size [2-404](#)
- displaying global setting [2-303](#)
- multicast router learning method [2-107](#)
- multicast router ports, configuring [2-107](#)
- multicast storm control [2-379](#)
- Multiple Spanning Tree Protocol
 - See MSTP

N

- native VLANs [2-398](#)
- Network Assistant requirements [xiv](#)
- nonegotiate, speed [2-377](#)
- nonegotiating DTP messaging [2-388](#)
- normal-range VLANs [2-419, 2-424](#)
- note, description [xiv](#)
- no vlan command [2-419, 2-428](#)

P**PAgP**

See EtherChannel

- pagp learn-method command [2-157](#)
- pagp port-priority command [2-159](#)
- password, VTP [2-438, 2-442](#)
- password-recovery mechanism, enabling and disabling [2-174](#)

- per-VLAN spanning-tree plus
 - See STP
 - physical-port learner [2-157](#)
 - PID, displaying [2-241](#)
 - PIM-DVMRP, as multicast router learning method [2-107](#)
 - policy maps
 - applying to an interface [2-178](#)
 - traffic classification
 - defining trust states [2-412](#)
 - setting DSCP or IP precedence values [2-176](#)
 - Port Aggregation Protocol
 - See EtherChannel
 - port-based authentication
 - AAA method list [2-3](#)
 - debug messages, display [B-4](#)
 - enabling IEEE 802.1x
 - globally [2-52](#)
 - per interface [2-65](#)
 - guest VLAN [2-56](#)
 - host modes [2-58](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-59](#)
 - MAC authentication bypass [2-60](#)
 - manual control of authorization state [2-65](#)
 - PAE as authenticator [2-64](#)
 - periodic re-authentication
 - enabling [2-68](#)
 - time between attempts [2-69](#)
 - quiet period between failed authentication exchanges [2-69](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-67](#)
 - resetting configurable IEEE 802.1x parameters [2-54](#)
 - switch-to-authentication server retransmission time [2-69](#)
 - switch-to-client frame-retransmission number [2-62 to 2-63](#)
 - switch-to-client retransmission time [2-69](#)
 - port-channel load-balance command [2-161](#)
 - Port Fast, for spanning tree [2-369](#)
 - port ranges, defining [2-49](#)
 - ports, debugging [B-45](#)
 - ports, protected [2-397](#)
 - port security
 - aging [2-395](#)
 - debug messages, display [B-47](#)
 - enabling [2-390](#)
 - violation error recovery [2-75](#)
 - port trust states for QoS [2-151](#)
 - power information, displaying [2-216](#)
 - priority-queue command [2-163](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-241](#)
 - protected ports, displaying [2-235](#)
 - pruning
 - VLANs [2-398](#)
 - VTP
 - displaying interface information [2-230](#)
 - enabling [2-438, 2-442](#)
 - pruning-eligible VLAN list [2-399](#)
 - PVST+
 - See STP
-
- ## Q
- QoS
 - defining the CoS value for an incoming packet [2-141](#)
 - displaying configuration information [2-274](#)
 - DSCP transparency [2-143](#)
 - egress queues
 - defining the CoS output queue threshold map [2-149](#)
 - displaying buffer allocations [2-276](#)
 - displaying CoS output queue threshold map [2-279](#)
 - displaying queueing strategy [2-276](#)
 - mapping CoS values to a queue and threshold [2-149](#)
 - enabling [2-139](#)

QoS (continued)

ingress queues

- defining the CoS input queue threshold map [2-145](#)
- displaying buffer allocations [2-276](#)
- displaying CoS input queue threshold map [2-279](#)
- displaying queueing strategy [2-276](#)
- displaying settings for [2-275](#)
- enabling the priority queue [2-147](#)
- mapping CoS values to a queue and threshold [2-145](#)

maps

- defining [2-145, 2-149](#)
- displaying [2-279](#)

policy maps

- applying to an interface [2-178](#)
- setting DSCP or IP precedence values [2-176](#)
- trust states [2-412](#)

port trust states [2-151](#)queues, enabling the expedite [2-163](#)

statistics

- in-profile and out-of-profile packets [2-276](#)
- packets enqueued or dropped [2-276](#)
- sent and received CoS values [2-276](#)
- sent and received DSCP values [2-276](#)

receiving flow-control packets [2-80](#)

recovery mechanism

- causes [2-75](#)
- display [2-27, 2-186, 2-217, 2-221](#)
- timer interval [2-75](#)

redundancy for cluster switches [2-46](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)

requirements

- cluster [xiv](#)
- device manager [xiv](#)
- Network Assistant [xiv](#)

reset (boot loader) command [A-18](#)reset command [2-431](#)resource templates, displaying [2-291](#)rmdir (boot loader) command [A-19](#)rmon collection stats command [2-171](#)root guard, for spanning tree [2-342](#)

RSPAN

- configuring [2-152](#)
- displaying [2-281](#)
- filter RSPAN traffic [2-152](#)
- sessions
 - add interfaces to [2-152](#)
 - displaying [2-281](#)
 - start new [2-152](#)

Rradius-server dead-criteria command [2-165](#)radius-server host command [2-167](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-169](#)re-authenticating IEEE 802.1x-enabled ports [2-67](#)

re-authentication

- periodic [2-68](#)
- time between attempts [2-69](#)

Ssdm prefer command [2-172](#)

SDM templates

- displaying [2-291](#)

secure ports, limitations [2-392](#)sending flow-control packets [2-80](#)service password-recovery command [2-174](#)set (boot loader) command [A-20](#)set command [2-176](#)setup command [2-178](#)

- setup express command [2-181](#)
- show archive status command [2-183](#)
- show boot command [2-184](#)
- show cable-diagnostics tdr command [2-186](#)
- show changes command [2-431](#)
- show cluster candidates command [2-190](#)
- show cluster command [2-188](#)
- show cluster members command [2-192](#)
- show controllers cpu-interface command [2-194](#)
- show controllers ethernet-controller command [2-196](#)
- show controllers team command [2-203](#)
- show controller utilization command [2-205](#)
- show current command [2-431](#)
- show dot1x command [2-207](#)
- show dtp [2-211](#)
- show eap command [2-213](#)
- show env command [2-216](#)
- show errdisable detect command [2-217](#)
- show errdisable flap-values command [2-219](#)
- show errdisable recovery command [2-221](#)
- show etherchannel command [2-223](#)
- show fallback profile command [2-226](#)
- show flowcontrol command [2-228](#)
- show interfaces command [2-230](#)
- show interfaces counters command [2-239](#)
- show inventory command [2-241](#)
- show ip igmp profile command [2-242](#)
- show ip igmp snooping command [2-243](#)
- show ip igmp snooping groups command [2-246](#)
- show ip igmp snooping mrouter command [2-248](#)
- show ip igmp snooping querier command [2-250](#)
- show lacp command [2-252](#)
- show mac address-table address command [2-258](#)
- show mac address-table aging time command [2-260](#)
- show mac address-table command [2-256](#)
- show mac address-table count command [2-262](#)
- show mac address-table dynamic command [2-264](#)
- show mac address-table interface command [2-266](#)
- show mac address-table notification command [2-268](#)
- show mac address-table static command [2-270](#)
- show mac address-table vlan command [2-272](#)
- show mls qos command [2-274](#)
- show mls qos input-queue command [2-275](#)
- show mls qos interface command [2-276](#)
- show mls qos maps command [2-279](#)
- show monitor command [2-281](#)
- show pagp command [2-283](#)
- show parser macro command [2-285](#)
- show platform etherchannel command [C-2](#)
- show platform forward command [C-3](#)
- show platform igmp snooping command [C-5](#)
- show platform layer4op command [C-7](#)
- show platform mac-address-table command [C-8](#)
- show platform messaging command [C-9](#)
- show platform monitor command [C-10](#)
- show platform pm command [C-11](#)
- show platform port-asic command [C-12](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show port security command [2-288](#)
- show proposed command [2-431](#)
- show sdm prefer command [2-291](#)
- show setup express command [2-293](#)
- show spanning-tree command [2-294](#)
- show storm-control command [2-301](#)
- show system mtu command [2-303](#)
- show trust command [2-412](#)
- show udd command [2-304](#)
- show version command [2-307](#)
- show vlan command [2-309](#)
- show vlan command, fields [2-310](#)
- show vmps command [2-312](#)

- show vtp command [2-315](#)
- shutdown command [2-319](#)
- shutdown vlan command [2-320](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-325](#)
- SNMP informs, enabling the sending of [2-321](#)
- snmp-server enable traps command [2-321](#)
- snmp-server host command [2-325](#)
- snmp trap mac-notification command [2-329](#)
- SNMP traps
 - enabling MAC address notification trap [2-329](#)
 - enabling the MAC address notification feature [2-121](#)
 - enabling the sending of [2-321](#)
- software images
 - deleting [2-51](#)
 - uploading [2-11](#)
- software version, displaying [2-307](#)
- SPAN
 - configuring [2-152](#)
 - debug messages, display [B-15](#)
 - displaying [2-281](#)
 - filter SPAN traffic [2-152](#)
 - sessions
 - add interfaces to [2-152](#)
 - displaying [2-281](#)
 - start new [2-152](#)
- spanning-tree backbonefast command [2-331](#)
- spanning-tree bpdupfilter command [2-332](#)
- spanning-tree bpduguard command [2-334](#)
- spanning-tree cost command [2-336](#)
- spanning-tree etherchannel command [2-338](#)
- spanning-tree extend system-id command [2-340](#)
- spanning-tree guard command [2-342](#)
- spanning-tree link-type command [2-344](#)
- spanning-tree loopguard default command [2-346](#)
- spanning-tree mode command [2-348](#)
- spanning-tree mst configuration command [2-350](#)
- spanning-tree mst cost command [2-352](#)
- spanning-tree mst forward-time command [2-354](#)
- spanning-tree mst hello-time command [2-355](#)
- spanning-tree mst max-age command [2-356](#)
- spanning-tree mst max-hops command [2-357](#)
- spanning-tree mst port-priority command [2-359](#)
- spanning-tree mst pre-standard command [2-361](#)
- spanning-tree mst priority command [2-362](#)
- spanning-tree mst root command [2-363](#)
- spanning-tree portfast (global configuration) command [2-367](#)
- spanning-tree portfast (interface configuration) command [2-369](#)
- spanning-tree port-priority command [2-365](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-371](#)
- spanning-tree uplinkfast command [2-372](#)
- spanning-tree vlan command [2-374](#)
- speed command [2-377](#)
- SSH, configuring version [2-111](#)
- static-access ports, configuring [2-382](#)
- statistics, Ethernet group [2-171](#)
- sticky learning, enabling [2-390](#)
- storm-control command [2-379](#)
- STP
 - BackboneFast [2-331](#)
 - counters, clearing [2-33](#)
 - debug messages, display
 - BackboneFast events [B-51](#)
 - MSTP [B-54](#)
 - optimized BPDUs handling [B-53](#)
 - spanning-tree activity [B-49](#)
 - switch shim [B-56](#)
 - transmitted and received BPDUs [B-52](#)
 - UplinkFast [B-58](#)
 - detection of indirect link failures [2-331](#)
 - EtherChannel misconfiguration [2-338](#)
 - extended system ID [2-340](#)
 - path cost [2-336](#)

STP (continued)

- protocol modes [2-348](#)
 - root port
 - accelerating choice of new [2-372](#)
 - loop guard [2-342](#)
 - preventing from becoming designated [2-342](#)
 - restricting which can be root [2-342](#)
 - root guard [2-342](#)
 - UplinkFast [2-372](#)
 - root switch
 - affects of extended system ID [2-340, 2-375](#)
 - hello-time [2-374](#)
 - interval between BPDU messages [2-374](#)
 - interval between hello BPDU messages [2-374](#)
 - max-age [2-374](#)
 - port priority for selection of [2-365](#)
 - primary or secondary [2-374](#)
 - switch priority [2-374](#)
 - state changes
 - blocking to forwarding state [2-369](#)
 - enabling BPDU filtering [2-332, 2-367](#)
 - enabling BPDU guard [2-334, 2-367](#)
 - enabling Port Fast [2-367, 2-369](#)
 - enabling timer to recover from error state [2-75](#)
 - forward-delay time [2-374](#)
 - length of listening and learning states [2-374](#)
 - shutting down Port Fast-enabled ports [2-367](#)
 - state information display [2-294](#)
 - VLAN options [2-362, 2-374](#)
- Switched Port Analyzer**
- See SPAN
 - switchport access command [2-382](#)
 - switchport block command [2-384](#)
 - switchport host command [2-385](#)
 - switchport mode command [2-386](#)
 - switchport nonegotiate command [2-388](#)
 - switchport port-security aging command [2-395](#)
 - switchport port-security command [2-390](#)
 - switchport protected command [2-397](#)

- switchports, displaying [2-230](#)
- switchport trunk command [2-398](#)
- switchport voice vlan command [2-401, 2-402](#)
- system message logging, save message to flash [2-118](#)
- system mtu command [2-404](#)
- system resource templates [2-172](#)

T

- tar files, creating, listing, and extracting [2-8](#)
- TDR, running [2-406](#)
- Telnet, using to communicate to cluster switches [2-169](#)
- temperature information, displaying [2-216](#)
- templates, SDM [2-172](#)
- templates, system resources [2-172](#)
- test cable-diagnostics tdr command [2-406](#)
- traceroute mac command [2-407](#)
- traceroute mac ip command [2-410](#)
- trunking, VLAN mode [2-386](#)
- trunk mode [2-386](#)
- trunk ports [2-386](#)
- trunks, to non-DTP device [2-387](#)
- trusted port states for QoS [2-151](#)
- type (boot loader) command [A-23](#)

U**UDLD**

- aggressive mode [2-414, 2-416](#)
- debug messages, display [B-65](#)
- enable globally [2-414](#)
- enable per interface [2-416](#)
- error recovery timer [2-75](#)
- message timer [2-414](#)
- normal mode [2-414, 2-416](#)
- reset a shutdown interface [2-418](#)
- status [2-304](#)

udld command [2-414](#)

udld port command [2-416](#)

udld reset command [2-418](#)

unicast storm control [2-379](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-384](#)

unknown unicast traffic, preventing [2-384](#)

unset (boot loader) command [A-24](#)

upgrading information

See release notes

UplinkFast, for STP [2-372](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)

vlan (global configuration) command [2-419](#)

vlan (VLAN configuration) command [2-424](#)

VLAN configuration

rules [2-422, 2-426](#)

saving [2-419, 2-428](#)

VLAN configuration mode

commands

VLAN [2-424](#)

VTP [2-442](#)

description [1-5](#)

entering [2-430](#)

summary [1-2](#)

vlan database command [2-430](#)

VLAN ID range [2-419, 2-424](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-419](#)

configuring [2-419, 2-424](#)

debug messages, display

ISL [B-62](#)

VLAN IOS file system error tests [B-61](#)

VLAN manager activity [B-59](#)

VTP [B-63](#)

displaying configurations [2-309](#)

enabling guest VLAN supplicant [2-55, 2-79](#)

extended-range [2-419](#)

MAC addresses

displaying [2-272](#)

number of [2-262](#)

media types [2-421, 2-426](#)

normal-range [2-419, 2-424](#)

restarting [2-320](#)

saving the configuration [2-419](#)

shutting down [2-320](#)

SNMP traps for VTP [2-323, 2-326](#)

suspending [2-320](#)

variables [2-424](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-436](#)

displaying [2-312](#)

error recovery timer [2-75](#)

reconfirming dynamic VLAN assignments [2-433](#)

vmpls reconfirm (global configuration) command [2-434](#)

vmpls reconfirm (privileged EXEC) command [2-433](#)

vmpls retry command [2-435](#)

vmpls server command [2-436](#)

voice VLAN

configuring [2-401, 2-402](#)

VQP

- and dynamic-access ports [2-383](#)
- clearing client statistics [2-35](#)
- displaying information [2-312](#)
- per-server retry count [2-435](#)
- reconfirmation interval [2-434](#)
- reconfirming dynamic VLAN assignments [2-433](#)

VTP

- changing characteristics [2-438](#)
 - clearing pruning counters [2-36](#)
 - configuring
 - domain name [2-438, 2-442](#)
 - file name [2-438](#)
 - mode [2-438, 2-442](#)
 - password [2-438, 2-442](#)
 - counters display fields [2-316](#)
 - displaying information [2-315](#)
 - enabling
 - pruning [2-438, 2-442](#)
 - Version 2 [2-438, 2-442](#)
 - mode [2-438, 2-442](#)
 - pruning [2-438, 2-442](#)
 - saving the configuration [2-419, 2-428](#)
 - statistics [2-315](#)
 - status [2-315](#)
 - status display fields [2-317](#)
- vtp (global configuration) command [2-438](#)
- vtp (VLAN configuration) command [2-442](#)

