



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-590](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-118](#)
 MAC, displaying [2-383](#)
access mode [2-541](#)
access ports [2-541](#)
ACEs [2-68](#), [2-253](#)
ACLs
 deny [2-66](#)
 displaying [2-289](#)
 for non-IP protocols [2-174](#)
 IP [2-118](#)
 on Layer 2 interfaces [2-118](#)
 permit [2-251](#)
address aliasing [2-242](#)
aggregate-port learner [2-247](#)
allowed VLANs [2-556](#)
apply command [2-590](#)
archive download-sw command [2-6](#)
archive tar command [2-8](#)
archive upload-sw command [2-11](#)
audience [xvii](#)

authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-93](#)
autonegotiation of duplex mode [2-101](#)
auto qos voip command [2-13](#)

B

BackboneFast, for STP [2-477](#)
backup interfaces
 configuring [2-536](#)
 displaying [2-345](#)
boot (boot loader) command [A-2](#)
boot boothlpr command [2-17](#)
boot config-file command [2-18](#)
boot enable-break command [2-19](#)
boot helper command [2-20](#)
boot helper-config file command [2-21](#)
booting
 Cisco IOS image [2-24](#)
 displaying environment variables [2-298](#)
 interrupting [2-19](#)
 manually [2-22](#)
boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)
 helper image [2-20](#)

boot loader (continued)

directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-26](#)

environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsetting [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4](#), [A-16](#), [A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-22](#)boot private-config-file command [2-23](#)boot system command [2-24](#)BPDU filtering, for spanning tree [2-478](#), [2-513](#)BPDU guard, for spanning tree [2-480](#), [2-513](#)broadcast storm control [2-531](#)cat (boot loader) command [A-4](#)caution, description [xviii](#)channel-group command [2-25](#)channel-protocol command [2-28](#)

Cisco Network Assistant

See Network Assistant [xviii](#)

Cisco SoftPhone

auto-QoS configuration [2-13](#)

trusting packets sent from [2-234](#)

class command [2-29](#)class-map command [2-31](#)

class maps

- creating [2-31](#)
- defining the match criteria [2-194](#)
- displaying [2-302](#)

class of service

See CoS

clear dot1x command [2-33](#)clear eap sessions command [2-34](#)clear errdisable interface [2-35](#)clear ip dhcp snooping database command [2-36](#)clear lacp command [2-38](#)clear mac address-table command [2-39](#), [2-41](#)clear pagp command [2-42](#)clear port-security command [2-43](#)clear spanning-tree counters command [2-45](#)clear spanning-tree detected-protocols command [2-46](#)clear vmps statistics command [2-47](#)clear vtp counters command [2-48](#)cluster commander-address command [2-49](#)cluster discovery hop-count command [2-51](#)cluster enable command [2-52](#)cluster holdtime command [2-54](#)cluster member command [2-55](#)cluster outside-interface command [2-57](#)cluster requirements [xviii](#)cluster run command [2-58](#)**C**

candidate switches

See clusters

clusters

- adding candidates [2-55](#)
- binding to HSRP group [2-59](#)
- building manually [2-55](#)
- communicating with
 - devices outside the cluster [2-57](#)
 - members by using Telnet [2-269](#)
- debug messages, display [B-5](#)
- displaying
 - candidate switches [2-305](#)
 - debug messages [B-5](#)
 - member switches [2-307](#)
 - status [2-303](#)
- hop-count limit for extended discovery [2-51](#)
- HSRP standby groups [2-59](#)
- redundancy [2-59](#)
- SNMP trap [2-467](#)
- cluster standby-group command [2-59](#)
- cluster timer command [2-61](#)
- command modes defined [1-1](#)
- command switch
 - See clusters
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-18, 2-23](#)
- configuring multiple interfaces [2-113](#)
- config-vlan mode
 - commands [2-578](#)
 - description [1-4](#)
 - entering [2-577](#)
 - summary [1-2](#)
- conventions
 - command [xvii](#)
 - for examples [xviii](#)
 - publication [xvii](#)
 - text [xvii](#)

copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-204](#)
- overriding the incoming value [2-204](#)

CoS-to-DSCP map [2-208](#)

CPU ASIC statistics, displaying [2-309](#)

crashinfo files [2-106](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-8](#)
- debug eap command [B-9](#)
- debug etherchannel command [B-10](#)
- debug interface command [B-11](#)
- debug ip dhcp snooping command [B-12](#)
- debug ip igmp filter command [B-13](#)
- debug ip igmp max-groups command [B-14](#)
- debug ip igmp snooping command [B-15](#)
- debug lacp command [B-16](#)
- debug mac-notification command [B-17](#)
- debug matm command [B-18](#)
- debug matm move update command [B-19](#)
- debug monitor command [B-20](#)
- debug mvrdbg command [B-21](#)
- debug nvram command [B-22](#)
- debug pagp command [B-23](#)
- debug platform acl command [B-24](#)
- debug platform backup interface command [B-25](#)
- debug platform cpu-queues command [B-26](#)
- debug platform dot1x command [B-28](#)
- debug platform etherchannel command [B-29](#)
- debug platform forw-tcam command [B-30](#)
- debug platform ip dhcp command [B-31](#)
- debug platform ip igmp snooping command [B-32](#)
- debug platform ip wccp command [B-34](#)

debug platform led command [B-35](#)
 debug platform matm command [B-36](#)
 debug platform messaging application command [B-37](#)
 debug platform phy command [B-38](#)
 debug platform pm command [B-40](#)
 debug platform port-asic command [B-42](#)
 debug platform port-security command [B-43](#)
 debug platform qos-acl-tcam command [B-44](#)
 debug platform resource-manager command [B-45](#)
 debug platform snmp command [B-46](#)
 debug platform span command [B-47](#)
 debug platform supervisor-asic command [B-48](#)
 debug platform sw-bridge command [B-49](#)
 debug platform tcam command [B-50](#)
 debug platform udd command [B-52](#)
 debug platform vlan command [B-53](#)
 debug pm command [B-54](#)
 debug port-security command [B-56](#)
 debug qos-manager command [B-57](#)
 debug spanning-tree backbonefast command [B-60](#)
 debug spanning-tree bpdu command [B-61](#)
 debug spanning-tree bpdu-opt command [B-62](#)
 debug spanning-tree command [B-58](#)
 debug spanning-tree mstp command [B-63](#)
 debug spanning-tree switch command [B-65](#)
 debug spanning-tree uplinkfast command [B-67](#)
 debug sw-vlan command [B-68](#)
 debug sw-vlan ifs command [B-70](#)
 debug sw-vlan notification command [B-71](#)
 debug sw-vlan vtp command [B-72](#)
 debug udd command [B-74](#)
 debug vqpc command [B-76](#)
 define interface-range command [2-63](#)
 delete (boot loader) command [A-6](#)
 delete command [2-65](#)
 deny command [2-66](#)
 detect mechanism, causes [2-102](#)
 device manager requirements [xviii](#)

DHCP snooping

accepting untrusted packets from edge switch [2-132](#)
 enabling
 on a VLAN [2-137](#)
 option 82 [2-130, 2-132](#)
 trust on an interface [2-135](#)
 error recovery timer [2-104](#)
 rate limiting [2-134](#)

DHCP snooping binding database

binding file, configuring [2-128](#)
 bindings
 adding [2-126](#)
 deleting [2-126](#)
 displaying [2-358](#)
 clearing database agent statistics [2-36](#)
 database agent, configuring [2-128](#)
 displaying
 binding entries [2-358](#)
 database agent status [2-360, 2-362](#)
 renewing [2-273](#)

dir (boot loader) command [A-7](#)

directories, deleting [2-65](#)

documentation, related [xviii](#)

document conventions [xvii](#)

domain name, VTP [2-597, 2-601](#)

dot1x auth-fail max-attempts [2-71](#)

dot1x auth-fail vlan [2-73](#)

dot1x command [2-69](#)

dot1x control-direction command [2-75](#)

dot1x critical global configuration command [2-77](#)

dot1x critical interface configuration command [2-79](#)

dot1x default command [2-81](#)

dot1x fallback command [2-82](#)

dot1x guest-vlan command [2-84](#)

dot1x host-mode command [2-86](#)

dot1x initialize command [2-87](#)

dot1x mac-auth-bypass command [2-88](#)

dot1x max-reauth-req command [2-90](#)

dot1x max-req command [2-91](#)

- dot1x pae command [2-92](#)
- dot1x port-control command [2-93](#)
- dot1x re-authenticate command [2-95](#)
- dot1x reauthentication command [2-96](#)
- dot1x timeout command [2-97](#)
- DSCP-to-CoS map [2-208](#)
- DSCP-to-DSCP-mutation map [2-208](#)
- DTP [2-542](#)
- DTP flap
 - error detection for [2-102](#)
 - error recovery timer [2-104](#)
- DTP negotiation [2-543](#)
- dual-purpose uplink ports
 - displaying configurable options [2-348](#)
 - displaying the active media [2-352](#)
- dual-purpose uplink ports, selecting the type [2-198](#)
- duplex command [2-100](#)
- dynamic-access ports
 - configuring [2-534](#)
 - restrictions [2-535](#)
- dynamic auto VLAN membership mode [2-541](#)
- dynamic desirable VLAN membership mode [2-541](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-91](#)
 - response time before retransmitting [2-97](#)
- environment variables, displaying [2-298](#)
- errdisable detect cause command [2-102](#)
- errdisable recovery command [2-104](#)
- error conditions, displaying [2-334](#)
- error disable detection [2-102](#)
- error-disabled interfaces, displaying [2-345](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-25](#)
 - creating port-channel logical interface [2-111](#)
 - debug EtherChannel/PAgP, display [B-10](#)
 - debug platform-specific events, display [B-29](#)
 - displaying [2-338](#)
 - interface information, displaying [2-345](#)
 - LACP
 - clearing channel-group information [2-38](#)
 - debug messages, display [B-16](#)
 - displaying [2-377](#)
 - modes [2-25](#)
 - port priority for hot-standby ports [2-162](#)
 - restricting a protocol [2-28](#)
 - system priority [2-164](#)
 - load-distribution methods [2-260](#)
 - PAgP
 - aggregate-port learner [2-247](#)
 - clearing channel-group information [2-42](#)
 - debug messages, display [B-23](#)
 - displaying [2-427](#)
 - error detection for [2-102](#)
 - error recovery timer [2-104](#)
 - learn method [2-247](#)
 - modes [2-25](#)
 - physical-port learner [2-247](#)
 - priority of interface for transmitted traffic [2-249](#)
- Ethernet controller, internal register display [2-311](#)
- Ethernet statistics, collecting [2-275](#)
- examples, conventions for [xviii](#)
- exception crashinfo command [2-106](#)
- exit command [2-590](#)
- extended discovery of candidate switches [2-51](#)
- extended-range VLANs
 - and allowed VLAN list [2-556](#)
 - and pruning-eligible list [2-556](#)
 - configuring [2-577](#)
- extended system ID for STP [2-486](#)

F

fallback profile command [2-107](#)
 fallback profiles, displaying [2-341](#)
 fan information, displaying [2-331](#)
 file name, VTP [2-597](#)
 files, deleting [2-65](#)
 flash_init (boot loader) command [A-9](#)
 Flex Links
 configuring [2-536](#)
 displaying [2-345](#)
 flowcontrol command [2-109](#)
 format (boot loader) command [A-10](#)
 forwarding results, display [C-5](#)
 frame forwarding information, displaying [C-5](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-289](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-258](#)
 hop-count limit for clusters [2-51](#)
 host connection, port configuration [2-540](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-59](#)
 standby group [2-59](#)

I

IEEE 802.1x
 and switchport modes [2-542](#)
 violation error recovery [2-104](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-72, 2-83, 2-108](#)
 IGMP filters
 applying [2-138](#)
 debug messages, display [B-13](#)
 IGMP groups, setting maximum [2-140](#)
 IGMP maximum groups, debugging [B-14](#)
 IGMP profiles
 creating [2-142](#)
 displaying [2-365](#)
 IGMP snooping
 adding ports as a static member of a group [2-158](#)
 displaying [2-366, 2-371, 2-373](#)
 enabling [2-144](#)
 enabling the configurable-leave timer [2-146](#)
 enabling the Immediate-Leave feature [2-155](#)
 flooding query count [2-152](#)
 interface topology change notification behavior [2-154](#)
 multicast table [2-369](#)
 querier [2-148](#)
 query solicitation [2-152](#)
 report suppression [2-150](#)
 switch topology change notification behavior [2-152](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-244](#)
 immediate-leave processing [2-155](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-111](#)
 interface range command [2-113](#)

- interface-range macros [2-63](#)
 - interfaces
 - assigning Ethernet interface to channel group [2-25](#)
 - configuring [2-100](#)
 - configuring multiple [2-113](#)
 - creating port-channel logical [2-111](#)
 - debug messages, display [B-11](#)
 - disabling [2-465](#)
 - displaying the MAC address table [2-395](#)
 - restarting [2-465](#)
 - interface speed, configuring [2-523](#)
 - interface vlan command [2-116](#)
 - internal registers, displaying [2-311, 2-318](#)
 - Internet Group Management Protocol
 - See IGMP
 - invalid GBIC
 - error detection for [2-102](#)
 - error recovery timer [2-104](#)
 - ip access-group command [2-118](#)
 - ip address command [2-120](#)
 - IP addresses, setting [2-120](#)
 - ip admission command [2-122](#)
 - ip admission name proxy http command [2-123](#)
 - IP DHCP snooping
 - See DHCP snooping
 - ip dhcp snooping binding command [2-126](#)
 - ip dhcp snooping command [2-125](#)
 - ip dhcp snooping database command [2-128](#)
 - ip dhcp snooping information option allow-untrusted command [2-132](#)
 - ip dhcp snooping information option command [2-130](#)
 - ip dhcp snooping limit rate command [2-134](#)
 - ip dhcp snooping trust command [2-135](#)
 - ip dhcp snooping verify command [2-136](#)
 - ip dhcp snooping vlan command [2-137](#)
 - ip igmp filter command [2-138](#)
 - ip igmp max-groups command [2-140](#)
 - ip igmp profile command [2-142](#)
 - ip igmp snooping command [2-144](#)
 - ip igmp snooping last-member-query-interval command [2-146](#)
 - ip igmp snooping querier command [2-148](#)
 - ip igmp snooping report-suppression command [2-150](#)
 - ip igmp snooping tcn command [2-152](#)
 - ip igmp snooping tcn flood command [2-154](#)
 - ip igmp snooping vlan immediate-leave command [2-155](#)
 - ip igmp snooping vlan mrouter command [2-156](#)
 - ip igmp snooping vlan static command [2-158](#)
 - IP multicast addresses [2-241](#)
 - IP phones
 - auto-QoS configuration [2-13](#)
 - trusting packets sent from [2-234](#)
 - IP-precedence-to-DSCP map [2-208](#)
 - IP source guard
 - displaying
 - dynamic binding entries only [2-358](#)
 - ip ssh command [2-160](#)
-
- ## J
- jumbo frames
 - See MTU
-
- ## L
- LACP
 - See EtherChannel
 - lacp port-priority command [2-162](#)
 - lacp system-priority command [2-164](#)
 - Layer 2 traceroute
 - IP addresses [2-568](#)
 - MAC addresses [2-565](#)
 - line configuration mode [1-2, 1-5](#)
 - Link Aggregation Control Protocol
 - See EtherChannel
 - link flap
 - error detection for [2-102](#)
 - error recovery timer [2-104](#)

link state group command [2-166](#)
 link state track command [2-168](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-260](#)
 logging event command [2-169](#)
 logging file command [2-170](#)
 logical interface [2-111](#)
 loopback error
 detection for [2-102](#)
 recovery timer [2-104](#)
 loop guard, for spanning tree [2-488, 2-492](#)

M

mac access-group command [2-172](#)
 MAC access-groups, displaying [2-383](#)
 MAC access list configuration mode [2-174](#)
 mac access-list extended command [2-174](#)
 MAC access lists [2-66](#)
 MAC addresses
 displaying
 aging time [2-389](#)
 all [2-387](#)
 dynamic [2-393](#)
 MAC address-table move updates [2-397](#)
 notification settings [2-399](#)
 number of addresses in a VLAN [2-391](#)
 per interface [2-395](#)
 per VLAN [2-403](#)
 static [2-401](#)
 static and dynamic entries [2-385](#)
 dynamic
 aging time [2-176](#)
 deleting [2-39](#)
 displaying [2-393](#)
 enabling MAC address notification [2-179](#)
 enabling MAC address-table move update [2-177](#)

MAC addresses (continued)

static
 adding and removing [2-181](#)
 displaying [2-401](#)
 dropping on an interface [2-182](#)
 tables [2-387](#)
 MAC address notification, debugging [B-17](#)
 mac address-table aging-time [2-172](#)
 mac address-table aging-time command [2-176](#)
 mac address-table move update command [2-177](#)
 mac address-table notification command [2-179](#)
 mac address-table static command [2-181](#)
 mac address-table static drop command [2-182](#)
 macro apply command [2-184](#)
 macro description command [2-187](#)
 macro global command [2-188](#)
 macro global description command [2-191](#)
 macro name command [2-192](#)
 macros
 adding a description [2-187](#)
 adding a global description [2-191](#)
 applying [2-188](#)
 creating [2-192](#)
 displaying [2-429](#)
 interface range [2-63, 2-113](#)
 specifying parameter values [2-188](#)
 tracing [2-188](#)
 manual
 audience [xvii](#)
 purpose of [xvii](#)
 maps
 QoS
 defining [2-208](#)
 displaying [2-413](#)
 match (class-map configuration) command [2-194](#)
 maximum transmission unit
 See MTU
 mdix auto command [2-196](#)
 media-type command [2-198](#)

member switches

See clusters

memory (boot loader) command [A-14](#)

mkdir (boot loader) command [A-15](#)

mls qos aggregate-policer command [2-202](#)

mls qos command [2-200](#)

mls qos cos command [2-204](#)

mls qos dscp-mutation command [2-206](#)

mls qos map command [2-208](#)

mls qos queue-set output buffers command [2-212](#)

mls qos queue-set output threshold command [2-214](#)

mls qos rewrite ip dscp command [2-216](#)

mls qos srr-queue input bandwidth command [2-218](#)

mls qos srr-queue input buffers command [2-220](#)

mls qos-srr-queue input cos-map command [2-222](#)

mls qos srr-queue input dscp-map command [2-224](#)

mls qos srr-queue input priority-queue command [2-226](#)

mls qos srr-queue input threshold command [2-228](#)

mls qos-srr-queue output cos-map command [2-230](#)

mls qos srr-queue output dscp-map command [2-232](#)

mls qos trust command [2-234](#)

mode, MVR [2-241](#)

Mode button, and password recovery [2-278](#)

modes, commands [1-1](#)

monitor session command [2-236](#)

more (boot loader) command [A-16](#)

MSTP

displaying [2-441](#)

interoperability [2-46](#)

link type [2-490](#)

MST region

aborting changes [2-496](#)

applying changes [2-496](#)

configuration name [2-496](#)

configuration revision number [2-496](#)

current or pending display [2-496](#)

displaying [2-441](#)

MST configuration mode [2-496](#)

VLANs-to-instance mapping [2-496](#)

MSTP (continued)

path cost [2-498](#)

protocol mode [2-494](#)

restart protocol migration process [2-46](#)

root port

loop guard [2-488](#)

preventing from becoming designated [2-488](#)

restricting which can be root [2-488](#)

root guard [2-488](#)

root switch

affects of extended system ID [2-486](#)

hello-time [2-501, 2-509](#)

interval between BPDU messages [2-502](#)

interval between hello BPDU messages [2-501, 2-509](#)

max-age [2-502](#)

maximum hop count before discarding BPDU [2-503](#)

port priority for selection of [2-505](#)

primary or secondary [2-509](#)

switch priority [2-508](#)

state changes

blocking to forwarding state [2-515](#)

enabling BPDU filtering [2-478, 2-513](#)

enabling BPDU guard [2-480, 2-513](#)

enabling Port Fast [2-513, 2-515](#)

forward-delay time [2-500](#)

length of listening and learning states [2-500](#)

rapid transition to forwarding [2-490](#)

shutting down Port Fast-enabled ports [2-513](#)

state information display [2-440](#)

MTU

configuring size [2-562](#)

displaying global setting [2-448](#)

multicast group address, MVR [2-244](#)

multicast groups, MVR [2-242](#)

multicast router learning method [2-156](#)

multicast router ports, configuring [2-156](#)

multicast storm control [2-531](#)

multicast VLAN, MVR [2-241](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-242](#)

configuring [2-241](#)

configuring interfaces [2-244](#)

debug messages, display [B-21](#)

displaying [2-421](#)

displaying interface information [2-423](#)

members, displaying [2-425](#)

mvr (global configuration) command [2-241](#)

mvr (interface configuration) command [2-244](#)

mvr vlan group command [2-245](#)

N

native VLANs [2-556](#)

Network Assistant requirements [xviii](#)

nonegotiate, speed [2-523](#)

nonegotiating DTP messaging [2-543](#)

non-IP protocols

denying [2-66](#)

forwarding [2-251](#)

non-IP traffic access lists [2-174](#)

non-IP traffic forwarding

denying [2-66](#)

permitting [2-251](#)

normal-range VLANs [2-577, 2-583](#)

note, description [xviii](#)

no vlan command [2-577, 2-587](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-247](#)

pagp port-priority command [2-249](#)

password, VTP [2-597, 2-601](#)

password-recovery mechanism, enabling and disabling [2-278](#)

permit (MAC access-list configuration) command [2-251](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-247](#)

PID, displaying [2-356](#)

PIM-DVMRP, as multicast router learning method [2-156](#)

police aggregate command [2-256](#)

police command [2-254](#)

policed-DSCP map [2-208](#)

policy-map command [2-258](#)

policy maps

applying to an interface [2-280, 2-284](#)

creating [2-258](#)

displaying [2-432](#)

hierarchical [2-258](#)

policers

displaying [2-406](#)

for a single class [2-254](#)

for multiple classes [2-202, 2-256](#)

policed-DSCP map [2-208](#)

traffic classification

defining the class [2-29](#)

defining trust states [2-570](#)

setting DSCP or IP precedence values [2-282](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-7](#)

enabling IEEE 802.1x

globally [2-69](#)

per interface [2-93](#)

guest VLAN [2-84](#)

host modes [2-86](#)

port-based authentication (continued)

- IEEE 802.1x AAA accounting methods [2-1](#)
- initialize an interface [2-87](#)
- MAC authentication bypass [2-88](#)
- manual control of authorization state [2-93](#)
- PAE as authenticator [2-92](#)
- periodic re-authentication
 - enabling [2-96](#)
 - time between attempts [2-97](#)
- quiet period between failed authentication exchanges [2-97](#)
- re-authenticating IEEE 802.1x-enabled ports [2-95](#)
- resetting configurable IEEE 802.1x parameters [2-81](#)
- switch-to-authentication server retransmission time [2-97](#)
- switch-to-client frame-retransmission number [2-90 to 2-91](#)
- switch-to-client retransmission time [2-97](#)
- port-channel load-balance command [2-260](#)
- Port Fast, for spanning tree [2-515](#)
- port ranges, defining [2-63](#)
- ports, debugging [B-54](#)
- ports, protected [2-554](#)
- port security
 - aging [2-550](#)
 - debug messages, display [B-56](#)
 - enabling [2-545](#)
 - violation error recovery [2-104](#)
- port trust states for QoS [2-234](#)
- port types, MVR [2-244](#)
- power information, displaying [2-331](#)
- priority-queue command [2-262](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-356](#)
- protected ports, displaying [2-350](#)
- pruning
 - VLANs [2-556](#)
 - VTP
 - displaying interface information [2-345](#)
 - enabling [2-597, 2-601](#)

pruning-eligible VLAN list [2-557](#)

PVST+

See STP

Q**QoS**

- auto-QoS
 - configuring [2-13](#)
 - debug messages, display [B-2](#)
 - displaying [2-294](#)
- class maps
 - creating [2-31](#)
 - defining the match criteria [2-194](#)
 - displaying [2-302](#)
- defining the CoS value for an incoming packet [2-204](#)
- displaying configuration information [2-294, 2-405](#)
- DSCP transparency [2-216](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-206](#)
 - defining DSCP-to-DSCP-mutation map [2-208](#)
- egress queues
 - allocating buffers [2-212](#)
 - defining the CoS output queue threshold map [2-230](#)
 - defining the DSCP output queue threshold map [2-232](#)
 - displaying buffer allocations [2-409](#)
 - displaying CoS output queue threshold map [2-413](#)
 - displaying DSCP output queue threshold map [2-413](#)
 - displaying queueing strategy [2-409](#)
 - displaying queue-set settings [2-416](#)
 - enabling bandwidth shaping and scheduling [2-527](#)
 - enabling bandwidth sharing and scheduling [2-529](#)
 - limiting the maximum output on a port [2-525](#)
 - mapping a port to a queue-set [2-264](#)

QoS (continued)

- mapping CoS values to a queue and threshold [2-230](#)
- mapping DSCP values to a queue and threshold [2-232](#)
- setting maximum and reserved memory allocations [2-214](#)
- setting WTD thresholds [2-214](#)
- enabling [2-200](#)
- ingress queues
 - allocating buffers [2-220](#)
 - assigning SRR scheduling weights [2-218](#)
 - defining the CoS input queue threshold map [2-222](#)
 - defining the DSCP input queue threshold map [2-224](#)
 - displaying buffer allocations [2-409](#)
 - displaying CoS input queue threshold map [2-413](#)
 - displaying DSCP input queue threshold map [2-413](#)
 - displaying queueing strategy [2-409](#)
 - displaying settings for [2-407](#)
 - enabling the priority queue [2-226](#)
 - mapping CoS values to a queue and threshold [2-222](#)
 - mapping DSCP values to a queue and threshold [2-224](#)
 - setting WTD thresholds [2-228](#)
- maps
 - defining [2-208, 2-222, 2-224, 2-230, 2-232](#)
 - displaying [2-413](#)
- policy maps
 - applying an aggregate policer [2-256](#)
 - applying to an interface [2-280, 2-284](#)
 - creating [2-258](#)
 - defining policers [2-202, 2-254](#)
 - displaying policers [2-406](#)
 - displaying policy maps [2-432](#)
 - hierarchical [2-258](#)
 - policed-DSCP map [2-208](#)
 - setting DSCP or IP precedence values [2-282](#)

QoS (continued)

- traffic classifications [2-29](#)
- trust states [2-570](#)
- port trust states [2-234](#)
- queues, enabling the expedite [2-262](#)
- statistics
 - in-profile and out-of-profile packets [2-409](#)
 - packets enqueued or dropped [2-409](#)
 - sent and received CoS values [2-409](#)
 - sent and received DSCP values [2-409](#)
- trusted boundary for IP phones [2-234](#)
- quality of service
 - See QoS
- querytime, MVR [2-241](#)
- queue-set command [2-264](#)

R

- radius-server dead-criteria command [2-265](#)
- radius-server host command [2-267](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-269](#)
- re-authenticating IEEE 802.1x-enabled ports [2-95](#)
- re-authentication
 - periodic [2-96](#)
 - time between attempts [2-97](#)
- receiver ports, MVR [2-244](#)
- receiving flow-control packets [2-109](#)
- recovery mechanism
 - causes [2-104](#)
 - display [2-35, 2-300, 2-332, 2-336](#)
 - timer interval [2-104](#)
- redundancy for cluster switches [2-59](#)
- remote-span command [2-271](#)
- Remote Switched Port Analyzer
 - See RSPAN

rename (boot loader) command [A-17](#)
 renew ip dhcp snooping database command [2-273](#)
 requirements
 cluster [xviii](#)
 device manager [xviii](#)
 Network Assistant [xviii](#)
 reset (boot loader) command [A-18](#)
 reset command [2-590](#)
 resource templates, displaying [2-437](#)
 restricted VLAN
 See dot1x auth-fail vlan
 rmdir (boot loader) command [A-19](#)
 rmon collection stats command [2-275](#)
 root guard, for spanning tree [2-488](#)

RSPAN

 configuring [2-236](#)
 displaying [2-419](#)
 filter RSPAN traffic [2-236](#)
 remote-span command [2-271](#)
 sessions
 add interfaces to [2-236](#)
 displaying [2-419](#)
 start new [2-236](#)

S

sdm prefer command [2-276](#)
 SDM templates
 displaying [2-437](#)
 secure ports, limitations [2-547](#)
 sending flow-control packets [2-109](#)
 service password-recovery command [2-278](#)
 service-policy command [2-280](#)
 set (boot loader) command [A-20](#)
 set command [2-282](#)
 setup command [2-284](#)
 setup express command [2-287](#)
 show access-lists command [2-289](#)
 show archive status command [2-292](#)
 show auto qos command [2-294](#)
 show boot command [2-298](#)
 show cable-diagnostics tdr command [2-300](#)
 show changes command [2-590](#)
 show class-map command [2-302](#)
 show cluster candidates command [2-305](#)
 show cluster command [2-303](#)
 show cluster members command [2-307](#)
 show controllers cpu-interface command [2-309](#)
 show controllers ethernet-controller command [2-311](#)
 show controllers tcam command [2-318](#)
 show controller utilization command [2-320](#)
 show current command [2-590](#)
 show dot1x command [2-322](#)
 show dtp [2-326](#)
 show eap command [2-328](#)
 show env command [2-331](#)
 show errdisable detect command [2-332](#)
 show errdisable flap-values command [2-334](#)
 show errdisable recovery command [2-336](#)
 show etherchannel command [2-338](#)
 show fallback profile command [2-341](#)
 show flowcontrol command [2-343](#)
 show interfaces command [2-345](#)
 show interfaces counters command [2-354](#)
 show inventory command [2-356](#)
 show ip dhcp snooping binding command [2-358](#)
 show ip dhcp snooping command [2-357](#)
 show ip dhcp snooping database command [2-360, 2-362](#)
 show ip igmp profile command [2-365](#)
 show ip igmp snooping command [2-366](#)
 show ip igmp snooping groups command [2-369](#)
 show ip igmp snooping mrouter command [2-371](#)
 show ip igmp snooping querier command [2-373](#)
 show ipv6 route updated [2-375](#)
 show lacp command [2-377](#)
 show link state group command [2-381](#)
 show mac access-group command [2-383](#)
 show mac address-table address command [2-387](#)

- show mac address-table aging time command [2-389](#)
- show mac address-table command [2-385](#)
- show mac address-table count command [2-391](#)
- show mac address-table dynamic command [2-393](#)
- show mac address-table interface command [2-395](#)
- show mac address-table move update command [2-397](#)
- show mac address-table notification command [2-41, 2-399, B-19](#)
- show mac address-table static command [2-401](#)
- show mac address-table vlan command [2-403](#)
- show mls qos aggregate-policer command [2-406](#)
- show mls qos command [2-405](#)
- show mls qos input-queue command [2-407](#)
- show mls qos interface command [2-409](#)
- show mls qos maps command [2-413](#)
- show mls qos queue-set command [2-416](#)
- show mls qos vlan command [2-418](#)
- show monitor command [2-419](#)
- show mvr command [2-421](#)
- show mvr interface command [2-423](#)
- show mvr members command [2-425](#)
- show pagp command [2-427](#)
- show parser macro command [2-429](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-432](#)
- show port security command [2-434](#)
- show proposed command [2-590](#)
- show sdm prefer command [2-437](#)
- show setup express command [2-439](#)
- show spanning-tree command [2-440](#)
- show storm-control command [2-446](#)
- show system mtu command [2-448](#)
- show trust command [2-570](#)
- show udd command [2-449](#)
- show version command [2-452](#)
- show vlan command [2-454](#)
- show vlan command, fields [2-455](#)
- show vmps command [2-457](#)
- show vtp command [2-460](#)
- shutdown command [2-465](#)
- shutdown vlan command [2-466](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-471](#)
- SNMP informs, enabling the sending of [2-467](#)
- snmp-server enable traps command [2-467](#)
- snmp-server host command [2-471](#)
- snmp trap mac-notification command [2-475](#)
- SNMP traps
 - enabling MAC address notification trap [2-475](#)
 - enabling the MAC address notification feature [2-179](#)
 - enabling the sending of [2-467](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-65](#)
 - uploading [2-11](#)
- software version, displaying [2-452](#)
- source ports, MVR [2-244](#)

SPAN

- configuring [2-236](#)

- debug messages, display [B-20](#)

- displaying [2-419](#)

- filter SPAN traffic [2-236](#)

- sessions

- add interfaces to [2-236](#)

- displaying [2-419](#)

- start new [2-236](#)

- spanning-tree backbonefast command [2-477](#)

- spanning-tree bpdudfilter command [2-478](#)

- spanning-tree bpduguard command [2-480](#)

- spanning-tree cost command [2-482](#)

- spanning-tree etherchannel command [2-484](#)

- spanning-tree extend system-id command [2-486](#)

- spanning-tree guard command [2-488](#)

- spanning-tree link-type command [2-490](#)

- spanning-tree loopguard default command [2-492](#)

- spanning-tree mode command [2-494](#)

- spanning-tree mst configuration command [2-496](#)

- spanning-tree mst cost command [2-498](#)

- spanning-tree mst forward-time command [2-500](#)

- spanning-tree mst hello-time command [2-501](#)

- spanning-tree mst max-age command [2-502](#)

- spanning-tree mst max-hops command [2-503](#)

- spanning-tree mst port-priority command [2-505](#)

- spanning-tree mst pre-standard command [2-507](#)

- spanning-tree mst priority command [2-508](#)

- spanning-tree mst root command [2-509](#)

- spanning-tree portfast (global configuration) command [2-513](#)

- spanning-tree portfast (interface configuration) command [2-515](#)

- spanning-tree port-priority command [2-511](#)

Spanning Tree Protocol

- See STP

- spanning-tree transmit hold-count command [2-517](#)

- spanning-tree uplinkfast command [2-518](#)

- spanning-tree vlan command [2-520](#)

- speed command [2-523](#)

- srr-queue bandwidth limit command [2-525](#)

- srr-queue bandwidth shape command [2-527](#)

- srr-queue bandwidth share command [2-529](#)

- SSH, configuring version [2-160](#)

- static-access ports, configuring [2-534](#)

- statistics, Ethernet group [2-275](#)

- sticky learning, enabling [2-545](#)

- storm-control command [2-531](#)

STP

- BackboneFast [2-477](#)

- counters, clearing [2-45](#)

- debug messages, display

- BackboneFast events [B-60](#)

- MSTP [B-63](#)

- optimized BPDUs handling [B-62](#)

- spanning-tree activity [B-58](#)

- switch shim [B-65](#)

- transmitted and received BPDUs [B-61](#)

- UplinkFast [B-67](#)

- detection of indirect link failures [2-477](#)

- EtherChannel misconfiguration [2-484](#)

- extended system ID [2-486](#)

- path cost [2-482](#)

- protocol modes [2-494](#)

- root port

- accelerating choice of new [2-518](#)

- loop guard [2-488](#)

- preventing from becoming designated [2-488](#)

- restricting which can be root [2-488](#)

- root guard [2-488](#)

- UplinkFast [2-518](#)

- root switch

- affects of extended system ID [2-486, 2-521](#)

- hello-time [2-520](#)

- interval between BPDU messages [2-520](#)

- interval between hello BPDU messages [2-520](#)

- max-age [2-520](#)

- port priority for selection of [2-511](#)

STP (continued)

primary or secondary [2-520](#)

switch priority [2-520](#)

state changes

blocking to forwarding state [2-515](#)

enabling BPDU filtering [2-478, 2-513](#)

enabling BPDU guard [2-480, 2-513](#)

enabling Port Fast [2-513, 2-515](#)

enabling timer to recover from error state [2-104](#)

forward-delay time [2-520](#)

length of listening and learning states [2-520](#)

shutting down Port Fast-enabled ports [2-513](#)

state information display [2-440](#)

VLAN options [2-508, 2-520](#)

Switched Port Analyzer

See SPAN

switchport access command [2-534](#)

switchport backup interface command [2-536](#)

switchport block command [2-539](#)

switchport host command [2-540](#)

switchport mode command [2-541](#)

switchport nonegotiate command [2-543](#)

switchport port-security aging command [2-550](#)

switchport port-security command [2-545](#)

switchport priority extend command [2-552](#)

switchport protected command [2-554](#)

switchports, displaying [2-345](#)

switchport trunk command [2-556](#)

switchport voice vlan command [2-559, 2-560](#)

system message logging, save message to flash [2-170](#)

system mtu command [2-562](#)

system resource templates [2-276](#)

templates, SDM [2-276](#)

templates, system resources [2-276](#)

test cable-diagnostics tdr command [2-564](#)

traceroute mac command [2-565](#)

traceroute mac ip command [2-568](#)

trunking, VLAN mode [2-541](#)

trunk mode [2-541](#)

trunk ports [2-541](#)

trunks, to non-DTP device [2-542](#)

trusted boundary for QoS [2-234](#)

trusted port states for QoS [2-234](#)

type (boot loader) command [A-23](#)

U

UDLD

aggressive mode [2-572, 2-574](#)

debug messages, display [B-74](#)

enable globally [2-572](#)

enable per interface [2-574](#)

error recovery timer [2-104](#)

message timer [2-572](#)

normal mode [2-572, 2-574](#)

reset a shutdown interface [2-576](#)

status [2-449](#)

udld command [2-572](#)

udld port command [2-574](#)

udld reset command [2-576](#)

unicast storm control [2-531](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-539](#)

unknown unicast traffic, preventing [2-539](#)

unset (boot loader) command [A-24](#)

upgrading information

See release notes

UplinkFast, for STP [2-518](#)

user EXEC mode [1-2, 1-3](#)

T

tar files, creating, listing, and extracting [2-8](#)

TDR, running [2-564](#)

Telnet, using to communicate to cluster switches [2-269](#)

temperature information, displaying [2-331](#)

V

version (boot loader) command [A-26](#)

vlan (global configuration) command [2-577](#)

vlan (VLAN configuration) command [2-583](#)

VLAN configuration

rules [2-580, 2-585](#)

saving [2-577, 2-587](#)

VLAN configuration mode

commands

VLAN [2-583](#)

VTP [2-601](#)

description [1-5](#)

entering [2-589](#)

summary [1-2](#)

vlan database command [2-589](#)

VLAN ID range [2-577, 2-583](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-577](#)

configuring [2-577, 2-583](#)

debug messages, display

ISL [B-71](#)

VLAN IOS file system error tests [B-70](#)

VLAN manager activity [B-68](#)

VTP [B-72](#)

displaying configurations [2-454](#)

enabling guest VLAN supplicant [2-72, 2-83, 2-108](#)

extended-range [2-577](#)

MAC addresses

displaying [2-403](#)

number of [2-391](#)

media types [2-579, 2-585](#)

normal-range [2-577, 2-583](#)

restarting [2-466](#)

saving the configuration [2-577](#)

shutting down [2-466](#)

SNMP traps for VTP [2-469, 2-472](#)

VLANs (continued)

suspending [2-466](#)

variables [2-583](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-595](#)

displaying [2-457](#)

error recovery timer [2-104](#)

reconfirming dynamic VLAN assignments [2-592](#)

vmmps reconfirm (global configuration) command [2-593](#)

vmmps reconfirm (privileged EXEC) command [2-592](#)

vmmps retry command [2-594](#)

vmmps server command [2-595](#)

voice VLAN

configuring [2-559, 2-560](#)

setting port priority [2-552](#)

VQP

and dynamic-access ports [2-535](#)

clearing client statistics [2-47](#)

displaying information [2-457](#)

per-server retry count [2-594](#)

reconfirmation interval [2-593](#)

reconfirming dynamic VLAN assignments [2-592](#)

VTP

changing characteristics [2-597](#)

clearing pruning counters [2-48](#)

configuring

domain name [2-597, 2-601](#)

file name [2-597](#)

mode [2-597, 2-601](#)

password [2-597, 2-601](#)

counters display fields [2-461](#)

displaying information [2-460](#)

enabling

pruning [2-597, 2-601](#)

Version 2 [2-597, 2-601](#)

mode [2-597, 2-601](#)

pruning [2-597, 2-601](#)

VTP (continued)

- saving the configuration [2-577, 2-587](#)
- statistics [2-460](#)
- status [2-460](#)
- status display fields [2-462](#)
- vtp (global configuration) command [2-597](#)
- vtp (VLAN configuration) command [2-601](#)