



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-660](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-122](#)
 MAC, displaying [2-442](#)
access mode [2-612](#)
access ports [2-612](#)
ACEs [2-68](#), [2-288](#)
ACLs
 deny [2-66](#)
 displaying [2-334](#)
 for non-IP protocols [2-207](#)
 IP [2-122](#)
 on Layer 2 interfaces [2-122](#)
 permit [2-286](#)
address aliasing [2-277](#)
aggregate-port learner [2-282](#)
allowed VLANs [2-627](#)
apply command [2-660](#)
archive download-sw command [2-6](#)
archive tar command [2-9](#)
archive upload-sw command [2-12](#)
authentication failed VLAN
 See dot1x auth-fail vlan

auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-92](#)
autonegotiation of duplex mode [2-103](#)
auto qos voip command [2-14](#)

B

BackboneFast, for STP [2-547](#)
backup interfaces
 configuring [2-606](#)
 displaying [2-391](#)
boot (boot loader) command [A-2](#)
boot config-file command [2-18](#)
boot enable-break command [2-19](#)
boot helper command [2-20](#)
boot helper-config file command [2-21](#)
booting
 Cisco IOS image [2-24](#)
 displaying environment variables [2-342](#)
 interrupting [2-19](#)
 manually [2-22](#)
boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)
 helper image [2-20](#)
 directories
 creating [A-14](#)
 displaying a list of [A-7](#)
 removing [A-18](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-13](#)
- version [A-25](#)

environment variables

- described [A-19](#)
- displaying settings [A-19](#)
- location of [A-20](#)
- setting [A-19](#)
- unsetting [A-23](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-15, A-22](#)
- renaming [A-16](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

prompt [A-1](#)resetting the system [A-17](#)boot manual command [2-22](#)boot private-config-file command [2-23](#)boot system command [2-24](#)BPDU filtering, for spanning tree [2-548, 2-583](#)BPDU guard, for spanning tree [2-550, 2-583](#)broadcast storm control [2-601](#)**C**

candidate switches

See clusters

cat (boot loader) command [A-4](#)channel-group command [2-25](#)channel-protocol command [2-28](#)

Cisco SoftPhone

- auto-QoS configuration [2-14](#)
- trusting packets sent from [2-269](#)

class command [2-29](#)class-map command [2-31](#)

class maps

- creating [2-31](#)
- defining the match criteria [2-229](#)
- displaying [2-346](#)

class of service

See CoS

clear dot1x command [2-33](#)clear eap sessions command [2-34](#)clear errdisable interface [2-35](#)clear ip dhcp snooping database command [2-36](#)clear ipv6 dhcp conflict command [2-38](#)clear lacp command [2-39](#)clear mac address-table command [2-40, 2-42](#)clear pagp command [2-43](#)clear port-security command [2-44](#)clear spanning-tree counters command [2-46](#)clear spanning-tree detected-protocols command [2-47](#)clear vmpls statistics command [2-48](#)clear vtp counters command [2-49](#)cluster commander-address command [2-50](#)cluster discovery hop-count command [2-52](#)cluster enable command [2-53](#)cluster holdtime command [2-55](#)cluster member command [2-56](#)cluster outside-interface command [2-58](#)cluster run command [2-59](#)

clusters

adding candidates [2-56](#)binding to HSRP group [2-60](#)building manually [2-56](#)

communicating with

- devices outside the cluster [2-58](#)
- members by using Telnet [2-313](#)

debug messages, display [B-5](#)

displaying

- candidate switches [2-349](#)
- debug messages [B-5](#)

- member switches [2-351](#)
 - status [2-347](#)
- hop-count limit for extended discovery [2-52](#)
- HSRP standby groups [2-60](#)
- redundancy [2-60](#)
- SNMP trap [2-537](#)
- cluster standby-group command [2-60](#)
- cluster timer command [2-62](#)
- command modes defined [1-1](#)
- command switch
 - See clusters
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-18, 2-23](#)
- configuring multiple interfaces [2-118](#)
- config-vlan mode
 - commands [2-648](#)
 - description [1-4](#)
 - entering [2-647](#)
 - summary [1-2](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-239](#)
 - overriding the incoming value [2-239](#)
- CoS-to-DSCP map [2-243](#)
- CPU ASIC statistics, displaying [2-353](#)
- crashinfo files [2-111](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-8](#)
- debug eap command [B-9](#)
- debug etherchannel command [B-10](#)
- debug ilpower command [B-11](#)
- debug interface command [B-12](#)
- debug ip dhcp snooping command [B-13](#)
- debug ip igmp filter command [B-14](#)
- debug ip igmp max-groups command [B-15](#)
- debug ip igmp snooping command [B-16](#)
- debug lacp command [B-17](#)
- debug mac-notification command [B-18](#)
- debug matm command [B-19](#)
- debug matm move update command [B-20](#)
- debug monitor command [B-21](#)
- debug mvrdbg command [B-22](#)
- debug nvram command [B-23](#)
- debug pagp command [B-24](#)
- debug platform acl command [B-25](#)
- debug platform backup interface command [B-26](#)
- debug platform configuration command [B-32](#)
- debug platform cpu-queues command [B-27](#)
- debug platform dot1x command [B-29](#)
- debug platform etherchannel command [B-30](#)
- debug platform forw-tcam command [B-31](#)
- debug platform ip dhcp command [B-33](#)
- debug platform ip igmp snooping command [B-34](#)
- debug platform led command [B-36](#)
- debug platform matm command [B-37](#)
- debug platform messaging application command [B-38](#)
- debug platform phy command [B-39](#)
- debug platform pm command [B-41](#)
- debug platform port-asic command [B-43](#)
- debug platform port-security command [B-44](#)
- debug platform qos-acl-tcam command [B-45](#)
- debug platform resource-manager command [B-46](#)
- debug platform snmp command [B-47](#)
- debug platform span command [B-48](#)
- debug platform supervisor-asic command [B-49](#)
- debug platform sw-bridge command [B-50](#)
- debug platform tcam command [B-51](#)
- debug platform udd command [B-53](#)
- debug platform vlan command [B-54](#)
- debug pm command [B-55](#)
- debug port-security command [B-57](#)

- debug qos-manager command [B-58](#)
- debug spanning-tree backbonefast command [B-61](#)
- debug spanning-tree bpdu command [B-62](#)
- debug spanning-tree bpdu-opt command [B-63](#)
- debug spanning-tree command [B-59](#)
- debug spanning-tree mstp command [B-64](#)
- debug spanning-tree switch command [B-66](#)
- debug spanning-tree uplinkfast command [B-68](#)
- debug sw-vlan command [B-69](#)
- debug sw-vlan ifs command [B-71](#)
- debug sw-vlan notification command [B-72](#)
- debug sw-vlan vtp command [B-74](#)
- debug udd command [B-76](#)
- debug vqpc command [B-78](#)
- define interface-range command [2-63](#)
- delete (boot loader) command [A-6](#)
- delete command [2-65](#)
- deny command [2-66](#)
- detect mechanism, causes [2-104](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-137](#)
 - enabling
 - on a VLAN [2-143](#)
 - option 82 [2-135, 2-137](#)
 - trust on an interface [2-141](#)
 - error recovery timer [2-109](#)
 - rate limiting [2-139](#)
- DHCP snooping binding database
 - binding file, configuring [2-133](#)
 - bindings
 - adding [2-131](#)
 - deleting [2-131](#)
 - displaying [2-405](#)
 - clearing database agent statistics [2-36](#)
 - database agent, configuring [2-133](#)
 - displaying
 - binding entries [2-405](#)
 - database agent status [2-408, 2-410](#)
 - renewing [2-317](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-65](#)
- domain name, VTP [2-667, 2-671](#)
- dot1x auth-fail max-attempts [2-71](#)
- dot1x auth-fail vlan [2-73](#)
- dot1x command [2-69](#)
- dot1x control-direction command [2-75](#)
- dot1x critical global configuration command [2-77](#)
- dot1x critical interface configuration command [2-79](#)
- dot1x default command [2-81](#)
- dot1x fallback command [2-82](#)
- dot1x guest-vlan command [2-83](#)
- dot1x host-mode command [2-85](#)
- dot1x initialize command [2-86](#)
- dot1x mac-auth-bypass command [2-87](#)
- dot1x max-reauth-req command [2-89](#)
- dot1x max-req command [2-90](#)
- dot1x pae command [2-91](#)
- dot1x port-control command [2-92](#)
- dot1x re-authenticate command [2-94](#)
- dot1x reauthentication command [2-95](#)
- dot1x test eapol-capable command [2-96](#)
- dot1x test timeout command [2-97](#)
- dot1x timeout command [2-98](#)
- dot1x violation-mode command [2-101](#)
- DSCP-to-CoS map [2-243](#)
- DSCP-to-DSCP-mutation map [2-243](#)
- DTP [2-613](#)
- DTP flap
 - error detection for [2-104](#)
 - error recovery timer [2-109](#)
- DTP negotiation [2-614](#)
- dual-purpose uplink ports
 - displaying configurable options [2-394](#)
 - displaying the active media [2-398](#)
 - selecting the type [2-233](#)
- duplex command [2-102](#)
- dynamic-access ports
 - configuring [2-604](#)

- restrictions [2-605](#)
- dynamic auto VLAN membership mode [2-612](#)
- dynamic desirable VLAN membership mode [2-612](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-90](#)
 - response time before retransmitting [2-98](#)
- environment variables, displaying [2-342](#)
- errdisable detect cause command [2-104](#)
- errdisable detect cause small-frame command [2-106](#)
- errdisable recovery cause small-frame [2-108](#)
- errdisable recovery command [2-109](#)
- error conditions, displaying [2-380](#)
- error disable detection [2-104](#)
- error-disabled interfaces, displaying [2-391](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-25](#)
 - creating port-channel logical interface [2-116](#)
 - debug EtherChannel/PAgP, display [B-10](#)
 - debug platform-specific events, display [B-30](#)
 - displaying [2-384](#)
 - interface information, displaying [2-391](#)
- LACP
 - clearing channel-group information [2-39](#)
 - debug messages, display [B-17](#)
 - displaying [2-433](#)
 - modes [2-25](#)
 - port priority for hot-standby ports [2-190](#)
 - restricting a protocol [2-28](#)
 - system priority [2-192](#)
- load-distribution methods [2-295](#)
- PAgP
 - aggregate-port learner [2-282](#)

- clearing channel-group information [2-43](#)
- debug messages, display [B-24](#)
- displaying [2-488](#)
- error detection for [2-104](#)
- error recovery timer [2-109](#)
- learn method [2-282](#)
- modes [2-25](#)
- physical-port learner [2-282](#)
- priority of interface for transmitted traffic [2-284](#)
- Ethernet controller, internal register display [2-355](#)
- Ethernet statistics, collecting [2-320](#)
- exception crashinfo command [2-111](#)
- exit command [2-660](#)
- extended discovery of candidate switches [2-52](#)
- extended-range VLANs
 - and allowed VLAN list [2-627](#)
 - and pruning-eligible list [2-627](#)
 - configuring [2-647](#)
- extended system ID for STP [2-556](#)

F

- fallback profile command [2-112](#)
- fallback profiles, displaying [2-387](#)
- fan information, displaying [2-377](#)
- file name, VTP [2-667](#)
- files, deleting [2-65](#)
- flash_init (boot loader) command [A-9](#)
- Flex Links
 - configuring [2-606](#)
 - configuring preferred VLAN [2-608](#)
 - displaying [2-391](#)
- flowcontrol command [2-114](#)
- format (boot loader) command [A-10](#)
- forwarding results, display [C-5](#)
- frame forwarding information, displaying [C-5](#)
- fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-334](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-294](#)

hop-count limit for clusters [2-52](#)

host connection, port configuration [2-611](#)

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [2-60](#)

standby group [2-60](#)

I

IEEE 802.1x

and switchport modes [2-613](#)

violation error recovery [2-109](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-72, 2-82, 2-113](#)

IGMP filters

applying [2-144](#)

debug messages, display [B-14](#)

IGMP groups, setting maximum [2-146](#)

IGMP maximum groups, debugging [B-15](#)

IGMP profiles

creating [2-148](#)

displaying [2-413](#)

IGMP snooping

adding ports as a static member of a group [2-164](#)

displaying [2-414, 2-419, 2-421](#)

enabling [2-150](#)

enabling the configurable-leave timer [2-152](#)

enabling the Immediate-Leave feature [2-161](#)

flooding query count [2-158](#)

interface topology change notification behavior [2-160](#)

multicast table [2-417](#)

querier [2-154](#)

query solicitation [2-158](#)

report suppression [2-156](#)

switch topology change notification behavior [2-158](#)

images

See software images

Immediate-Leave feature, MVR [2-279](#)

immediate-leave processing [2-161](#)

Immediate-Leave processing, IPv6 [2-188](#)

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-116](#)

interface range command [2-118](#)

interface-range macros [2-63](#)

interfaces

assigning Ethernet interface to channel group [2-25](#)

configuring [2-102](#)

configuring multiple [2-118](#)

creating port-channel logical [2-116](#)

debug messages, display [B-12](#)

disabling [2-532](#)

displaying the MAC address table [2-454](#)

restarting [2-532](#)

interface speed, configuring [2-593](#)

interface vlan command [2-121](#)

internal registers, displaying [2-355, 2-364](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [2-104](#)

error recovery timer [2-109](#)

ip access-group command [2-122](#)

ip address command [2-124](#)

IP addresses, setting [2-124](#)

ip admission command [2-126](#)

ip admission name proxy http command [2-128](#)

IP DHCP snooping

See DHCP snooping

ip dhcp snooping binding command [2-131](#)
 ip dhcp snooping command [2-130](#)
 ip dhcp snooping database command [2-133](#)
 ip dhcp snooping information option allow-untrusted command [2-137](#)
 ip dhcp snooping information option command [2-135](#)
 ip dhcp snooping limit rate command [2-139](#)
 ip dhcp snooping trust command [2-141](#)
 ip dhcp snooping verify command [2-142](#)
 ip dhcp snooping vlan command [2-143](#)
 ip igmp filter command [2-144](#)
 ip igmp max-groups command [2-146](#)
 ip igmp profile command [2-148](#)
 ip igmp snooping command [2-150](#)
 ip igmp snooping last-member-query-interval command [2-152](#)
 ip igmp snooping querier command [2-154](#)
 ip igmp snooping report-suppression command [2-156](#)
 ip igmp snooping tcn command [2-158](#)
 ip igmp snooping tcn flood command [2-160](#)
 ip igmp snooping vlan immediate-leave command [2-161](#)
 ip igmp snooping vlan mrouter command [2-162](#)
 ip igmp snooping vlan static command [2-164](#)
 IP multicast addresses [2-276](#)
 IP phones
 auto-QoS configuration [2-14](#)
 trusting packets sent from [2-269](#)
 IP-precedence-to-DSCP map [2-243](#)
 IP source guard
 displaying
 dynamic binding entries only [2-405](#)
 ip ssh command [2-166](#)
 ipv6 address dhcp command [2-168](#)
 ipv6 dhcp client request vendor command [2-169](#)
 ipv6 dhcp ping packets command [2-170](#)
 ipv6 dhcp pool command [2-172](#)
 ipv6 dhcp server command [2-175](#)
 ipv6 mld snooping command [2-177](#)

ipv6 mld snooping last-listener-query count command [2-179](#)
 ipv6 mld snooping last-listener-query-interval command [2-181](#)
 ipv6 mld snooping listener-message-suppression command [2-183](#)
 ipv6 mld snooping robustness-variable command [2-184](#)
 ipv6 mld snooping tcn command [2-186](#)
 ipv6 mld snooping vlan command [2-188](#)
 IPv6 SDM template [2-321](#)

J

jumbo frames
 See MTU

L

LACP

See EtherChannel

lacp port-priority command [2-190](#)
 lacp system-priority command [2-192](#)

Layer 2 traceroute

IP addresses [2-638](#)
 MAC addresses [2-635](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [2-104](#)
 error recovery timer [2-109](#)

link state group command [2-198](#)

link state track command [2-200](#)

load-distribution methods for EtherChannel [2-295](#)

location (global configuration) command [2-194](#)

location (interface configuration) command [2-196](#)

logging event command [2-201](#)

logging event power-inline-status command [2-202](#)

logging file command [2-203](#)

logical interface [2-116](#)
 loopback error
 detection for [2-104](#)
 recovery timer [2-109](#)
 loop guard, for spanning tree [2-558, 2-562](#)

M

mac access-group command [2-205](#)
 MAC access-groups, displaying [2-442](#)
 MAC access list configuration mode [2-207](#)
 mac access-list extended command [2-207](#)
 MAC access lists [2-66](#)
 MAC addresses
 disabling MAC address learning per VLAN [2-210](#)
 displaying
 aging time [2-448](#)
 all [2-446](#)
 dynamic [2-452](#)
 MAC address-table move updates [2-457](#)
 notification settings [2-456, 2-459](#)
 number of addresses in a VLAN [2-450](#)
 per interface [2-454](#)
 per VLAN [2-463](#)
 static [2-461](#)
 static and dynamic entries [2-444](#)
 dynamic
 aging time [2-209](#)
 deleting [2-40](#)
 displaying [2-452](#)
 enabling MAC address notification [2-214](#)
 enabling MAC address-table move update [2-212](#)
 static
 adding and removing [2-216](#)
 displaying [2-461](#)
 dropping on an interface [2-217](#)
 tables [2-446](#)
 MAC address notification, debugging [B-18](#)
 mac address-table aging-time [2-205](#)

mac address-table aging-time command [2-209](#)
 mac address-table learning command [2-210](#)
 mac address-table move update command [2-212](#)
 mac address-table notification command [2-214](#)
 mac address-table static command [2-216](#)
 mac address-table static drop command [2-217](#)
 macro apply command [2-219](#)
 macro description command [2-222](#)
 macro global command [2-223](#)
 macro global description command [2-226](#)
 macro name command [2-227](#)
 macros
 adding a description [2-222](#)
 adding a global description [2-226](#)
 applying [2-223](#)
 creating [2-227](#)
 displaying [2-490](#)
 interface range [2-63, 2-118](#)
 specifying parameter values [2-223](#)
 tracing [2-223](#)
 maps
 QoS
 defining [2-243](#)
 displaying [2-473](#)
 match (class-map configuration) command [2-229](#)
 maximum transmission unit
 See MTU
 mdix auto command [2-231](#)
 media-type command [2-233](#)
 member switches
 See clusters
 memory (boot loader) command [A-13](#)
 mkdir (boot loader) command [A-14](#)
 MLD snooping
 configuring [2-183, 2-184](#)
 configuring queries [2-179, 2-181](#)
 configuring topology change notification [2-186](#)
 displaying [2-424, 2-426, 2-428, 2-429](#)
 enabling [2-177](#)

- MLD snooping on a VLAN, enabling [2-188](#)
- mls qos aggregate-policer command [2-237](#)
- mls qos command [2-235](#)
- mls qos cos command [2-239](#)
- mls qos dscp-mutation command [2-241](#)
- mls qos map command [2-243](#)
- mls qos queue-set output buffers command [2-247](#)
- mls qos queue-set output threshold command [2-249](#)
- mls qos rewrite ip dscp command [2-251](#)
- mls qos srr-queue input bandwidth command [2-253](#)
- mls qos srr-queue input buffers command [2-255](#)
- mls qos-srr-queue input cos-map command [2-257](#)
- mls qos srr-queue input dscp-map command [2-259](#)
- mls qos srr-queue input priority-queue command [2-261](#)
- mls qos srr-queue input threshold command [2-263](#)
- mls qos-srr-queue output cos-map command [2-265](#)
- mls qos srr-queue output dscp-map command [2-267](#)
- mls qos trust command [2-269](#)
- mode, MVR [2-276](#)
- Mode button, and password recovery [2-323](#)
- modes, commands [1-1](#)
- monitor session command [2-271](#)
- more (boot loader) command [A-15](#)
- MSTP
 - displaying [2-507](#)
 - interoperability [2-47](#)
 - link type [2-560](#)
 - MST region
 - aborting changes [2-566](#)
 - applying changes [2-566](#)
 - configuration name [2-566](#)
 - configuration revision number [2-566](#)
 - current or pending display [2-566](#)
 - displaying [2-507](#)
 - MST configuration mode [2-566](#)
 - VLANs-to-instance mapping [2-566](#)
 - path cost [2-568](#)
 - protocol mode [2-564](#)
 - restart protocol migration process [2-47](#)
- root port
 - loop guard [2-558](#)
 - preventing from becoming designated [2-558](#)
 - restricting which can be root [2-558](#)
 - root guard [2-558](#)
- root switch
 - affects of extended system ID [2-556](#)
 - hello-time [2-571, 2-579](#)
 - interval between BDPU messages [2-572](#)
 - interval between hello BPDU messages [2-571, 2-579](#)
 - max-age [2-572](#)
 - maximum hop count before discarding BPDU [2-573](#)
 - port priority for selection of [2-575](#)
 - primary or secondary [2-579](#)
 - switch priority [2-578](#)
- state changes
 - blocking to forwarding state [2-585](#)
 - enabling BPDU filtering [2-548, 2-583](#)
 - enabling BPDU guard [2-550, 2-583](#)
 - enabling Port Fast [2-583, 2-585](#)
 - forward-delay time [2-570](#)
 - length of listening and learning states [2-570](#)
 - rapid transition to forwarding [2-560](#)
 - shutting down Port Fast-enabled ports [2-583](#)
- state information display [2-506](#)
- MTU
 - configuring size [2-632](#)
 - displaying global setting [2-514](#)
- Multicast Listener Discovery
 - See MLD
 - multicast group address, MVR [2-279](#)
 - multicast groups, MVR [2-277](#)
- Multicast Listener Discovery
 - See MLD
 - multicast router learning method [2-162](#)
 - multicast router ports, configuring [2-162](#)
 - multicast router ports, IPv6 [2-188](#)

multicast storm control [2-601](#)

multicast VLAN, MVR [2-277](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-277](#)

configuring [2-276](#)

configuring interfaces [2-279](#)

debug messages, display [B-22](#)

displaying [2-482](#)

displaying interface information [2-484](#)

members, displaying [2-486](#)

mvr (global configuration) command [2-276](#)

mvr (interface configuration) command [2-279](#)

mvr vlan group command [2-280](#)

N

native VLANs [2-627](#)

Network Admission Control Software Configuration Guide [2-127, 2-129](#)

nonegotiate, speed [2-593](#)

nonegotiating DTP messaging [2-614](#)

non-IP protocols

denying [2-66](#)

forwarding [2-286](#)

non-IP traffic access lists [2-207](#)

non-IP traffic forwarding

denying [2-66](#)

permitting [2-286](#)

normal-range VLANs [2-647, 2-653](#)

no vlan command [2-647, 2-657](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-282](#)

pagp port-priority command [2-284](#)

password, VTP [2-667, 2-671](#)

password-recovery mechanism, enabling and disabling [2-323](#)

permit (MAC access-list configuration) command [2-286](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-282](#)

PID, displaying [2-403](#)

PIM-DVMRP, as multicast router learning method [2-162](#)

PoE

configuring the power budget [2-300](#)

configuring the power management mode [2-297](#)

displaying controller register values [2-362](#)

displaying power management information [2-498](#)

logging of status [2-202](#)

monitoring power [2-303](#)

policing power consumption [2-303](#)

police aggregate command [2-291](#)

police command [2-289](#)

policed-DSCP map [2-243](#)

policy-map command [2-293](#)

policy maps

applying to an interface [2-325, 2-329](#)

creating [2-293](#)

displaying [2-493](#)

hierarchical [2-294](#)

policers

displaying [2-466](#)

for a single class [2-289](#)

for multiple classes [2-237, 2-291](#)

policed-DSCP map [2-243](#)

traffic classification

defining the class [2-29](#)

defining trust states [2-640](#)

setting DSCP or IP precedence values [2-327](#)

Port Aggregation Protocol

See EtherChannel

- port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-101](#)
 - debug messages, display [B-7](#)
 - enabling IEEE 802.1x
 - globally [2-69](#)
 - per interface [2-92](#)
 - guest VLAN [2-83](#)
 - host modes [2-85](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-86, 2-97](#)
 - MAC authentication bypass [2-87](#)
 - manual control of authorization state [2-92](#)
 - PAE as authenticator [2-91](#)
 - periodic re-authentication
 - enabling [2-95](#)
 - time between attempts [2-98](#)
 - quiet period between failed authentication exchanges [2-98](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-94](#)
 - resetting configurable IEEE 802.1x parameters [2-81](#)
 - switch-to-authentication server retransmission time [2-98](#)
 - switch-to-client frame-retransmission number [2-89 to 2-90](#)
 - switch-to-client retransmission time [2-98](#)
 - test for IEEE 802.1x readiness [2-96](#)
 - port-channel load-balance command [2-295](#)
 - Port Fast, for spanning tree [2-585](#)
 - port ranges, defining [2-63](#)
 - ports, debugging [B-55](#)
 - ports, protected [2-625](#)
 - port security
 - aging [2-621](#)
 - debug messages, display [B-57](#)
 - enabling [2-616](#)
 - violation error recovery [2-109](#)
 - port trust states for QoS [2-269](#)
 - port types, MVR [2-279](#)
 - power information, displaying [2-377](#)
 - power inline command [2-297](#)
 - power inline consumption command [2-300](#)
 - power inline police command [2-303](#)
 - Power over Ethernet
 - See PoE
 - priority-queue command [2-306](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-403](#)
 - protected ports, displaying [2-396](#)
 - pruning
 - VLANs [2-627](#)
 - VTP
 - displaying interface information [2-391](#)
 - enabling [2-667, 2-671](#)
 - pruning-eligible VLAN list [2-628](#)
 - PVST+
 - See STP
-
- ## Q
- QoS
 - auto-QoS
 - configuring [2-14](#)
 - debug messages, display [B-2](#)
 - displaying [2-338](#)
 - class maps
 - creating [2-31](#)
 - defining the match criteria [2-229](#)
 - displaying [2-346](#)
 - defining the CoS value for an incoming packet [2-239](#)
 - displaying configuration information [2-338, 2-465](#)
 - DSCP transparency [2-251](#)
 - DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-241](#)
 - defining DSCP-to-DSCP-mutation map [2-243](#)
 - egress queues
 - allocating buffers [2-247](#)
 - defining the CoS output queue threshold map [2-265](#)

- defining the DSCP output queue threshold map [2-267](#)
 - displaying buffer allocations [2-469](#)
 - displaying CoS output queue threshold map [2-473](#)
 - displaying DSCP output queue threshold map [2-473](#)
 - displaying queueing strategy [2-469](#)
 - displaying queue-set settings [2-476](#)
 - enabling bandwidth shaping and scheduling [2-597](#)
 - enabling bandwidth sharing and scheduling [2-599](#)
 - limiting the maximum output on a port [2-595](#)
 - mapping a port to a queue-set [2-308](#)
 - mapping CoS values to a queue and threshold [2-265](#)
 - mapping DSCP values to a queue and threshold [2-267](#)
 - setting maximum and reserved memory allocations [2-249](#)
 - setting WTD thresholds [2-249](#)
 - enabling [2-235](#)
 - ingress queues
 - allocating buffers [2-255](#)
 - assigning SRR scheduling weights [2-253](#)
 - defining the CoS input queue threshold map [2-257](#)
 - defining the DSCP input queue threshold map [2-259](#)
 - displaying buffer allocations [2-469](#)
 - displaying CoS input queue threshold map [2-473](#)
 - displaying DSCP input queue threshold map [2-473](#)
 - displaying queueing strategy [2-469](#)
 - displaying settings for [2-467](#)
 - enabling the priority queue [2-261](#)
 - mapping CoS values to a queue and threshold [2-257](#)
 - mapping DSCP values to a queue and threshold [2-259](#)
 - setting WTD thresholds [2-263](#)
 - maps
 - defining [2-243, 2-257, 2-259, 2-265, 2-267](#)
 - displaying [2-473](#)
 - policy maps
 - applying an aggregate policer [2-291](#)
 - applying to an interface [2-325, 2-329](#)
 - creating [2-293](#)
 - defining policers [2-237, 2-289](#)
 - displaying policers [2-466](#)
 - displaying policy maps [2-493](#)
 - hierarchical [2-294](#)
 - policed-DSCP map [2-243](#)
 - setting DSCP or IP precedence values [2-327](#)
 - traffic classifications [2-29](#)
 - trust states [2-640](#)
 - port trust states [2-269](#)
 - queues, enabling the expedite [2-306](#)
 - statistics
 - in-profile and out-of-profile packets [2-469](#)
 - packets enqueued or dropped [2-469](#)
 - sent and received CoS values [2-469](#)
 - sent and received DSCP values [2-469](#)
 - trusted boundary for IP phones [2-269](#)
 - quality of service
 - See QoS
 - querytime, MVR [2-276](#)
 - queue-set command [2-308](#)
-
- ## R
- radius-server dead-criteria command [2-309](#)
 - radius-server host command [2-311](#)
 - rapid per-VLAN spanning-tree plus
 - See STP
 - rapid PVST+
 - See STP
 - rcommand command [2-313](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-94](#)
 - re-authentication
 - periodic [2-95](#)

- time between attempts [2-98](#)
- receiver ports, MVR [2-279](#)
- receiving flow-control packets [2-114](#)
- recovery mechanism
 - causes [2-109](#)
 - display [2-35](#), [2-344](#), [2-378](#), [2-382](#)
 - timer interval [2-109](#)
- redundancy for cluster switches [2-60](#)
- remote-span command [2-315](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-16](#)
- renew ip dhcp snooping database command [2-317](#)
- reset (boot loader) command [A-17](#)
- reset command [2-660](#)
- resource templates, displaying [2-503](#)
- restricted VLAN
 - See dot1x auth-fail vlan
- rmdir (boot loader) command [A-18](#)
- rmon collection stats command [2-320](#)
- root guard, for spanning tree [2-558](#)
- RSPAN
 - configuring [2-271](#)
 - displaying [2-479](#)
 - filter RSPAN traffic [2-271](#)
 - remote-span command [2-315](#)
 - sessions
 - displaying [2-479](#)

S

- sdm prefer command [2-321](#)
- SDM templates
 - displaying [2-503](#)
 - dual IPv4 and IPv6 [2-321](#)
- secure ports, limitations [2-618](#)
- sending flow-control packets [2-114](#)
- service password-recovery command [2-323](#)
- service-policy command [2-325](#)
- set (boot loader) command [A-19](#)
- set command [2-327](#)
- setup command [2-329](#)
- setup express command [2-332](#)
- show access-lists command [2-334](#)
- show archive status command [2-337](#)
- show auto qos command [2-338](#)
- show boot command [2-342](#)
- show cable-diagnostics tdr command [2-344](#)
- show changes command [2-660](#)
- show class-map command [2-346](#)
- show cluster candidates command [2-349](#)
- show cluster command [2-347](#)
- show cluster members command [2-351](#)
- show controllers cpu-interface command [2-353](#)
- show controllers ethernet-controller command [2-355](#)
- show controllers power inline command [2-362](#)
- show controllers tcam command [2-364](#)
- show controller utilization command [2-366](#)
- show current command [2-660](#)
- show dot1x command [2-368](#)
- show dtp [2-372](#)
- show eap command [2-374](#)
- show env command [2-377](#)
- show errdisable detect command [2-378](#)
- show errdisable flap-values command [2-380](#)
- show errdisable recovery command [2-382](#)
- show etherchannel command [2-384](#)
- show facility-alarm status [2-387](#)
- show fallback profile command [2-387](#)
- show flowcontrol command [2-389](#)
- show interfaces command [2-391](#)
- show interfaces counters command [2-400](#)
- show inventory command [2-403](#)
- show ip dhcp snooping binding command [2-405](#)
- show ip dhcp snooping command [2-404](#)
- show ip dhcp snooping database command [2-408](#), [2-410](#)
- show ip igmp profile command [2-413](#)
- show ip igmp snooping address command [2-426](#)

- show ip igmp snooping command [2-414, 2-424](#)
- show ip igmp snooping groups command [2-417](#)
- show ip igmp snooping mrouter command [2-419, 2-428](#)
- show ip igmp snooping querier command [2-421, 2-429](#)
- show ipv6 dhcp conflict command [2-423](#)
- show ipv6 route updated [2-431](#)
- show lacp command [2-433](#)
- show link state group command [2-440](#)
- show location [2-437](#)
- show mac access-group command [2-442](#)
- show mac address-table address command [2-446](#)
- show mac address-table aging time command [2-448](#)
- show mac address-table command [2-444](#)
- show mac address-table count command [2-450](#)
- show mac address-table dynamic command [2-452](#)
- show mac address-table interface command [2-454](#)
- show mac address-table learning command [2-456](#)
- show mac address-table move update command [2-457](#)
- show mac address-table notification command [2-42, 2-459, B-20](#)
- show mac address-table static command [2-461](#)
- show mac address-table vlan command [2-463](#)
- show mls qos aggregate-policer command [2-466](#)
- show mls qos command [2-465](#)
- show mls qos input-queue command [2-467](#)
- show mls qos interface command [2-469](#)
- show mls qos maps command [2-473](#)
- show mls qos queue-set command [2-476](#)
- show mls qos vlan command [2-478](#)
- show monitor command [2-479](#)
- show mvr command [2-482](#)
- show mvr interface command [2-484](#)
- show mvr members command [2-486](#)
- show pagp command [2-488](#)
- show parser macro command [2-490](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-493](#)
- show port security command [2-495](#)
- show power inline command [2-498](#)
- show proposed command [2-660](#)
- show sdm prefer command [2-503](#)
- show setup express command [2-505](#)
- show spanning-tree command [2-506](#)
- show storm-control command [2-512](#)
- show system mtu command [2-514](#)
- show trust command [2-640](#)
- show udd command [2-515](#)
- show version command [2-518](#)
- show vlan command [2-520](#)
- show vlan command, fields [2-522](#)
- show vmps command [2-524](#)
- show vtp command [2-527](#)
- shutdown command [2-532](#)
- shutdown vlan command [2-534](#)
- small violation-rate command [2-535](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-541](#)
- SNMP informs, enabling the sending of [2-537](#)

- snmp-server enable traps command [2-537](#)
- snmp-server host command [2-541](#)
- snmp trap mac-notification command [2-545](#)
- SNMP traps
 - enabling MAC address notification trap [2-545](#)
 - enabling the MAC address notification feature [2-214](#)
 - enabling the sending of [2-537](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-65](#)
 - downloading [2-6](#)
 - upgrading [2-6](#)
 - uploading [2-12](#)
- software version, displaying [2-518](#)
- source ports, MVR [2-279](#)
- SPAN
 - configuring [2-271](#)
 - debug messages, display [B-21](#)
 - displaying [2-479](#)
 - filter SPAN traffic [2-271](#)
 - sessions
 - add interfaces to [2-271](#)
 - displaying [2-479](#)
 - start new [2-271](#)
- spanning-tree backbonefast command [2-547](#)
- spanning-tree bpdupfilter command [2-548](#)
- spanning-tree bpduguard command [2-550](#)
- spanning-tree cost command [2-552](#)
- spanning-tree etherchannel command [2-554](#)
- spanning-tree extend system-id command [2-556](#)
- spanning-tree guard command [2-558](#)
- spanning-tree link-type command [2-560](#)
- spanning-tree loopguard default command [2-562](#)
- spanning-tree mode command [2-564](#)
- spanning-tree mst configuration command [2-566](#)
- spanning-tree mst cost command [2-568](#)
- spanning-tree mst forward-time command [2-570](#)
- spanning-tree mst hello-time command [2-571](#)
- spanning-tree mst max-age command [2-572](#)
- spanning-tree mst max-hops command [2-573](#)
- spanning-tree mst port-priority command [2-575](#)
- spanning-tree mst pre-standard command [2-577](#)
- spanning-tree mst priority command [2-578](#)
- spanning-tree mst root command [2-579](#)
- spanning-tree portfast (global configuration) command [2-583](#)
- spanning-tree portfast (interface configuration) command [2-585](#)
- spanning-tree port-priority command [2-581](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-587](#)
- spanning-tree uplinkfast command [2-588](#)
- spanning-tree vlan command [2-590](#)
- speed command [2-593](#)
- srr-queue bandwidth limit command [2-595](#)
- srr-queue bandwidth share command [2-599](#)
- SSH, configuring version [2-166](#)
- static-access ports, configuring [2-604](#)
- statistics, Ethernet group [2-320](#)
- sticky learning, enabling [2-616](#)
- storm-control command [2-601](#)
- STP
 - BackboneFast [2-547](#)
 - counters, clearing [2-46](#)
 - debug messages, display
 - BackboneFast events [B-61](#)
 - MSTP [B-64](#)
 - optimized BPDUs handling [B-63](#)
 - spanning-tree activity [B-59](#)
 - switch shim [B-66](#)
 - transmitted and received BPDUs [B-62](#)
 - UplinkFast [B-68](#)
 - detection of indirect link failures [2-547](#)
 - EtherChannel misconfiguration [2-554](#)
 - extended system ID [2-556](#)
 - path cost [2-552](#)

protocol modes [2-564](#)

root port

- accelerating choice of new [2-588](#)
- loop guard [2-558](#)
- preventing from becoming designated [2-558](#)
- restricting which can be root [2-558](#)
- root guard [2-558](#)
- UplinkFast [2-588](#)

root switch

- affects of extended system ID [2-556, 2-591](#)
- hello-time [2-590](#)
- interval between BDPUs messages [2-590](#)
- interval between hello BPDU messages [2-590](#)
- max-age [2-590](#)
- port priority for selection of [2-581](#)
- primary or secondary [2-590](#)
- switch priority [2-590](#)

state changes

- blocking to forwarding state [2-585](#)
- enabling BPDU filtering [2-548, 2-583](#)
- enabling BPDU guard [2-550, 2-583](#)
- enabling Port Fast [2-583, 2-585](#)
- enabling timer to recover from error state [2-109](#)
- forward-delay time [2-590](#)
- length of listening and learning states [2-590](#)
- shutting down Port Fast-enabled ports [2-583](#)

state information display [2-506](#)

VLAN options [2-578, 2-590](#)

Switched Port Analyzer

See SPAN

switchport access command [2-604](#)

switchport backup interface command [2-606](#)

switchport block command [2-610](#)

switchport host command [2-611](#)

switchport mode command [2-612](#)

switchport nonegotiate command [2-614](#)

switchport port-security aging command [2-621](#)

switchport port-security command [2-616](#)

switchport priority extend command [2-623](#)

switchport protected command [2-625](#)

switchports, displaying [2-391](#)

switchport trunk command [2-627](#)

switchport voice vlan command [2-630](#)

system message logging [2-202](#)

system message logging, save message to flash [2-203](#)

system mtu command [2-632](#)

system resource templates [2-321](#)

T

tar files, creating, listing, and extracting [2-9](#)

TDR, running [2-634](#)

Telnet, using to communicate to cluster switches [2-313](#)

temperature information, displaying [2-377](#)

templates, SDM [2-322](#)

templates, system resources [2-321](#)

test cable-diagnostics tdr command [2-634](#)

test relay [2-635](#)

traceroute mac command [2-635](#)

traceroute mac ip command [2-638](#)

trunking, VLAN mode [2-612](#)

trunk mode [2-612](#)

trunk ports [2-612](#)

trunks, to non-DTP device [2-613](#)

trusted boundary for QoS [2-269](#)

trusted port states for QoS [2-269](#)

type (boot loader) command [A-22](#)

U

UDLD

- aggressive mode [2-642, 2-644](#)
- debug messages, display [B-76](#)
- enable globally [2-642](#)
- enable per interface [2-644](#)
- error recovery timer [2-109](#)
- message timer [2-642](#)

- normal mode [2-642, 2-644](#)
- reset a shutdown interface [2-646](#)
- status [2-515](#)
- udld command [2-642](#)
- udld port command [2-644](#)
- udld reset command [2-646](#)
- unicast storm control [2-601](#)
- UniDirectional Link Detection
 - See UDLD
- unknown multicast traffic, preventing [2-610](#)
- unknown unicast traffic, preventing [2-610](#)
- unset (boot loader) command [A-23](#)
- upgrading
 - software images
 - downloading [2-6](#)
 - monitoring status of [2-337](#)
- UplinkFast, for STP [2-588](#)
- user EXEC mode [1-2, 1-3](#)

V

- version (boot loader) command [A-25](#)
- vlan (global configuration) command [2-647](#)
- vlan (VLAN configuration) command [2-653](#)
- VLAN configuration
 - rules [2-650, 2-655](#)
 - saving [2-647, 2-657](#)
- VLAN configuration mode
 - commands
 - VLAN [2-653](#)
 - VTP [2-671](#)
 - description [1-5](#)
 - entering [2-659](#)
 - summary [1-2](#)
- vlan database command [2-659](#)
- VLAN ID range [2-647, 2-653](#)
- VLAN Query Protocol
 - See VQP
- VLANs
 - adding [2-647](#)
 - configuring [2-647, 2-653](#)
 - debug messages, display
 - ISL [B-72](#)
 - VLAN IOS file system error tests [B-71](#)
 - VLAN manager activity [B-69](#)
 - VTP [B-74](#)
 - displaying configurations [2-520](#)
 - enabling guest VLAN supplicant [2-72, 2-82, 2-113](#)
 - extended-range [2-647](#)
 - MAC addresses
 - displaying [2-463](#)
 - number of [2-450](#)
 - media types [2-649, 2-655](#)
 - normal-range [2-647, 2-653](#)
 - restarting [2-534](#)
 - saving the configuration [2-647](#)
 - shutting down [2-534](#)
 - SNMP traps for VTP [2-539, 2-542](#)
 - suspending [2-534](#)
 - variables [2-653](#)
- VLAN Trunking Protocol
 - See VTP
- VMPS
 - configuring servers [2-665](#)
 - displaying [2-524](#)
 - error recovery timer [2-109](#)
 - reconfirming dynamic VLAN assignments [2-662](#)
 - vmmps reconfirm (global configuration) command [2-663](#)
 - vmmps reconfirm (privileged EXEC) command [2-662](#)
 - vmmps retry command [2-664](#)
 - vmmps server command [2-665](#)
- voice VLAN
 - configuring [2-630](#)
 - setting port priority [2-623](#)
- VQP
 - and dynamic-access ports [2-605](#)
 - clearing client statistics [2-48](#)
 - displaying information [2-524](#)

- per-server retry count [2-664](#)
- reconfirmation interval [2-663](#)
- reconfirming dynamic VLAN assignments [2-662](#)

VTP

- changing characteristics [2-667](#)
- clearing pruning counters [2-49](#)
- configuring
 - domain name [2-667, 2-671](#)
 - file name [2-667](#)
 - mode [2-667, 2-671](#)
 - password [2-667, 2-671](#)
- counters display fields [2-528](#)
- displaying information [2-527](#)
- enabling
 - pruning [2-667, 2-671](#)
 - Version 2 [2-667, 2-671](#)
- mode [2-667, 2-671](#)
- pruning [2-667, 2-671](#)
- saving the configuration [2-647, 2-657](#)
- statistics [2-527](#)
- status [2-527](#)
- status display fields [2-530](#)

vtp (global configuration) command [2-667](#)

vtp (VLAN configuration) command [2-671](#)