



INDEX

A

aaa accounting dot1x command **1**
aaa authentication dot1x command **3**
aaa authorization network command **5, 16, 21, 23, 25, 27, 109, 423, 5, 35**
AAA methods **3**
abort command **757**
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP **167**
 MAC, displaying **532**
access mode **710**
access ports **710**
ACEs **100, 358**
ACLs
 deny **98**
 displaying **406**
 for non-IP protocols **261**
 IP **167**
 on Layer 2 interfaces **167**
 permit **356**
address aliasing **337**
aggregate-port learner **350**
allowed VLANs **725**
apply command **757**
archive download-sw command **6**
archive tar command **9**
archive upload-sw command **12**
arp access-list command **14**

authentication control-direction command **16**
authentication event command **18**
authentication failed VLAN
 See dot1x auth-fail vlan
authentication fallback command **21**
authentication host-mode command **23**
authentication open command **25**
authentication order command **27**
authentication periodic command **29**
authentication port-control command **31**
authentication priority command **33**
authentication timer command **35**
authentication violation command **37**
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
auth open command **25**
auth order command **27**
authorization state of controlled port **126**
auth timer command **35**
autonegotiation of duplex mode **137**
auto qos voip command **39**

B

BackboneFast, for STP **645**
backup interfaces
 configuring **704**
 displaying **473**
boot (boot loader) command **2**
boot config-file command **43**
boot enable-break command **44**

- boot helper command **45**
 boot helper-config file command **46**
 booting
 Cisco IOS image **49**
 displaying environment variables **419**
 interrupting **44**
 manually **47**
- boot loader
 accessing **1**
 booting
 Cisco IOS image **2**
 helper image **45**
- directories
 creating **14**
 displaying a list of **7**
 removing **18**
- displaying
 available commands **12**
 memory heap utilization **13**
 version **25**
- environment variables
 described **19**
 displaying settings **19**
 location of **20**
 setting **19**
 unsetting **23**
- files
 copying **5**
 deleting **6**
 displaying a list of **7**
 displaying the contents of **4, 15, 22**
 renaming **16**
- file system
 formatting **10**
 initializing flash **9**
 running a consistency check **11**
- prompt **1**
 resetting the system **17**
- boot manual command **47**
 boot private-config-file command **48**
 boot system command **49**
 BPDU filtering, for spanning tree **646, 681**
 BPDU guard, for spanning tree **648, 681**
 broadcast storm control **699**
-
- C**
- candidate switches
 See clusters
- cat (boot loader) command **4**
 channel-group command **50**
 channel-protocol command **53**
 Cisco SoftPhone
 auto-QoS configuration **39**
 trusting packets sent from **329**
- CISP
 See Client Information Signalling Protocol
- cisp
 debug platform cisp command **35**
 cisp enable command **54**
 class command **55**
 class-map command **57**
 class maps
 creating **57**
 defining the match criteria **290**
 displaying **424**
- class of service
 See CoS
- clear dot1x command **59**
 clear eap sessions command **60**
 clear energwyise neighbors command **61**
 clear errdisable interface **62**
 clear ip arp inspection log command **63**
 clear ip arp inspection statistics command **64**
 clear ip dhcp snooping database command **65**
 clear lacp command **67**
 clear mac address-table command **68, 70**
 clear nmfp statistics command **71**

- clear pagp command **72**
 clear port-security command **73**
 clear spanning-tree counters command **75**
 clear spanning-tree detected-protocols command **76**
 clear vmps statistics command **77**
 clear vtp counters command **78**
 Client Information Signalling Protocol **54, 109, 423, 5, 35**
 cluster commander-address command **79**
 cluster discovery hop-count command **81**
 cluster enable command **82**
 cluster holdtime command **83**
 cluster member command **84**
 cluster outside-interface command **86**
 cluster run command **87**
 clusters
 adding candidates **84**
 binding to HSRP group **88**
 building manually **84**
 communicating with
 devices outside the cluster **86**
 members by using Telnet **382**
 debug messages, display **6**
 displaying
 candidate switches **427**
 debug messages **6**
 member switches **429**
 status **425**
 hop-count limit for extended discovery **81**
 HSRP standby groups **88**
 redundancy **88**
 SNMP trap **635**
 cluster standby-group command **88**
 cluster timer command **90**
 command modes defined **1**
 command switch
 See clusters
 configuration files
 password recovery disable considerations **1**
 specifying the name **43, 48**
 configuring multiple interfaces **163**
 config-vlan mode
 commands **746**
 description **4**
 entering **745**
 summary **2**
 copy (boot loader) command **5**
 CoS
 assigning default value to incoming packets **299**
 overriding the incoming value **299**
 CoS-to-DSCP map **303**
 CPU ASIC statistics, displaying **431**
 crashinfo files **156**
-
- D**
- debug auto qos command **2**
 debug backup command **4**
 debug cisp command **5**
 debug cluster command **6**
 debug dot1x command **8**
 debug dtp command **10**
 debug eap command **11**
 debug etherchannel command **12**
 debug ilpower command **14**
 debug interface command **15**
 debug ip dhcp snooping command **17**
 debug ip igmp filter command **18**
 debug ip igmp max-groups command **19**
 debug ip igmp snooping command **20**
 debug lacp command **21**
 debug lldp packets command **22**
 debug mac-notification command **23**
 debug matm command **24**
 debug matm move update command **25**
 debug monitor command **26**
 debug mvrdbg command **28**
 debug nmfp command **30**
 debug nvram command **31**

- debug pagp command **32**
 debug platform acl command **33**
 debug platform backup interface command **34**
 debug platform cisp command **35**
 debug platform configuration command **41**
 debug platform cpu-queues command **36**
 debug platform dot1x command **38**
 debug platform etherchannel command **39**
 debug platform forw-tcam command **40**
 debug platform ip arp inspection command **43**
 debug platform ip dhcp command **44**
 debug platform ip igmp snooping command **45**
 debug platform ip source-guard command **47**
 debug platform led command **48**
 debug platform matm command **49**
 debug platform messaging application command **51**
 debug platform phy command **52**
 debug platform pm command **54**
 debug platform port-asic command **56**
 debug platform port-security command **57**
 debug platform qos-acl-tcam command **58**
 debug platform resource-manager command **59**
 debug platform snmp command **60**
 debug platform span command **61**
 debug platform supervisor-asic command **62**
 debug platform sw-bridge command **63**
 debug platform tcam command **64**
 debug platform udld command **66**
 debug platform vlan command **67**
 debug pm command **68**
 debug port-security command **70**
 debug qos-manager command **71**
 debug spanning-tree backbonefast command **74**
 debug spanning-tree bpdu command **75**
 debug spanning-tree bpdu-opt command **76**
 debug spanning-tree command **72**
 debug spanning-tree mstp command **77**
 debug spanning-tree switch command **79**
 debug spanning-tree uplinkfast command **81**
 debug sw-vlan command **82**
 debug sw-vlan ifs command **84**
 debug sw-vlan notification command **86**
 debug sw-vlan vtp command **88**
 debug udld command **90**
 debug vqpc command **92**
 define interface-range command **92**
 delete (boot loader) command **6**
 delete command **94**
 deny (ARP access-list configuration) command **96**
 deny command **98**
 detect mechanism, causes **148**
 DHCP snooping
 accepting untrusted packets from edge switch **195**
 enabling
 on a VLAN **201**
 option 82 **193, 195**
 trust on an interface **199**
 error recovery timer **154**
 rate limiting **197**
 DHCP snooping binding database
 binding file, configuring **191**
 bindings
 adding **189**
 deleting **189**
 displaying **491**
 clearing database agent statistics **65**
 database agent, configuring **191**
 displaying
 binding entries **491**
 database agent status **494, 496**
 renewing **386**
 dir (boot loader) command **7**
 directories, deleting **94**
 domain name, VTP **764, 768**
 dot1x auth-fail max-attempts **103**
 dot1x auth-fail vlan **105**
 dot1x command **101**
 dot1x control-direction command **107**

- dot1x credentials (global configuration) command **109**
- dot1x critical global configuration command **110**
- dot1x critical interface configuration command **112**
- dot1x default command **114**
- dot1x fallback command **115**
- dot1x guest-vlan command **116**
- dot1x host-mode command **118**
- dot1x initialize command **120**
- dot1x mac-auth-bypass command **121**
- dot1x max-reauth-req command **123**
- dot1x max-req command **124**
- dot1x pae command **125**
- dot1x port-control command **126**
- dot1x re-authenticate command **128**
- dot1x reauthentication command **129**
- dot1x test eapol-capable command **130**
- dot1x test timeout command **131**
- dot1x timeout command **132**
- dot1x violation-mode command **135**
- DSCP-to-CoS map **303**
- DSCP-to-DSCP-mutation map **303**
- DTP **711**
 - DTP flap
 - error detection for **148**
 - error recovery timer **154**
 - DTP negotiation **712**
 - dual-purpose uplink ports
 - displaying configurable options **475**
 - displaying the active media **480**
 - selecting the type **293**
 - duplex command **136**
 - dynamic-access ports
 - configuring **702**
 - restrictions **703**
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN **175**
 - define **14**
 - deny packets **96**
 - display **410**
 - permit packets **354**
 - clear
 - log buffer **63**
 - statistics **64**
 - display
 - ARP ACLs **410**
 - configuration and operating state **486**
 - log buffer **486**
 - statistics **486**
 - trust state and rate limit **486**
 - enable per VLAN **185**
 - log buffer
 - clear **63**
 - configure **179**
 - display **486**
 - rate-limit incoming ARP packets **177**
 - statistics
 - clear **64**
 - display **486**
 - trusted interface state **181**
 - type of packet logged **186**
 - validation checks **183**
- dynamic auto VLAN membership mode **710**
- dynamic desirable VLAN membership mode **710**
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

EAP-request/identity frame
 maximum number to send [124](#)
 response time before retransmitting [132](#)
 energywise (global configuration) command [138, 140](#)
 energywise domain command [142](#)
 energywise query command [144](#)
 environment variables, displaying [419](#)
 errdisable detect cause command [148](#)
 errdisable detect cause small-frame command [151](#)
 errdisable recovery cause small-frame [153](#)
 errdisable recovery command [154](#)
 error conditions, displaying [462](#)
 error disable detection [148](#)
 error-disabled interfaces, displaying [473](#)
EtherChannel
 assigning Ethernet interface to channel group [50](#)
 creating port-channel logical interface [161](#)
 debug EtherChannel/PAgP, display [12](#)
 debug platform-specific events, display [39](#)
 displaying [466](#)
 interface information, displaying [473](#)
LACP
 clearing channel-group information [67](#)
 debug messages, display [21](#)
 displaying [523](#)
 modes [50](#)
 port priority for hot-standby ports [244](#)
 restricting a protocol [53](#)
 system priority [246](#)
 load-distribution methods [365](#)
PAgP
 aggregate-port learner [350](#)
 clearing channel-group information [72](#)
 debug messages, display [32](#)
 displaying [583](#)
 error detection for [148](#)
 error recovery timer [154](#)

EtherChannel (continued)
 learn method [350](#)
 modes [50](#)
 physical-port learner [350](#)
 priority of interface for transmitted traffic [352](#)
 Ethernet controller, internal register display [433](#)
 Ethernet statistics, collecting [390](#)
 exception crashinfo command [156](#)
 exit command [757](#)
 extended discovery of candidate switches [81](#)
 extended-range VLANs
 and allowed VLAN list [725](#)
 and pruning-eligible list [725](#)
 configuring [745](#)
 extended system ID for STP [654](#)

F

fallback profile command [157](#)
 fallback profiles, displaying [469](#)
 fan information, displaying [459](#)
 file name, VTP [764](#)
 files, deleting [94](#)
 flash_init (boot loader) command [9](#)
 flexible authentication ordering [27](#)
Flex Links
 configuring [704](#)
 configuring preferred VLAN [706](#)
 displaying [473](#)
 flowcontrol command [159](#)
 format (boot loader) command [10](#)
 forwarding results, display [5](#)
 frame forwarding information, displaying [5](#)
 fsck (boot loader) command [11](#)

G

global configuration mode [2, 3](#)

H

hardware ACL statistics [406](#)

help (boot loader) command [12](#)

hierarchical policy maps [364](#)

hop-count limit for clusters [81](#)

host connection, port configuration [709](#)

Hot Standby Router Protocol

 See HSRP

HSRP

 binding HSRP group to cluster [88](#)

 standby group [88](#)

I IEEE 802.1x

 and switchport modes [711](#)

 violation error recovery [154](#)

 See also port-based authentication

IEEE 802.1X Port Based Authentication

 enabling guest VLAN supplicant [104, 115, 158](#)

IGMP filters

 applying [202](#)

 debug messages, display [18](#)

IGMP groups, setting maximum [204](#)

IGMP maximum groups, debugging [19](#)

IGMP profiles

 creating [206](#)

 displaying [499](#)

IGMP snooping

 adding ports as a static member of a group [223](#)

 displaying [500, 505, 507](#)

 enabling [208](#)

 enabling the configurable-leave timer [210](#)

 enabling the Immediate-Leave feature [219](#)

IGMP snooping (continued)

 flooding query count [216](#)

 interface topology change notification behavior [218](#)

 multicast table [503](#)

 querier [212](#)

 query solicitation [216](#)

 report suppression [214](#)

 switch topology change notification behavior [216](#)

images

 See software images

Immediate-Leave feature, MVR [339](#)

immediate-leave processing [219](#)

Immediate-Leave processing, IPv6 [242](#)

interface configuration mode [2, 4](#)

interface port-channel command [161](#)

interface range command [163](#)

interface-range macros [92](#)

interfaces

 assigning Ethernet interface to channel group [50](#)

 configuring [136](#)

 configuring multiple [163](#)

 creating port-channel logical [161](#)

 debug messages, display [15](#)

 disabling [631](#)

 displaying the MAC address table [544](#)

 restarting [631](#)

 interface speed, configuring [691](#)

 interface vlan command [166](#)

 internal registers, displaying [433, 442](#)

Internet Group Management Protocol

 See IGMP

invalid GBIC

 error detection for [148](#)

 error recovery timer [154](#)

ip access-group command [167](#)

ip address command [169](#)

IP addresses, setting [169](#)

ip admission command [171](#)

ip admission name proxy http command [173](#)

- ip arp inspection filter vlan command **175**
 ip arp inspection limit command **177**
 ip arp inspection log-buffer command **179**
 ip arp inspection trust command **181**
 ip arp inspection validate command **183**
 ip arp inspection vlan command **185**
 ip arp inspection vlan logging command **186**
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command **189**
 ip dhcp snooping command **188**
 ip dhcp snooping database command **191**
 ip dhcp snooping information option allow-untrusted command **195**
 ip dhcp snooping information option command **193**
 ip dhcp snooping limit rate command **197**
 ip dhcp snooping trust command **199**
 ip dhcp snooping verify command **200**
 ip dhcp snooping vlan command **201**
 ip igmp filter command **202**
 ip igmp max-groups command **204**
 ip igmp profile command **206**
 ip igmp snooping command **208**
 ip igmp snooping last-member-query-interval command **210**
 ip igmp snooping querier command **212**
 ip igmp snooping report-suppression command **214**
 ip igmp snooping tcn command **216**
 ip igmp snooping tcn flood command **218**
 ip igmp snooping vlan immediate-leave command **219**
 ip igmp snooping vlan mrouter command **221**
 ip igmp snooping vlan static command **223**
 IP multicast addresses **336**
 IP phones
 auto-QoS configuration **39**
 trusting packets sent from **329**
 IP-precedence-to-DSCP map **303**
 ip source binding command **225**
 IP source guard
 disabling **229**
 displaying
 binding entries **509**
 configuration **511**
 dynamic binding entries only **491**
 enabling **229**
 static IP source bindings **225**
 ip ssh command **227**
 ipv6 mld snooping command **230**
 ipv6 mld snooping last-listener-query count command **232**
 ipv6 mld snooping last-listener-query-interval command **234**
 ipv6 mld snooping listener-message-suppression command **236**
 ipv6 mld snooping robustness-variable command **238**
 ipv6 mld snooping tcn command **240**
 ipv6 mld snooping vlan command **242**
 IPv6 SDM template **391**
 ip verify source command **229**
-
- J**
- jumbo frames
 See MTU
-
- L**
- LACP
 See EtherChannel
 lacp port-priority command **244**
 lacp system-priority command **246**
 Layer 2 traceroute
 IP addresses **736**
 MAC addresses **733**
 line configuration mode **2, 5**
 Link Aggregation Control Protocol
 See EtherChannel

link flap
 error detection for **148**
 error recovery timer **154**

link state group command **252**

link state track command **254**

load-distribution methods for EtherChannel **365**

location (global configuration) command **248**

location (interface configuration) command **250**

logging event command **255**

logging event power-inline-status command **256**

logging file command **257**

logical interface **161**

loopback error
 detection for **148**
 recovery timer **154**

loop guard, for spanning tree **656, 660**

M

mac access-group command **259**

MAC access-groups, displaying **532**

MAC access list configuration mode **261**

mac access-list extended command **261**

MAC access lists **98**

MAC addresses
 disabling MAC address learning per VLAN **264**
 displaying
 aging time **538**
 all **536**
 dynamic **542**
 MAC address-table move updates **547**
 notification settings **546, 549**
 number of addresses in a VLAN **540**
 per interface **544**
 per VLAN **553**
 static **551**
 static and dynamic entries **534**

MAC addresses (continued)
 dynamic
 aging time **263**
 deleting **68**
 displaying **542**
 enabling MAC address notification **268**
 enabling MAC address-table move update **266**
 static
 adding and removing **270**
 displaying **551**
 dropping on an interface **271**
 tables **536**
 MAC address notification, debugging **23**
 mac address-table aging-time **259**
 mac address-table aging-time command **263**
 mac address-table learning command **264**
 mac address-table move update command **266**
 mac address-table notification command **268**
 mac address-table static command **270**
 mac address-table static drop command **271**
 macro apply command **273**
 macro auto execute command **276**
 macro auto global processing command **281**
 macro description command **283**
 macro global command **284**
 macro global description command **287**
 macro name command **288**
 macros
 adding a description **283**
 adding a global description **287**
 applying **284**
 creating **288**
 displaying **585**
 interface range **92, 163**
 specifying parameter values **284**
 tracing **284**

- maps
- QoS
- defining **303**
 - displaying **563**
- match (class-map configuration) command **290**
- maximum transmission unit
- See MTU
- mdix auto command **292**
- media-type command **293**
- member switches
- See clusters
- memory (boot loader) command **13**
- mkdir (boot loader) command **14**
- MLD snooping
- configuring **236, 238**
 - configuring queries **232, 234**
 - configuring topology change notification **240**
 - displaying **513, 515, 517, 519**
 - enabling **230**
- MLD snooping on a VLAN, enabling **242**
- mls qos aggregate-policer command **297**
- mls qos command **295**
- mls qos cos command **299**
- mls qos dscp-mutation command **301**
- mls qos map command **303**
- mls qos queue-set output buffers command **307**
- mls qos queue-set output threshold command **309**
- mls qos rewrite ip dscp command **311**
- mls qos srr-queue input bandwidth command **313**
- mls qos srr-queue input buffers command **315**
- mls qos-srr-queue input cos-map command **317**
- mls qos srr-queue input dscp-map command **319**
- mls qos srr-queue input priority-queue command **321**
- mls qos srr-queue input threshold command **323**
- mls qos-srr-queue output cos-map command **325**
- mls qos srr-queue output dscp-map command **327**
- mls qos trust command **329**
- mode, MVR **336**
- Mode button, and password recovery **393**
- modes, commands **1**
- monitor session command **331**
- more (boot loader) command **15**
- MSTP
- displaying **605**
 - interoperability **76**
 - link type **658**
 - MST region
 - aborting changes **664**
 - applying changes **664**
 - configuration name **664**
 - configuration revision number **664**
 - current or pending display **664**
 - displaying **605**
 - MST configuration mode **664**
 - VLANs-to-instance mapping **664** - path cost **666**
 - protocol mode **662**
 - restart protocol migration process **76**
 - root port
 - loop guard **656**
 - preventing from becoming designated **656**
 - restricting which can be root **656**
 - root guard **656** - root switch
 - affects of extended system ID **654**
 - hello-time **669, 677**
 - interval between BDPU messages **670**
 - interval between hello BPDU messages **669, 677**
 - max-age **670**
 - maximum hop count before discarding BPDU **671**
 - port priority for selection of **673**
 - primary or secondary **677**
 - switch priority **676**

MSTP (continued)

- state changes
 - blocking to forwarding state [683](#)
 - enabling BPDU filtering [646, 681](#)
 - enabling BPDU guard [648, 681](#)
 - enabling Port Fast [681, 683](#)
 - forward-delay time [668](#)
 - length of listening and learning states [668](#)
 - rapid transition to forwarding [658](#)
 - shutting down Port Fast-enabled ports [681](#)
- state information display [604](#)

MTU

- configuring size [730](#)
- displaying global setting [613](#)

multicast group address, MVR [339](#)

multicast groups, MVR [337](#)

Multicast Listener Discovery

- See MLD
- multicast router learning method [221](#)
- multicast router ports, configuring [221](#)
- multicast router ports, IPv6 [242](#)
- multicast storm control [699](#)
- multicast VLAN, MVR [337](#)
- multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [337](#)
- configuring [336](#)
- configuring interfaces [339](#)
- debug messages, display [28](#)
- displaying [572](#)
- displaying interface information [574](#)
- members, displaying [576](#)

mvr (global configuration) command [336](#)

mvr (interface configuration) command [339](#)

mvr vlan group command [340](#)

N

- native VLANs [725](#)
- Network Admission Control Software Configuration Guide [172, 174](#)
- network-policy (global configuration) command [343](#)
- network-policy command [342](#)
- network-policy profile (network-policy configuration) command [345](#)
- nmfsp attachment suppress command [349](#)
- nmfsp command [347](#)
- nonegotiate, speed [691](#)
- nonegotiating DTP messaging [712](#)
- non-IP protocols
 - denying [98](#)
 - forwarding [356](#)
- non-IP traffic access lists [261](#)
- non-IP traffic forwarding
 - denying [98](#)
 - permitting [356](#)
- normal-range VLANs [745, 750](#)
- no vlan command [745, 754](#)

O

online diagnostics

global configuration mode

- clearing health monitoring diagnostic test schedule [63](#)
- setting health monitoring diagnostic testing [63](#)
- setting up health monitoring diagnostic test schedule [63](#)

P

PAgP

See EtherChannel

pagp learn-method command [350](#)

pagp port-priority command [352](#)

password, VTP [764, 768](#)

password-recovery mechanism, enabling and disabling **393**
 permit (ARP access-list configuration) command **354**
 permit (MAC access-list configuration) command **356**
 per-VLAN spanning-tree plus
 See STP
 physical-port learner **350**
 PID, displaying **485**
 PIM-DVMRP, as multicast router learning method **221**
 PoE
 configuring the power budget **370**
 configuring the power management mode **367**
 displaying controller register values **440**
 displaying power management information **593**
 logging of status **256**
 monitoring power **372**
 policing power consumption **372**
 police aggregate command **361**
 police command **359**
 policed-DSCP map **303**
 policy-map command **363**
 policy maps
 applying to an interface **395, 399**
 creating **363**
 displaying **588**
 hierarchical **364**
 policers
 displaying **556**
 for a single class **359**
 for multiple classes **297, 361**
 policed-DSCP map **303**
 traffic classification
 defining the class **55**
 defining trust states **738**
 setting DSCP or IP precedence values **397**
 Port Aggregation Protocol
 See EtherChannel

port-based authentication
 AAA method list **3**
 configuring violation modes **135**
 debug messages, display **8**
 enabling IEEE 802.1x
 globally **101**
 per interface **126**
 guest VLAN **116**
 host modes **118**
 IEEE 802.1x AAA accounting methods **1**
 initialize an interface **120, 131**
 MAC authentication bypass **121**
 manual control of authorization state **126**
 PAE as authenticator **125**
 periodic re-authentication
 enabling **129**
 time between attempts **132**
 quiet period between failed authentication exchanges **132**
 re-authenticating IEEE 802.1x-enabled ports **128**
 resetting configurable IEEE 802.1x parameters **114**
 switch-to-authentication server retransmission time **132**
 switch-to-client frame-retransmission number **123 to 124**
 switch-to-client retransmission time **132**
 test for IEEE 802.1x readiness **130**
 port-channel load-balance command **365**
 Port Fast, for spanning tree **683**
 port ranges, defining **92**
 ports, debugging **68**
 ports, protected **723**
 port security
 aging **719**
 debug messages, display **70**
 enabling **714**
 violation error recovery **154**
 port trust states for QoS **329**
 port types, MVR **339**
 power information, displaying **459**

power inline command [367](#)
 power inline consumption command [370](#)
 power inline police command [372](#)
 Power over Ethernet
 See PoE
 priority-queue command [375](#)
 privileged EXEC mode [2, 3](#)
 product identification information, displaying [485](#)
 protected ports, displaying [478](#)
 pruning
 VLANs [725](#)
 VTP
 displaying interface information [473](#)
 enabling [764, 768](#)
 pruning-eligible VLAN list [726](#)
 PVST+
 See STP

Q

QoS
 auto-QoS
 configuring [39](#)
 debug messages, display [2](#)
 displaying [415](#)
 class maps
 creating [57](#)
 defining the match criteria [290](#)
 displaying [424](#)
 defining the CoS value for an incoming packet [299](#)
 displaying configuration information [415, 555](#)
 DSCP transparency [311](#)
 DSCP trusted ports
 applying DSCP-to-DSCP-mutation map to [301](#)
 defining DSCP-to-DSCP-mutation map [303](#)
 egress queues
 allocating buffers [307](#)
 defining the CoS output queue threshold map [325](#)

QoS (continued)
 defining the DSCP output queue threshold map [327](#)
 displaying buffer allocations [559](#)
 displaying CoS output queue threshold map [563](#)
 displaying DSCP output queue threshold map [563](#)
 displaying queueing strategy [559](#)
 displaying queue-set settings [566](#)
 enabling bandwidth shaping and scheduling [695](#)
 enabling bandwidth sharing and scheduling [697](#)
 limiting the maximum output on a port [693](#)
 mapping a port to a queue-set [377](#)
 mapping CoS values to a queue and threshold [325](#)
 mapping DSCP values to a queue and threshold [327](#)
 setting maximum and reserved memory allocations [309](#)
 setting WTD thresholds [309](#)
 enabling [295](#)
 ingress queues
 allocating buffers [315](#)
 assigning SRR scheduling weights [313](#)
 defining the CoS input queue threshold map [317](#)
 defining the DSCP input queue threshold map [319](#)
 displaying buffer allocations [559](#)
 displaying CoS input queue threshold map [563](#)
 displaying DSCP input queue threshold map [563](#)
 displaying queueing strategy [559](#)
 displaying settings for [557](#)
 enabling the priority queue [321](#)
 mapping CoS values to a queue and threshold [317](#)
 mapping DSCP values to a queue and threshold [319](#)
 setting WTD thresholds [323](#)

QoS (continued)

maps

defining **303, 317, 319, 325, 327**

displaying **563**

policy maps

applying an aggregate policer **361**

applying to an interface **395, 399**

creating **363**

defining policers **297, 359**

displaying policers **556**

displaying policy maps **588**

hierarchical **364**

policed-DSCP map **303**

setting DSCP or IP precedence values **397**

traffic classifications **55**

trust states **738**

port trust states **329**

queues, enabling the expedite **375**

statistics

in-profile and out-of-profile packets **559**

packets enqueued or dropped **559**

sent and received CoS values **559**

sent and received DSCP values **559**

trusted boundary for IP phones **329**

quality of service

See QoS

querytime, MVR **336**

queue-set command **377**

R

radius-server dead-criteria command **378**

radius-server host command **380**

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command **382**

re-authenticating IEEE 802.1x-enabled ports **128**

re-authentication

periodic **129**

time between attempts **132**

receiver ports, MVR **339**

receiving flow-control packets **159**

recovery mechanism

causes **154**

display **62, 421, 460, 464**

timer interval **154**

redundancy for cluster switches **88**

remote-span command **384**

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command **16**

renew ip dhcp snooping database command **386**

reset (boot loader) command **17**

reset command **757**

resource templates, displaying **598**

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command **18**

rmon collection stats command **390**

root guard, for spanning tree **656**

RSPAN

configuring **331**

displaying **569**

filter RSPAN traffic **331**

remote-span command **384**

sessions

displaying **569**

S

sdm prefer command **391**

SDM templates

displaying **598**

dual IPv4 and IPv6 **391**

secure ports, limitations **716**

sending flow-control packets **159**

- service password-recovery command **393**
 service-policy command **395**
 set (boot loader) command **19**
 set command **397**
 setup command **399**
 setup express command **402**
 shell trigger command **404**
 show access-lists command **406**
 show archive status command **409**
 show arp access-list command **410**
 show authentication command **411**
 show auto qos command **415**
 show boot command **419**
 show cable-diagnostics tdr command **421**
 show changes command **757**
 show cisp command **423**
 show class-map command **424**
 show cluster candidates command **427**
 show cluster command **425**
 show cluster members command **429**
 show controllers cpu-interface command **431**
 show controllers ethernet-controller command **433**
 show controllers power inline command **440**
 show controllers team command **442**
 show controller utilization command **444**
 show current command **757**
 show dot1x command **446**
 show dtp **450**
 show eap command **452**
 show energywise command **455**
 show env command **459**
 show errdisable detect command **460**
 show errdisable flap-values command **462**
 show errdisable recovery command **464**
 show etherchannel command **466**
 show fallback profile command **469**
 show flowcontrol command **471**
 show interfaces command **473**
 show interfaces counters command **482**
 show inventory command **485**
 show ip arp inspection command **486**
 show ip dhcp snooping binding command **491**
 show ip dhcp snooping command **490**
 show ip dhcp snooping database command **494, 496**
 show ip igmp profile command **499**
 show ip igmp snooping address command **515**
 show ip igmp snooping command **500, 513**
 show ip igmp snooping groups command **503**
 show ip igmp snooping mrouter command **505, 517**
 show ip igmp snooping querier command **507, 519**
 show ip source binding command **509**
 show ipv6 route updated **521**
 show ip verify source command **511**
 show lacp command **523**
 show link state group command **530**
 show location **527**
 show mac access-group command **532**
 show mac address-table address command **536**
 show mac address-table aging time command **538**
 show mac address-table command **534**
 show mac address-table count command **540**
 show mac address-table dynamic command **542**
 show mac address-table interface command **544**
 show mac address-table learning command **546**
 show mac address-table move update command **547**
 show mac address-table notification command **70, 549, 25**
 show mac address-table static command **551**
 show mac address-table vlan command **553**
 show mls qos aggregate-policer command **556**
 show mls qos command **555**
 show mls qos input-queue command **557**
 show mls qos interface command **559**
 show mls qos maps command **563**
 show mls qos queue-set command **566**
 show mls qos vlan command **568**
 show monitor command **569**
 show mvr command **572**
 show mvr interface command **574**

- show mvr members command **576**
 show network-policy profile command **578**
 show nmfp command **580**
 show pagp command **583**
 show parser macro command **585**
 show platform acl command **2**
 show platform backup interface command **3**
 show platform etherchannel command **4**
 show platform forward command **5**
 show platform igmp snooping command **7**
 show platform layer4op command **9**
 show platform mac-address-table command **10**
 show platform messaging command **11**
 show platform monitor command **12**
 show platform mvr table command **13**
 show platform pm command **14**
 show platform port-asic command **15**
 show platform port-security command **20**
 show platform qos command **21**
 show platform resource-manager command **22**
 show platform snmp counters command **24**
 show platform spanning-tree command **25**
 show platform stack manager command **27**
 show platform stp-instance command **26**
 show platform team command **28**
 show platform vlan command **30**
 show policy-map command **588**
 show port security command **590**
 show power inline command **593**
 show proposed command **757**
 show sdm prefer command **598**
 show setup express command **600**
 show shell command **601**
 show spanning-tree command **604**
 show storm-control command **610**
 show system mtu command **613**
 show trust command **738**
 show udld command **615**
 show version command **618**
 show vlan command **620**
 show vlan command, fields **621**
 show vmps command **623**
 show vtp command **626**
 shutdown command **631**
 shutdown vlan command **632**
 small violation-rate command **633**
 Smartports macros
 See macros
 SNMP host, specifying **639**
 SNMP informs, enabling the sending of **635**
 snmp-server enable traps command **635**
 snmp-server host command **639**
 snmp trap mac-notification command **643**
 SNMP traps
 enabling MAC address notification trap **643**
 enabling the MAC address notification feature **268**
 enabling the sending of **635**
 SoftPhone
 See Cisco SoftPhone
 software images
 deleting **94**
 downloading **6**
 upgrading **6**
 uploading **12**
 software version, displaying **618**
 source ports, MVR **339**
 SPAN
 configuring **331**
 debug messages, display **26**
 displaying **569**
 filter SPAN traffic **331**
 sessions
 add interfaces to **331**
 displaying **569**
 start new **331**
 spanning-tree backbonefast command **645**
 spanning-tree bpdufilter command **646**
 spanning-tree bpduguard command **648**

- spanning-tree cost command **650**
- spanning-tree etherchannel command **652**
- spanning-tree extend system-id command **654**
- spanning-tree guard command **656**
- spanning-tree link-type command **658**
- spanning-tree loopguard default command **660**
- spanning-tree mode command **662**
- spanning-tree mst configuration command **664**
- spanning-tree mst cost command **666**
- spanning-tree mst forward-time command **668**
- spanning-tree mst hello-time command **669**
- spanning-tree mst max-age command **670**
- spanning-tree mst max-hops command **671**
- spanning-tree mst port-priority command **673**
- spanning-tree mst pre-standard command **675**
- spanning-tree mst priority command **676**
- spanning-tree mst root command **677**
- spanning-tree portfast (global configuration) command **681**
- spanning-tree portfast (interface configuration) command **683**
- spanning-tree port-priority command **679**
- Spanning Tree Protocol**
- See STP
- spanning-tree transmit hold-count command **685**
- spanning-tree uplinkfast command **686**
- spanning-tree vlan command **688**
- speed command **691**
- srr-queue bandwidth limit command **693**
- srr-queue bandwidth share command **697**
- SSH, configuring version **227**
- static-access ports, configuring **702**
- statistics, Ethernet group **390**
- sticky learning, enabling **714**
- storm-control command **699**
- STP**
- BackboneFast **645**
 - counters, clearing **75**
 - debug messages, display
 - BackboneFast events **74**
 - MSTP **77**
 - optimized BPDUs handling **76**
 - spanning-tree activity **72**
 - switch shim **79**
 - transmitted and received BPDUs **75**
 - UplinkFast **81**
 - detection of indirect link failures **645**
 - EtherChannel misconfiguration **652**
 - extended system ID **654**
 - path cost **650**
 - protocol modes **662**
 - root port
 - accelerating choice of new **686**
 - loop guard **656**
 - preventing from becoming designated **656**
 - restricting which can be root **656**
 - root guard **656**
 - UplinkFast **686**
 - root switch
 - affects of extended system ID **654, 689**
 - hello-time **688**
 - interval between BPDU messages **688**
 - interval between hello BPDU messages **688**
 - max-age **688**
 - port priority for selection of **679**
 - primary or secondary **688**
 - switch priority **688**
 - state changes
 - blocking to forwarding state **683**
 - enabling BPDU filtering **646, 681**
 - enabling BPDU guard **648, 681**
 - enabling Port Fast **681, 683**
 - enabling timer to recover from error state **154**
 - forward-delay time **688**

STP (continued)

- length of listening and learning states **688**
- shutting down Port Fast-enabled ports **681**
- state information display **604**
- VLAN options **676, 688**

Switched Port Analyzer

See SPAN

switchport access command **702**

switchport backup interface command **704**

switchport block command **708**

switchport host command **709**

switchport mode command **710**

switchport nonegotiate command **712**

switchport port-security aging command **719**

switchport port-security command **714**

switchport priority extend command **721**

switchport protected command **723**

switchports, displaying **473**

switchport trunk command **725**

switchport voice vlan command **728**

system message logging **256**

system message logging, save message to flash **257**

system mtu command **730**

system resource templates **391**

T

tar files, creating, listing, and extracting **9**

TDR, running **732**

Telnet, using to communicate to cluster switches **382**

temperature information, displaying **459**

templates, SDM **392**

templates, system resources **391**

test cable-diagnostics tdr command **732**

test relay **733**

traceroute mac command **733**

traceroute mac ip command **736**

trunking, VLAN mode **710**

trunk mode **710**

trunk ports **710**

trunks, to non-DTP device **711**

trusted boundary for QoS **329**

trusted port states for QoS **329**

type (boot loader) command **22**

U

UDLD

aggressive mode **740, 742**

debug messages, display **90**

enable globally **740**

enable per interface **742**

error recovery timer **154**

message timer **740**

normal mode **740, 742**

reset a shutdown interface **744**

status **615**

udld command **740**

udld port command **742**

udld reset command **744**

unicast storm control **699**

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing **708**

unknown unicast traffic, preventing **708**

unset (boot loader) command **23**

upgrading

software images

downloading **6**

monitoring status of **409**

UplinkFast, for STP **686**

user EXEC mode **2, 3**

V

version (boot loader) command **25**
 vlan (global configuration) command **745**
 vlan (VLAN configuration) command **750**
 VLAN configuration
 rules **748, 752**
 saving **745, 754**
 VLAN configuration mode
 commands
 VLAN **750**
 VTP **768**
 description **5**
 entering **756**
 summary **2**
 vlan database command **756**
 VLAN ID range **745, 750**
 VLAN Query Protocol
 See VQP
 VLANs
 adding **745**
 configuring **745, 750**
 debug messages, display
 ISL **86**
 VLAN IOS file system error tests **84**
 VLAN manager activity **82**
 VTP **88**
 displaying configurations **620**
 enabling guest VLAN supplicant **104, 115, 158**
 extended-range **745**
 MAC addresses
 displaying **553**
 number of **540**
 media types **747, 752**
 normal-range **745, 750**
 restarting **632**
 saving the configuration **745**
 shutting down **632**
 SNMP traps for VTP **637, 640**

VLANs (continued)
 suspending **632**
 variables **750**
 VLAN Trunking Protocol
 See VTP
 VMPS
 configuring servers **762**
 displaying **623**
 error recovery timer **154**
 reconfirming dynamic VLAN assignments **759**
 vmps reconfirm (global configuration) command **760**
 vmps reconfirm (privileged EXEC) command **759**
 vmps retry command **761**
 vmps server command **762**
 voice VLAN
 configuring **728**
 setting port priority **721**
 VQP
 and dynamic-access ports **703**
 clearing client statistics **77**
 displaying information **623**
 per-server retry count **761**
 reconfirmation interval **760**
 reconfirming dynamic VLAN assignments **759**
 VTP
 changing characteristics **764**
 clearing pruning counters **78**
 configuring
 domain name **764, 768**
 file name **764**
 mode **764, 768**
 password **764, 768**
 counters display fields **627**
 displaying information **626**
 enabling
 pruning **764, 768**
 Version 2 **764, 768**
 mode **764, 768**
 pruning **764, 768**

VTP (continued)

 saving the configuration **745, 754**

 statistics **626**

 status **626**

 status display fields **629**

 vtp (global configuration) command **764**

 vtp (VLAN configuration) command **768**