



INDEX

A

aaa accounting dot1x command [1](#)
aaa authentication dot1x command [3](#)
aaa authorization network command [5, 18, 24, 26, 28, 30, 32, 111, 253, 427, 7, 35](#)
AAA methods [3](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [160](#)
 MAC, displaying [529](#)
access mode [708](#)
access ports [708](#)
ACEs [102, 362](#)
ACLs
 deny [100](#)
 displaying [410](#)
 for non-IP protocols [257](#)
 IP [160](#)
 on Layer 2 interfaces [160](#)
 permit [360](#)
address aliasing [341](#)
aggregate-port learner [354](#)
allowed VLANs [723](#)
archive download-sw command [6](#)
archive tar command [9](#)
archive upload-sw command [12](#)
arp access-list command [14](#)
authentication command bounce-port ignore [16](#)
authentication command disable-port ignore [17](#)

authentication control-direction command [18](#)
authentication event command [20](#)
authentication failed VLAN
 See dot1x auth-fail vlan
authentication fallback command [24](#)
authentication host-mode command [26](#)
authentication mac-move permit command [28](#)
authentication open command [30](#)
authentication order command [32](#)
authentication periodic command [34](#)
authentication port-control command [36](#)
authentication priority command [38](#)
authentication timer command [40](#)
authentication violation command [42](#)
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
auth open command [30](#)
auth order command [32](#)
authorization state of controlled port [128](#)
auth timer command [40](#)
autonegotiation of duplex mode [140](#)
auto qos voip command [44](#)
Auto Smartports macros
 LLDP [282](#)

B

BackboneFast, for STP [642](#)
backup interfaces
 configuring [701](#)
 displaying [474](#)

- boot (boot loader) command [2](#)
- boot config-file command [48](#)
- boot enable-break command [49](#)
- boot helper command [50](#)
- boot helper-config file command [51](#)
- booting
 - Cisco IOS image [54](#)
 - displaying environment variables [423](#)
 - interrupting [49](#)
 - manually [52](#)
- boot loader
 - accessing [1](#)
 - booting
 - Cisco IOS image [2](#)
 - helper image [50](#)
 - directories
 - creating [14](#)
 - displaying a list of [7](#)
 - removing [18](#)
 - displaying
 - available commands [12](#)
 - memory heap utilization [13](#)
 - version [25](#)
 - environment variables
 - described [19](#)
 - displaying settings [19](#)
 - location of [20](#)
 - setting [19](#)
 - unsetting [23](#)
 - files
 - copying [5](#)
 - deleting [6](#)
 - displaying a list of [7](#)
 - displaying the contents of [4, 15, 22](#)
 - renaming [16](#)

- bootloader (continued)
 - file system
 - formatting [10](#)
 - initializing flash [9](#)
 - running a consistency check [11](#)
 - prompt [1](#)
 - resetting the system [17](#)
- boot manual command [52](#)
- boot private-config-file command [53](#)
- boot system command [54](#)
- BPDU filtering, for spanning tree [643, 678](#)
- BPDU guard, for spanning tree [645, 678](#)
- broadcast storm control [696](#)

C

- candidate switches
 - See clusters
- cat (boot loader) command [4](#)
- channel-group command [55](#)
- channel-protocol command [58](#)
- Cisco SoftPhone
 - auto-QoS configuration [44](#)
 - trusting packets sent from [333](#)
- CISP
 - See Client Information Signalling Protocol
- cisp
 - debug platform cisp command [35](#)
- cisp enable command [59](#)
- class command [60](#)
- class-map command [62](#)
- class maps
 - creating [62](#)
 - defining the match criteria [294](#)
 - displaying [428](#)
- class of service
 - See CoS
- clear dot1x command [64](#)
- clear eap sessions command [65](#)

- clear errdisable interface [66](#)
- clear ip arp inspection log command [67](#)
- clear ip arp inspection statistics command [68](#)
- clear ip dhcp snooping database command [69](#)
- clear lacp command [71](#)
- clear mac address-table command [72, 74](#)
- clear nmsp statistics command [75](#)
- clear pagp command [76](#)
- clear port-security command [77](#)
- clear spanning-tree counters command [79](#)
- clear spanning-tree detected-protocols command [80](#)
- clear vmps statistics command [81](#)
- clear vtp counters command [82](#)
- Client Information Signalling Protocol [59, 111, 427, 7, 35](#)
- cluster commander-address command [83](#)
- cluster discovery hop-count command [85](#)
- cluster enable command [86](#)
- cluster holdtime command [87](#)
- cluster member command [88](#)
- cluster outside-interface command [90](#)
- cluster run command [91](#)
- clusters
 - adding candidates [88](#)
 - binding to HSRP group [92](#)
 - building manually [88](#)
 - communicating with
 - devices outside the cluster [90](#)
 - members by using Telnet [386](#)
 - debug messages, display [8](#)
 - displaying
 - candidate switches [431](#)
 - debug messages [8](#)
 - member switches [433](#)
 - status [429](#)
 - hop-count limit for extended discovery [85](#)
 - HSRP standby groups [92](#)
 - redundancy [92](#)
 - SNMP trap [632](#)
- cluster standby-group command [92](#)

- cluster timer command [94](#)
- command modes defined [1](#)
- command switch
 - See clusters
- configuration files
 - password recovery disable considerations [1](#)
 - specifying the name [48, 53](#)
- configuring multiple interfaces [156](#)
- config-vlan mode
 - commands [744](#)
- copy (boot loader) command [5](#)
- CoS
 - assigning default value to incoming packets [303](#)
 - overriding the incoming value [303](#)
- CoS-to-DSCP map [307](#)
- CPU ASIC statistics, displaying [435](#)
- crashinfo files [149](#)
- critical VLAN [21](#)

D

- debug authentication [2](#)
- debug auto qos command [4](#)
- debug backup command [6](#)
- debug cisp command [7](#)
- debug cluster command [8](#)
- debug dot1x command [10](#)
- debug dtp command [12](#)
- debug eap command [13](#)
- debug etherchannel command [14](#)
- debug ilpower command [15](#)
- debug interface command [16](#)
- debug ip dhcp snooping command [17](#)
- debug ip igmp filter command [19](#)
- debug ip igmp max-groups command [20](#)
- debug ip igmp snooping command [21](#)
- debug ip verify source packet command [18](#)
- debug lacp command [22](#)
- debug lldp packets command [23](#)

- debug mac-notification command 24
- debug macro command 25
- debug matm command 26
- debug matm move update command 27
- debug monitor command 28
- debug mvrdbg command 29
- debug nmosp command 30
- debug nvram command 31
- debug pagp command 32
- debug platform acl command 33
- debug platform backup interface command 34
- debug platform cisp command 35
- debug platform configuration command 41
- debug platform cpu-queues command 36
- debug platform dot1x command 38
- debug platform etherchannel command 39
- debug platform forw-tcam command 40
- debug platform ip arp inspection command 42
- debug platform ip dhcp command 43
- debug platform ip igmp snooping command 44
- debug platform ip source-guard command 46
- debug platform led command 47
- debug platform matm command 48
- debug platform messaging application command 49
- debug platform phy command 50
- debug platform pm command 52
- debug platform port-asic command 54
- debug platform port-security command 55
- debug platform qos-acl-tcam command 56
- debug platform resource-manager command 57
- debug platform snmp command 58
- debug platform span command 59
- debug platform supervisor-asic command 60
- debug platform sw-bridge command 61
- debug platform tcam command 62
- debug platform udld command 64
- debug platform vlan command 65
- debug pm command 66
- debug port-security command 68
- debug qos-manager command 69
- debug spanning-tree backbonefast command 72
- debug spanning-tree bpdu command 73
- debug spanning-tree bpdu-opt command 74
- debug spanning-tree command 70
- debug spanning-tree mstp command 75
- debug spanning-tree switch command 77
- debug spanning-tree uplinkfast command 79
- debug sw-vlan command 80
- debug sw-vlan ifs command 82
- debug sw-vlan notification command 83
- debug sw-vlan vtp command 84
- debug udld command 86
- debug vqpc command 88
- define interface-range command 95
- delete (boot loader) command 6
- delete command 97
- deny (ARP access-list configuration) command 98
- deny command 100
- detect mechanism, causes 141
- DHCP snooping
 - accepting untrusted packets from edge switch 188
 - enabling
 - on a VLAN 194
 - option 82 186, 188
 - trust on an interface 192
 - error recovery timer 147
 - rate limiting 190
- DHCP snooping binding database
 - binding file, configuring 184
 - bindings
 - adding 182
 - deleting 182
 - displaying 490
 - clearing database agent statistics 69
 - database agent, configuring 184

DHCP snooping binding database (continued)

displaying

binding entries [490](#)database agent status [492, 494](#)renewing [390](#)dir (boot loader) command [7](#)directories, deleting [97](#)domain name, VTP [755](#)dot1x auth-fail max-attempts [105](#)dot1x auth-fail vlan [107](#)dot1x command [103](#)dot1x control-direction command [109](#)dot1x credentials (global configuration) command [111](#)dot1x critical global configuration command [112](#)dot1x critical interface configuration command [114](#)dot1x default command [116](#)dot1x fallback command [117](#)dot1x guest-vlan command [118](#)dot1x host-mode command [120](#)dot1x initialize command [122](#)dot1x mac-auth-bypass command [123](#)dot1x max-reauth-req command [125](#)dot1x max-req command [126](#)dot1x pae command [127](#)dot1x port-control command [128](#)dot1x re-authenticate command [130](#)dot1x reauthentication command [131](#)dot1x supplicant force-multicast command [132](#)dot1x test eapol-capable command [133](#)dot1x test timeout command [134](#)dot1x timeout command [135](#)dot1x violation-mode command [138](#)DSCP-to-CoS map [307](#)DSCP-to-DSCP-mutation map [307](#)DTP [709](#)

DTP flap

error detection for [141](#)error recovery timer [147](#)DTP negotiation [710](#)

dual-purpose uplink ports

displaying configurable options [476](#)displaying the active media [480](#)selecting the type [297](#)duplex command [139](#)

dynamic-access ports

configuring [699](#)restrictions [700](#)

dynamic ARP inspection

ARP ACLs

apply to a VLAN [168](#)define [14](#)deny packets [98](#)display [414](#)permit packets [358](#)

clear

log buffer [67](#)statistics [68](#)

display

ARP ACLs [414](#)configuration and operating state [485](#)log buffer [485](#)statistics [485](#)trust state and rate limit [485](#)enable per VLAN [178](#)

log buffer

clear [67](#)configure [172](#)display [485](#)rate-limit incoming ARP packets [170](#)

statistics

clear [68](#)display [485](#)trusted interface state [174](#)type of packet logged [179](#)validation checks [176](#)dynamic auto VLAN membership mode [708](#)dynamic desirable VLAN membership mode [708](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [126](#)response time before retransmitting [135](#)environment variables, displaying [423](#)errdisable detect cause command [141](#)errdisable detect cause small-frame comand [144](#)errdisable recovery cause small-frame [146](#)errdisable recovery command [147](#)error conditions, displaying [462](#)error disable detection [141](#)error-disabled interfaces, displaying [474](#)

EtherChannel

assigning Ethernet interface to channel group [55](#)creating port-channel logical interface [154](#)debug EtherChannel/PAgP, display [14](#)debug platform-specific events, display [39](#)displaying [466](#)interface information, displaying [474](#)

LACP

clearing channel-group information [71](#)debug messages, display [22](#)displaying [520](#)modes [55](#)port priority for hot-standby ports [238](#)restricting a protocol [58](#)system priority [240](#)load-distribution methods [369](#)

EtherChannel (continued)

PAgP

aggregate-port learner [354](#)clearing channel-group information [76](#)debug messages, display [32](#)displaying [581](#)error detection for [141](#)error recovery timer [147](#)learn method [354](#)modes [55](#)physical-port learner [354](#)priority of interface for transmitted traffic [356](#)Ethernet controller, internal register display [437](#)Ethernet statistics, collecting [394](#)exception crashinfo command [149](#)extended discovery of candidate switches [85](#)

extended-range VLANs

and allowed VLAN list [723](#)and pruning-eligible list [723](#)configuring [743](#)extended system ID for STP [651](#)

Ffallback profile command [150](#)fallback profiles, displaying [470](#)fan information, displaying [459](#)file name, VTP [755](#)files, deleting [97](#)flash_init (boot loader) command [9](#)flexible authentication ordering [32](#)

Flex Links

configuring [701](#)configuring preferred VLAN [703](#)displaying [474](#)flowcontrol command [152](#)format (boot loader) command [10](#)

forwarding results, display [5](#)
 frame forwarding information, displaying [5](#)
 fsck (boot loader) command [11](#)

G

global configuration mode [2, 3](#)

H

hardware ACL statistics [410](#)
 help (boot loader) command [12](#)
 hierarchical policy maps [368](#)
 hop-count limit for clusters [85](#)
 host connection, port configuration [707](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [92](#)
 standby group [92](#)

I

IEEE 802.1x
 and switchport modes [709](#)
 violation error recovery [147](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [106, 117, 151](#)
 IGMP filters
 applying [197](#)
 debug messages, display [19](#)
 IGMP groups, setting maximum [199](#)
 IGMP maximum groups, debugging [20](#)
 IGMP profiles
 creating [201](#)
 displaying [497](#)

IGMP snooping
 adding ports as a static member of a group [217](#)
 displaying [498, 503, 505](#)
 enabling [203](#)
 enabling the configurable-leave timer [205](#)
 enabling the Immediate-Leave feature [214](#)
 flooding query count [211](#)
 interface topology change notification behavior [213](#)
 multicast table [501](#)
 querier [207](#)
 query solicitation [211](#)
 report suppression [209](#)
 switch topology change notification behavior [211](#)
 images
 See software images
 Immediate-Leave feature, MVR [343](#)
 immediate-leave processing [214](#)
 Immediate-Leave processing, IPv6 [236](#)
 interface configuration mode [2, 4](#)
 interface port-channel command [154](#)
 interface range command [156](#)
 interface-range macros [95](#)
 interfaces
 assigning Ethernet interface to channel group [55](#)
 configuring [139](#)
 configuring multiple [156](#)
 creating port-channel logical [154](#)
 debug messages, display [16](#)
 disabling [628](#)
 displaying the MAC address table [541](#)
 restarting [628](#)
 interface speed, configuring [688](#)
 interface vlan command [158](#)
 internal registers, displaying [437, 446](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [141](#)
 error recovery timer [147](#)

ip access-group command [160](#)
 ip address command [162](#)
 IP addresses, setting [162](#)
 ip admission command [164](#)
 ip admission name proxy http command [166](#)
 ip arp inspection filter vlan command [168](#)
 ip arp inspection limit command [170](#)
 ip arp inspection log-buffer command [172](#)
 ip arp inspection trust command [174](#)
 ip arp inspection validate command [176](#)
 ip arp inspection vlan command [178](#)
 ip arp inspection vlan logging command [179](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [182](#)
 ip dhcp snooping command [181](#)
 ip dhcp snooping database command [184](#)
 ip dhcp snooping information option allow-untrusted command [188](#)
 ip dhcp snooping information option command [186](#)
 ip dhcp snooping limit rate command [190](#)
 ip dhcp snooping trust command [192](#)
 ip dhcp snooping verify command [193](#)
 ip dhcp snooping vlan command [194](#)
 ip dhcp snooping vlan information option format-type circuit-id string command [195](#)
 ip igmp filter command [197](#)
 ip igmp max-groups command [199](#)
 ip igmp profile command [201](#)
 ip igmp snooping command [203](#)
 ip igmp snooping last-member-query-interval command [205](#)
 ip igmp snooping querier command [207](#)
 ip igmp snooping report-suppression command [209](#)
 ip igmp snooping tcn command [211](#)
 ip igmp snooping tcn flood command [213](#)
 ip igmp snooping vlan immediate-leave command [214](#)
 ip igmp snooping vlan mrouter command [215](#)
 ip igmp snooping vlan static command [217](#)
 IP multicast addresses [340](#)

IP phones
 auto-QoS configuration [44](#)
 trusting packets sent from [333](#)
 IP-precedence-to-DSCP map [307](#)
 ip source binding command [219](#)
 IP source guard
 disabling [223](#)
 displaying
 binding entries [507](#)
 configuration [508](#)
 dynamic binding entries only [490](#)
 enabling [223](#)
 static IP source bindings [219](#)
 ip ssh command [221](#)
 ipv6 mld snooping command [224](#)
 ipv6 mld snooping last-listener-query count command [226](#)
 ipv6 mld snooping last-listener-query-interval command [228](#)
 ipv6 mld snooping listener-message-suppression command [230](#)
 ipv6 mld snooping robustness-variable command [232](#)
 ipv6 mld snooping tcn command [234](#)
 ipv6 mld snooping vlan command [236](#)
 IPv6 SDM template [395](#)
 ip verify source command [223](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [238](#)
 lacp system-priority command [240](#)

Layer 2 traceroute

IP addresses [734](#)MAC addresses [731](#)line configuration mode [2, 4](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [141](#)error recovery timer [147](#)link state group command [246](#)link state track command [248](#)load-distribution methods for EtherChannel [369](#)location (global configuration) command [242](#)location (interface configuration) command [244](#)logging event command [249](#)logging event power-inline-status command [250](#)logging file command [251](#)logical interface [154](#)

loopback error

detection for [141](#)recovery timer [147](#)loop guard, for spanning tree [653, 657](#)

Mmab request format attribute 32 command [253](#)mac access-group command [255](#)MAC access-groups, displaying [529](#)MAC access list configuration mode [257](#)mac access-list extended command [257](#)MAC access lists [100](#)

MAC addresses

disabling MAC address learning per VLAN [260](#)

displaying

aging time [535](#)all [533](#)dynamic [539](#)MAC address-table move updates [544](#)notification settings [543, 546](#)

MAC addresses (continued)

displaying (continued)

number of addresses in a VLAN [537](#)per interface [541](#)per VLAN [550](#)static [548](#)static and dynamic entries [531](#)

dynamic

aging time [259](#)deleting [72](#)displaying [539](#)enabling MAC address notification [264](#)enabling MAC address-table move update [262](#)

static

adding and removing [266](#)displaying [548](#)dropping on an interface [267](#)tables [533](#)MAC address notification, debugging [24](#)mac address-table aging-time [255](#)mac address-table aging-time command [259](#)mac address-table learning command [260](#)mac address-table move update command [262](#)mac address-table notification command [264](#)mac address-table static command [266](#)mac address-table static drop command [267](#)macro apply command [269](#)macro auto device command [272](#)macro auto execute command [274](#)macro auto file command [280](#)macro auto global processing command [282](#)macro auto mac-address-group command [284](#)macro auto sticky command [286](#)macro description command [287](#)macro global command [288](#)macro global description command [291](#)macro name command [292](#)

macros

- adding a description [287](#)
- adding a global description [291](#)
- applying [288](#)
- creating [292](#)
- displaying [583](#)
- interface range [95, 156](#)
- specifying parameter values [288](#)
- tracing [288](#)

maps

QoS

- defining [307](#)
- displaying [562](#)

match (class-map configuration) command [294](#)

maximum transmission unit

See MTU

mdix auto command [296](#)

media-type command [297](#)

member switches

See clusters

memory (boot loader) command [13](#)

mkdir (boot loader) command [14](#)

MLD snooping

- configuring [230, 232](#)
- configuring queries [226, 228](#)
- configuring topology change notification [234](#)
- displaying [510, 512, 514, 516](#)
- enabling [224](#)

MLD snooping on a VLAN, enabling [236](#)

mls qos aggregate-policer command [301](#)

mls qos command [299](#)

mls qos cos command [303](#)

mls qos dscp-mutation command [305](#)

mls qos map command [307](#)

mls qos queue-set output buffers command [311](#)

mls qos queue-set output threshold command [313](#)

mls qos rewrite ip dscp command [315](#)

mls qos srr-queue input bandwidth command [317](#)

mls qos srr-queue input buffers command [319](#)

mls qos srr-queue input cos-map command [321](#)

mls qos srr-queue input dscp-map command [323](#)

mls qos srr-queue input priority-queue command [325](#)

mls qos srr-queue input threshold command [327](#)

mls qos srr-queue output cos-map command [329](#)

mls qos srr-queue output dscp-map command [331](#)

mls qos trust command [333](#)

mode, MVR [340](#)

Mode button, and password recovery [397](#)

modes, commands [1](#)

monitor session command [335](#)

more (boot loader) command [15](#)

MSTP

displaying [603](#)

interoperability [80](#)

link type [655](#)

MST region

- aborting changes [661](#)
- applying changes [661](#)
- configuration name [661](#)
- configuration revision number [661](#)
- current or pending display [661](#)
- displaying [603](#)
- MST configuration mode [661](#)
- VLANs-to-instance mapping [661](#)

path cost [663](#)

protocol mode [659](#)

restart protocol migration process [80](#)

root port

- loop guard [653](#)
- preventing from becoming designated [653](#)
- restricting which can be root [653](#)
- root guard [653](#)

MSTP (continued)

root switch

- affects of extended system ID [651](#)
- hello-time [666, 674](#)
- interval between BPDU messages [667](#)
- interval between hello BPDU messages [666, 674](#)
- max-age [667](#)
- maximum hop count before discarding BPDU [668](#)
- port priority for selection of [670](#)
- primary or secondary [674](#)
- switch priority [673](#)

state changes

- blocking to forwarding state [680](#)
- enabling BPDU filtering [643, 678](#)
- enabling BPDU guard [645, 678](#)
- enabling Port Fast [678, 680](#)
- forward-delay time [665](#)
- length of listening and learning states [665](#)
- rapid transition to forwarding [655](#)
- shutting down Port Fast-enabled ports [678](#)

state information display [602](#)

MTU

- configuring size [728](#)
- displaying global setting [610](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [343](#)multicast groups, MVR [341](#)

Multicast Listener Discovery

See MLD

multicast router learning method [215](#)multicast router ports, configuring [215](#)multicast router ports, IPv6 [236](#)multicast storm control [696](#)multicast VLAN, MVR [341](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [341](#)
- configuring [340](#)
- configuring interfaces [343](#)
- debug messages, display [29](#)
- displaying [570](#)
- displaying interface information [572](#)
- members, displaying [574](#)
- mvr (global configuration) command [340](#)
- mvr (interface configuration) command [343](#)
- mvr vlan group command [344](#)

Nnative VLANs [723](#)Network Admission Control Software Configuration Guide [165, 167](#)network-policy (global configuration) command [347](#)network-policy command [346](#)network-policy profile (network-policy configuration) command [349](#)nmsp attachment suppress command [353](#)nmsp command [351](#)nonegotiate, speed [688](#)nonegotiating DTP messaging [710](#)

non-IP protocols

- denying [100](#)
- forwarding [360](#)

non-IP traffic access lists [257](#)

non-IP traffic forwarding

- denying [100](#)
- permitting [360](#)

normal-range VLANs [743, 748](#)no vlan command [743](#)

O

online diagnostics

global configuration mode

- clearing health monitoring diagnostic test schedule [67](#)
- setting health monitoring diagnostic testing [67](#)
- setting up health monitoring diagnostic test schedule [67](#)

P

PAGP

See EtherChannel

- pagp learn-method command [354](#)
- pagp port-priority command [356](#)
- password, VTP [756](#)
- password-recovery mechanism, enabling and disabling [397](#)
- permit (ARP access-list configuration) command [358](#)
- permit (MAC access-list configuration) command [360](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [354](#)
- PID, displaying [484](#)
- PIM-DVMRP, as multicast router learning method [215](#)
- PoE
 - configuring the power budget [374](#)
 - configuring the power management mode [371](#)
 - displaying controller register values [444](#)
 - displaying power management information [591](#)
 - logging of status [250](#)
 - monitoring power [376](#)
 - policing power consumption [376](#)
- police aggregate command [365](#)
- police command [363](#)
- policed-DSCP map [307](#)
- policy-map command [367](#)

policy maps

- applying to an interface [399, 403](#)
- creating [367](#)
- displaying [586](#)
- hierarchical [368](#)
- policers
 - displaying [555](#)
 - for a single class [363](#)
 - for multiple classes [301, 365](#)
 - policed-DSCP map [307](#)
- traffic classification
 - defining the class [60](#)
 - defining trust states [736](#)
 - setting DSCP or IP precedence values [401](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

- AAA method list [3](#)
- configuring violation modes [138](#)
- debug messages, display [10](#)
- enabling IEEE 802.1x
 - globally [103](#)
 - per interface [128](#)
- guest VLAN [118](#)
- host modes [120](#)
- IEEE 802.1x AAA accounting methods [1](#)
- initialize an interface [122, 134](#)
- MAC authentication bypass [123](#)
- manual control of authorization state [128](#)
- PAE as authenticator [127](#)
- periodic re-authentication
 - enabling [131](#)
 - time between attempts [135](#)
- quiet period between failed authentication exchanges [135](#)
- re-authenticating IEEE 802.1x-enabled ports [130](#)
- resetting configurable IEEE 802.1x parameters [116](#)
- switch-to-authentication server retransmission time [135](#)

port-based authentication (continued)

- switch-to-client frame-retransmission number [125 to 126](#)
- switch-to-client retransmission time [135](#)
- test for IEEE 802.1x readiness [133](#)

port-channel load-balance command [369](#)

Port Fast, for spanning tree [680](#)

port ranges, defining [95](#)

ports, debugging [66](#)

ports, protected [721](#)

port security

- aging [717](#)
- debug messages, display [68](#)
- enabling [712](#)
- violation error recovery [147](#)

port trust states for QoS [333](#)

port types, MVR [343](#)

power information, displaying [459](#)

power inline command [371](#)

power inline consumption command [374](#)

power inline police command [376](#)

Power over Ethernet

- See PoE

priority-queue command [379](#)

privileged EXEC mode [2, 3](#)

product identification information, displaying [484](#)

protected ports, displaying [479](#)

pruning

- VLANs [723](#)
- VTP
 - displaying interface information [474](#)
 - enabling [756](#)

pruning-eligible VLAN list [724](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [44](#)
- debug messages, display [4](#)
- displaying [419](#)

class maps

- creating [62](#)
- defining the match criteria [294](#)
- displaying [428](#)

defining the CoS value for an incoming packet [303](#)

displaying configuration information [419, 554](#)

DSCP transparency [315](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [305](#)
- defining DSCP-to-DSCP-mutation map [307](#)

egress queues

- allocating buffers [311](#)
- defining the CoS output queue threshold map [329](#)
- defining the DSCP output queue threshold map [331](#)
- displaying buffer allocations [558](#)
- displaying CoS output queue threshold map [562](#)
- displaying DSCP output queue threshold map [562](#)
- displaying queueing strategy [558](#)
- displaying queue-set settings [565](#)
- enabling bandwidth shaping and scheduling [692](#)
- enabling bandwidth sharing and scheduling [694](#)
- limiting the maximum output on a port [690](#)
- mapping a port to a queue-set [381](#)
- mapping CoS values to a queue and threshold [329](#)
- mapping DSCP values to a queue and threshold [331](#)
- setting maximum and reserved memory allocations [313](#)
- setting WTD thresholds [313](#)

enabling [299](#)

QoS (continued)

ingress queues

- allocating buffers [319](#)
- assigning SRR scheduling weights [317](#)
- defining the CoS input queue threshold map [321](#)
- defining the DSCP input queue threshold map [323](#)
- displaying buffer allocations [558](#)
- displaying CoS input queue threshold map [562](#)
- displaying DSCP input queue threshold map [562](#)
- displaying queueing strategy [558](#)
- displaying settings for [556](#)
- enabling the priority queue [325](#)
- mapping CoS values to a queue and threshold [321](#)
- mapping DSCP values to a queue and threshold [323](#)
- setting WTD thresholds [327](#)

maps

- defining [307, 321, 323, 329, 331](#)
- displaying [562](#)

policy maps

- applying an aggregate policer [365](#)
- applying to an interface [399, 403](#)
- creating [367](#)
- defining policers [301, 363](#)
- displaying policers [555](#)
- displaying policy maps [586](#)
- hierarchical [368](#)
- policed-DSCP map [307](#)
- setting DSCP or IP precedence values [401](#)
- traffic classifications [60](#)
- trust states [736](#)

port trust states [333](#)queues, enabling the expedite [379](#)

QoS (continued)

statistics

- in-profile and out-of-profile packets [558](#)
- packets enqueued or dropped [558](#)
- sent and received CoS values [558](#)
- sent and received DSCP values [558](#)
- trusted boundary for IP phones [333](#)

quality of service

See QoS

querytime, MVR [340](#)queue-set command [381](#)

Rradius-server dead-criteria command [382](#)radius-server host command [384](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [386](#)re-authenticating IEEE 802.1x-enabled ports [130](#)

re-authentication

- periodic [131](#)
- time between attempts [135](#)

receiver ports, MVR [343](#)receiving flow-control packets [152](#)

recovery mechanism

- causes [147](#)
- display [66, 425, 460, 464](#)
- timer interval [147](#)

redundancy for cluster switches [92](#)remote-span command [388](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [16](#)renew ip dhcp snooping database command [390](#)reset (boot loader) command [17](#)resource templates, displaying [596](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command 18

rmon collection stats command 394

root guard, for spanning tree 653

RSPAN

configuring 335

displaying 568

filter RSPAN traffic 335

remote-span command 388

sessions

displaying 568

S

sdm prefer command 395

SDM templates

displaying 596

dual IPv4 and IPv6 395

secure ports, limitations 714

sending flow-control packets 152

service password-recovery command 397

service-policy command 399

set (boot loader) command 19

set command 401

setup command 403

setup express command 406

shell trigger command 408

show access-lists command 410

show archive status command 413

show arp access-list command 414

show authentication command 415

show auto qos command 419

show boot command 423

show cable-diagnostics tdr command 425

show cisp command 427

show class-map command 428

show cluster candidates command 431

show cluster command 429

show cluster members command 433

show controllers cpu-interface command 435

show controllers ethernet-controller command 437

show controllers power inline command 444

show controllers tcam command 446

show controller utilization command 448

show dot1x command 450

show dtp 454

show eap command 456

show env command 459

show errdisable detect command 460

show errdisable flap-values command 462

show errdisable recovery command 464

show etherchannel command 466

show fallback profile command 470

show flowcontrol command 472

show interfaces command 474

show interfaces counters command 482

show inventory command 484

show ip arp inspection command 485

show ip dhcp snooping binding command 490

show ip dhcp snooping command 489

show ip dhcp snooping database command 492, 494

show ip igmp profile command 497

show ip igmp snooping address command 512

show ip igmp snooping command 498, 510

show ip igmp snooping groups command 501

show ip igmp snooping mrouter command 503, 514

show ip igmp snooping querier command 505, 516

show ip source binding command 507

show ipv6 route updated 518

show ip verify source command 508

show lacp command 520

show link state group command 527

show location 524

show mac access-group command 529

show mac address-table address command 533

show mac address-table aging time command 535

show mac address-table command 531

- show mac address-table count command [537](#)
- show mac address-table dynamic command [539](#)
- show mac address-table interface command [541](#)
- show mac address-table learning command [543](#)
- show mac address-table move update command [544](#)
- show mac address-table notification command [74](#), [546](#), [27](#)
- show mac address-table static command [548](#)
- show mac address-table vlan command [550](#)
- show macro auto command [552](#)
- show mls qos aggregate-policer command [555](#)
- show mls qos command [554](#)
- show mls qos input-queue command [556](#)
- show mls qos interface command [558](#)
- show mls qos maps command [562](#)
- show mls qos queue-set command [565](#)
- show mls qos vlan command [567](#)
- show monitor command [568](#)
- show mvr command [570](#)
- show mvr interface command [572](#)
- show mvr members command [574](#)
- show network-policy profile command [576](#)
- show nmosp command [578](#)
- show pagp command [581](#)
- show parser macro command [583](#)
- show platform acl command [2](#)
- show platform backup interface command [3](#)
- show platform etherchannel command [4](#)
- show platform forward command [5](#)
- show platform igmp snooping command [7](#)
- show platform layer4op command [9](#)
- show platform mac-address-table command [10](#)
- show platform messaging command [11](#)
- show platform monitor command [12](#)
- show platform mvr table command [13](#)
- show platform pm command [14](#)
- show platform port-asic command [15](#)
- show platform port-security command [20](#)
- show platform qos command [21](#)
- show platform resource-manager command [22](#)
- show platform snmp counters command [24](#)
- show platform spanning-tree command [25](#)
- show platform stp-instance command [26](#)
- show platform team command [27](#)
- show platform vlan command [29](#)
- show policy-map command [586](#)
- show port security command [588](#)
- show power inline command [591](#)
- show sdm prefer command [596](#)
- show setup express command [598](#)
- show shell command [599](#)
- show spanning-tree command [602](#)
- show storm-control command [608](#)
- show system mtu command [610](#)
- show trust command [736](#)
- show udd command [612](#)
- show version command [615](#)
- show vlan command [617](#)
- show vlan command, fields [618](#)
- show vmmps command [620](#)
- show vtp command [623](#)
- shutdown command [628](#)
- shutdown vlan command [629](#)
- small violation-rate command [630](#)
- Smartports macros
 - See macros
- SNMP host, specifying [636](#)
- SNMP informs, enabling the sending of [632](#)
- snmp-server enable traps command [632](#)
- snmp-server host command [636](#)
- snmp trap mac-notification change command [640](#)
- SNMP traps
 - enabling MAC address notification trap [640](#)
 - enabling the MAC address notification feature [264](#)
 - enabling the sending of [632](#)
- SoftPhone
 - See Cisco SoftPhone

- software images
 - deleting [97](#)
 - downloading [6](#)
 - upgrading [6](#)
 - uploading [12](#)
- software version, displaying [615](#)
- source ports, MVR [343](#)
- SPAN
 - configuring [335](#)
 - debug messages, display [28](#)
 - displaying [568](#)
 - filter SPAN traffic [335](#)
 - sessions
 - add interfaces to [335](#)
 - displaying [568](#)
 - start new [335](#)
- spanning-tree backbonefast command [642](#)
- spanning-tree bpdupfilter command [643](#)
- spanning-tree bpduguard command [645](#)
- spanning-tree cost command [647](#)
- spanning-tree etherchannel command [649](#)
- spanning-tree extend system-id command [651](#)
- spanning-tree guard command [653](#)
- spanning-tree link-type command [655](#)
- spanning-tree loopguard default command [657](#)
- spanning-tree mode command [659](#)
- spanning-tree mst configuration command [661](#)
- spanning-tree mst cost command [663](#)
- spanning-tree mst forward-time command [665](#)
- spanning-tree mst hello-time command [666](#)
- spanning-tree mst max-age command [667](#)
- spanning-tree mst max-hops command [668](#)
- spanning-tree mst port-priority command [670](#)
- spanning-tree mst pre-standard command [672](#)
- spanning-tree mst priority command [673](#)
- spanning-tree mst root command [674](#)
- spanning-tree portfast (global configuration) command [678](#)
- spanning-tree portfast (interface configuration) command [680](#)
- spanning-tree port-priority command [676](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [682](#)
- spanning-tree uplinkfast command [683](#)
- spanning-tree vlan command [685](#)
- speed command [688](#)
- srr-queue bandwidth limit command [690](#)
- srr-queue bandwidth share command [694](#)
- SSH, configuring version [221](#)
- static-access ports, configuring [699](#)
- statistics, Ethernet group [394](#)
- sticky learning, enabling [712](#)
- storm-control command [696](#)
- STP
 - BackboneFast [642](#)
 - counters, clearing [79](#)
 - debug messages, display
 - BackboneFast events [72](#)
 - MSTP [75](#)
 - optimized BPDUs handling [74](#)
 - spanning-tree activity [70](#)
 - switch shim [77](#)
 - transmitted and received BPDUs [73](#)
 - UplinkFast [79](#)
 - detection of indirect link failures [642](#)
 - EtherChannel misconfiguration [649](#)
 - extended system ID [651](#)
 - path cost [647](#)
 - protocol modes [659](#)
 - root port
 - accelerating choice of new [683](#)
 - loop guard [653](#)
 - preventing from becoming designated [653](#)
 - restricting which can be root [653](#)
 - root guard [653](#)
 - UplinkFast [683](#)

STP (continued)

root switch

- affects of extended system ID [651, 686](#)
- hello-time [685](#)
- interval between BPDU messages [685](#)
- interval between hello BPDU messages [685](#)
- max-age [685](#)
- port priority for selection of [676](#)
- primary or secondary [685](#)
- switch priority [685](#)

state changes

- blocking to forwarding state [680](#)
- enabling BPDU filtering [643, 678](#)
- enabling BPDU guard [645, 678](#)
- enabling Port Fast [678, 680](#)
- enabling timer to recover from error state [147](#)
- forward-delay time [685](#)
- length of listening and learning states [685](#)
- shutting down Port Fast-enabled ports [678](#)

state information display [602](#)VLAN options [673, 685](#)

Switched Port Analyzer

See SPAN

- switchport access command [699](#)
- switchport backup interface command [701](#)
- switchport block command [705](#)
- switchport host command [707](#)
- switchport mode command [708](#)
- switchport nonegotiate command [710](#)
- switchport port-security aging command [717](#)
- switchport port-security command [712](#)
- switchport priority extend command [719](#)
- switchport protected command [721](#)
- switchports, displaying [474](#)
- switchport trunk command [723](#)
- switchport voice vlan command [726](#)
- system message logging [250](#)
- system message logging, save message to flash [251](#)

system mtu command [728](#)system resource templates [395](#)

T

- tar files, creating, listing, and extracting [9](#)
- TDR, running [730](#)
- Telnet, using to communicate to cluster switches [386](#)
- temperature information, displaying [459](#)
- templates, SDM [396](#)
- templates, system resources [395](#)
- test cable-diagnostics tdr command [730](#)
- traceroute mac command [731](#)
- traceroute mac ip command [734](#)
- trunking, VLAN mode [708](#)
- trunk mode [708](#)
- trunk ports [708](#)
- trunks, to non-DTP device [709](#)
- trusted boundary for QoS [333](#)
- trusted port states for QoS [333](#)
- type (boot loader) command [22](#)

U

UDLD

- aggressive mode [738, 740](#)
- debug messages, display [86](#)
- enable globally [738](#)
- enable per interface [740](#)
- error recovery timer [147](#)
- message timer [738](#)
- normal mode [738, 740](#)
- reset a shutdown interface [742](#)
- status [612](#)
- udld command [738](#)
- udld port command [740](#)
- udld reset command [742](#)
- unicast storm control [696](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing 705

unknown unicast traffic, preventing 705

unset (boot loader) command 23

upgrading

software images

downloading 6

monitoring status of 413

UplinkFast, for STP 683

user EXEC mode 2

V

version (boot loader) command 25

vlan (global configuration) command 743

VLAN configuration

rules 746

saving 743

VLAN configuration mode

commands

VLAN 748

VTP 761

description 4

entering 743, 749

summary 2

VLAN ID range 743

VLAN Query Protocol

See VQP

VLANs

adding 743

configuring 743, 748

debug messages, display

ISL 83

VLAN IOS file system error tests 82

VLAN manager activity 80

VTP 84

displaying configurations 617

enabling guest VLAN supplicant 106, 117, 151

VLANs (continued)

extended-range 743

MAC addresses

displaying 550

number of 537

media types 746

normal-range 743, 748

restarting 629

saving the configuration 743

shutting down 629

SNMP traps for VTP 634, 637

suspending 629

VLAN Trunking Protocol

See VTP

VMPS

configuring servers 753

displaying 620

error recovery timer 147

reconfirming dynamic VLAN assignments 750

vmpls reconfirm (global configuration) command 751

vmpls reconfirm (privileged EXEC) command 750

vmpls retry command 752

vmpls server command 753

voice VLAN

configuring 726

setting port priority 719

VQP

and dynamic-access ports 700

clearing client statistics 81

displaying information 620

per-server retry count 752

reconfirmation interval 751

reconfirming dynamic VLAN assignments 750

VTP

changing characteristics 755

clearing pruning counters 82

VTP (continued)

configuring

domain name [755](#)file name [755](#)mode [755](#)password [756](#)counters display fields [624](#)displaying information [623](#)

enabling

pruning [756](#)Version 2 [756](#)enabling per port [760](#)mode [755](#)pruning [756](#)saving the configuration [743](#)statistics [623](#)status [623](#)status display fields [626](#)vtp (global configuration) command [755](#)vtp interface configuration) command [760](#)vtp primary command [762](#)