



INDEX

A

aaa accounting dot1x command [1](#)
aaa authentication dot1x command [3](#)
aaa authorization network command [5, 22, 28, 30, 32, 34, 36, 140, 286, 443, 7, 34](#)
AAA methods [3](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [193](#)
 MAC, displaying [551](#)
access mode [725](#)
access ports [725](#)
ACEs [125, 376](#)
ACLs
 deny [123](#)
 displaying [426](#)
 for non-IP protocols [290](#)
 IP [193](#)
 on Layer 2 interfaces [193](#)
 permit [374](#)
address aliasing [353](#)
aggregate-port learner [368](#)
allowed VLANs [740](#)
archive copy-sw command [6](#)
archive download-sw command [9](#)
archive tar command [13](#)
archive upload-sw command [16](#)
arp access-list command [18](#)
authentication command bounce-port ignore [20](#)

authentication command disable-port ignore [21](#)
authentication control-direction command [22](#)
authentication event command [24](#)
authentication failed VLAN
 See dot1x auth-fail vlan
authentication fallback command [28](#)
authentication host-mode command [30](#)
authentication mac-move permit command [32](#)
authentication open command [34](#)
authentication order command [36](#)
authentication periodic command [38](#)
authentication port-control command [40](#)
authentication priority command [42](#)
authentication timer command [44](#)
authentication violation command [46](#)
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
auth open command [34](#)
auth order command [36](#)
authorization state of controlled port [158](#)
auth timer command [44](#)
autonegotiation of duplex mode [170](#)
auto qos classify command [48](#)
auto qos trust command [51](#)
auto qos video command [54](#)
auto qos voip command [57](#)

B

BackboneFast, for STP [651](#)
backup interfaces

- configuring [718](#)
 - displaying [493](#)
 - boot (boot loader) command [2](#)
 - boot auto-copy-sw command [63](#)
 - boot config-file command [65](#)
 - boot enable-break command [66](#)
 - boot helper command [67](#)
 - boot helper-config file command [68](#)
 - booting
 - Cisco IOS image [71](#)
 - displaying environment variables [439](#)
 - interrupting [66](#)
 - manually [69](#)
 - boot loader
 - accessing [1](#)
 - booting
 - Cisco IOS image [2](#)
 - helper image [67](#)
 - directories
 - creating [14](#)
 - displaying a list of [7](#)
 - removing [18](#)
 - displaying
 - available commands [12](#)
 - memory heap utilization [13](#)
 - version [25](#)
 - environment variables
 - described [19](#)
 - displaying settings [19](#)
 - location of [20](#)
 - setting [19](#)
 - unsetting [23](#)
 - files
 - copying [5](#)
 - deleting [6](#)
 - displaying a list of [7](#)
 - displaying the contents of [4, 15, 22](#)
 - renaming [16](#)
 - file system
 - formatting [10](#)
 - initializing flash [9](#)
 - running a consistency check [11](#)
 - prompt [1](#)
 - resetting the system [17](#)
 - boot manual command [69](#)
 - boot private-config-file command [70](#)
 - boot system command [71](#)
 - BPDU filtering, for spanning tree [652, 686](#)
 - BPDU guard, for spanning tree [654, 686](#)
 - broadcast storm control [707](#)
-
- ## C
- candidate switches
 - See clusters
 - cat (boot loader) command [4](#)
 - channel-group command [73](#)
 - channel-protocol command [76](#)
 - Cisco IP camera
 - auto-QoS configuration [54](#)
 - Cisco SoftPhone
 - auto-QoS configuration [57](#)
 - trusting packets sent from [345](#)
 - Cisco Telepresence System
 - auto-QoS configuration [54](#)
 - CISP
 - See Client Information Signalling Protocol
 - cisp
 - debug platform cisp command [34](#)
 - cisp enable command [77](#)
 - class command [78](#)
 - class-map command [81](#)
 - class maps
 - creating [81](#)
 - defining the match criteria [302](#)
 - displaying [444](#)
 - class of service
 - See CoS

- clear dot1x command [84](#)
 - clear eap sessions command [85](#)
 - clear errdisable interface [86](#)
 - clear ip arp inspection log command [83](#)
 - clear ip arp inspection statistics command [87](#)
 - clear ip dhcp snooping database command [88](#)
 - clear lacp command [90](#)
 - clear logging onboard command [91](#)
 - clear mac address-table command [92, 94](#)
 - clear nmsp statistics command [95](#)
 - clear pagp command [96](#)
 - clear port-security command [97](#)
 - clear psp counter [99](#)
 - clear psp counter command [99](#)
 - clear spanning-tree counters command [100](#)
 - clear spanning-tree detected-protocols command [101](#)
 - clear vmpls statistics command [102](#)
 - clear vtp counters command [103](#)
 - Client Information Signalling Protocol [77, 140, 443, 7, 34](#)
 - cluster commander-address command [104](#)
 - cluster discovery hop-count command [106](#)
 - cluster enable command [107](#)
 - cluster holdtime command [108](#)
 - cluster member command [109](#)
 - cluster outside-interface command [111](#)
 - cluster run command [112](#)
 - clusters
 - adding candidates [109](#)
 - binding to HSRP group [113](#)
 - building manually [109](#)
 - communicating with
 - devices outside the cluster [111](#)
 - members by using Telnet [400](#)
 - debug messages, display [8](#)
 - displaying
 - candidate switches [447](#)
 - debug messages [8](#)
 - member switches [449](#)
 - status [445](#)
 - hop-count limit for extended discovery [106](#)
 - HSRP standby groups [113](#)
 - redundancy [113](#)
 - SNMP trap [641](#)
 - cluster standby-group command [113](#)
 - cluster timer command [115](#)
 - command modes defined [2](#)
 - command switch
 - See clusters
 - configuration files
 - password recovery disable considerations [1](#)
 - specifying the name [65, 70](#)
 - configuring multiple interfaces [190](#)
 - config-vlan mode
 - commands [762](#)
 - entering [761](#)
 - copy (boot loader) command [5](#)
 - copy logging onboard command [116](#)
 - CoS
 - assigning default value to incoming packets [313](#)
 - overriding the incoming value [313](#)
 - CoS-to-DSCP map [317](#)
 - CPU ASIC statistics, displaying [451](#)
 - crashinfo files [181](#)
 - critical VLAN [25](#)
-
- ## D
- debug authentication [2](#)
 - debug auto qos command [4](#)
 - debug backup command [6](#)
 - debug cisp command [7](#)
 - debug cluster command [8](#)
 - debug dot1x command [10](#)
 - debug dtp command [12](#)
 - debug eap command [13](#)
 - debug etherchannel command [14](#)
 - debug ilpower command [15](#)
 - debug interface command [16](#)

- debug ip dhcp snooping command 17
- debug ip igmp filter command 19
- debug ip igmp max-groups command 20
- debug ip igmp snooping command 21
- debug ip verify source packet command 18
- debug lacp command 22
- debug lldp packets command 23
- debug mac-notification command 24
- debug matm command 25
- debug matm move update command 26
- debug monitor command 27
- debug mvrdbg command 28
- debug nmsp command 29
- debug nvram command 30
- debug pagp command 31
- debug platform acl command 32
- debug platform backup interface command 33
- debug platform cisp command 34
- debug platform cli-redirection main command 35
- debug platform configuration command 36, 42
- debug platform cpu-queues command 37
- debug platform dot1x command 39
- debug platform etherchannel command 40
- debug platform forw-tcam command 41
- debug platform ip arp inspection command 43
- debug platform ip dhcp command 44
- debug platform ip igmp snooping command 45
- debug platform ip source-guard command 47
- debug platform led command 48
- debug platform matm command 49
- debug platform messaging application command 50
- debug platform phy command 51
- debug platform pm command 53
- debug platform port-asic command 55
- debug platform port-security command 56
- debug platform qos-acl-tcam command 57
- debug platform resource-manager command 58
- debug platform snmp command 59
- debug platform span command 60
- debug platform stack-manager command 61
- debug platform supervisor-asic command 62
- debug platform sw-bridge command 63
- debug platform team command 64
- debug platform udd command 66
- debug platform vlan command 67
- debug pm command 68
- debug port-security command 70
- debug qos-manager command 71
- debug spanning-tree backbonefast command 74
- debug spanning-tree bpdu command 75
- debug spanning-tree bpdu-opt command 76
- debug spanning-tree command 72
- debug spanning-tree mstp command 77
- debug spanning-tree switch command 79
- debug spanning-tree uplinkfast command 81
- debug sw-vlan command 82
- debug sw-vlan ifs command 84
- debug sw-vlan notification command 85
- debug sw-vlan vtp command 87
- debug udd command 89
- debug vqpc command 91
- define interface-range command 118
- delete (boot loader) command 6
- delete command 120
- deny (ARP access-list configuration) command 121
- deny command 123
- detect mechanism, causes 172
- DHCP snooping
 - accepting untrusted packets from edge switch 224
 - enabling
 - on a VLAN 229
 - option 82 222, 224
 - trust on an interface 227
 - error recovery timer 178
 - rate limiting 226
- DHCP snooping binding database
 - binding file, configuring 220
 - bindings

- adding [218](#)
 - deleting [218](#)
 - clearing database agent statistics [88](#)
 - database agent, configuring [220](#)
 - renewing [408](#)
- dir (boot loader) command [7](#)
- directories, deleting [120](#)
- domain name, VTP [771](#)
- dot1x auth-fail max-attempts [134](#)
- dot1x auth-fail vlan [136](#)
- dot1x command [132](#)
- dot1x control-direction command [138](#)
- dot1x credentials (global configuration) command [140](#)
- dot1x critical global configuration command [141](#)
- dot1x critical interface configuration command [143](#)
- dot1x default command [145](#)
- dot1x fallback command [146](#)
- dot1x guest-vlan command [147](#)
- dot1x host-mode command [149](#)
- dot1x initialize command [151](#)
- dot1x mac-auth-bypass command [152](#)
- dot1x max-reauth-req command [154](#)
- dot1x max-req command [156](#)
- dot1x pae command [157](#)
- dot1x port-control command [158](#)
- dot1x re-authenticate command [160](#)
- dot1x reauthentication command [161](#)
- dot1x supplicant force-multicast command [162](#)
- dot1x test eapol-capable command [163](#)
- dot1x test timeout command [164](#)
- dot1x timeout command [165](#)
- dot1x violation-mode command [168](#)
- DSCP-to-CoS map [317](#)
- DSCP-to-DSCP-mutation map [317](#)
- DTP [726](#)
- DTP flap
 - error detection for [172](#)
 - error recovery timer [178](#)
- DTP negotiation [727](#)
- dual-purpose uplink ports
 - displaying configurable options [496](#)
 - displaying the active media [500](#)
 - selecting the type [305](#)
- duplex command [169](#)
- dynamic-access ports
 - configuring [716](#)
 - restrictions [717](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [201](#)
 - define [18](#)
 - deny packets [121](#)
 - display [430](#)
 - permit packets [372](#)
 - clear
 - log buffer [83](#)
 - statistics [87](#)
 - display
 - ARP ACLs [430](#)
 - configuration and operating state [504](#)
 - log buffer [504](#)
 - statistics [504](#)
 - trust state and rate limit [504](#)
 - enable per VLAN [211](#)
 - log buffer
 - clear [83](#)
 - configure [205](#)
 - display [504](#)
 - rate-limit incoming ARP packets [203](#)
 - statistics
 - clear [87](#)
 - display [504](#)
 - trusted interface state [207](#)
 - type of packet logged [212](#)
 - validation checks [209](#)
- dynamic auto VLAN membership mode [725](#)
- dynamic desirable VLAN membership mode [725](#)
- Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [156](#)

response time before retransmitting [165](#)

environment variables, displaying [439](#)

epm access-control open [171](#)

errdisable detect cause command [172](#)

errdisable detect cause small-frame comand [175](#)

errdisable recovery cause small-frame [177](#)

errdisable recovery command [178](#)

error conditions, displaying [483](#)

error disable detection [172](#)

error-disabled interfaces, displaying [493](#)

EtherChannel

assigning Ethernet interface to channel group [73](#)

creating port-channel logical interface [188](#)

debug EtherChannel/PAGP, display [14](#)

debug platform-specific events, display [40](#)

displaying [486](#)

interface information, displaying [493](#)

LACP

clearing channel-group information [90, 91](#)

debug messages, display [22](#)

displaying [538](#)

modes [73](#)

port priority for hot-standby ports [271](#)

restricting a protocol [76](#)

system priority [273](#)

load-distribution methods [383](#)

PAGP

aggregate-port learner [368](#)

clearing channel-group information [96](#)

debug messages, display [31](#)

displaying [593](#)

error detection for [172](#)

error recovery timer [178](#)

learn method [368](#)

modes [73](#)

physical-port learner [368](#)

priority of interface for transmitted traffic [370](#)

Ethernet controller, internal register display [453](#)

Ethernet controller, stackport information [459](#)

Ethernet statistics, collecting [411](#)

exception crashinfo command [181, 186](#)

extended discovery of candidate switches [106](#)

extended-range VLANs

and allowed VLAN list [740](#)

and pruning-eligible list [740](#)

configuring [761](#)

extended system ID for STP [660](#)

F

fallback profile command [182](#)

fallback profiles, displaying [489](#)

fan information, displaying [480](#)

file name, VTP [771](#)

files, deleting [120](#)

flash_init (boot loader) command [9](#)

flexible authentication ordering [36](#)

Flex Links

configuring [718](#)

configuring preferred VLAN [720](#)

displaying [493](#)

flowcontrol command [184](#)

format (boot loader) command [10](#)

fsck (boot loader) command [11](#)

G

global configuration mode [2, 4](#)

H

hardware ACL statistics [426](#)

help (boot loader) command [12](#)

hierarchical policy maps [382](#)

hop-count limit for clusters [106](#)

host connection, port configuration [724](#)

Hot Standby Router Protocol

- See HSRP

HSRP

- binding HSRP group to cluster [113](#)
- standby group [113](#)

I

IEEE 802.1x

- and switchport modes [726](#)
- violation error recovery [178](#)
- See also port-based authentication

IEEE 802.1X Port Based Authentication

- enabling guest VLAN supplicant [135, 146, 183](#)

IGMP filters

- applying [232](#)
- debug messages, display [19](#)

IGMP groups, setting maximum [233](#)

IGMP maximum groups, debugging [20](#)

IGMP profiles

- creating [235](#)
- displaying [516](#)

IGMP snooping

- adding ports as a static member of a group [251](#)
- displaying [517](#)
- enabling [237](#)
- enabling the configurable-leave timer [239](#)
- enabling the Immediate-Leave feature [248](#)
- flooding query count [245](#)
- interface topology change notification behavior [247](#)
- querier [241](#)
- query solicitation [245](#)

- report suppression [243](#)
- switch topology change notification behavior [245](#)

images

- See software images

Immediate-Leave feature, MVR [355](#)

immediate-leave processing [248](#)

Immediate-Leave processing, IPv6 [269](#)

interface configuration mode [3, 4](#)

interface port-channel command [188](#)

interface range command [190](#)

interface-range macros [118](#)

interfaces

- assigning Ethernet interface to channel group [73](#)
- configuring [169](#)
- configuring multiple [190](#)
- creating port-channel logical [188](#)
- debug messages, display [16](#)
- disabling [637](#)
- displaying the MAC address table [560](#)
- restarting [637](#)

interface speed, configuring [696](#)

interface vlan command [192](#)

internal registers, displaying [453, 459, 465](#)

Internet Group Management Protocol

- See IGMP

invalid GBIC

- error detection for [172](#)
- error recovery timer [178](#)

ip access-group command [193](#)

ip address command [195](#)

IP addresses, setting [195](#)

ip admission command [197](#)

ip admission name proxy http command [199](#)

ip arp inspection filter vlan command [201](#)

ip arp inspection limit command [203](#)

ip arp inspection log-buffer command [205](#)

ip arp inspection trust command [207](#)

ip arp inspection validate command [209](#)

ip arp inspection vlan command [211](#)

ip arp inspection vlan logging command [212](#)
 ip device tracking command [216](#)
 ip device tracking probe command [214](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [218](#)
 ip dhcp snooping command [217](#)
 ip dhcp snooping database command [220](#)
 ip dhcp snooping information option allow-untrusted command [224](#)
 ip dhcp snooping information option command [222](#)
 ip dhcp snooping limit rate command [226](#)
 ip dhcp snooping trust command [227](#)
 ip dhcp snooping verify command [228](#)
 ip dhcp snooping vlan command [229](#)
 ip dhcp snooping vlan information option format-type circuit-id string command [230](#)
 ip igmp filter command [232](#)
 ip igmp max-groups command [233](#)
 ip igmp profile command [235](#)
 ip igmp snooping command [237](#)
 ip igmp snooping last-member-query-interval command [239](#)
 ip igmp snooping querier command [241](#)
 ip igmp snooping report-suppression command [243](#)
 ip igmp snooping tcn command [245](#)
 ip igmp snooping tcn flood command [247](#)
 ip igmp snooping vlan immediate-leave command [248](#)
 ip igmp snooping vlan mrouter command [249](#)
 ip igmp snooping vlan static command [251](#)
 IP multicast addresses [352](#)
 IP phones
 auto-QoS configuration [57](#)
 trusting packets sent from [345](#)
 IP-precedence-to-DSCP map [317](#)
 ip source binding command [253](#)
 IP source guard
 disabling [256](#)
 enabling [256](#)
 static IP source bindings [253](#)

ip ssh command [255](#)
 ipv6 mld snooping command [257](#)
 ipv6 mld snooping last-listener-query count command [259](#)
 ipv6 mld snooping last-listener-query-interval command [261](#)
 ipv6 mld snooping listener-message-suppression command [263](#)
 ipv6 mld snooping robustness-variable command [265](#)
 ipv6 mld snooping tcn command [267](#)
 ipv6 mld snooping vlan command [269](#)
 IPv6 SDM template [412](#)
 ip verify source command [256](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [271](#)
 lacp system-priority command [273](#)
 Layer 2 traceroute
 IP addresses [751](#)
 MAC addresses [748](#)
 line configuration mode [3, 5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [172](#)
 error recovery timer [178](#)
 link state group command [275](#)
 link state track command [277](#)
 load-distribution methods for EtherChannel [383](#)
 location (global configuration) command [278](#)
 location (interface configuration) command [280](#)

- logging event command [282](#)
- logging event power-inline-status command [283](#)
- logging file command [284](#)
- logical interface [188](#)
- loopback error
 - detection for [172](#)
 - recovery timer [178](#)
- loop guard, for spanning tree [662, 666](#)

M

- mab request format attribute 32 command [286](#)
- mac access-group command [288](#)
- MAC access-groups, displaying [551](#)
- MAC access list configuration mode [290](#)
- mac access-list extended command [290](#)
- MAC access lists [123](#)
- MAC addresses
 - disabling MAC address learning per VLAN [293](#)
 - displaying
 - dynamic [558](#)
 - notification settings [563](#)
 - number of addresses in a VLAN [557](#)
 - per interface [560](#)
 - per VLAN [567](#)
 - static [565](#)
 - static and dynamic entries [552](#)
 - dynamic
 - aging time [292](#)
 - deleting [92](#)
 - displaying [558](#)
 - enabling MAC address notification [297](#)
 - enabling MAC address-table move update [295](#)
 - persistent stack [704](#)
 - static
 - adding and removing [299](#)
 - displaying [565](#)
 - dropping on an interface [300](#)
- MAC address notification, debugging [24](#)

- mac address-table aging-time [288](#)
- mac address-table aging-time command [292](#)
- mac address-table learning command [293](#)
- mac address-table move update command [295](#)
- mac address-table notification command [297](#)
- mac address-table static command [299](#)
- mac address-table static drop command [300](#)
- macros
 - interface range [118, 190](#)
- maps
 - QoS
 - defining [317](#)
- match (class-map configuration) command [302](#)
- maximum transmission unit
 - See MTU
- mdix auto command [304](#)
- media-type (interface configuration) command [305](#)
- media-type rj45 (line configuration) command [307](#)
- member switches
 - See clusters
- memory (boot loader) command [13](#)
- mkdir (boot loader) command [14](#)
- MLD snooping
 - configuring [263, 265](#)
 - configuring queries [259, 261](#)
 - configuring topology change notification [267](#)
 - displaying [528](#)
 - enabling [257](#)
- MLD snooping on a VLAN, enabling [269](#)
- mls qos aggregate-policer command [311](#)
- mls qos command [309](#)
- mls qos cos command [313](#)
- mls qos dscp-mutation command [315](#)
- mls qos map command [317](#)
- mls qos queue-set output buffers command [321](#)
- mls qos queue-set output threshold command [323](#)
- mls qos queue-set stack buffers command [325](#)
- mls qos rewrite ip dscp command [327](#)
- mls qos srr-queue input bandwidth command [329](#)

- mls qos srr-queue input buffers command [331](#)
- mls qos srr-queue input cos-map command [333](#)
- mls qos srr-queue input dscp-map command [335](#)
- mls qos srr-queue input priority-queue command [337](#)
- mls qos srr-queue input threshold command [339](#)
- mls qos srr-queue output cos-map command [341](#)
- mls qos srr-queue output dscp-map command [343](#)
- mls qos trust command [345](#)
- mode, MVR [352](#)
- Mode button, and password recovery [414](#)
- modes, commands [2](#)
- monitor session command [347](#)
- more (boot loader) command [15](#)
- MSTP
 - displaying [610](#)
 - interoperability [101](#)
 - link type [664](#)
 - MST region
 - aborting changes [669](#)
 - applying changes [669](#)
 - configuration name [669](#)
 - configuration revision number [669](#)
 - current or pending display [669](#)
 - displaying [610](#)
 - MST configuration mode [669](#)
 - VLANs-to-instance mapping [669](#)
 - path cost [671](#)
 - protocol mode [667](#)
 - restart protocol migration process [101](#)
 - root port
 - loop guard [662](#)
 - preventing from becoming designated [662](#)
 - restricting which can be root [662](#)
 - root guard [662](#)
 - root switch
 - affects of extended system ID [660](#)
 - hello-time [674, 682](#)
 - interval between BPDU messages [675](#)
 - interval between hello BPDU messages [674, 682](#)
 - max-age [675](#)
 - maximum hop count before discarding BPDU [676](#)
 - port priority for selection of [678](#)
 - primary or secondary [682](#)
 - switch priority [681](#)
 - state changes
 - blocking to forwarding state [688](#)
 - enabling BPDU filtering [652, 686](#)
 - enabling BPDU guard [654, 686](#)
 - enabling Port Fast [686, 688](#)
 - forward-delay time [673](#)
 - length of listening and learning states [673](#)
 - rapid transition to forwarding [664](#)
 - shutting down Port Fast-enabled ports [686](#)
 - state information display [609](#)
- MTU
 - configuring size [745](#)
 - displaying global setting [620](#)
- Multicast Listener Discovery
 - See MLD
- multicast group address, MVR [355](#)
- multicast groups, MVR [353](#)
- Multicast Listener Discovery
 - See MLD
- multicast router learning method [249](#)
- multicast router ports, configuring [249](#)
- multicast router ports, IPv6 [269](#)
- multicast storm control [707](#)
- multicast VLAN, MVR [353](#)
- multicast VLAN registration
 - See MVR
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [353](#)
 - configuring [352](#)
 - configuring interfaces [355](#)
 - debug messages, display [28](#)

- displaying [584](#)
- displaying interface information [585](#)
- members, displaying [587](#)
- mvr (global configuration) command [352](#)
- mvr (interface configuration) command [355](#)
- mvr vlan group command [356](#)

N

- native VLANs [740](#)
- Network Admission Control Software Configuration Guide [198, 200](#)
- network-policy (global configuration) command [359](#)
- network-policy command [358](#)
- network-policy profile (network-policy configuration) command [361](#)
- nmosp attachment suppress command [364](#)
- nmosp command [363](#)
- no authentication logging verbose [365](#)
- no dot1x logging verbose [366](#)
- no mab logging verbose [367](#)
- nonegotiate, speed [696](#)
- nonegotiating DTP messaging [727](#)
- non-IP protocols
 - denying [123](#)
 - forwarding [374](#)
- non-IP traffic access lists [290](#)
- non-IP traffic forwarding
 - denying [123](#)
 - permitting [374](#)
- normal-range VLANs [761](#)
- no vlan command [761](#)

O

- online diagnostics
 - displaying
 - configured boot-up coverage level [469](#)
 - current scheduled tasks [469](#)

- event logs [469](#)
- supported test suites [469](#)
- test ID [469](#)
- test results [469](#)
- test statistics [469](#)
- global configuration mode
 - clearing health monitoring diagnostic test schedule [87](#)
 - setting health monitoring diagnostic testing [87](#)
 - setting up health monitoring diagnostic test schedule [87](#)
- health monitoring diagnostic tests, configuring [126](#)
- testing, starting [130](#)

P

- PAgP
 - See EtherChannel
- pagp learn-method command [368](#)
- pagp port-priority command [370](#)
- password, VTP [772](#)
- password-recovery mechanism, enabling and disabling [414](#)
- permit (ARP access-list configuration) command [372](#)
- permit (MAC access-list configuration) command [374](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [368](#)
- PIM-DVMRP, as multicast router learning method [249](#)
- PoE
 - configuring the power budget [387](#)
 - configuring the power management mode [384](#)
 - displaying controller register values [463](#)
 - displaying power management information [598](#)
 - logging of status [283](#)
 - monitoring power [389](#)
 - policing power consumption [389](#)
- police aggregate command [379](#)
- police command [377](#)

- policed-DSCP map [317](#)
- policy-map command [381](#)
- policy maps
 - applying to an interface [416, 421](#)
 - creating [381](#)
 - hierarchical [382](#)
 - policers
 - displaying [570](#)
 - for a single class [377](#)
 - for multiple classes [311, 379](#)
 - policed-DSCP map [317](#)
 - traffic classification
 - defining the class [78](#)
 - defining trust states [753](#)
 - setting DSCP or IP precedence values [419](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [3](#)
 - configuring violation modes [168](#)
 - debug messages, display [10](#)
 - enabling IEEE 802.1x
 - globally [132](#)
 - per interface [158](#)
 - guest VLAN [147](#)
 - host modes [149](#)
 - IEEE 802.1x AAA accounting methods [1](#)
 - initialize an interface [151, 164](#)
 - MAC authentication bypass [152](#)
 - manual control of authorization state [158](#)
 - PAE as authenticator [157](#)
 - periodic re-authentication
 - enabling [161](#)
 - time between attempts [165](#)
 - quiet period between failed authentication exchanges [165](#)
 - re-authenticating IEEE 802.1x-enabled ports [160](#)
 - resetting configurable IEEE 802.1x parameters [145](#)
 - switch-to-authentication server retransmission time [165](#)
 - switch-to-client frame-retransmission number [154 to 156](#)
 - switch-to-client retransmission time [165](#)
 - test for IEEE 802.1x readiness [163](#)
- port-channel load-balance command [383](#)
- Port Fast, for spanning tree [688](#)
- port ranges, defining [116, 118](#)
- ports, debugging [68](#)
- ports, protected [738](#)
- port security
 - aging [734](#)
 - debug messages, display [70](#)
 - enabling [729](#)
 - violation error recovery [178](#)
- port trust states for QoS [345](#)
- port types, MVR [355](#)
- power information, displaying [480](#)
- power inline command [384](#)
- power inline consumption command [387](#)
- power inline police command [389](#)
- Power over Ethernet
 - See PoE
- priority-queue command [392](#)
- priority value, stack member [617](#)
- privileged EXEC mode [2, 3](#)
- protected ports, displaying [498](#)
- pruning
 - VLANs [740](#)
 - VTP
 - displaying interface information [493](#)
 - enabling [772](#)
- pruning-eligible VLAN list [741](#)
- psp [394](#)
- psp command [394](#)
- PVST+
 - See STP

Q

QoS

auto-QoS

- configuring [57](#)
- debug messages, display [4](#)

auto-QoS trust

- configuring [51](#)

auto-QoS video

- configuring [54](#)

class maps

- creating [81](#)
- defining the match criteria [302](#)
- displaying [444](#)

defining the CoS value for an incoming packet [313](#)

displaying configuration information [569](#)

DSCP transparency [327](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [315](#)
- defining DSCP-to-DSCP-mutation map [317](#)

egress queues

- allocating buffers [321](#)
- defining the CoS output queue threshold map [341](#)
- defining the DSCP output queue threshold map [343](#)
- displaying buffer allocations [572](#)
- displaying CoS output queue threshold map [577](#)
- displaying DSCP output queue threshold map [577](#)
- displaying queueing strategy [572](#)
- displaying queue-set settings [580](#)
- enabling bandwidth shaping and scheduling [700](#)
- enabling bandwidth sharing and scheduling [702](#)
- limiting the maximum output on a port [698](#)
- mapping a port to a queue-set [395](#)
- mapping CoS values to a queue and threshold [341](#)
- mapping DSCP values to a queue and threshold [343](#)

setting maximum and reserved memory allocations [323](#)

setting WTD thresholds [323](#)

enabling [309](#)

ingress queues

- allocating buffers [331](#)
- assigning SRR scheduling weights [329](#)
- defining the CoS input queue threshold map [333](#)
- defining the DSCP input queue threshold map [335](#)
- displaying buffer allocations [572](#)
- displaying CoS input queue threshold map [577](#)
- displaying DSCP input queue threshold map [577](#)
- displaying queueing strategy [572](#)
- displaying settings for [571](#)
- enabling the priority queue [337](#)
- mapping CoS values to a queue and threshold [333](#)
- mapping DSCP values to a queue and threshold [335](#)
- setting WTD thresholds [339](#)

maps

defining [317, 333, 335, 341, 343](#)

policy maps

- applying an aggregate policer [379](#)
- applying to an interface [416, 421](#)
- creating [381](#)
- defining policers [311, 377](#)
- displaying policers [570](#)
- hierarchical [382](#)
- policed-DSCP map [317](#)
- setting DSCP or IP precedence values [419](#)
- traffic classifications [78](#)
- trust states [753](#)

port trust states [345](#)

queues, enabling the expedite [392](#)

statistics

- in-profile and out-of-profile packets [572](#)
- packets enqueued or dropped [572](#)
- sent and received CoS values [572](#)

sent and received DSCP values [572](#)
 trusted boundary for IP phones [345](#)
 quality of service
 See QoS
 querytime, MVR [352](#)
 queue-set command [395](#)

R

radius-server dead-criteria command [396](#)
 radius-server host command [398](#)
 rapid per-VLAN spanning-tree plus
 See STP
 rapid PVST+
 See STP
 rcommand command [400](#)
 re-authenticating IEEE 802.1x-enabled ports [160](#)
 re-authentication
 periodic [161](#)
 time between attempts [165](#)
 receiver ports, MVR [355](#)
 receiving flow-control packets [184](#)
 recovery mechanism
 causes [178](#)
 display [86](#), [441](#), [482](#), [484](#)
 timer interval [179](#)
 redundancy for cluster switches [113](#)
 reload command [402](#)
 remote command [404](#)
 remote-span command [406](#)
 Remote Switched Port Analyzer
 See RSPAN
 rename (boot loader) command [16](#)
 renew ip dhcp snooping database command [408](#)
 reset (boot loader) command [17](#)
 resource templates, displaying [605](#)
 restricted VLAN
 See dot1x auth-fail vlan
 rmdir (boot loader) command [18](#)

rmon collection stats command [411](#)
 root guard, for spanning tree [662](#)
 RSPAN
 configuring [347](#)
 filter RSPAN traffic [347](#)
 remote-span command [406](#)

S

SDM mismatch mode [618](#)
 sdm prefer command [412](#)
 SDM templates
 displaying [605](#)
 dual IPv4 and IPv6 [412](#)
 secure ports, limitations [731](#)
 sending flow-control packets [184](#)
 service password-recovery command [414](#)
 service-policy command [416](#)
 session command [418](#)
 set (boot loader) command [19](#)
 set command [419](#)
 setup command [421](#)
 setup express command [424](#)
 show access-lists command [426](#)
 show archive status command [429](#)
 show arp access-list command [430](#)
 show authentication command [431](#)
 show auto qos command [435](#)
 show boot command [439](#)
 show cable-diagnostics tdr command [441](#)
 show cisp command [443](#)
 show class-map command [444](#)
 show cluster candidates command [447](#)
 show cluster command [445](#)
 show cluster members command [449](#)
 show controllers cpu-interface command [451](#)
 show controllers ethernet-controller command [453](#)
 show controllers power inline command [463](#)
 show controllers tcam command [465](#)

- show controller utilization command 467
- show dot1x command 472
- show dtp 476
- show eap command 478
- show env command 480
- show errdisable detect command 482
- show errdisable flap-values command 483
- show errdisable recovery command 484
- show etherchannel command 486
- show fallback profile command 489
- show flowcontrol command 491
- show interfaces command 493
- show interfaces counters command 501
- show inventory command 503
- show ip arp inspection command 504
- show ip dhcp snooping binding command 509
- show ip dhcp snooping command 508
- show ip dhcp snooping database command 511, 513
- show ip igmp profile command 516
- show ip igmp snooping command 517, 528
- show ip igmp snooping groups command 520
- show ip igmp snooping mrouter command 522
- show ip igmp snooping querier command 523
- show ip source binding command 525
- show ipv6 route updated 536
- show ip verify source command 526
- show lacp command 538
- show link state group command 542
- show logging onboard command 546
- show mac access-group command 551
- show mac address-table address command 554
- show mac address-table aging time command 555
- show mac address-table command 552
- show mac address-table count command 557
- show mac address-table dynamic command 558
- show mac address-table interface command 560
- show mac address-table move update command 562
- show mac address-table notification command 94, 563, 26
- show mac address-table static command 565
- show mac address-table vlan command 567
- show mls qos aggregate-policer command 570
- show mls qos command 569
- show mls qos input-queue command 571
- show mls qos interface command 572
- show mls qos maps command 577
- show mls qos queue-set command 580
- show mls qos vlan command 581
- show monitor command 582
- show mvr command 584
- show mvr interface command 585
- show mvr members command 587
- show network-policy profile command 589
- show nmsp command 590
- show pagp command 593
- show platform acl command 2
- show platform backup interface command 3
- show platform etherchannel command 4
- show platform forward command 5
- show platform frontend-controller command 7
- show platform igmp snooping command 8
- show platform ip unicast command 9
- show platform layer4op command 10
- show platform mac-address-table command 11
- show platform messaging command 12
- show platform monitor command 13
- show platform mvr table command 14
- show platform pm command 15
- show platform port-asic command 16
- show platform port-security command 21
- show platform qos command 22
- show platform resource-manager command 23
- show platform snmp counters command 25
- show platform spanning-tree command 26
- show platform stack manager command 28
- show platform stp-instance command 27
- show platform tb command 31
- show platform team command 33
- show platform vlan command 35

- show policy-map command [595](#)
- show port security command [596](#)
- show power inline command [598](#)
- show psp config [603](#)
- show psp config command [603](#)
- show psp statistics [604](#)
- show psp statistics command [604](#)
- show sdm prefer command [605](#)
- show setup express command [608](#)
- show spanning-tree command [609](#)
- show storm-control command [615](#)
- show switch command [617](#)
- show system mtu command [620](#)
- show trust command [753](#)
- show udd command [621](#)
- show version command [624](#)
- show vlan command [626](#)
- show vlan command, fields [627](#)
- show vmps command [629](#)
- show vtp command [631](#)
- shutdown command [637](#)
- shutdown vlan command [638](#)
- small violation-rate command [639](#)
- SNMP host, specifying [645](#)
- SNMP informs, enabling the sending of [641](#)
- snmp-server enable traps command [641](#)
- snmp-server host command [645](#)
- snmp trap mac-notification change command [649](#)
- SNMP traps
 - enabling MAC address notification trap [649](#)
 - enabling the MAC address notification feature [297](#)
 - enabling the sending of [641](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [6](#)
 - deleting [120](#)
 - downloading [9](#)
 - upgrading [6, 9](#)
- uploading [16](#)
- software version, displaying [624](#)
- source ports, MVR [355](#)
- SPAN
 - configuring [347](#)
 - debug messages, display [27](#)
 - filter SPAN traffic [347](#)
 - sessions
 - add interfaces to [347](#)
 - start new [347](#)
- spanning-tree backbonefast command [651](#)
- spanning-tree bpduguard command [652](#)
- spanning-tree bpduguard command [654](#)
- spanning-tree cost command [656](#)
- spanning-tree etherchannel command [658](#)
- spanning-tree extend system-id command [660](#)
- spanning-tree guard command [662](#)
- spanning-tree link-type command [664](#)
- spanning-tree loopguard default command [666](#)
- spanning-tree mode command [667](#)
- spanning-tree mst configuration command [669](#)
- spanning-tree mst cost command [671](#)
- spanning-tree mst forward-time command [673](#)
- spanning-tree mst hello-time command [674](#)
- spanning-tree mst max-age command [675](#)
- spanning-tree mst max-hops command [676](#)
- spanning-tree mst port-priority command [678](#)
- spanning-tree mst pre-standard command [680](#)
- spanning-tree mst priority command [681](#)
- spanning-tree mst root command [682](#)
- spanning-tree portfast (global configuration) command [686](#)
- spanning-tree portfast (interface configuration) command [688](#)
- spanning-tree port-priority command [684](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [690](#)
- spanning-tree uplinkfast command [691](#)

- spanning-tree vlan command [693](#)
- speed command [696](#)
- srr-queue bandwidth limit command [698](#)
- srr-queue bandwidth share command [702](#)
- SSH, configuring version [255](#)
- stack-mac persistent timer command [704](#)
- stack member
 - access [418](#)
 - number [617, 714](#)
 - provisioning [712](#)
 - reloading [402](#)
- stacks, switch
 - disabling a member [710](#)
 - enabling a member [710](#)
 - MAC address [704](#)
 - provisioning a new member [712](#)
 - reloading [402](#)
 - stack member access [418](#)
 - stack member number [617, 714](#)
 - stack member priority value [617](#)
- static-access ports, configuring [716](#)
- statistics, Ethernet group [411](#)
- sticky learning, enabling [729](#)
- storm-control command [707](#)
- STP
 - BackboneFast [651](#)
 - counters, clearing [100](#)
 - debug messages, display
 - BackboneFast events [74](#)
 - MSTP [77](#)
 - optimized BPDUs handling [76](#)
 - spanning-tree activity [72](#)
 - switch shim [79](#)
 - transmitted and received BPDUs [75](#)
 - UplinkFast [81](#)
 - detection of indirect link failures [651](#)
 - EtherChannel misconfiguration [658](#)
 - extended system ID [660](#)
 - path cost [656](#)
 - protocol modes [667](#)
 - root port
 - accelerating choice of new [691](#)
 - loop guard [662](#)
 - preventing from becoming designated [662](#)
 - restricting which can be root [662](#)
 - root guard [662](#)
 - UplinkFast [691](#)
 - root switch
 - affects of extended system ID [660, 694](#)
 - hello-time [693](#)
 - interval between BDPU messages [693](#)
 - interval between hello BPDU messages [693](#)
 - max-age [693](#)
 - port priority for selection of [684](#)
 - primary or secondary [693](#)
 - switch priority [693](#)
 - state changes
 - blocking to forwarding state [688](#)
 - enabling BPDU filtering [652, 686](#)
 - enabling BPDU guard [654, 686](#)
 - enabling Port Fast [686, 688](#)
 - enabling timer to recover from error state [178](#)
 - forward-delay time [693](#)
 - length of listening and learning states [693](#)
 - shutting down Port Fast-enabled ports [686](#)
 - state information display [609](#)
 - VLAN options [681, 693](#)
- Switched Port Analyzer
 - See SPAN
- switchport access command [716](#)
- switchport backup interface command [718](#)
- switchport block command [722](#)
- switchport host command [724](#)
- switchport mode command [725](#)
- switchport nonegotiate command [727](#)
- switchport port-security aging command [734](#)
- switchport port-security command [729](#)
- switchport priority extend command [736](#)

switchport protected command [738](#)
 switchports, displaying [493](#)
 switchport trunk command [740](#)
 switchport voice vlan command [743](#)
 switch priority command [710](#)
 switch provision command [712](#)
 switch renumber command [714](#)
 system message logging [283](#)
 system message logging, save message to flash [284](#)
 system mtu command [745](#)
 system resource templates [412](#)

T

tar files, creating, listing, and extracting [13](#)
 TDR, running [747](#)
 Telnet, using to communicate to cluster switches [400](#)
 temperature information, displaying [480](#)
 templates, system resources [412](#)
 test cable-diagnostics tdr command [747](#)
 traceroute mac command [748](#)
 traceroute mac ip command [751](#)
 trunking, VLAN mode [725](#)
 trunk mode [725](#)
 trunk ports [725](#)
 trunks, to non-DTP device [726](#)
 trusted boundary for QoS [345](#)
 trusted port states for QoS [345](#)
 type (boot loader) command [22](#)

U

UDLD

aggressive mode [755, 757](#)
 debug messages, display [89](#)
 enable globally [755](#)
 enable per interface [757](#)
 error recovery timer [178](#)

message timer [755](#)
 normal mode [755, 757](#)
 reset a shutdown interface [759](#)
 status [621](#)

udld command [755](#)

udld port command [757](#)

udld reset command [759](#)

unicast storm control [707](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [722](#)

unknown unicast traffic, preventing [722](#)

unset (boot loader) command [23](#)

upgrading

software images

copying [6](#)

downloading [9](#)

monitoring status of [429](#)

UplinkFast, for STP [691](#)

usb-inactivity-timeout (console configuration) command [760](#)

user EXEC mode [2, 3](#)

V

version (boot loader) command [25](#)

version mismatch mode [617](#)

vlan (global configuration) command [761](#)

VLAN configuration

rules [764](#)

saving [761](#)

VLAN configuration mode

description [5](#)

summary [3](#)

VLAN ID range [761](#)

VLAN Query Protocol

See VQP

VLANs

adding [761](#)

- configuring [761](#)
- debug messages, display
 - ISL [85](#)
 - VLAN IOS file system error tests [84](#)
 - VLAN manager activity [82](#)
 - VTP [87](#)
- displaying configurations [626](#)
- enabling guest VLAN supplicant [135, 146, 183](#)
- extended-range [761](#)
- MAC addresses
 - displaying [567](#)
 - number of [557](#)
- media types [763](#)
- normal-range [761](#)
- restarting [638](#)
- saving the configuration [761](#)
- shutting down [638](#)
- SNMP traps for VTP [643, 646](#)
- suspending [638](#)
- VLAN Trunking Protocol
 - See VTP
- VM mode [617](#)
- VMPS
 - configuring servers [769](#)
 - displaying [629](#)
 - error recovery timer [179](#)
 - reconfirming dynamic VLAN assignments [766](#)
- vmpls reconfirm (global configuration) command [767](#)
- vmpls reconfirm (privileged EXEC) command [766](#)
- vmpls retry command [768](#)
- vmpls server command [769](#)
- voice VLAN
 - configuring [743](#)
 - setting port priority [736](#)
- VQP
 - and dynamic-access ports [717](#)
 - clearing client statistics [102](#)
 - displaying information [629](#)
 - per-server retry count [768](#)
 - reconfirmation interval [767](#)
 - reconfirming dynamic VLAN assignments [766](#)
- VTP
 - changing characteristics [771](#)
 - clearing pruning counters [103](#)
 - configuring
 - domain name [771](#)
 - file name [771](#)
 - mode [771](#)
 - password [772](#)
 - counters display fields [632](#)
 - displaying information [631](#)
 - enabling
 - pruning [772](#)
 - Version 2 [772](#)
 - enabling per port [776](#)
 - mode [771](#)
 - pruning [772](#)
 - saving the configuration [761](#)
 - statistics [631](#)
 - status [631](#)
 - status display fields [634](#)
- vtp (global configuration) command [771](#)
- vtp interface configuration) command [776](#)
- vtp primary command [777](#)

