



INDEX

A

aaa accounting dot1x command **1**
aaa authentication dot1x command **3**
aaa authorization network command **5, 22, 28, 30, 32, 34, 36, 141, 291, 293, 294, 455, 7, 34**
AAA methods **3**
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP **198**
 MAC, displaying **564**
 access mode **737**
 access ports **737**
 ACEs **126, 385**
 ACLs
 deny **124**
 displaying **438**
 for non-IP protocols **298**
 IP **198**
 on Layer 2 interfaces **198**
 permit **383**
 address aliasing **361**
 aggregate-port learner **377**
 allowed VLANs **752**
 archive copy-sw command **6**
 archive download-sw command **9**
 archive tar command **13**
 archive upload-sw command **16**
 arp access-list command **18**
 authentication command bounce-port ignore **20**

authentication command disable-port ignore **21**
authentication control-direction command **22**
authentication event command **24**
authentication failed VLAN
 See dot1x auth-fail vlan
authentication fallback command **28**
authentication host-mode command **30**
authentication mac-move permit command **32**
authentication open command **34**
authentication order command **36**
authentication periodic command **38**
authentication port-control command **40**
authentication priority command **42**
authentication timer command **44**
authentication violation command **46**
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
auth open command **34**
auth order command **36**
authorization state of controlled port **159**
auth timer command **44**
autonegotiation of duplex mode **173**
auto qos classify command **48**
auto qos trust command **51**
auto qos video command **54**
auto qos voip command **57**

B

BackboneFast, for STP **663**
backup interfaces

- configuring [731](#)
 - displaying [506](#)
 - boot (boot loader) command [2](#)
 - boot auto-copy-sw command [63](#)
 - boot config-file command [65](#)
 - boot enable-break command [66](#)
 - boot helper command [67](#)
 - boot helper-config file command [68](#)
 - booting
 - Cisco IOS image [71](#)
 - displaying environment variables [451](#)
 - interrupting [66](#)
 - manually [69](#)
 - boot loader
 - accessing [1](#)
 - booting
 - Cisco IOS image [2](#)
 - helper image [67](#)
 - directories
 - creating [15](#)
 - displaying a list of [7](#)
 - removing [19](#)
 - displaying
 - available commands [12](#)
 - memory heap utilization [13](#)
 - version [26](#)
 - environment variables
 - described [20](#)
 - displaying settings [20](#)
 - location of [21](#)
 - setting [20](#)
 - unsettling [24](#)
 - files
 - copying [5](#)
 - deleting [6](#)
 - displaying a list of [7](#)
 - displaying the contents of [4, 16, 23](#)
 - renaming [17](#)
 - file system
 - formatting [10](#)
 - initializing flash [9](#)
 - running a consistency check [11](#)
 - prompt [1](#)
 - resetting the system [18](#)
 - boot manual command [69](#)
 - boot private-config-file command [70](#)
 - boot system command [71](#)
 - BPDU filtering, for spanning tree [664, 698](#)
 - BPDU guard, for spanning tree [666, 698](#)
 - broadcast storm control [719](#)
-
- ## C
- candidate switches
 - See clusters
 - cat (boot loader) command [4](#)
 - channel-group command [73](#)
 - channel-protocol command [76](#)
 - Cisco IP camera
 - auto-QoS configuration [54](#)
 - Cisco SoftPhone
 - auto-QoS configuration [57](#)
 - trusting packets sent from [353](#)
 - Cisco Telepresence System
 - auto-QoS configuration [54](#)
 - CISP
 - See Client Information Signalling Protocol
 - cisp
 - debug platform cisp command [34](#)
 - cisp enable command [77](#)
 - class command [78](#)
 - class-map command [81](#)
 - class maps
 - creating [81](#)
 - defining the match criteria [310](#)
 - displaying [456](#)
 - class of service
 - See CoS

- clear dot1x command **84**
 clear eap sessions command **85**
 clear errdisable interface **86**
 clear ip arp inspection log command **83**
 clear ip arp inspection statistics command **87**
 clear ip dhcp snooping database command **88**
 clear lacp command **90**
 clear logging onboard command **91**
 clear mac address-table command **92, 94**
 clear nmfp statistics command **95**
 clear pagp command **96**
 clear port-security command **97**
 clear psp counter **99**
 clear psp counter command **99**
 clear spanning-tree counters command **100**
 clear spanning-tree detected-protocols command **101**
 clear vmps statistics command **102**
 clear vtp counters command **103**
 Client Information Signalling Protocol **77, 141, 455, 7, 34**
 cluster commander-address command **104**
 cluster discovery hop-count command **106**
 cluster enable command **107**
 cluster holdtime command **108**
 cluster member command **109**
 cluster outside-interface command **111**
 cluster run command **112**
 clusters
 adding candidates **109**
 binding to HSRP group **113**
 building manually **109**
 communicating with
 devices outside the cluster **111**
 members by using Telnet **409**
 debug messages, display **8**
 displaying
 candidate switches **459**
 debug messages **8**
 member switches **461**
 status **457**
 hop-count limit for extended discovery **106**
 HSRP standby groups **113**
 redundancy **113**
 SNMP trap **653**
 cluster standby-group command **113**
 cluster timer command **115**
 command modes defined **2**
 command switch
 See clusters
 configuration files
 password recovery disable considerations **1**
 specifying the name **65, 70**
 configuring multiple interfaces **193**
 config-vlan mode
 commands **774**
 entering **773**
 copy (boot loader) command **5**
 copy logging onboard command **116**
 CoS
 assigning default value to incoming packets **321**
 overriding the incoming value **321**
 CoS-to-DSCP map **325**
 CPU ASIC statistics, displaying **463**
 crashinfo files **184**
 critical VLAN **26**
-
- D**
- debug authentication **2**
 debug auto qos command **4**
 debug backup command **6**
 debug cisp command **7**
 debug cluster command **8**
 debug dot1x command **10**
 debug dtp command **12**
 debug eap command **13**
 debug etherchannel command **14**
 debug ilpower command **15**
 debug interface command **16**

- debug ip dhcp snooping command **17**
 debug ip igmp filter command **19**
 debug ip igmp max-groups command **20**
 debug ip igmp snooping command **21**
 debug ip verify source packet command **18**
 debug lacp command **22**
 debug lldp packets command **23**
 debug mac-notification command **24**
 debug matm command **25**
 debug matm move update command **26**
 debug monitor command **27**
 debug mvrdbg command **28**
 debug nmfp command **29**
 debug nvram command **30**
 debug pagp command **31**
 debug platform acl command **32**
 debug platform backup interface command **33**
 debug platform cisp command **34**
 debug platform cli-redirection main command **35**
 debug platform configuration command **42**
 debug platform cpu-queues command **37**
 debug platform dot1x command **39**
 debug platform etherchannel command **40**
 debug platform forw-tcam command **41**
 debug platform ip arp inspection command **43**
 debug platform ip dhcp command **44**
 debug platform ip igmp snooping command **45**
 debug platform ip source-guard command **47**
 debug platform led command **48**
 debug platform matm command **49**
 debug platform messaging application command **50**
 debug platform phy command **51**
 debug platform pm command **53**
 debug platform port-asic command **55**
 debug platform port-security command **56**
 debug platform qos-acl-tcam command **57**
 debug platform resource-manager command **58**
 debug platform snmp command **59**
 debug platform span command **60**
 debug platform stack-manager command **61**
 debug platform supervisor-asic command **62**
 debug platform sw-bridge command **63**
 debug platform tcam command **64**
 debug platform udld command **66**
 debug platform vlan command **67**
 debug pm command **68**
 debug port-security command **70**
 debug qos-manager command **71**
 debug spanning-tree backbonefast command **74**
 debug spanning-tree bpdu command **75**
 debug spanning-tree bpdu-opt command **76**
 debug spanning-tree command **72**
 debug spanning-tree mstp command **77**
 debug spanning-tree switch command **79**
 debug spanning-tree uplinkfast command **81**
 debug sw-vlan command **82**
 debug sw-vlan ifs command **84**
 debug sw-vlan notification command **85**
 debug sw-vlan vtp command **87**
 debug udld command **89**
 debug vqpc command **91**
 define interface-range command **118**
 delete (boot loader) command **6**
 delete command **120**
 deny (ARP access-list configuration) command **122**
 deny command **124**
 detect mechanism, causes **175**
 DHCP snooping
 accepting untrusted packets from edge switch **229**
 enabling
 on a VLAN **234**
 option 82 **227, 229**
 trust on an interface **232**
 error recovery timer **181**
 rate limiting **231**
 DHCP snooping binding database
 binding file, configuring **225**
 bindings

- adding **223**
- deleting **223**
- clearing database agent statistics **88**
- database agent, configuring **225**
- renewing **417**
- dir (boot loader) command **7**
- directories, deleting **120**
- domain name, VTP **783**
- dot1x auth-fail max-attempts **135**
- dot1x auth-fail vlan **137**
- dot1x command **133**
- dot1x control-direction command **139**
- dot1x credentials (global configuration) command **141**
- dot1x critical global configuration command **142**
- dot1x critical interface configuration command **144**
- dot1x default command **146**
- dot1x fallback command **147**
- dot1x guest-vlan command **148**
- dot1x host-mode command **150**
- dot1x initialize command **152**
- dot1x mac-auth-bypass command **153**
- dot1x max-reauth-req command **155**
- dot1x max-req command **157**
- dot1x pae command **158**
- dot1x port-control command **159**
- dot1x re-authenticate command **161**
- dot1x reauthentication command **162**
- dot1x supplicant controlled transient command **163**
- dot1x supplicant force-multicast command **165**
- dot1x test eapol-capable command **166**
- dot1x test timeout command **167**
- dot1x timeout command **168**
- dot1x violation-mode command **171**
- DSCP-to-CoS map **325**
- DSCP-to-DSCP-mutation map **325**
- DTP **738**
- DTP flap
 - error detection for **175**
 - error recovery timer **181**
- DTP negotiation **739**
- dual-purpose uplink ports
 - displaying configurable options **509**
 - displaying the active media **512**
 - selecting the type **313**
- duplex command **172**
- dynamic-access ports
 - configuring **729**
 - restrictions **730**
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN **206**
 - define **18**
 - deny packets **122**
 - display **442**
 - permit packets **381**
 - clear
 - log buffer **83**
 - statistics **87**
 - display
 - ARP ACLs **442**
 - configuration and operating state **517**
 - log buffer **517**
 - statistics **517**
 - trust state and rate limit **517**
 - enable per VLAN **216**
 - log buffer
 - clear **83**
 - configure **210**
 - display **517**
 - rate-limit incoming ARP packets **208**
 - statistics
 - clear **87**
 - display **517**
 - trusted interface state **212**
 - type of packet logged **217**
 - validation checks **214**
- dynamic auto VLAN membership mode **737**
- dynamic desirable VLAN membership mode **737**

Dynamic Host Configuration Protocol (DHCP)

 See DHCP snooping

Dynamic Trunking Protocol

 See DTP

E

EAP-request/identity frame

 maximum number to send **157**

 response time before retransmitting **168**

environment variables, displaying **451**

epm access-control open **174**

errdisable detect cause command **175**

errdisable detect cause small-frame command **178**

errdisable recovery cause small-frame **180**

errdisable recovery command **181**

error conditions, displaying **497**

error disable detection **175**

error-disabled interfaces, displaying **506**

EtherChannel

 assigning Ethernet interface to channel group **73**

 creating port-channel logical interface **191**

 debug EtherChannel/PAgP, display **14**

 debug platform-specific events, display **40**

 displaying **500**

 interface information, displaying **506**

 LACP

 clearing channel-group information **90, 91**

 debug messages, display **22**

 displaying **551**

 modes **73**

 port priority for hot-standby ports **276**

 restricting a protocol **76**

 system priority **278**

 load-distribution methods **392**

 PAgP

 aggregate-port learner **377**

 clearing channel-group information **96**

 debug messages, display **31**

displaying **605**

error detection for **175**

error recovery timer **181**

learn method **377**

modes **73**

physical-port learner **377**

priority of interface for transmitted traffic **379**

Ethernet controller, internal register display **465**

Ethernet controller, stackport information **472**

Ethernet statistics, collecting **421**

exception crashinfo command **184, 189**

extended discovery of candidate switches **106**

extended-range VLANs

 and allowed VLAN list **752**

 and pruning-eligible list **752**

 configuring **773**

extended system ID for STP **672**

F

fallback profile command **185**

fallback profiles, displaying **503**

fan information, displaying **494**

file name, VTP **783**

files, deleting **120**

flash_init (boot loader) command **9**

flexible authentication ordering **36**

Flex Links

 configuring **731**

 configuring preferred VLAN **734**

 displaying **506**

flowcontrol command **187**

format (boot loader) command **10**

fsck (boot loader) command **11**

G

global configuration mode **2, 4**

H

hardware ACL statistics [438](#)
 help (boot loader) command [12](#)
 hierarchical policy maps [391](#)
 hop-count limit for clusters [106](#)
 host connection, port configuration [736](#)
 Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [113](#)
 standby group [113](#)

I
IEEE 802.1x

and switchport modes [738](#)
 violation error recovery [181](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [136, 147, 186](#)

IGMP filters

applying [237](#)
 debug messages, display [19](#)

IGMP groups, setting maximum [238](#)

IGMP maximum groups, debugging [20](#)

IGMP profiles

creating [240](#)
 displaying [529](#)

IGMP snooping

adding ports as a static member of a group [256](#)
 displaying [530](#)
 enabling [242](#)
 enabling the configurable-leave timer [244](#)
 enabling the Immediate-Leave feature [253](#)
 flooding query count [250](#)
 interface topology change notification behavior [252](#)
 querier [246](#)
 query solicitation [250](#)

report suppression [248](#)

switch topology change notification behavior [250](#)

images

See software images

Immediate-Leave feature, MVR [363](#)

immediate-leave processing [253](#)

Immediate-Leave processing, IPv6 [274](#)

interface configuration mode [3, 4](#)

interface port-channel command [191](#)

interface range command [193](#)

interface-range macros [118](#)

interfaces

assigning Ethernet interface to channel group [73](#)

configuring [172](#)

configuring multiple [193](#)

creating port-channel logical [191](#)

debug messages, display [16](#)

disabling [649](#)

displaying the MAC address table [573](#)

restarting [649](#)

interface speed, configuring [708](#)

interface vlan command [196](#)

internal registers, displaying [465, 472, 478](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [175](#)

error recovery timer [181](#)

ip access-group command [198](#)

ip address command [200](#)

IP addresses, setting [200](#)

ip admission command [202](#)

ip admission name proxy http command [204](#)

ip arp inspection filter vlan command [206](#)

ip arp inspection limit command [208](#)

ip arp inspection log-buffer command [210](#)

ip arp inspection trust command [212](#)

ip arp inspection validate command [214](#)

ip arp inspection vlan command [216](#)

- ip arp inspection vlan logging command **217**
- ip device tracking command **221**
- ip device tracking probe command **219**
- IP DHCP snooping
 See DHCP snooping
- ip dhcp snooping binding command **223**
- ip dhcp snooping command **222**
- ip dhcp snooping database command **225**
- ip dhcp snooping information option allow-untrusted command **229**
- ip dhcp snooping information option command **227**
- ip dhcp snooping limit rate command **231**
- ip dhcp snooping trust command **232**
- ip dhcp snooping verify command **233**
- ip dhcp snooping vlan command **234**
- ip dhcp snooping vlan information option format-type circuit-id string command **235**
- ip igmp filter command **237**
- ip igmp max-groups command **238**
- ip igmp profile command **240**
- ip igmp snooping command **242**
- ip igmp snooping last-member-query-interval command **244**
- ip igmp snooping querier command **246**
- ip igmp snooping report-suppression command **248**
- ip igmp snooping tcn command **250**
- ip igmp snooping tcn flood command **252**
- ip igmp snooping vlan immediate-leave command **253**
- ip igmp snooping vlan mrouter command **254**
- ip igmp snooping vlan static command **256**
- IP multicast addresses **360**
- IP phones
 auto-QoS configuration **57**
 trusting packets sent from **353**
- IP-precedence-to-DSCP map **325**
- ip source binding command **258**
- IP source guard
 disabling **261**
 enabling **261**
 static IP source bindings **258**
- ip ssh command **260**
- ipv6 mld snooping command **262**
- ipv6 mld snooping last-listener-query count command **264**
- ipv6 mld snooping last-listener-query-interval command **266**
- ipv6 mld snooping listener-message-suppression command **268**
- ipv6 mld snooping robustness-variable command **270**
- ipv6 mld snooping tcn command **272**
- ipv6 mld snooping vlan command **274**
- IPv6 SDM template **422**
- ip verify source command **261**
-
- J**
- jumbo frames
 See MTU
-
- L**
- LACP
 See EtherChannel
- lacp port-priority command **276**
- lacp system-priority command **278**
- Layer 2 traceroute
 IP addresses **763**
 MAC addresses **760**
- line configuration mode **3, 5**
- Link Aggregation Control Protocol
 See EtherChannel
- link flap
 error detection for **175**
 error recovery timer **181**
- link state group command **280**
- link state track command **282**
- load-distribution methods for EtherChannel **392**
- location (global configuration) command **283**
- location (interface configuration) command **285**

logging event command **287**
 logging event power-inline-status command **288**
 logging file command **289**
 logical interface **191**
 loopback error
 detection for **175**
 recovery timer **181**
 loop guard, for spanning tree **674, 678**

M

mab request format attribute 1 command **291**
 mab request format attribute 2 command **293**
 mab request format attribute 32 command **294**
 mac access-group command **296**
 MAC access-groups, displaying **564**
 MAC access list configuration mode **298**
 mac access-list extended command **298**
 MAC access lists **124**
 MAC addresses
 disabling MAC address learning per VLAN **301**
 displaying
 dynamic **571**
 notification settings **576**
 number of addresses in a VLAN **570**
 per interface **573**
 per VLAN **580**
 static **578**
 static and dynamic entries **565**
 dynamic
 aging time **300**
 deleting **92**
 displaying **571**
 enabling MAC address notification **305**
 enabling MAC address-table move update **303**
 persistent stack **716**
 static
 adding and removing **307**
 displaying **578**

dropping on an interface **308**
 MAC address notification, debugging **24**
 mac address-table aging-time **296**
 mac address-table aging-time command **300**
 mac address-table learning command **301**
 mac address-table move update command **303**
 mac address-table notification command **305**
 mac address-table static command **307**
 mac address-table static drop command **308**
 macros
 interface range **118, 193**
 maps
 QoS
 defining **325**
 match (class-map configuration) command **310**
 maximum transmission unit
 See MTU
 mdix auto command **312**
 media-type (interface configuration) command **313**
 media-type rj45 (line configuration) command **315**
 member switches
 See clusters
 memory (boot loader) command **13**
 mkdir (boot loader) command **15**
 MLD snooping
 configuring **268, 270**
 configuring queries **264, 266**
 configuring topology change notification **272**
 displaying **541**
 enabling **262**
 MLD snooping on a VLAN, enabling **274**
 mls qos aggregate-policer command **319**
 mls qos command **317**
 mls qos cos command **321**
 mls qos dscp-mutation command **323**
 mls qos map command **325**
 mls qos queue-set output buffers command **329**
 mls qos queue-set output threshold command **331**
 mls qos queue-set stack buffers command **333**

- mls qos rewrite ip dscp command **335**
- mls qos srr-queue input bandwidth command **337**
- mls qos srr-queue input buffers command **339**
- mls qos-srr-queue input cos-map command **341**
- mls qos srr-queue input dscp-map command **343**
- mls qos srr-queue input priority-queue command **345**
- mls qos srr-queue input threshold command **347**
- mls qos-srr-queue output cos-map command **349**
- mls qos srr-queue output dscp-map command **351**
- mls qos trust command **353**
- mode, MVR **360**
- Mode button, and password recovery **426**
- modes, commands **2**
- monitor session command **355**
- more (boot loader) command **16**
- MSTP
 - displaying **622**
 - interoperability **101**
 - link type **676**
 - MST region
 - aborting changes **681**
 - applying changes **681**
 - configuration name **681**
 - configuration revision number **681**
 - current or pending display **681**
 - displaying **622**
 - MST configuration mode **681**
 - VLANs-to-instance mapping **681**
 - path cost **683**
 - protocol mode **679**
 - restart protocol migration process **101**
 - root port
 - loop guard **674**
 - preventing from becoming designated **674**
 - restricting which can be root **674**
 - root guard **674**
 - root switch
 - affects of extended system ID **672**
 - hello-time **686, 694**
- interval between BDPU messages **687**
- interval between hello BPDU messages **686, 694**
- max-age **687**
- maximum hop count before discarding BPDU **688**
- port priority for selection of **690**
- primary or secondary **694**
- switch priority **693**
- state changes
 - blocking to forwarding state **700**
 - enabling BPDU filtering **664, 698**
 - enabling BPDU guard **666, 698**
 - enabling Port Fast **698, 700**
 - forward-delay time **685**
 - length of listening and learning states **685**
 - rapid transition to forwarding **676**
 - shutting down Port Fast-enabled ports **698**
- state information display **621**
- MTU
 - configuring size **757**
 - displaying global setting **633**
- Multicase Listener Discovery
 - See MLD
- multicast group address, MVR **363**
- multicast groups, MVR **361**
- Multicast Listener Discovery
 - See MLD
- multicast router learning method **254**
- multicast router ports, configuring **254**
- multicast router ports, IPv6 **274**
- multicast storm control **719**
- multicast VLAN, MVR **361**
- multicast VLAN registration
 - See MVR
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing **361**
 - configuring **360**

configuring interfaces [363](#)
 debug messages, display [28](#)
 displaying [596](#)
 displaying interface information [597](#)
 members, displaying [599](#)
mvr (global configuration) command [360](#)
mvr (interface configuration) command [363](#)
mvr vlan group command [364](#)

N

native VLANs [752](#)
Network Admission Control Software Configuration Guide [203, 205](#)
network-policy (global configuration) command [367](#)
network-policy command [366](#)
network-policy profile (network-policy configuration) command [369](#)
nmsp attachment suppress command [373](#)
nmsp command [371](#)
 no authentication logging verbose [374](#)
 no dot1x logging verbose [375](#)
 no mab logging verbose [376](#)
 nonegotiate, speed [708](#)
 nonegotiating DTP messaging [739](#)
 non-IP protocols
 denying [124](#)
 forwarding [383](#)

non-IP traffic access lists [298](#)

non-IP traffic forwarding

- denying [124](#)
- permitting [383](#)

normal-range VLANs [773](#)

no **vlan** command [773](#)

O

online diagnostics
 displaying

configured boot-up coverage level [482](#)
 current scheduled tasks [482](#)
 event logs [482](#)
 supported test suites [482](#)
 test ID [482](#)
 test results [482](#)
 test statistics [482](#)
 global configuration mode
 clearing health monitoring diagnostic test schedule [87](#)
 clearing test-based testing schedule [129](#)
 setting health monitoring diagnostic testing [87](#)
 setting test-based testing [129](#)
 setting up health monitoring diagnostic test schedule [87](#)
 setting up test-based testing [129](#)
 health monitoring diagnostic tests, configuring [127](#)
 scheduled switchover
 disabling [129](#)
 enabling [129](#)
 scheduling
 enabling [129](#)
 removing [129](#)
 testing, starting [131](#)
 test interval, setting [129](#)

P

PAgP

See EtherChannel

pagp learn-method command [377](#)
pagp port-priority command [379](#)
 password, VTP [784](#)
 password-recovery mechanism, enabling and disabling [426](#)
permit (ARP access-list configuration) command [381](#)
permit (MAC access-list configuration) command [383](#)
 per-VLAN spanning-tree plus
 See STP

- physical-port learner **377**
- PIM-DVMRP, as multicast router learning method **254**
- PoE
- configuring the power budget **396**
 - configuring the power management mode **393**
 - displaying controller register values **476**
 - displaying power management information **610**
 - logging of status **288**
 - monitoring power **398**
 - policing power consumption **398**
- police aggregate command **388**
- police command **386**
- policed-DSCP map **325**
- policy-map command **390**
- policy maps
- applying to an interface **428, 433**
 - creating **390**
 - hierarchical **391**
 - policers
 - displaying **583**
 - for a single class **386**
 - for multiple classes **319, 388**
 - policed-DSCP map **325**
 - traffic classification
 - defining the class **78**
 - defining trust states **765**
 - setting DSCP or IP precedence values **431**
- Port Aggregation Protocol
- See EtherChannel
- port-based authentication
- AAA method list **3**
 - configuring violation modes **171**
 - debug messages, display **10**
 - enabling IEEE 802.1x
 - globally **133**
 - per interface **159**
 - guest VLAN **148**
 - host modes **150**
 - IEEE 802.1x AAA accounting methods **1**
- initialize an interface **152, 167**
- MAC authentication bypass **153**
- manual control of authorization state **159**
- PAE as authenticator **158**
- periodic re-authentication
- enabling **162**
 - time between attempts **168**
- quiet period between failed authentication exchanges **168**
- re-authenticating IEEE 802.1x-enabled ports **161**
- resetting configurable IEEE 802.1x parameters **146**
- switch-to-authentication server retransmission time **168**
- switch-to-client frame-retransmission number **155 to 157**
- switch-to-client retransmission time **168**
- test for IEEE 802.1x readiness **166**
- port-channel load-balance command **392**
- Port Fast, for spanning tree **700**
- port ranges, defining **116, 118**
- ports, debugging **68**
- ports, protected **750**
- port security
- aging **746**
 - debug messages, display **70**
 - enabling **741**
 - violation error recovery **181**
- port trust states for QoS **353**
- port types, MVR **363**
- power information, displaying **494**
- power inline command **393**
- power inline consumption command **396**
- power inline police command **398**
- Power over Ethernet
- See PoE
- priority-queue command **401**
- priority value, stack member **629, 724**
- privileged EXEC mode **2, 3**
- protected ports, displaying **511**
- pruning

- VLANs [752](#)
- VTP
- displaying interface information [506](#)
 - enabling [784](#)
- pruning-eligible VLAN list [753](#)
- psp [403](#)
- psp command [403](#)
- PVST+
- See STP
-
- Q**
- QoS
- auto-QoS
 - configuring [57](#)
 - debug messages, display [4](#)
 - auto-QoS trust
 - configuring [51](#)
 - auto-QoS video
 - configuring [54](#)
 - class maps
 - creating [81](#)
 - defining the match criteria [310](#)
 - displaying [456](#)
 - defining the CoS value for an incoming packet [321](#)
 - displaying configuration information [582](#)
 - DSCP transparency [335](#)
 - DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [323](#)
 - defining DSCP-to-DSCP-mutation map [325](#)
 - egress queues
 - allocating buffers [329](#)
 - defining the CoS output queue threshold map [349](#)
 - defining the DSCP output queue threshold map [351](#)
 - displaying buffer allocations [585](#)
 - displaying CoS output queue threshold map [589](#)
 - displaying DSCP output queue threshold map [589](#)
 - displaying queueing strategy [585](#)
 - displaying queue-set settings [592](#)
 - enabling bandwidth shaping and scheduling [712](#)
 - enabling bandwidth sharing and scheduling [714](#)
 - limiting the maximum output on a port [710](#)
 - mapping a port to a queue-set [404](#)
 - mapping CoS values to a queue and threshold [349](#)
 - mapping DSCP values to a queue and threshold [351](#)
 - setting maximum and reserved memory allocations [331](#)
 - setting WTD thresholds [331](#)
 - enabling [317](#)
- ingress queues
 - allocating buffers [339](#)
 - assigning SRR scheduling weights [337](#)
 - defining the CoS input queue threshold map [341](#)
 - defining the DSCP input queue threshold map [343](#)
 - displaying buffer allocations [585](#)
 - displaying CoS input queue threshold map [589](#)
 - displaying DSCP input queue threshold map [589](#)
 - displaying queueing strategy [585](#)
 - displaying settings for [584](#)
 - enabling the priority queue [345](#)
 - mapping CoS values to a queue and threshold [341](#)
 - mapping DSCP values to a queue and threshold [343](#)
 - setting WTD thresholds [347](#)
- maps
 - defining [325, 341, 343, 349, 351](#)
- policy maps
 - applying an aggregate policer [388](#)
 - applying to an interface [428, 433](#)
 - creating [390](#)
 - defining policers [319, 386](#)
 - displaying policers [583](#)

- hierarchical [391](#)
 - policed-DSCP map [325](#)
 - setting DSCP or IP precedence values [431](#)
 - traffic classifications [78](#)
 - trust states [765](#)
 - port trust states [353](#)
 - queues, enabling the expedite [401](#)
 - statistics
 - in-profile and out-of-profile packets [585](#)
 - packets enqueued or dropped [585](#)
 - sent and received CoS values [585](#)
 - sent and received DSCP values [585](#)
 - trusted boundary for IP phones [353](#)
 - quality of service
 - See QoS
 - querytime, MVR [360](#)
 - queue-set command [404](#)
-
- R**
 - radius-server dead-criteria command [405](#)
 - radius-server host command [407](#)
 - rapid per-VLAN spanning-tree plus
 - See STP
 - rapid PVST+
 - See STP
 - rcommand command [409](#)
 - re-authenticating IEEE 802.1x-enabled ports [161](#)
 - re-authentication
 - periodic [162](#)
 - time between attempts [168](#)
 - receiver ports, MVR [363](#)
 - receiving flow-control packets [187](#)
 - recovery mechanism
 - causes [181](#)
 - display [86, 453, 496, 498](#)
 - timer interval [182](#)
 - redundancy for cluster switches [113](#)
 - reload command [411](#)
 - remote command [413](#)
 - remote-span command [415](#)
 - Remote Switched Port Analyzer
 - See RSPAN
 - rename (boot loader) command [17](#)
 - renew ip dhcp snooping database command [417](#)
 - reset (boot loader) command [18](#)
 - resource templates, displaying [617](#)
 - restricted VLAN
 - See dot1x auth-fail vlan
 - rmdir (boot loader) command [19](#)
 - rmon collection stats command [421](#)
 - root guard, for spanning tree [674](#)
 - RSPAN
 - configuring [355](#)
 - filter RSPAN traffic [355](#)
 - remote-span command [415](#)

S

- scheduled switchover
 - disabling [129](#)
 - enabling [129](#)
- SDM mismatch mode [630](#)
- sdm prefer command [422](#)
- SDM templates
 - displaying [617](#)
 - dual IPv4 and IPv6 [422](#)
- secure ports, limitations [743](#)
- sending flow-control packets [187](#)
- service password-recovery command [426](#)
- service-policy command [428](#)
- session command [430](#)
- set (boot loader) command [20](#)
- set command [431](#)
- setup command [433](#)
- setup express command [436](#)
- show access-lists command [438](#)
- show archive status command [441](#)

- show arp access-list command **442**
 show authentication command **443**
 show auto qos command **447**
 show boot command **451**
 show cable-diagnostics tdr command **453**
 show cisp command **455**
 show class-map command **456**
 show cluster candidates command **459**
 show cluster command **457**
 show cluster members command **461**
 show controllers cpu-interface command **463**
 show controllers ethernet-controller command **465**
 show controllers power inline command **476**
 show controllers team command **478**
 show controller utilization command **480**
 show dot1x command **485**
 show dtp **489**
 show eap command **491**
 show env command **494**
 show errdisable detect command **496**
 show errdisable flap-values command **497**
 show errdisable recovery command **498**
 show etherchannel command **500**
 show fallback profile command **503**
 show flowcontrol command **504**
 show interfaces command **506**
 show interfaces counters command **514**
 show inventory command **516**
 show ip arp inspection command **517**
 show ip dhcp snooping binding command **522**
 show ip dhcp snooping command **521**
 show ip dhcp snooping database command **524, 526**
 show ip igmp profile command **529**
 show ip igmp snooping command **530, 541**
 show ip igmp snooping groups command **533**
 show ip igmp snooping mrouter command **535**
 show ip igmp snooping querier command **536**
 show ip source binding command **538**
 show ipv6 route updated **549**
 show ip verify source command **539**
 show lacp command **551**
 show link state group command **555**
 show logging onboard command **559**
 show mac access-group command **564**
 show mac address-table address command **567**
 show mac address-table aging time command **568**
 show mac address-table command **565**
 show mac address-table count command **570**
 show mac address-table dynamic command **571**
 show mac address-table interface command **573**
 show mac address-table move update command **575**
 show mac address-table notification command **94, 576, 26**
 show mac address-table static command **578**
 show mac address-table vlan command **580**
 show mls qos aggregate-policer command **583**
 show mls qos command **582**
 show mls qos input-queue command **584**
 show mls qos interface command **585**
 show mls qos maps command **589**
 show mls qos queue-set command **592**
 show mls qos vlan command **593**
 show monitor command **594**
 show mvr command **596**
 show mvr interface command **597**
 show mvr members command **599**
 show network-policy profile command **601**
 show nmsp command **602**
 show pagp command **605**
 show platform acl command **2**
 show platform backup interface command **3**
 show platform etherchannel command **4**
 show platform forward command **5**
 show platform frontend-controller command **7**
 show platform igmp snooping command **8**
 show platform ip unicast command **9**
 show platform layer4op command **10**
 show platform mac-address-table command **11**
 show platform messaging command **12**

- show platform monitor command **13**
 show platform mvr table command **14**
 show platform pm command **15**
 show platform port-asic command **16**
 show platform port-security command **21**
 show platform qos command **22**
 show platform resource-manager command **23**
 show platform snmp counters command **25**
 show platform spanning-tree command **26**
 show platform stack manager command **28**
 show platform stp-instance command **27**
 show platform tb command **32**
 show platform team command **34**
 show platform vlan command **36**
 show policy-map command **607**
 show port security command **608**
 show power inline command **610**
 show psp config **615**
 show psp config command **615**
 show psp statistics **616**
 show psp statistics command **616**
 show sdm prefer command **617**
 show setup express command **620**
 show spanning-tree command **621**
 show storm-control command **627**
 show switch command **629**
 show system mtu command **633**
 show trust command **765**
 show udld command **634**
 show version command **637**
 show vlan command **638**
 show vlan command, fields **639**
 show vmps command **641**
 show vtp command **643**
 shutdown command **649**
 shutdown vlan command **650**
 small violation-rate command **651**
 SNMP host, specifying **657**
 SNMP informs, enabling the sending of **653**
 snmp-server enable traps command **653**
 snmp-server host command **657**
 snmp trap mac-notification change command **661**
 SNMP traps
 enabling MAC address notification trap **661**
 enabling the MAC address notification feature **305**
 enabling the sending of **653**
 SoftPhone
 See Cisco SoftPhone
 software images
 copying **6**
 deleting **120**
 downloading **9**
 upgrading **6, 9**
 uploading **16**
 software version, displaying **637**
 source ports, MVR **363**
 SPAN
 configuring **355**
 debug messages, display **27**
 filter SPAN traffic **355**
 sessions
 add interfaces to **355**
 start new **355**
 spanning-tree backbonefast command **663**
 spanning-tree bpdufilter command **664**
 spanning-tree bpduguard command **666**
 spanning-tree cost command **668**
 spanning-tree etherchannel command **670**
 spanning-tree extend system-id command **672**
 spanning-tree guard command **674**
 spanning-tree link-type command **676**
 spanning-tree loopguard default command **678**
 spanning-tree mode command **679**
 spanning-tree mst configuration command **681**
 spanning-tree mst cost command **683**
 spanning-tree mst forward-time command **685**
 spanning-tree mst hello-time command **686**
 spanning-tree mst max-age command **687**

- spanning-tree mst max-hops command **688**
- spanning-tree mst port-priority command **690**
- spanning-tree mst pre-standard command **692**
- spanning-tree mst priority command **693**
- spanning-tree mst root command **694**
- spanning-tree portfast (global configuration) command **698**
- spanning-tree portfast (interface configuration) command **700**
- spanning-tree port-priority command **696**
- Spanning Tree Protocol
- See STP
- spanning-tree transmit hold-count command **702**
- spanning-tree uplinkfast command **703**
- spanning-tree vlan command **705**
- speed command **708**
- srr-queue bandwidth limit command **710**
- srr-queue bandwidth share command **714**
- SSH, configuring version **260**
- stack-mac persistent timer command **716**
- stack member
- access **430**
 - number **629, 727**
 - priority value **724**
 - provisioning **725**
 - reloading **411**
- stacks, switch
- disabling a member **722**
 - enabling a member **722**
 - MAC address **716**
 - provisioning a new member **725**
 - reloading **411**
 - stack member access **430**
 - stack member number **629, 727**
 - stack member priority value **629, 724**
- static-access ports, configuring **729**
- statistics, Ethernet group **421**
- sticky learning, enabling **741**
- storm-control command **719**
- STP
- BackboneFast **663**
 - counters, clearing **100**
 - debug messages, display
 - BackboneFast events **74**
 - MSTP **77**
 - optimized BPDUs handling **76**
 - spanning-tree activity **72**
 - switch shim **79**
 - transmitted and received BPDUs **75**
 - UplinkFast **81**
 - detection of indirect link failures **663**
 - EtherChannel misconfiguration **670**
 - extended system ID **672**
 - path cost **668**
 - protocol modes **679**
 - root port
 - accelerating choice of new **703**
 - loop guard **674**
 - preventing from becoming designated **674**
 - restricting which can be root **674**
 - root guard **674**
 - UplinkFast **703**
 - root switch
 - affects of extended system ID **672, 706**
 - hello-time **705**
 - interval between BPDU messages **705**
 - interval between hello BPDU messages **705**
 - max-age **705**
 - port priority for selection of **696**
 - primary or secondary **705**
 - switch priority **705**
 - state changes
 - blocking to forwarding state **700**
 - enabling BPDU filtering **664, 698**
 - enabling BPDU guard **666, 698**
 - enabling Port Fast **698, 700**
 - enabling timer to recover from error state **181**
 - forward-delay time **705**

length of listening and learning states **705**
 shutting down Port Fast-enabled ports **698**
 state information display **621**
 VLAN options **693, 705**
Switched Port Analyzer
 See SPAN
 switchport access command **729**
 switchport backup interface command **731**
 switchport block command **735**
 switchport host command **736**
 switchport mode command **737**
 switchport nonegotiate command **739**
 switchport port-security aging command **746**
 switchport port-security command **741**
 switchport priority extend command **748**
 switchport protected command **750**
 switchports, displaying **506**
 switchport trunk command **752**
 switchport voice vlan command **755**
 switch priority command **722, 724**
 switch provision command **725**
 switch renumber command **727**
 system message logging **288**
 system message logging, save message to flash **289**
 system mtu command **757**
 system resource templates **422**

T

tar files, creating, listing, and extracting **13**
 TDR, running **759**
 Telnet, using to communicate to cluster switches **409**
 temperature information, displaying **494**
 templates, system resources **422**
 test cable-diagnostics tdr command **759**
 traceroute mac command **760**
 traceroute mac ip command **763**
 trunking, VLAN mode **737**
 trunk mode **737**

trunk ports **737**
 trunks, to non-DTP device **738**
 trusted boundary for QoS **353**
 trusted port states for QoS **353**
 type (boot loader) command **23**

U

UDLD
 aggressive mode **767, 769**
 debug messages, display **89**
 enable globally **767**
 enable per interface **769**
 error recovery timer **181**
 message timer **767**
 normal mode **767, 769**
 reset a shutdown interface **771**
 status **634**
 udld command **767**
 udld port command **769**
 udld reset command **771**
 unicast storm control **719**
UniDirectional Link Detection
 See UDLD

unknown multicast traffic, preventing **735**
 unknown unicast traffic, preventing **735**

unset (boot loader) command **24**

upgrading

software images
 copying **6**
 downloading **9**
 monitoring status of **441**

UplinkFast, for STP **703**
 usb-inactivity-timeout (console configuration)
 command **772**
 user EXEC mode **2, 3**

V

version (boot loader) command **26**
 version mismatch mode **630**
 vlan (global configuration) command **773**
 VLAN configuration
 rules **776**
 saving **773**
 VLAN configuration mode
 description **5**
 summary **3**
 VLAN ID range **773**
 VLAN Query Protocol
 See VQP
 VLANs
 adding **773**
 configuring **773**
 debug messages, display
 ISL **85**
 VLAN IOS file system error tests **84**
 VLAN manager activity **82**
 VTP **87**
 displaying configurations **638**
 enabling guest VLAN supplicant **136, 147, 186**
 extended-range **773**
 MAC addresses
 displaying **580**
 number of **570**
 media types **775**
 normal-range **773**
 restarting **650**
 saving the configuration **773**
 shutting down **650**
 SNMP traps for VTP **655, 658**
 suspending **650**
 VLAN Trunking Protocol
 See VTP
 VM mode **630**
 VMPS

configuring servers **781**
 displaying **641**
 error recovery timer **182**
 reconfirming dynamic VLAN assignments **778**
 vmps reconfirm (global configuration) command **779**
 vmps reconfirm (privileged EXEC) command **778**
 vmps retry command **780**
 vmps server command **781**
 voice VLAN
 configuring **755**
 setting port priority **748**
 VQP
 and dynamic-access ports **730**
 clearing client statistics **102**
 displaying information **641**
 per-server retry count **780**
 reconfirmation interval **779**
 reconfirming dynamic VLAN assignments **778**
 VTP
 changing characteristics **783**
 clearing pruning counters **103**
 configuring
 domain name **783**
 file name **783**
 mode **783**
 password **784**
 counters display fields **644**
 displaying information **643**
 enabling
 pruning **784**
 Version 2 **784**
 enabling per port **788**
 mode **783**
 pruning **784**
 saving the configuration **773**
 statistics **643**
 status **643**
 status display fields **646**
 vtp (global configuration) command **783**

vtp interface configuration) command [788](#)

vtp primary command [789](#)