



## INDEX

---

### A

aaa accounting dot1x command [1](#)  
aaa authentication dot1x command [3](#)  
aaa authorization network command [5, 22, 28, 30, 32, 34, 36, 141, 291, 293, 294, 456, 7, 34](#)  
AAA methods [3](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [198](#)  
    MAC, displaying [565](#)  
access mode [737](#)  
access ports [737](#)  
ACEs [126, 385](#)  
ACLs  
    deny [124](#)  
    displaying [439](#)  
    for non-IP protocols [298](#)  
    IP [198](#)  
    on Layer 2 interfaces [198](#)  
    permit [383](#)  
address aliasing [361](#)  
aggregate-port learner [377](#)  
allowed VLANs [752](#)  
archive copy-sw command [6](#)  
archive download-sw command [9](#)  
archive tar command [13](#)  
archive upload-sw command [16](#)  
arp access-list command [18](#)  
authentication command bounce-port ignore [20](#)

authentication command disable-port ignore [21](#)  
authentication control-direction command [22](#)  
authentication event command [24](#)  
authentication failed VLAN  
    See dot1x auth-fail vlan  
authentication fallback command [28](#)  
authentication host-mode command [30](#)  
authentication mac-move permit command [32](#)  
authentication open command [34](#)  
authentication order command [36](#)  
authentication periodic command [38](#)  
authentication port-control command [40](#)  
authentication priority command [42](#)  
authentication timer command [44](#)  
authentication violation command [46](#)  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
auth open command [34](#)  
auth order command [36](#)  
authorization state of controlled port [159](#)  
auth timer command [44](#)  
autonegotiation of duplex mode [173](#)  
auto qos classify command [48](#)  
auto qos trust command [51](#)  
auto qos video command [54](#)  
auto qos voip command [57](#)

---

### B

BackboneFast, for STP [663](#)  
backup interfaces

- configuring 731
  - displaying 507
- boot (boot loader) command 2
- boot auto-copy-sw command 63
- boot config-file command 65
- boot enable-break command 66
- boot helper command 67
- boot helper-config file command 68
- booting
  - Cisco IOS image 71
  - displaying environment variables 452
  - interrupting 66
  - manually 69
- boot loader
  - accessing 1
  - booting
    - Cisco IOS image 2
    - helper image 67
  - directories
    - creating 15
    - displaying a list of 7
    - removing 19
  - displaying
    - available commands 12
    - memory heap utilization 13
    - version 26
  - environment variables
    - described 20
    - displaying settings 20
    - location of 21
    - setting 20
    - unsetting 24
  - files
    - copying 5
    - deleting 6
    - displaying a list of 7
    - displaying the contents of 4, 16, 23
    - renaming 17
  - file system

- formatting 10
  - initializing flash 9
  - running a consistency check 11
- prompt 1
- resetting the system 18
- boot manual command 69
- boot private-config-file command 70
- boot system command 71
- BPDU filtering, for spanning tree 664, 698
- BPDU guard, for spanning tree 666, 698
- broadcast storm control 719

---

## C

- candidate switches
  - See clusters
- cat (boot loader) command 4
- channel-group command 73
- channel-protocol command 76
- Cisco IP camera
  - auto-QoS configuration 54
- Cisco SoftPhone
  - auto-QoS configuration 57
  - trusting packets sent from 353
- Cisco Telepresence System
  - auto-QoS configuration 54
- CISP
  - See Client Information Signalling Protocol
- cisp
  - debug platform cisp command 34
- cisp enable command 77
- class command 78
- class-map command 81
- class maps
  - creating 81
  - defining the match criteria 310
  - displaying 457
- class of service
  - See CoS

- clear dot1x command [84](#)
- clear eap sessions command [85](#)
- clear errdisable interface [86](#)
- clear ip arp inspection log command [83](#)
- clear ip arp inspection statistics command [87](#)
- clear ip dhcp snooping database command [88](#)
- clear lacp command [90](#)
- clear logging onboard command [91](#)
- clear mac address-table command [92, 94](#)
- clear nmsp statistics command [95](#)
- clear pagp command [96](#)
- clear port-security command [97](#)
- clear psp counter [99](#)
- clear psp counter command [99](#)
- clear spanning-tree counters command [100](#)
- clear spanning-tree detected-protocols command [101](#)
- clear vmpls statistics command [102](#)
- clear vtp counters command [103](#)
- Client Information Signalling Protocol [77, 141, 456, 7, 34](#)
- cluster commander-address command [104](#)
- cluster discovery hop-count command [106](#)
- cluster enable command [107](#)
- cluster holdtime command [108](#)
- cluster member command [109](#)
- cluster outside-interface command [111](#)
- cluster run command [112](#)
- clusters
  - adding candidates [109](#)
  - binding to HSRP group [113](#)
  - building manually [109](#)
  - communicating with
    - devices outside the cluster [111](#)
    - members by using Telnet [410](#)
  - debug messages, display [8](#)
  - displaying
    - candidate switches [460](#)
    - debug messages [8](#)
    - member switches [462](#)
    - status [458](#)

- hop-count limit for extended discovery [106](#)
- HSRP standby groups [113](#)
- redundancy [113](#)
- SNMP trap [653](#)
- cluster standby-group command [113](#)
- cluster timer command [115](#)
- command modes defined [2](#)
- command switch
  - See clusters
- configuration files
  - password recovery disable considerations [1](#)
  - specifying the name [65, 70](#)
- configuring multiple interfaces [193](#)
- config-vlan mode
  - commands [774](#)
  - entering [773](#)
- copy (boot loader) command [5](#)
- copy logging onboard command [116](#)
- CoS
  - assigning default value to incoming packets [321](#)
  - overriding the incoming value [321](#)
- CoS-to-DSCP map [325](#)
- CPU ASIC statistics, displaying [464](#)
- crashinfo files [184](#)
- critical VLAN [26](#)

---

## D

- debug authentication [2](#)
- debug auto qos command [4](#)
- debug backup command [6](#)
- debug cisp command [7](#)
- debug cluster command [8](#)
- debug dot1x command [10](#)
- debug dtp command [12](#)
- debug eap command [13](#)
- debug etherchannel command [14](#)
- debug ilpower command [15](#)
- debug interface command [16](#)

- debug ip dhcp snooping command 17
- debug ip igmp filter command 19
- debug ip igmp max-groups command 20
- debug ip igmp snooping command 21
- debug ip verify source packet command 18
- debug lacp command 22
- debug lldp packets command 23
- debug mac-notification command 24
- debug matm command 25
- debug matm move update command 26
- debug monitor command 27
- debug mvrdbg command 28
- debug nmsp command 29
- debug nvram command 30
- debug pagp command 31
- debug platform acl command 32
- debug platform backup interface command 33
- debug platform cisp command 34
- debug platform cli-redirection main command 35
- debug platform configuration command 42
- debug platform cpu-queues command 37
- debug platform dot1x command 39
- debug platform etherchannel command 40
- debug platform forw-tcam command 41
- debug platform ip arp inspection command 43
- debug platform ip dhcp command 44
- debug platform ip igmp snooping command 45
- debug platform ip source-guard command 47
- debug platform led command 48
- debug platform matm command 49
- debug platform messaging application command 50
- debug platform phy command 51
- debug platform pm command 53
- debug platform port-asic command 55
- debug platform port-security command 56
- debug platform qos-acl-tcam command 57
- debug platform resource-manager command 58
- debug platform snmp command 59
- debug platform span command 60
- debug platform stack-manager command 61
- debug platform supervisor-asic command 62
- debug platform sw-bridge command 63
- debug platform team command 64
- debug platform udd command 66
- debug platform vlan command 67
- debug pm command 68
- debug port-security command 70
- debug qos-manager command 71
- debug spanning-tree backbonefast command 74
- debug spanning-tree bpdu command 75
- debug spanning-tree bpdu-opt command 76
- debug spanning-tree command 72
- debug spanning-tree mstp command 77
- debug spanning-tree switch command 79
- debug spanning-tree uplinkfast command 81
- debug sw-vlan command 82
- debug sw-vlan ifs command 84
- debug sw-vlan notification command 85
- debug sw-vlan vtp command 87
- debug udd command 89
- debug vqpc command 91
- define interface-range command 118
- delete (boot loader) command 6
- delete command 120
- deny (ARP access-list configuration) command 122
- deny command 124
- detect mechanism, causes 175
- DHCP snooping
  - accepting untrusted packets from edge switch 229
  - enabling
    - on a VLAN 234
    - option 82 227, 229
    - trust on an interface 232
  - error recovery timer 181
  - rate limiting 231
- DHCP snooping binding database
  - binding file, configuring 225
  - bindings

- adding [223](#)
  - deleting [223](#)
  - clearing database agent statistics [88](#)
  - database agent, configuring [225](#)
  - renewing [418](#)
- dir (boot loader) command [7](#)
- directories, deleting [120](#)
- domain name, VTP [783](#)
- dot1x auth-fail max-attempts [135](#)
- dot1x auth-fail vlan [137](#)
- dot1x command [133](#)
- dot1x control-direction command [139](#)
- dot1x credentials (global configuration) command [141](#)
- dot1x critical global configuration command [142](#)
- dot1x critical interface configuration command [144](#)
- dot1x default command [146](#)
- dot1x fallback command [147](#)
- dot1x guest-vlan command [148](#)
- dot1x host-mode command [150](#)
- dot1x initialize command [152](#)
- dot1x mac-auth-bypass command [153](#)
- dot1x max-reauth-req command [155](#)
- dot1x max-req command [157](#)
- dot1x pae command [158](#)
- dot1x port-control command [159](#)
- dot1x re-authenticate command [161](#)
- dot1x reauthentication command [162](#)
- dot1x supplicant controlled transient command [163](#)
- dot1x supplicant force-multicast command [165](#)
- dot1x test eapol-capable command [166](#)
- dot1x test timeout command [167](#)
- dot1x timeout command [168](#)
- dot1x violation-mode command [171](#)
- DSCP-to-CoS map [325](#)
- DSCP-to-DSCP-mutation map [325](#)
- DTP [738](#)
- DTP flap
  - error detection for [175](#)
  - error recovery timer [181](#)
- DTP negotiation [739](#)
- dual-purpose uplink ports
  - displaying configurable options [510](#)
  - displaying the active media [513](#)
  - selecting the type [313](#)
- duplex command [172](#)
- dynamic-access ports
  - configuring [729](#)
  - restrictions [730](#)
- dynamic ARP inspection
  - ARP ACLs
    - apply to a VLAN [206](#)
    - define [18](#)
    - deny packets [122](#)
    - display [443](#)
    - permit packets [381](#)
  - clear
    - log buffer [83](#)
    - statistics [87](#)
  - display
    - ARP ACLs [443](#)
    - configuration and operating state [518](#)
    - log buffer [518](#)
    - statistics [518](#)
    - trust state and rate limit [518](#)
  - enable per VLAN [216](#)
  - log buffer
    - clear [83](#)
    - configure [210](#)
    - display [518](#)
  - rate-limit incoming ARP packets [208](#)
  - statistics
    - clear [87](#)
    - display [518](#)
  - trusted interface state [212](#)
  - type of packet logged [217](#)
  - validation checks [214](#)
- dynamic auto VLAN membership mode [737](#)
- dynamic desirable VLAN membership mode [737](#)

## Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

## Dynamic Trunking Protocol

See DTP

---

**E**

## EAP-request/identity frame

maximum number to send [157](#)response time before retransmitting [168](#)environment variables, displaying [452](#)epm access-control open [174](#)errdisable detect cause command [175](#)errdisable detect cause small-frame comand [178](#)errdisable recovery cause small-frame [180](#)errdisable recovery command [181](#)error conditions, displaying [498](#)error disable detection [175](#)error-disabled interfaces, displaying [507](#)

## EtherChannel

assigning Ethernet interface to channel group [73](#)creating port-channel logical interface [191](#)debug EtherChannel/PAgP, display [14](#)debug platform-specific events, display [40](#)displaying [501](#)interface information, displaying [507](#)

## LACP

clearing channel-group information [90, 91](#)debug messages, display [22](#)displaying [552](#)modes [73](#)port priority for hot-standby ports [276](#)restricting a protocol [76](#)system priority [278](#)load-distribution methods [392](#)

## PAgP

aggregate-port learner [377](#)clearing channel-group information [96](#)debug messages, display [31](#)displaying [606](#)error detection for [175](#)error recovery timer [181](#)learn method [377](#)modes [73](#)physical-port learner [377](#)priority of interface for transmitted traffic [379](#)Ethernet controller, internal register display [466](#)Ethernet controller, stackport information [473](#)Ethernet statistics, collecting [421](#)exception crashinfo command [184, 189](#)extended discovery of candidate switches [106](#)

extended-range VLANs

and allowed VLAN list [752](#)and pruning-eligible list [752](#)configuring [773](#)extended system ID for STP [672](#)

---

**F**fallback profile command [185](#)fallback profiles, displaying [504](#)fan information, displaying [495](#)file name, VTP [783](#)files, deleting [120](#)flash\_init (boot loader) command [9](#)flexible authentication ordering [36](#)

## Flex Links

configuring [731](#)configuring preferred VLAN [734](#)displaying [507](#)flowcontrol command [187](#)format (boot loader) command [10](#)fsck (boot loader) command [11](#)

---

**G**global configuration mode [2, 4](#)

## H

hardware ACL statistics [439](#)  
 help (boot loader) command [12](#)  
 hierarchical policy maps [391](#)  
 hop-count limit for clusters [106](#)  
 host connection, port configuration [736](#)  
 Hot Standby Router Protocol  
     See HSRP  
 HSRP  
     binding HSRP group to cluster [113](#)  
     standby group [113](#)

## I

IEEE 802.1x  
     and switchport modes [738](#)  
     violation error recovery [181](#)  
     See also port-based authentication  
 IEEE 802.1X Port Based Authentication  
     enabling guest VLAN supplicant [136, 147, 186](#)  
 IGMP filters  
     applying [237](#)  
     debug messages, display [19](#)  
 IGMP groups, setting maximum [238](#)  
 IGMP maximum groups, debugging [20](#)  
 IGMP profiles  
     creating [240](#)  
     displaying [530](#)  
 IGMP snooping  
     adding ports as a static member of a group [256](#)  
     displaying [531](#)  
     enabling [242](#)  
     enabling the configurable-leave timer [244](#)  
     enabling the Immediate-Leave feature [253](#)  
     flooding query count [250](#)  
     interface topology change notification behavior [252](#)  
     querier [246](#)  
     query solicitation [250](#)

report suppression [248](#)  
 switch topology change notification behavior [250](#)  
 images  
     See software images  
 Immediate-Leave feature, MVR [363](#)  
 immediate-leave processing [253](#)  
 Immediate-Leave processing, IPv6 [274](#)  
 interface configuration mode [3, 4](#)  
 interface port-channel command [191](#)  
 interface range command [193](#)  
 interface-range macros [118](#)  
 interfaces  
     assigning Ethernet interface to channel group [73](#)  
     configuring [172](#)  
     configuring multiple [193](#)  
     creating port-channel logical [191](#)  
     debug messages, display [16](#)  
     disabling [649](#)  
     displaying the MAC address table [574](#)  
     restarting [649](#)  
 interface speed, configuring [708](#)  
 interface vlan command [196](#)  
 internal registers, displaying [466, 473, 479](#)  
 Internet Group Management Protocol  
     See IGMP  
 invalid GBIC  
     error detection for [175](#)  
     error recovery timer [181](#)  
 ip access-group command [198](#)  
 ip address command [200](#)  
 IP addresses, setting [200](#)  
 ip admission command [202](#)  
 ip admission name proxy http command [204](#)  
 ip arp inspection filter vlan command [206](#)  
 ip arp inspection limit command [208](#)  
 ip arp inspection log-buffer command [210](#)  
 ip arp inspection trust command [212](#)  
 ip arp inspection validate command [214](#)  
 ip arp inspection vlan command [216](#)

ip arp inspection vlan logging command [217](#)  
 ip device tracking command [221](#)  
 ip device tracking probe command [219](#)  
 IP DHCP snooping  
     See DHCP snooping  
 ip dhcp snooping binding command [223](#)  
 ip dhcp snooping command [222](#)  
 ip dhcp snooping database command [225](#)  
 ip dhcp snooping information option allow-untrusted command [229](#)  
 ip dhcp snooping information option command [227](#)  
 ip dhcp snooping limit rate command [231](#)  
 ip dhcp snooping trust command [232](#)  
 ip dhcp snooping verify command [233](#)  
 ip dhcp snooping vlan command [234](#)  
 ip dhcp snooping vlan information option format-type circuit-id string command [235](#)  
 ip igmp filter command [237](#)  
 ip igmp max-groups command [238](#)  
 ip igmp profile command [240](#)  
 ip igmp snooping command [242](#)  
 ip igmp snooping last-member-query-interval command [244](#)  
 ip igmp snooping querier command [246](#)  
 ip igmp snooping report-suppression command [248](#)  
 ip igmp snooping tcn command [250](#)  
 ip igmp snooping tcn flood command [252](#)  
 ip igmp snooping vlan immediate-leave command [253](#)  
 ip igmp snooping vlan mrouter command [254](#)  
 ip igmp snooping vlan static command [256](#)  
 IP multicast addresses [360](#)  
 IP phones  
     auto-QoS configuration [57](#)  
     trusting packets sent from [353](#)  
 IP-precedence-to-DSCP map [325](#)  
 ip source binding command [258](#)  
 IP source guard  
     disabling [261](#)  
     enabling [261](#)  
     static IP source bindings [258](#)

ip ssh command [260](#)  
 ipv6 mld snooping command [262](#)  
 ipv6 mld snooping last-listener-query count command [264](#)  
 ipv6 mld snooping last-listener-query-interval command [266](#)  
 ipv6 mld snooping listener-message-suppression command [268](#)  
 ipv6 mld snooping robustness-variable command [270](#)  
 ipv6 mld snooping tcn command [272](#)  
 ipv6 mld snooping vlan command [274](#)  
 IPv6 SDM template [422](#)  
 ip verify source command [261](#)

---

## J

jumbo frames  
     See MTU

---

## L

LACP  
     See EtherChannel  
 lacp port-priority command [276](#)  
 lacp system-priority command [278](#)  
 Layer 2 traceroute  
     IP addresses [763](#)  
     MAC addresses [760](#)  
 line configuration mode [3, 5](#)  
 Link Aggregation Control Protocol  
     See EtherChannel  
 link flap  
     error detection for [175](#)  
     error recovery timer [181](#)  
 link state group command [280](#)  
 link state track command [282](#)  
 load-distribution methods for EtherChannel [392](#)  
 location (global configuration) command [283](#)  
 location (interface configuration) command [285](#)



- logging event command [287](#)
- logging event power-inline-status command [288](#)
- logging file command [289](#)
- logical interface [191](#)
- loopback error
  - detection for [175](#)
  - recovery timer [181](#)
- loop guard, for spanning tree [674, 678](#)

## M

- mab request format attribute 1 command [291](#)
- mab request format attribute 2 command [293](#)
- mab request format attribute 32 command [294](#)
- mac access-group command [296](#)
- MAC access-groups, displaying [565](#)
- MAC access list configuration mode [298](#)
- mac access-list extended command [298](#)
- MAC access lists [124](#)
- MAC addresses
  - disabling MAC address learning per VLAN [301](#)
  - displaying
    - dynamic [572](#)
    - notification settings [577](#)
    - number of addresses in a VLAN [571](#)
    - per interface [574](#)
    - per VLAN [581](#)
    - static [579](#)
    - static and dynamic entries [566](#)
  - dynamic
    - aging time [300](#)
    - deleting [92](#)
    - displaying [572](#)
  - enabling MAC address notification [305](#)
  - enabling MAC address-table move update [303](#)
  - persistent stack [716](#)
  - static
    - adding and removing [307](#)
    - displaying [579](#)

- dropping on an interface [308](#)
- MAC address notification, debugging [24](#)
- mac address-table aging-time [296](#)
- mac address-table aging-time command [300](#)
- mac address-table learning command [301](#)
- mac address-table move update command [303](#)
- mac address-table notification command [305](#)
- mac address-table static command [307](#)
- mac address-table static drop command [308](#)
- macros
  - interface range [118, 193](#)
- maps
  - QoS
    - defining [325](#)
- match (class-map configuration) command [310](#)
- maximum transmission unit
  - See MTU
- mdix auto command [312](#)
- media-type (interface configuration) command [313](#)
- media-type rj45 (line configuration) command [315](#)
- member switches
  - See clusters
- memory (boot loader) command [13](#)
- mkdir (boot loader) command [15](#)
- MLD snooping
  - configuring [268, 270](#)
  - configuring queries [264, 266](#)
  - configuring topology change notification [272](#)
  - displaying [542](#)
  - enabling [262](#)
- MLD snooping on a VLAN, enabling [274](#)
- mls qos aggregate-policer command [319](#)
- mls qos command [317](#)
- mls qos cos command [321](#)
- mls qos dscp-mutation command [323](#)
- mls qos map command [325](#)
- mls qos queue-set output buffers command [329](#)
- mls qos queue-set output threshold command [331](#)
- mls qos queue-set stack buffers command [333](#)

- mls qos rewrite ip dscp command [335](#)
- mls qos srr-queue input bandwidth command [337](#)
- mls qos srr-queue input buffers command [339](#)
- mls qos-srr-queue input cos-map command [341](#)
- mls qos srr-queue input dscp-map command [343](#)
- mls qos srr-queue input priority-queue command [345](#)
- mls qos srr-queue input threshold command [347](#)
- mls qos-srr-queue output cos-map command [349](#)
- mls qos srr-queue output dscp-map command [351](#)
- mls qos trust command [353](#)
- mode, MVR [360](#)
- Mode button, and password recovery [427](#)
- modes, commands [2](#)
- monitor session command [355](#)
- more (boot loader) command [16](#)
- MSTP
  - displaying [623](#)
  - interoperability [101](#)
  - link type [676](#)
  - MST region
    - aborting changes [681](#)
    - applying changes [681](#)
    - configuration name [681](#)
    - configuration revision number [681](#)
    - current or pending display [681](#)
    - displaying [623](#)
    - MST configuration mode [681](#)
    - VLANs-to-instance mapping [681](#)
  - path cost [683](#)
  - protocol mode [679](#)
  - restart protocol migration process [101](#)
  - root port
    - loop guard [674](#)
    - preventing from becoming designated [674](#)
    - restricting which can be root [674](#)
    - root guard [674](#)
  - root switch
    - affects of extended system ID [672](#)
    - hello-time [686, 694](#)
    - interval between BPDU messages [687](#)
    - interval between hello BPDU messages [686, 694](#)
    - max-age [687](#)
    - maximum hop count before discarding BPDU [688](#)
    - port priority for selection of [690](#)
    - primary or secondary [694](#)
    - switch priority [693](#)
  - state changes
    - blocking to forwarding state [700](#)
    - enabling BPDU filtering [664, 698](#)
    - enabling BPDU guard [666, 698](#)
    - enabling Port Fast [698, 700](#)
    - forward-delay time [685](#)
    - length of listening and learning states [685](#)
    - rapid transition to forwarding [676](#)
    - shutting down Port Fast-enabled ports [698](#)
  - state information display [622](#)
- MTU
  - configuring size [757](#)
  - displaying global setting [634](#)
- Multicast Listener Discovery
  - See MLD
- multicast group address, MVR [363](#)
- multicast groups, MVR [361](#)
- Multicast Listener Discovery
  - See MLD
- multicast router learning method [254](#)
- multicast router ports, configuring [254](#)
- multicast router ports, IPv6 [274](#)
- multicast storm control [719](#)
- multicast VLAN, MVR [361](#)
- multicast VLAN registration
  - See MVR
- Multiple Spanning Tree Protocol
  - See MSTP
- MVR
  - and address aliasing [361](#)
  - configuring [360](#)

- configuring interfaces [363](#)
- debug messages, display [28](#)
- displaying [597](#)
- displaying interface information [598](#)
- members, displaying [600](#)
- mvr (global configuration) command [360](#)
- mvr (interface configuration) command [363](#)
- mvr vlan group command [364](#)

## N

- native VLANs [752](#)
- Network Admission Control Software Configuration Guide [203, 205](#)
- network-policy (global configuration) command [367](#)
- network-policy command [366](#)
- network-policy profile (network-policy configuration) command [369](#)
- nmsp attachment suppress command [373](#)
- nmsp command [371](#)
- no authentication logging verbose [374](#)
- no dot1x logging verbose [375](#)
- no mab logging verbose [376](#)
- nonegotiate, speed [708](#)
- nonegotiating DTP messaging [739](#)
- non-IP protocols
  - denying [124](#)
  - forwarding [383](#)
- non-IP traffic access lists [298](#)
- non-IP traffic forwarding
  - denying [124](#)
  - permitting [383](#)
- normal-range VLANs [773](#)
- no vlan command [773](#)

## O

- online diagnostics
  - displaying

- configured boot-up coverage level [483](#)
- current scheduled tasks [483](#)
- event logs [483](#)
- supported test suites [483](#)
- test ID [483](#)
- test results [483](#)
- test statistics [483](#)
- global configuration mode
  - clearing health monitoring diagnostic test schedule [87](#)
  - clearing test-based testing schedule [129](#)
  - setting health monitoring diagnostic testing [87](#)
  - setting test-based testing [129](#)
  - setting up health monitoring diagnostic test schedule [87](#)
  - setting up test-based testing [129](#)
- health monitoring diagnostic tests, configuring [127](#)
- scheduled switchover
  - disabling [129](#)
  - enabling [129](#)
- scheduling
  - enabling [129](#)
  - removing [129](#)
- testing, starting [131](#)
- test interval, setting [129](#)

## P

### PAGP

See EtherChannel

- pagp learn-method command [377](#)
- pagp port-priority command [379](#)
- password, VTP [784](#)
- password-recovery mechanism, enabling and disabling [427](#)
- permit (ARP access-list configuration) command [381](#)
- permit (MAC access-list configuration) command [383](#)
- per-VLAN spanning-tree plus
  - See STP

- physical-port learner [377](#)
- PIM-DVMRP, as multicast router learning method [254](#)
- PoE
  - configuring the power budget [396](#)
  - configuring the power management mode [393](#)
  - displaying controller register values [477](#)
  - displaying power management information [611](#)
  - logging of status [288](#)
  - monitoring power [399](#)
  - policing power consumption [399](#)
- police aggregate command [388](#)
- police command [386](#)
- policed-DSCP map [325](#)
- policy-map command [390](#)
- policy maps
  - applying to an interface [429, 434](#)
  - creating [390](#)
  - hierarchical [391](#)
  - policers
    - displaying [584](#)
    - for a single class [386](#)
    - for multiple classes [319, 388](#)
    - policed-DSCP map [325](#)
  - traffic classification
    - defining the class [78](#)
    - defining trust states [765](#)
    - setting DSCP or IP precedence values [432](#)
- Port Aggregation Protocol
  - See EtherChannel
- port-based authentication
  - AAA method list [3](#)
  - configuring violation modes [171](#)
  - debug messages, display [10](#)
  - enabling IEEE 802.1x
    - globally [133](#)
    - per interface [159](#)
  - guest VLAN [148](#)
  - host modes [150](#)
  - IEEE 802.1x AAA accounting methods [1](#)
  - initialize an interface [152, 167](#)
  - MAC authentication bypass [153](#)
  - manual control of authorization state [159](#)
  - PAE as authenticator [158](#)
  - periodic re-authentication
    - enabling [162](#)
    - time between attempts [168](#)
  - quiet period between failed authentication exchanges [168](#)
  - re-authenticating IEEE 802.1x-enabled ports [161](#)
  - resetting configurable IEEE 802.1x parameters [146](#)
  - switch-to-authentication server retransmission time [168](#)
  - switch-to-client frame-retransmission number [155 to 157](#)
  - switch-to-client retransmission time [168](#)
  - test for IEEE 802.1x readiness [166](#)
- port-channel load-balance command [392](#)
- Port Fast, for spanning tree [700](#)
- port ranges, defining [116, 118](#)
- ports, debugging [68](#)
- ports, protected [750](#)
- port security
  - aging [746](#)
  - debug messages, display [70](#)
  - enabling [741](#)
  - violation error recovery [181](#)
- port trust states for QoS [353](#)
- port types, MVR [363](#)
- power information, displaying [495](#)
- power inline command [393](#)
- power inline consumption command [396](#)
- power inline four-pair forced command [398](#)
- power inline police command [399](#)
- Power over Ethernet
  - See PoE
- priority-queue command [402](#)
- priority value, stack member [630, 724](#)
- privileged EXEC mode [2, 3](#)
- protected ports, displaying [512](#)

## pruning

VLANs [752](#)

## VTP

displaying interface information [507](#)enabling [784](#)pruning-eligible VLAN list [753](#)psp [404](#)psp command [404](#)

## PVST+

See STP

**Q**

## QoS

## auto-QoS

configuring [57](#)debug messages, display [4](#)

## auto-QoS trust

configuring [51](#)

## auto-QoS video

configuring [54](#)

## class maps

creating [81](#)defining the match criteria [310](#)displaying [457](#)defining the CoS value for an incoming packet [321](#)displaying configuration information [583](#)DSCP transparency [335](#)

## DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [323](#)defining DSCP-to-DSCP-mutation map [325](#)

## egress queues

allocating buffers [329](#)defining the CoS output queue threshold map [349](#)defining the DSCP output queue threshold map [351](#)displaying buffer allocations [586](#)displaying CoS output queue threshold map [590](#)displaying DSCP output queue threshold map [590](#)displaying queueing strategy [586](#)displaying queue-set settings [593](#)enabling bandwidth shaping and scheduling [712](#)enabling bandwidth sharing and scheduling [714](#)limiting the maximum output on a port [710](#)mapping a port to a queue-set [405](#)mapping CoS values to a queue and threshold [349](#)mapping DSCP values to a queue and threshold [351](#)setting maximum and reserved memory allocations [331](#)setting WTD thresholds [331](#)enabling [317](#)

## ingress queues

allocating buffers [339](#)assigning SRR scheduling weights [337](#)defining the CoS input queue threshold map [341](#)defining the DSCP input queue threshold map [343](#)displaying buffer allocations [586](#)displaying CoS input queue threshold map [590](#)displaying DSCP input queue threshold map [590](#)displaying queueing strategy [586](#)displaying settings for [585](#)enabling the priority queue [345](#)mapping CoS values to a queue and threshold [341](#)mapping DSCP values to a queue and threshold [343](#)setting WTD thresholds [347](#)

## maps

defining [325, 341, 343, 349, 351](#)

## policy maps

applying an aggregate policer [388](#)applying to an interface [429, 434](#)creating [390](#)defining policers [319, 386](#)displaying policers [584](#)

- hierarchical [391](#)
- policed-DSCP map [325](#)
- setting DSCP or IP precedence values [432](#)
- traffic classifications [78](#)
- trust states [765](#)
- port trust states [353](#)
- queues, enabling the expedite [402](#)
- statistics
  - in-profile and out-of-profile packets [586](#)
  - packets enqueued or dropped [586](#)
  - sent and received CoS values [586](#)
  - sent and received DSCP values [586](#)
- trusted boundary for IP phones [353](#)
- quality of service
  - See QoS
- querytime, MVR [360](#)
- queue-set command [405](#)

## R

- radius-server dead-criteria command [406](#)
- radius-server host command [408](#)
- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- rcommand command [410](#)
- re-authenticating IEEE 802.1x-enabled ports [161](#)
- re-authentication
  - periodic [162](#)
  - time between attempts [168](#)
- receiver ports, MVR [363](#)
- receiving flow-control packets [187](#)
- recovery mechanism
  - causes [181](#)
  - display [86, 454, 497, 499](#)
  - timer interval [182](#)
- redundancy for cluster switches [113](#)
- reload command [412](#)

- remote command [414](#)
- remote-span command [416](#)
- Remote Switched Port Analyzer
  - See RSPAN
- rename (boot loader) command [17](#)
- renew ip dhcp snooping database command [418](#)
- reset (boot loader) command [18](#)
- resource templates, displaying [618](#)
- restricted VLAN
  - See dot1x auth-fail vlan
- rmdir (boot loader) command [19](#)
- rmon collection stats command [421](#)
- root guard, for spanning tree [674](#)
- RSPAN
  - configuring [355](#)
  - filter RSPAN traffic [355](#)
  - remote-span command [416](#)

## S

- scheduled switchover
  - disabling [129](#)
  - enabling [129](#)
- SDM mismatch mode [631](#)
- sdm prefer command [422](#)
- SDM templates
  - displaying [618](#)
  - dual IPv4 and IPv6 [422](#)
- secure ports, limitations [743](#)
- sending flow-control packets [187](#)
- service password-recovery command [427](#)
- service-policy command [429](#)
- session command [431](#)
- set (boot loader) command [20](#)
- set command [432](#)
- setup command [434](#)
- setup express command [437](#)
- show access-lists command [439](#)
- show archive status command [442](#)

- show arp access-list command 443
- show authentication command 444
- show auto qos command 448
- show boot command 452
- show cable-diagnostics tdr command 454
- show cisp command 456
- show class-map command 457
- show cluster candidates command 460
- show cluster command 458
- show cluster members command 462
- show controllers cpu-interface command 464
- show controllers ethernet-controller command 466
- show controllers power inline command 477
- show controllers tcam command 479
- show controller utilization command 481
- show dot1x command 486
- show dtp 490
- show eap command 492
- show env command 495
- show errdisable detect command 497
- show errdisable flap-values command 498
- show errdisable recovery command 499
- show etherchannel command 501
- show fallback profile command 504
- show flowcontrol command 505
- show interfaces command 507
- show interfaces counters command 515
- show inventory command 517
- show ip arp inspection command 518
- show ip dhcp snooping binding command 523
- show ip dhcp snooping command 522
- show ip dhcp snooping database command 525, 527
- show ip igmp profile command 530
- show ip igmp snooping command 531, 542
- show ip igmp snooping groups command 534
- show ip igmp snooping mrouter command 536
- show ip igmp snooping querier command 537
- show ip source binding command 539
- show ipv6 route updated 550
- show ip verify source command 540
- show lacp command 552
- show link state group command 556
- show logging onboard command 560
- show mac access-group command 565
- show mac address-table address command 568
- show mac address-table aging time command 569
- show mac address-table command 566
- show mac address-table count command 571
- show mac address-table dynamic command 572
- show mac address-table interface command 574
- show mac address-table move update command 576
- show mac address-table notification command 94, 577, 26
- show mac address-table static command 579
- show mac address-table vlan command 581
- show mls qos aggregate-policer command 584
- show mls qos command 583
- show mls qos input-queue command 585
- show mls qos interface command 586
- show mls qos maps command 590
- show mls qos queue-set command 593
- show mls qos vlan command 594
- show monitor command 595
- show mvr command 597
- show mvr interface command 598
- show mvr members command 600
- show network-policy profile command 602
- show nmsp command 603
- show pagp command 606
- show platform acl command 2
- show platform backup interface command 3
- show platform etherchannel command 4
- show platform forward command 5
- show platform frontend-controller command 7
- show platform igmp snooping command 8
- show platform ip unicast command 9
- show platform layer4op command 10
- show platform mac-address-table command 11
- show platform messaging command 12

- show platform monitor command [13](#)
- show platform mvr table command [14](#)
- show platform pm command [15](#)
- show platform port-asic command [16](#)
- show platform port-security command [21](#)
- show platform qos command [22](#)
- show platform resource-manager command [23](#)
- show platform snmp counters command [25](#)
- show platform spanning-tree command [26](#)
- show platform stack manager command [28](#)
- show platform stp-instance command [27](#)
- show platform tb command [32](#)
- show platform team command [34](#)
- show platform vlan command [36](#)
- show policy-map command [608](#)
- show port security command [609](#)
- show power inline command [611](#)
- show psp config [616](#)
- show psp config command [616](#)
- show psp statistics [617](#)
- show psp statistics command [617](#)
- show sdm prefer command [618](#)
- show setup express command [621](#)
- show spanning-tree command [622](#)
- show storm-control command [628](#)
- show switch command [630](#)
- show system mtu command [634](#)
- show trust command [765](#)
- show udd command [635](#)
- show version command [638](#)
- show vlan command [639](#)
- show vlan command, fields [640](#)
- show vmps command [642](#)
- show vtp command [644](#)
- shutdown command [649](#)
- shutdown vlan command [650](#)
- small violation-rate command [651](#)
- SNMP host, specifying [657](#)
- SNMP informs, enabling the sending of [653](#)
- snmp-server enable traps command [653](#)
- snmp-server host command [657](#)
- snmp trap mac-notification change command [661](#)
- SNMP traps
  - enabling MAC address notification trap [661](#)
  - enabling the MAC address notification feature [305](#)
  - enabling the sending of [653](#)
- SoftPhone
  - See Cisco SoftPhone
- software images
  - copying [6](#)
  - deleting [120](#)
  - downloading [9](#)
  - upgrading [6, 9](#)
  - uploading [16](#)
- software version, displaying [638](#)
- source ports, MVR [363](#)
- SPAN
  - configuring [355](#)
  - debug messages, display [27](#)
  - filter SPAN traffic [355](#)
  - sessions
    - add interfaces to [355](#)
    - start new [355](#)
- spanning-tree backbonefast command [663](#)
- spanning-tree bpdupfilter command [664](#)
- spanning-tree bpduguard command [666](#)
- spanning-tree cost command [668](#)
- spanning-tree etherchannel command [670](#)
- spanning-tree extend system-id command [672](#)
- spanning-tree guard command [674](#)
- spanning-tree link-type command [676](#)
- spanning-tree loopguard default command [678](#)
- spanning-tree mode command [679](#)
- spanning-tree mst configuration command [681](#)
- spanning-tree mst cost command [683](#)
- spanning-tree mst forward-time command [685](#)
- spanning-tree mst hello-time command [686](#)
- spanning-tree mst max-age command [687](#)



- spanning-tree mst max-hops command [688](#)
- spanning-tree mst port-priority command [690](#)
- spanning-tree mst pre-standard command [692](#)
- spanning-tree mst priority command [693](#)
- spanning-tree mst root command [694](#)
- spanning-tree portfast (global configuration) command [698](#)
- spanning-tree portfast (interface configuration) command [700](#)
- spanning-tree port-priority command [696](#)
- Spanning Tree Protocol
  - See STP
- spanning-tree transmit hold-count command [702](#)
- spanning-tree uplinkfast command [703](#)
- spanning-tree vlan command [705](#)
- speed command [708](#)
- srr-queue bandwidth limit command [710](#)
- srr-queue bandwidth share command [714](#)
- SSH, configuring version [260](#)
- stack-mac persistent timer command [716](#)
- stack member
  - access [431](#)
  - number [630](#), [727](#)
  - priority value [724](#)
  - provisioning [725](#)
  - reloading [412](#)
- stacks, switch
  - disabling a member [722](#)
  - enabling a member [722](#)
  - MAC address [716](#)
  - provisioning a new member [725](#)
  - reloading [412](#)
  - stack member access [431](#)
  - stack member number [630](#), [727](#)
  - stack member priority value [630](#), [724](#)
- static-access ports, configuring [729](#)
- statistics, Ethernet group [421](#)
- sticky learning, enabling [741](#)
- storm-control command [719](#)

## STP

- BackboneFast [663](#)
- counters, clearing [100](#)
- debug messages, display
  - BackboneFast events [74](#)
  - MSTP [77](#)
  - optimized BPDUs handling [76](#)
  - spanning-tree activity [72](#)
  - switch shim [79](#)
  - transmitted and received BPDUs [75](#)
  - UplinkFast [81](#)
- detection of indirect link failures [663](#)
- EtherChannel misconfiguration [670](#)
- extended system ID [672](#)
- path cost [668](#)
- protocol modes [679](#)
- root port
  - accelerating choice of new [703](#)
  - loop guard [674](#)
  - preventing from becoming designated [674](#)
  - restricting which can be root [674](#)
  - root guard [674](#)
  - UplinkFast [703](#)
- root switch
  - affects of extended system ID [672](#), [706](#)
  - hello-time [705](#)
  - interval between BDPU messages [705](#)
  - interval between hello BPDU messages [705](#)
  - max-age [705](#)
  - port priority for selection of [696](#)
  - primary or secondary [705](#)
  - switch priority [705](#)
- state changes
  - blocking to forwarding state [700](#)
  - enabling BPDU filtering [664](#), [698](#)
  - enabling BPDU guard [666](#), [698](#)
  - enabling Port Fast [698](#), [700](#)
  - enabling timer to recover from error state [181](#)
  - forward-delay time [705](#)

- length of listening and learning states [705](#)
- shutting down Port Fast-enabled ports [698](#)
- state information display [622](#)
- VLAN options [693, 705](#)
- Switched Port Analyzer
  - See SPAN
- switchport access command [729](#)
- switchport backup interface command [731](#)
- switchport block command [735](#)
- switchport host command [736](#)
- switchport mode command [737](#)
- switchport nonegotiate command [739](#)
- switchport port-security aging command [746](#)
- switchport port-security command [741](#)
- switchport priority extend command [748](#)
- switchport protected command [750](#)
- switchports, displaying [507](#)
- switchport trunk command [752](#)
- switchport voice vlan command [755](#)
- switch priority command [722, 724](#)
- switch provision command [725](#)
- switch renumber command [727](#)
- system message logging [288](#)
- system message logging, save message to flash [289](#)
- system mtu command [757](#)
- system resource templates [422](#)

## T

- tar files, creating, listing, and extracting [13](#)
- TDR, running [759](#)
- Telnet, using to communicate to cluster switches [410](#)
- temperature information, displaying [495](#)
- templates, system resources [422](#)
- test cable-diagnostics tdr command [759](#)
- traceroute mac command [760](#)
- traceroute mac ip command [763](#)
- trunking, VLAN mode [737](#)
- trunk mode [737](#)

- trunk ports [737](#)
- trunks, to non-DTP device [738](#)
- trusted boundary for QoS [353](#)
- trusted port states for QoS [353](#)
- type (boot loader) command [23](#)

## U

### UDLD

- aggressive mode [767, 769](#)
- debug messages, display [89](#)
- enable globally [767](#)
- enable per interface [769](#)
- error recovery timer [181](#)
- message timer [767](#)
- normal mode [767, 769](#)
- reset a shutdown interface [771](#)
- status [635](#)

- udld command [767](#)

- udld port command [769](#)

- udld reset command [771](#)

- unicast storm control [719](#)

### UniDirectional Link Detection

- See UDLD

- unknown multicast traffic, preventing [735](#)

- unknown unicast traffic, preventing [735](#)

- unset (boot loader) command [24](#)

### upgrading

- software images

- copying [6](#)

- downloading [9](#)

- monitoring status of [442](#)

- UplinkFast, for STP [703](#)

- usb-inactivity-timeout (console configuration) command [772](#)

- user EXEC mode [2, 3](#)

## V

- version (boot loader) command [26](#)
- version mismatch mode [631](#)
- vlan (global configuration) command [773](#)
- VLAN configuration
  - rules [776](#)
  - saving [773](#)
- VLAN configuration mode
  - description [5](#)
  - summary [3](#)
- VLAN ID range [773](#)
- VLAN Query Protocol
  - See VQP
- VLANs
  - adding [773](#)
  - configuring [773](#)
  - debug messages, display
    - ISL [85](#)
    - VLAN IOS file system error tests [84](#)
    - VLAN manager activity [82](#)
    - VTP [87](#)
  - displaying configurations [639](#)
  - enabling guest VLAN supplicant [136, 147, 186](#)
  - extended-range [773](#)
  - MAC addresses
    - displaying [581](#)
    - number of [571](#)
  - media types [775](#)
  - normal-range [773](#)
  - restarting [650](#)
  - saving the configuration [773](#)
  - shutting down [650](#)
  - SNMP traps for VTP [655, 658](#)
  - suspending [650](#)
- VLAN Trunking Protocol
  - See VTP
- VM mode [631](#)
- VMPS
  - configuring servers [781](#)
  - displaying [642](#)
  - error recovery timer [182](#)
  - reconfirming dynamic VLAN assignments [778](#)
- vmmps reconfirm (global configuration) command [779](#)
- vmmps reconfirm (privileged EXEC) command [778](#)
- vmmps retry command [780](#)
- vmmps server command [781](#)
- voice VLAN
  - configuring [755](#)
  - setting port priority [748](#)
- VQP
  - and dynamic-access ports [730](#)
  - clearing client statistics [102](#)
  - displaying information [642](#)
  - per-server retry count [780](#)
  - reconfirmation interval [779](#)
  - reconfirming dynamic VLAN assignments [778](#)
- VTP
  - changing characteristics [783](#)
  - clearing pruning counters [103](#)
  - configuring
    - domain name [783](#)
    - file name [783](#)
    - mode [783](#)
    - password [784](#)
  - counters display fields [645](#)
  - displaying information [644](#)
  - enabling
    - pruning [784](#)
    - Version 2 [784](#)
  - enabling per port [788](#)
  - mode [783](#)
  - pruning [784](#)
  - saving the configuration [773](#)
  - statistics [644](#)
  - status [644](#)
  - status display fields [647](#)
- vtp (global configuration) command [783](#)

vtp interface configuration) command [788](#)

vtp primary command [789](#)