



INDEX

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5](#)
- AAA methods [2-3](#)
- abort command [2-663](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-124](#)
 - MAC, displaying [2-437](#)
- access mode [2-616](#)
- access ports [2-616](#)
- ACEs [2-71, 2-280](#)
- ACLs
 - deny [2-69](#)
 - displaying [2-328](#)
 - for non-IP protocols [2-200](#)
 - IP [2-124](#)
 - on Layer 2 interfaces [2-124](#)
 - permit [2-278](#)
- address aliasing [2-269](#)
- aggregate-port learner [2-274](#)
- allowed VLANs [2-631](#)
- apply command [2-663](#)
- archive copy-sw command [2-6](#)
- archive download-sw command [2-9](#)
- archive tar command [2-12](#)
- archive upload-sw command [2-15](#)

- authentication failed VLAN
 - See dot1x auth-fail vlan
- auth-fail max-attempts
 - See dot1x auth-fail max-attempts
- auth-fail vlan
 - See dot1x auth-fail vlan
- authorization state of controlled port [2-96](#)
- autonegotiation of duplex mode [2-106](#)
- auto qos voip command [2-17](#)

B

- BackboneFast, for STP [2-543](#)
- backup interfaces
 - configuring [2-610](#)
 - displaying [2-386](#)
- boot (boot loader) command [A-2](#)
- boot auto-copy-sw command [2-22](#)
- boot config-file command [2-23](#)
- boot enable-break command [2-24](#)
- boot helper command [2-25](#)
- boot helper-config file command [2-26](#)
- booting
 - Cisco IOS image [2-29](#)
 - displaying environment variables [2-336](#)
 - interrupting [2-24](#)
 - manually [2-27](#)
- boot loader
 - accessing [A-1](#)
 - booting
 - Cisco IOS image [A-2](#)
 - helper image [2-25](#)

bootloader (continued)

directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-13](#)
- version [A-26](#)

environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsetting [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4](#), [A-16](#), [A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-27](#)boot private-config-file command [2-28](#)boot system command [2-29](#)BPDU filtering, for spanning tree [2-544](#), [2-579](#)BPDU guard, for spanning tree [2-546](#), [2-579](#)broadcast storm control [2-600](#)**C**

candidate switches

See clusters

cat (boot loader) command [A-4](#)channel-group command [2-31](#)channel-protocol command [2-34](#)

Cisco SoftPhone

- auto-QoS configuration [2-17](#)
- trusting packets sent from [2-261](#)

class command [2-35](#)class-map command [2-37](#)

class maps

- creating [2-37](#)
- defining the match criteria [2-222](#)
- displaying [2-340](#)

class of service

See CoS

clear dot1x command [2-39](#)clear eap sessions command [2-40](#)clear errdisable interface [2-41](#)clear ip dhcp snooping database command [2-42](#)clear lacp command [2-44](#)clear mac address-table command [2-45](#), [2-46](#)clear pagp command [2-47](#)clear port-security command [2-48](#)clear spanning-tree counters command [2-50](#)clear spanning-tree detected-protocols command [2-51](#)clear vmps statistics command [2-52](#)clear vtp counters command [2-53](#)cluster commander-address command [2-54](#)cluster discovery hop-count command [2-56](#)cluster enable command [2-57](#)cluster holdtime command [2-58](#)cluster member command [2-59](#)cluster outside-interface command [2-61](#)cluster run command [2-62](#)

clusters

adding candidates [2-59](#)

binding to HSRP group [2-63](#)

building manually [2-59](#)

communicating with

- devices outside the cluster [2-61](#)
- members by using Telnet [2-304](#)

clusters (continued)

- debug messages, display [B-5](#)
- displaying
 - candidate switches [2-343](#)
 - debug messages [B-5](#)
 - member switches [2-345](#)
 - status [2-341](#)
- hop-count limit for extended discovery [2-56](#)
- HSRP standby groups [2-63](#)
- redundancy [2-63](#)
- SNMP trap [2-533](#)
- cluster standby-group command [2-63](#)
- cluster timer command [2-65](#)
- command modes defined [1-2](#)
- command switch
 - See clusters
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-23, 2-28](#)
- configuring multiple interfaces [2-121](#)
- config-vlan mode
 - commands [2-652](#)
 - description [1-4](#)
 - entering [2-651](#)
 - summary [1-3](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-231](#)
 - overriding the incoming value [2-231](#)
- CoS-to-DSCP map [2-235](#)
- CPU ASIC statistics, displaying [2-347](#)
- crashinfo files [2-114](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-8](#)
- debug eap command [B-9](#)
- debug etherchannel command [B-10](#)
- debug ilpower command [B-12](#)
- debug interface command [B-13](#)
- debug ip dhcp snooping command [B-15](#)
- debug ip igmp filter command [B-16](#)
- debug ip igmp max-groups command [B-17](#)
- debug ip igmp snooping command [B-18](#)
- debug lacp command [B-19](#)
- debug mac-notification command [B-20](#)
- debug matm command [B-21](#)
- debug matm move update command [B-22](#)
- debug monitor command [B-23](#)
- debug mvrdbg command [B-25](#)
- debug nvram command [B-26](#)
- debug pagp command [B-27](#)
- debug platform acl command [B-28](#)
- debug platform backup interface command [B-29](#)
- debug platform cli-redirection main command [B-30](#)
- debug platform configuration command [B-31, B-37](#)
- debug platform cpu-queues command [B-32](#)
- debug platform dot1x command [B-34](#)
- debug platform etherchannel command [B-35](#)
- debug platform forw-tcam command [B-36](#)
- debug platform ip dhcp command [B-39](#)
- debug platform ip igmp snooping command [B-40](#)
- debug platform led command [B-42](#)
- debug platform matm command [B-43](#)
- debug platform messaging application command [B-45](#)
- debug platform phy command [B-47](#)
- debug platform pm command [B-49](#)
- debug platform port-asic command [B-51](#)
- debug platform port-security command [B-52](#)
- debug platform qos-acl-tcam command [B-53](#)
- debug platform resource-manager command [B-54](#)
- debug platform snmp command [B-55](#)
- debug platform span command [B-56](#)
- debug platform stack-manager command [B-57](#)

- debug platform supervisor-asic command [B-58](#)
- debug platform sw-bridge command [B-59](#)
- debug platform tcam command [B-60](#)
- debug platform udlld command [B-62](#)
- debug platform vlan command [B-63](#)
- debug pm command [B-64](#)
- debug port-security command [B-66](#)
- debug qos-manager command [B-67](#)
- debug spanning-tree backbonefast command [B-70](#)
- debug spanning-tree bpdu command [B-71](#)
- debug spanning-tree bpdu-opt command [B-72](#)
- debug spanning-tree command [B-68](#)
- debug spanning-tree mstp command [B-73](#)
- debug spanning-tree switch command [B-75](#)
- debug spanning-tree uplinkfast command [B-77](#)
- debug sw-vlan command [B-78](#)
- debug sw-vlan ifs command [B-80](#)
- debug sw-vlan notification command [B-81](#)
- debug sw-vlan vtp command [B-83](#)
- debug udlld command [B-85](#)
- debug vqpc command [B-87](#)
- define interface-range command [2-66](#)
- delete (boot loader) command [A-6](#)
- delete command [2-68](#)
- deny command [2-69](#)
- detect mechanism, causes [2-107](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-138](#)
 - enabling
 - on a VLAN [2-143](#)
 - option 82 [2-136, 2-138](#)
 - trust on an interface [2-141](#)
 - error recovery timer [2-112](#)
 - rate limiting [2-140](#)
- DHCP snooping binding database
 - binding file, configuring [2-134](#)
 - bindings
 - adding [2-132](#)
 - deleting [2-132](#)
 - displaying [2-400](#)
 - clearing database agent statistics [2-42](#)
 - database agent, configuring [2-134](#)
 - displaying
 - binding entries [2-400](#)
 - database agent status [2-403, 2-405](#)
 - renewing [2-311](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-68](#)
- domain name, VTP [2-670, 2-674](#)
- dot1x auth-fail max-attempts [2-74](#)
- dot1x auth-fail vlan [2-76](#)
- dot1x command [2-72](#)
- dot1x control-direction command [2-78](#)
- dot1x critical global configuration command [2-80](#)
- dot1x critical interface configuration command [2-82](#)
- dot1x default command [2-84](#)
- dot1x fallback command [2-85](#)
- dot1x guest-vlan command [2-86](#)
- dot1x host-mode command [2-88](#)
- dot1x initialize command [2-90](#)
- dot1x mac-auth-bypass command [2-91](#)
- dot1x max-reauth-req command [2-93](#)
- dot1x max-req command [2-94](#)
- dot1x pae command [2-95](#)
- dot1x port-control command [2-96](#)
- dot1x re-authenticate command [2-98](#)
- dot1x reauthentication command [2-99](#)
- dot1x test eapol-capable command [2-100](#)
- dot1x test timeout command [2-101](#)
- dot1x timeout command [2-102](#)
- dot1x violation-mode command [2-104](#)
- DSCP-to-CoS map [2-235](#)
- DSCP-to-DSCP-mutation map [2-235](#)

DTP [2-617](#)

DTP flap

error detection for [2-107](#)

error recovery timer [2-112](#)

DTP negotiation [2-618](#)

dual-purpose uplink ports

displaying configurable options [2-389](#)

displaying the active media [2-393](#)

selecting the type [2-225](#)

duplex command [2-105](#)

dynamic-access ports

configuring [2-608](#)

restrictions [2-609](#)

dynamic auto VLAN membership mode [2-616](#)

dynamic desirable VLAN membership mode [2-616](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-94](#)

response time before retransmitting [2-102](#)

environment variables, displaying [2-336](#)

errdisable detect cause command [2-107](#)

errdisable detect cause small-frame command [2-109](#)

errdisable recovery cause small-frame [2-111](#)

errdisable recovery command [2-112](#)

error conditions, displaying [2-375](#)

error disable detection [2-107](#)

error-disabled interfaces, displaying [2-386](#)

EtherChannel

assigning Ethernet interface to channel group [2-31](#)

creating port-channel logical interface [2-119](#)

debug EtherChannel/PAGP, display [B-10](#)

debug platform-specific events, display [B-35](#)

displaying [2-379](#)

EtherChannel (continued)

interface information, displaying [2-386](#)

LACP

clearing channel-group information [2-44](#)

debug messages, display [B-19](#)

displaying [2-428](#)

modes [2-31](#)

port priority for hot-standby ports [2-183](#)

restricting a protocol [2-34](#)

system priority [2-185](#)

load-distribution methods [2-287](#)

PAGP

aggregate-port learner [2-274](#)

clearing channel-group information [2-47](#)

debug messages, display [B-27](#)

displaying [2-483](#)

error detection for [2-107](#)

error recovery timer [2-112](#)

learn method [2-274](#)

modes [2-31](#)

physical-port learner [2-274](#)

priority of interface for transmitted traffic [2-276](#)

Ethernet controller, internal register display [2-349](#)

Ethernet statistics, collecting [2-313](#)

exception crashinfo command [2-114](#)

exit command [2-663](#)

extended discovery of candidate switches [2-56](#)

extended-range VLANs

and allowed VLAN list [2-631](#)

and pruning-eligible list [2-631](#)

configuring [2-651](#)

extended system ID for STP [2-552](#)

F

fallback profile command [2-115](#)

fallback profiles, displaying [2-382](#)

fan information, displaying [2-371](#)

file name, VTP [2-670](#)

files, deleting [2-68](#)

flash_init (boot loader) command [A-9](#)

Flex Links

- configuring [2-610](#)
- configuring preferred VLAN [2-612](#)
- displaying [2-386](#)

flowcontrol command [2-117](#)

format (boot loader) command [A-10](#)

forwarding results, display [C-5](#)

frame forwarding information, displaying [C-5](#)

front-end controller, counter and status information [C-7](#)

fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-328](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-285](#)

hop-count limit for clusters [2-56](#)

host connection, port configuration [2-615](#)

Hot Standby Router Protocol

- See HSRP

HSRP

- binding HSRP group to cluster [2-63](#)
- standby group [2-63](#)

I

IEEE 802.1x

- and switchport modes [2-617](#)
- violation error recovery [2-112](#)
- See also port-based authentication

IEEE 802.1X Port Based Authentication

- enabling guest VLAN supplicant [2-75, 2-85, 2-116](#)

IGMP filters

- applying [2-144](#)
- debug messages, display [B-16](#)

IGMP groups, setting maximum [2-146](#)

IGMP maximum groups, debugging [B-17](#)

IGMP profiles

- creating [2-148](#)
- displaying [2-408](#)

IGMP snooping

- adding ports as a static member of a group [2-165](#)
- displaying [2-409, 2-414, 2-416](#)
- enabling [2-150](#)
- enabling the configurable-leave timer [2-152](#)
- enabling the Immediate-Leave feature [2-161](#)
- flooding query count [2-158](#)
- interface topology change notification behavior [2-160](#)
- multicast table [2-412](#)
- querier [2-154](#)
- query solicitation [2-158](#)
- report suppression [2-156](#)
- switch topology change notification behavior [2-158](#)

images

- See software images

Immediate-Leave feature, MVR [2-271](#)

immediate-leave processing [2-161](#)

Immediate-Leave processing, IPv6 [2-181](#)

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-119](#)

interface range command [2-121](#)

interface-range macros [2-66](#)

interfaces

- assigning Ethernet interface to channel group [2-31](#)
- configuring [2-105](#)
- configuring multiple [2-121](#)
- creating port-channel logical [2-119](#)
- debug messages, display [B-13](#)
- disabling [2-529](#)
- displaying the MAC address table [2-449](#)
- restarting [2-529](#)

interface speed, configuring [2-589](#)
 interface vlan command [2-123](#)
 internal registers, displaying [2-349, 2-358](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [2-107](#)
 error recovery timer [2-112](#)
 ip access-group command [2-124](#)
 ip address command [2-126](#)
 IP addresses, setting [2-126](#)
 ip admission command [2-128](#)
 ip admission name proxy http command [2-129](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [2-132](#)
 ip dhcp snooping command [2-131](#)
 ip dhcp snooping database command [2-134](#)
 ip dhcp snooping information option allow-untrusted command [2-138](#)
 ip dhcp snooping information option command [2-136](#)
 ip dhcp snooping limit rate command [2-140](#)
 ip dhcp snooping trust command [2-141](#)
 ip dhcp snooping verify command [2-142](#)
 ip dhcp snooping vlan command [2-143](#)
 ip igmp filter command [2-144](#)
 ip igmp max-groups command [2-146](#)
 ip igmp profile command [2-148](#)
 ip igmp snooping command [2-150](#)
 ip igmp snooping last-member-query-interval command [2-152](#)
 ip igmp snooping querier command [2-154](#)
 ip igmp snooping report-suppression command [2-156](#)
 ip igmp snooping tcn command [2-158](#)
 ip igmp snooping tcn flood command [2-160](#)
 ip igmp snooping vlan immediate-leave command [2-161](#)
 ip igmp snooping vlan mrouter command [2-163](#)
 ip igmp snooping vlan static command [2-165](#)
 IP multicast addresses [2-268](#)

IP phones
 auto-QoS configuration [2-17](#)
 trusting packets sent from [2-261](#)
 IP-precedence-to-DSCP map [2-235](#)
 IP source guard
 displaying
 dynamic binding entries only [2-400](#)
 ip ssh command [2-167](#)
 ipv6 mld snooping command [2-169](#)
 ipv6 mld snooping last-listener-query count command [2-171](#)
 ipv6 mld snooping last-listener-query-interval command [2-173](#)
 ipv6 mld snooping listener-message-suppression command [2-175](#)
 ipv6 mld snooping robustness-variable command [2-177](#)
 ipv6 mld snooping tcn command [2-179](#)
 ipv6 mld snooping vlan command [2-181](#)
 IPv6 SDM template [2-314](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [2-183](#)
 lacp system-priority command [2-185](#)
 Layer 2 traceroute
 IP addresses [2-642](#)
 MAC addresses [2-639](#)
 line configuration mode [1-3, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel

link flap

- error detection for [2-107](#)
- error recovery timer [2-112](#)

link state group command [2-191](#)

link state track command [2-193](#)

load-distribution methods for EtherChannel [2-287](#)

location (global configuration) command [2-187](#)

location (interface configuration) command [2-189](#)

logging event command [2-194](#)

logging event power-inline-status command [2-195](#)

logging file command [2-196](#)

logical interface [2-119](#)

loopback error

- detection for [2-107](#)
- recovery timer [2-112](#)

loop guard, for spanning tree [2-554, 2-558](#)

M

mac access-group command [2-198](#)

MAC access-groups, displaying [2-437](#)

MAC access list configuration mode [2-200](#)

mac access-list extended command [2-200](#)

MAC access lists [2-69](#)

MAC addresses

- disabling MAC address learning per VLAN [2-203](#)
- displaying
 - aging time [2-443](#)
 - all [2-441](#)
 - dynamic [2-447](#)
 - MAC address-table move updates [2-452](#)
 - notification settings [2-451, 2-454](#)
 - number of addresses in a VLAN [2-445](#)
 - per interface [2-449](#)
 - per VLAN [2-458](#)
 - static [2-456](#)
 - static and dynamic entries [2-439](#)

MAC addresses (continued)

- dynamic
 - aging time [2-202](#)
 - deleting [2-45](#)
 - displaying [2-447](#)
- enabling MAC address notification [2-207](#)
- enabling MAC address-table move update [2-205](#)
- persistent stack [2-597](#)
- static
 - adding and removing [2-209](#)
 - displaying [2-456](#)
 - dropping on an interface [2-210](#)
- tables [2-441](#)

MAC address notification, debugging [B-20](#)

mac address-table aging-time [2-198](#)

mac address-table aging-time command [2-202](#)

mac address-table learning command [2-203](#)

mac address-table move update command [2-205](#)

mac address-table notification command [2-207](#)

mac address-table static command [2-209](#)

mac address-table static drop command [2-210](#)

macro apply command [2-212](#)

macro description command [2-215](#)

macro global command [2-216](#)

macro global description command [2-219](#)

macro name command [2-220](#)

macros

- adding a description [2-215](#)
- adding a global description [2-219](#)
- applying [2-216](#)
- creating [2-220](#)
- displaying [2-485](#)
- interface range [2-66, 2-121](#)
- specifying parameter values [2-216](#)
- tracing [2-216](#)

maps

- QoS
 - defining [2-235](#)
 - displaying [2-468](#)

match (class-map configuration) command [2-222](#)
 maximum transmission unit
 See MTU
 mdix auto command [2-224](#)
 media-type command [2-225](#)
 member switches
 See clusters
 memory (boot loader) command [A-13](#)
 mkdir (boot loader) command [A-15](#)
 MLD snooping
 configuring [2-175, 2-177](#)
 configuring queries [2-171, 2-173](#)
 configuring topology change notification [2-179](#)
 displaying [2-418, 2-420, 2-422, 2-424](#)
 enabling [2-169](#)
 MLD snooping on a VLAN, enabling [2-181](#)
 mls qos aggregate-policer command [2-229](#)
 mls qos command [2-227](#)
 mls qos cos command [2-231](#)
 mls qos dscp-mutation command [2-233](#)
 mls qos map command [2-235](#)
 mls qos queue-set output buffers command [2-239](#)
 mls qos queue-set output threshold command [2-241](#)
 mls qos rewrite ip dscp command [2-243](#)
 mls qos srr-queue input bandwidth command [2-245](#)
 mls qos srr-queue input buffers command [2-247](#)
 mls qos-srr-queue input cos-map command [2-249](#)
 mls qos srr-queue input dscp-map command [2-251](#)
 mls qos srr-queue input priority-queue command [2-253](#)
 mls qos srr-queue input threshold command [2-255](#)
 mls qos-srr-queue output cos-map command [2-257](#)
 mls qos srr-queue output dscp-map command [2-259](#)
 mls qos trust command [2-261](#)
 mode, MVR [2-268](#)
 Mode button, and password recovery [2-316](#)
 modes, commands [1-2](#)
 monitor session command [2-263](#)
 more (boot loader) command [A-16](#)

MSTP

displaying [2-502](#)
 interoperability [2-51](#)
 link type [2-556](#)
 MST region
 aborting changes [2-562](#)
 applying changes [2-562](#)
 configuration name [2-562](#)
 configuration revision number [2-562](#)
 current or pending display [2-562](#)
 displaying [2-502](#)
 MST configuration mode [2-562](#)
 VLANs-to-instance mapping [2-562](#)
 path cost [2-564](#)
 protocol mode [2-560](#)
 restart protocol migration process [2-51](#)
 root port
 loop guard [2-554](#)
 preventing from becoming designated [2-554](#)
 restricting which can be root [2-554](#)
 root guard [2-554](#)
 root switch
 affects of extended system ID [2-552](#)
 hello-time [2-567, 2-575](#)
 interval between BDPUs messages [2-568](#)
 interval between hello BDPUs messages [2-567, 2-575](#)
 max-age [2-568](#)
 maximum hop count before discarding BPDUs [2-569](#)
 port priority for selection of [2-571](#)
 primary or secondary [2-575](#)
 switch priority [2-574](#)

MSTP (continued)

state changes

- blocking to forwarding state [2-581](#)
- enabling BPDU filtering [2-544, 2-579](#)
- enabling BPDU guard [2-546, 2-579](#)
- enabling Port Fast [2-579, 2-581](#)
- forward-delay time [2-566](#)
- length of listening and learning states [2-566](#)
- rapid transition to forwarding [2-556](#)
- shutting down Port Fast-enabled ports [2-579](#)

state information display [2-501](#)

MTU

- configuring size [2-636](#)
- displaying global setting [2-512](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-271](#)multicast groups, MVR [2-269](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-163](#)multicast router ports, configuring [2-163](#)multicast router ports, IPv6 [2-181](#)multicast storm control [2-600](#)multicast VLAN, MVR [2-268](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [2-269](#)
- configuring [2-268](#)
- configuring interfaces [2-271](#)
- debug messages, display [B-25](#)
- displaying [2-477](#)
- displaying interface information [2-479](#)
- members, displaying [2-481](#)

mvr (global configuration) command [2-268](#)mvr (interface configuration) command [2-271](#)mvr vlan group command [2-272](#)

Nnative VLANs [2-631](#)Network Admission Control Software Configuration Guide [2-128, 2-130](#)nonegotiate, speed [2-589](#)nonegotiating DTP messaging [2-618](#)

non-IP protocols

- denying [2-69](#)
- forwarding [2-278](#)

non-IP traffic access lists [2-200](#)

non-IP traffic forwarding

- denying [2-69](#)
- permitting [2-278](#)

normal-range VLANs [2-651, 2-656](#)no vlan command [2-651, 2-660](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-274](#)pagp port-priority command [2-276](#)password, VTP [2-670, 2-674](#)password-recovery mechanism, enabling and disabling [2-316](#)permit (MAC access-list configuration) command [2-278](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-274](#)PID, displaying [2-398](#)PIM-DVMRP, as multicast router learning method [2-163](#)

PoE

- configuring the power budget [2-292](#)
- configuring the power management mode [2-289](#)
- displaying controller register values [2-356](#)

- PoE (continued)
 - displaying power management information [2-493](#)
 - logging of status [2-195](#)
 - monitoring power [2-294](#)
 - policing power consumption [2-294](#)
- police aggregate command [2-283](#)
- police command [2-281](#)
- policed-DSCP map [2-235](#)
- policy-map command [2-285](#)
- policy maps
 - applying to an interface [2-318, 2-323](#)
 - creating [2-285](#)
 - displaying [2-488](#)
 - hierarchical [2-285](#)
 - policers
 - displaying [2-461](#)
 - for a single class [2-281](#)
 - for multiple classes [2-229, 2-283](#)
 - policed-DSCP map [2-235](#)
 - traffic classification
 - defining the class [2-35](#)
 - defining trust states [2-644](#)
 - setting DSCP or IP precedence values [2-321](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-104](#)
 - debug messages, display [B-7](#)
 - enabling IEEE 802.1x
 - globally [2-72](#)
 - per interface [2-96](#)
 - guest VLAN [2-86](#)
 - host modes [2-88](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-90, 2-101](#)
 - MAC authentication bypass [2-91](#)
 - manual control of authorization state [2-96](#)
 - PAE as authenticator [2-95](#)
- port-based authentication (continued)
 - periodic re-authentication
 - enabling [2-99](#)
 - time between attempts [2-102](#)
 - quiet period between failed authentication exchanges [2-102](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-98](#)
 - resetting configurable IEEE 802.1x parameters [2-84](#)
 - switch-to-authentication server retransmission time [2-102](#)
 - switch-to-client frame-retransmission number [2-93 to 2-94](#)
 - switch-to-client retransmission time [2-102](#)
 - test for IEEE 802.1x readiness [2-100](#)
- port-channel load-balance command [2-287](#)
- Port Fast, for spanning tree [2-581](#)
- port ranges, defining [2-66](#)
- ports, debugging [B-64](#)
- ports, protected [2-629](#)
- port security
 - aging [2-625](#)
 - debug messages, display [B-66](#)
 - enabling [2-620](#)
 - violation error recovery [2-112](#)
- port trust states for QoS [2-261](#)
- port types, MVR [2-271](#)
- power information, displaying [2-371](#)
- power inline command [2-289](#)
- power inline consumption command [2-292](#)
- power inline police command [2-294](#)
- Power over Ethernet
 - See PoE
- priority-queue command [2-297](#)
- priority value, stack member [2-509, 2-603](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-398](#)
- protected ports, displaying [2-391](#)

pruning

VLANs [2-631](#)

VTP

displaying interface information [2-386](#)enabling [2-670, 2-674](#)pruning-eligible VLAN list [2-632](#)

PVST+

See STP

Q

QoS

auto-QoS

configuring [2-17](#)debug messages, display [B-2](#)displaying [2-332](#)

class maps

creating [2-37](#)defining the match criteria [2-222](#)displaying [2-340](#)defining the CoS value for an incoming packet [2-231](#)displaying configuration information [2-332, 2-460](#)DSCP transparency [2-243](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-233](#)defining DSCP-to-DSCP-mutation map [2-235](#)

egress queues

allocating buffers [2-239](#)defining the CoS output queue threshold map [2-257](#)defining the DSCP output queue threshold map [2-259](#)displaying buffer allocations [2-464](#)displaying CoS output queue threshold map [2-468](#)displaying DSCP output queue threshold map [2-468](#)displaying queueing strategy [2-464](#)displaying queue-set settings [2-471](#)

QoS (continued)

egress queues (continued)

enabling bandwidth shaping and scheduling [2-593](#)enabling bandwidth sharing and scheduling [2-595](#)limiting the maximum output on a port [2-591](#)mapping a port to a queue-set [2-299](#)mapping CoS values to a queue and threshold [2-257](#)mapping DSCP values to a queue and threshold [2-259](#)setting maximum and reserved memory allocations [2-241](#)setting WTD thresholds [2-241](#)enabling [2-227](#)

ingress queues

allocating buffers [2-247](#)assigning SRR scheduling weights [2-245](#)defining the CoS input queue threshold map [2-249](#)defining the DSCP input queue threshold map [2-251](#)displaying buffer allocations [2-464](#)displaying CoS input queue threshold map [2-468](#)displaying DSCP input queue threshold map [2-468](#)displaying queueing strategy [2-464](#)displaying settings for [2-462](#)enabling the priority queue [2-253](#)mapping CoS values to a queue and threshold [2-249](#)mapping DSCP values to a queue and threshold [2-251](#)setting WTD thresholds [2-255](#)

maps

defining [2-235, 2-249, 2-251, 2-257, 2-259](#)displaying [2-468](#)

QoS (continued)

policy maps

- applying an aggregate policer [2-283](#)
- applying to an interface [2-318, 2-323](#)
- creating [2-285](#)
- defining policers [2-229, 2-281](#)
- displaying policers [2-461](#)
- displaying policy maps [2-488](#)
- hierarchical [2-285](#)
- policed-DSCP map [2-235](#)
- setting DSCP or IP precedence values [2-321](#)
- traffic classifications [2-35](#)
- trust states [2-644](#)

port trust states [2-261](#)queues, enabling the expedite [2-297](#)

statistics

- in-profile and out-of-profile packets [2-464](#)
- packets enqueued or dropped [2-464](#)
- sent and received CoS values [2-464](#)
- sent and received DSCP values [2-464](#)

trusted boundary for IP phones [2-261](#)

quality of service

See QoS

querytime, MVR [2-268](#)queue-set command [2-299](#)**R**radius-server dead-criteria command [2-300](#)radius-server host command [2-302](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-304](#)re-authenticating IEEE 802.1x-enabled ports [2-98](#)

re-authentication

- periodic [2-99](#)
- time between attempts [2-102](#)

receiver ports, MVR [2-271](#)receiving flow-control packets [2-117](#)

recovery mechanism

- causes [2-112](#)
- display [2-41, 2-338, 2-373, 2-377](#)
- timer interval [2-112](#)

redundancy for cluster switches [2-63](#)reload command [2-306](#)remote command [2-308](#)remote-span command [2-309](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)renew ip dhcp snooping database command [2-311](#)reset (boot loader) command [A-18](#)reset command [2-663](#)resource templates, displaying [2-498](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)rmon collection stats command [2-313](#)root guard, for spanning tree [2-554](#)

RSPAN

- configuring [2-263](#)
- displaying [2-474](#)
- filter RSPAN traffic [2-263](#)
- remote-span command [2-309](#)
- sessions
 - displaying [2-474](#)

SSDM mismatch mode [2-510](#)sdm prefer command [2-314](#)

SDM templates

- displaying [2-498](#)
- dual IPv4 and IPv6 [2-314](#)

secure ports, limitations [2-622](#)sending flow-control packets [2-117](#)

- service password-recovery command [2-316](#)
- service-policy command [2-318](#)
- session command [2-320](#)
- set (boot loader) command [A-20](#)
- set command [2-321](#)
- setup command [2-323](#)
- setup express command [2-326](#)
- show access-lists command [2-328](#)
- show archive status command [2-331](#)
- show auto qos command [2-332](#)
- show boot command [2-336](#)
- show cable-diagnostics tdr command [2-338](#)
- show changes command [2-663](#)
- show class-map command [2-340](#)
- show cluster candidates command [2-343](#)
- show cluster command [2-341](#)
- show cluster members command [2-345](#)
- show controllers cpu-interface command [2-347](#)
- show controllers ethernet-controller command [2-349](#)
- show controllers power inline command [2-356](#)
- show controllers tcam command [2-358](#)
- show controller utilization command [2-360](#)
- show current command [2-663](#)
- show dot1x command [2-362](#)
- show dtp [2-366](#)
- show eap command [2-368](#)
- show env command [2-371](#)
- show errdisable detect command [2-373](#)
- show errdisable flap-values command [2-375](#)
- show errdisable recovery command [2-377](#)
- show etherchannel command [2-379](#)
- show fallback profile command [2-382](#)
- show flowcontrol command [2-384](#)
- show interfaces command [2-386](#)
- show interfaces counters command [2-395](#)
- show inventory command [2-398](#)
- show ip dhcp snooping binding command [2-400](#)
- show ip dhcp snooping command [2-399](#)
- show ip dhcp snooping database command [2-403, 2-405](#)
- show ip igmp profile command [2-408](#)
- show ip igmp snooping address command [2-420](#)
- show ip igmp snooping command [2-409, 2-418](#)
- show ip igmp snooping groups command [2-412](#)
- show ip igmp snooping mrouter command [2-414, 2-422](#)
- show ip igmp snooping querier command [2-416, 2-424](#)
- show ipv6 route updated [2-426](#)
- show lacp command [2-428](#)
- show link state group command [2-435](#)
- show location [2-432](#)
- show mac access-group command [2-437](#)
- show mac address-table address command [2-441](#)
- show mac address-table aging time command [2-443](#)
- show mac address-table command [2-439](#)
- show mac address-table count command [2-445](#)
- show mac address-table dynamic command [2-447](#)
- show mac address-table interface command [2-449](#)
- show mac address-table learning command [2-451](#)
- show mac address-table move update command [2-452](#)
- show mac address-table notification command [2-46, 2-454, B-22](#)
- show mac address-table static command [2-456](#)
- show mac address-table vlan command [2-458](#)
- show mls qos aggregate-policer command [2-461](#)
- show mls qos command [2-460](#)
- show mls qos input-queue command [2-462](#)
- show mls qos interface command [2-464](#)
- show mls qos maps command [2-468](#)
- show mls qos queue-set command [2-471](#)
- show mls qos vlan command [2-473](#)
- show monitor command [2-474](#)
- show mvr command [2-477](#)
- show mvr interface command [2-479](#)
- show mvr members command [2-481](#)
- show pagp command [2-483](#)
- show parser macro command [2-485](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)

- show platform forward command [C-5](#)
- show platform frontend-controller command [C-7](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stack-manager command [C-28](#)
- show platform stp-instance command [C-27](#)
- show platform tb command [C-30](#)
- show platform team command [C-32](#)
- show platform vlan command [C-34](#)
- show policy-map command [2-488](#)
- show port security command [2-490](#)
- show power inline command [2-493](#)
- show proposed command [2-663](#)
- show sdm prefer command [2-498](#)
- show setup express command [2-500](#)
- show spanning-tree command [2-501](#)
- show storm-control command [2-507](#)
- show switch command [2-509](#)
- show system mtu command [2-512](#)
- show trust command [2-644](#)
- show udd command [2-513](#)
- show version command [2-516](#)
- show vlan command [2-518](#)
- show vlan command, fields [2-519](#)
- show vmpls command [2-521](#)
- show vtp command [2-524](#)
- shutdown command [2-529](#)
- shutdown vlan command [2-530](#)
- small violation-rate command [2-531](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-537](#)
- SNMP informs, enabling the sending of [2-533](#)
- snmp-server enable traps command [2-533](#)
- snmp-server host command [2-537](#)
- snmp trap mac-notification command [2-541](#)
- SNMP traps
 - enabling MAC address notification trap [2-541](#)
 - enabling the MAC address notification feature [2-207](#)
 - enabling the sending of [2-533](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-6](#)
 - deleting [2-68](#)
 - downloading [2-9](#)
 - upgrading [2-6, 2-9](#)
 - uploading [2-15](#)
- software version, displaying [2-516](#)
- source ports, MVR [2-271](#)
- SPAN
 - configuring [2-263](#)
 - debug messages, display [B-23](#)
 - displaying [2-474](#)
 - filter SPAN traffic [2-263](#)
 - sessions
 - add interfaces to [2-263](#)
 - displaying [2-474](#)
 - start new [2-263](#)
- spanning-tree backbonefast command [2-543](#)
- spanning-tree bpduguard command [2-544](#)
- spanning-tree bpduguard command [2-546](#)
- spanning-tree cost command [2-548](#)
- spanning-tree etherchannel command [2-550](#)
- spanning-tree extend system-id command [2-552](#)
- spanning-tree guard command [2-554](#)
- spanning-tree link-type command [2-556](#)

- spanning-tree loopguard default command [2-558](#)
- spanning-tree mode command [2-560](#)
- spanning-tree mst configuration command [2-562](#)
- spanning-tree mst cost command [2-564](#)
- spanning-tree mst forward-time command [2-566](#)
- spanning-tree mst hello-time command [2-567](#)
- spanning-tree mst max-age command [2-568](#)
- spanning-tree mst max-hops command [2-569](#)
- spanning-tree mst port-priority command [2-571](#)
- spanning-tree mst pre-standard command [2-573](#)
- spanning-tree mst priority command [2-574](#)
- spanning-tree mst root command [2-575](#)
- spanning-tree portfast (global configuration) command [2-579](#)
- spanning-tree portfast (interface configuration) command [2-581](#)
- spanning-tree port-priority command [2-577](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-583](#)
- spanning-tree uplinkfast command [2-584](#)
- spanning-tree vlan command [2-586](#)
- speed command [2-589](#)
- srr-queue bandwidth limit command [2-591](#)
- srr-queue bandwidth share command [2-595](#)
- SSH, configuring version [2-167](#)
- stack-mac persistent timer command [2-597](#)
- stack member
 - access [2-320](#)
 - number [2-509, 2-606](#)
 - priority value [2-603](#)
 - provisioning [2-604](#)
 - reloading [2-306](#)
- stacks, switch
 - MAC address [2-597](#)
 - provisioning a new member [2-604](#)
 - reloading [2-306](#)
 - stack member access [2-320](#)
- stacks, switch (continued)
 - stack member number [2-509, 2-606](#)
 - stack member priority value [2-509, 2-603](#)
- static-access ports, configuring [2-608](#)
- statistics, Ethernet group [2-313](#)
- sticky learning, enabling [2-620](#)
- storm-control command [2-600](#)
- STP
 - BackboneFast [2-543](#)
 - counters, clearing [2-50](#)
 - debug messages, display
 - BackboneFast events [B-70](#)
 - MSTP [B-73](#)
 - optimized BPDUs handling [B-72](#)
 - spanning-tree activity [B-68](#)
 - switch shim [B-75](#)
 - transmitted and received BPDUs [B-71](#)
 - UplinkFast [B-77](#)
 - detection of indirect link failures [2-543](#)
 - EtherChannel misconfiguration [2-550](#)
 - extended system ID [2-552](#)
 - path cost [2-548](#)
 - protocol modes [2-560](#)
 - root port
 - accelerating choice of new [2-584](#)
 - loop guard [2-554](#)
 - preventing from becoming designated [2-554](#)
 - restricting which can be root [2-554](#)
 - root guard [2-554](#)
 - UplinkFast [2-584](#)
- root switch
 - affects of extended system ID [2-552, 2-587](#)
 - hello-time [2-586](#)
 - interval between BDPU messages [2-586](#)
 - interval between hello BPDU messages [2-586](#)
 - max-age [2-586](#)
 - port priority for selection of [2-577](#)
 - primary or secondary [2-586](#)
 - switch priority [2-586](#)

STP (continued)

state changes

- blocking to forwarding state [2-581](#)
- enabling BPDU filtering [2-544, 2-579](#)
- enabling BPDU guard [2-546, 2-579](#)
- enabling Port Fast [2-579, 2-581](#)
- enabling timer to recover from error state [2-112](#)
- forward-delay time [2-586](#)
- length of listening and learning states [2-586](#)
- shutting down Port Fast-enabled ports [2-579](#)

state information display [2-501](#)VLAN options [2-574, 2-586](#)

Switched Port Analyzer

See SPAN

- switchport access command [2-608](#)
- switchport backup interface command [2-610](#)
- switchport block command [2-614](#)
- switchport host command [2-615](#)
- switchport mode command [2-616](#)
- switchport nonegotiate command [2-618](#)
- switchport port-security aging command [2-625](#)
- switchport port-security command [2-620](#)
- switchport priority extend command [2-627](#)
- switchport protected command [2-629](#)
- switchports, displaying [2-386](#)
- switchport trunk command [2-631](#)
- switchport voice vlan command [2-634](#)
- switch priority command [2-603](#)
- switch provision command [2-604](#)
- switch renumber command [2-606](#)
- system message logging [2-195](#)
- system message logging, save message to flash [2-196](#)
- system mtu command [2-636](#)
- system resource templates [2-314](#)

T

- tar files, creating, listing, and extracting [2-12](#)
- TDR, running [2-638](#)

- Telnet, using to communicate to cluster switches [2-304](#)
- temperature information, displaying [2-371](#)
- templates, SDM [2-314](#)
- templates, system resources [2-314](#)
- test cable-diagnostics tdr command [2-638](#)
- test relay [2-639](#)
- traceroute mac command [2-639](#)
- traceroute mac ip command [2-642](#)
- trunking, VLAN mode [2-616](#)
- trunk mode [2-616](#)
- trunk ports [2-616](#)
- trunks, to non-DTP device [2-617](#)
- trusted boundary for QoS [2-261](#)
- trusted port states for QoS [2-261](#)
- type (boot loader) command [A-23](#)

U

UDLD

- aggressive mode [2-646, 2-648](#)
- debug messages, display [B-85](#)
- enable globally [2-646](#)
- enable per interface [2-648](#)
- error recovery timer [2-112](#)
- message timer [2-646](#)
- normal mode [2-646, 2-648](#)
- reset a shutdown interface [2-650](#)
- status [2-513](#)

- udld command [2-646](#)
- udld port command [2-648](#)
- udld reset command [2-650](#)
- unicast storm control [2-600](#)

UniDirectional Link Detection

See UDLD

- unknown multicast traffic, preventing [2-614](#)
- unknown unicast traffic, preventing [2-614](#)
- unset (boot loader) command [A-24](#)

upgrading

software images

copying [2-6](#)downloading [2-9](#)monitoring status of [2-331](#)UplinkFast, for STP [2-584](#)user EXEC mode [1-2, 1-3](#)**V**version (boot loader) command [A-26](#)version mismatch mode [2-510](#)vlan (global configuration) command [2-651](#)vlan (VLAN configuration) command [2-656](#)

VLAN configuration

rules [2-654, 2-658](#)saving [2-651, 2-660](#)

VLAN configuration mode

commands

VLAN [2-656](#)VTP [2-674](#)description [1-5](#)entering [2-662](#)summary [1-3](#)vlan database command [2-662](#)VLAN ID range [2-651, 2-656](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-651](#)configuring [2-651, 2-656](#)

debug messages, display

ISL [B-81](#)VLAN IOS file system error tests [B-80](#)VLAN manager activity [B-78](#)VTP [B-83](#)displaying configurations [2-518](#)enabling guest VLAN supplicant [2-75, 2-85, 2-116](#)extended-range [2-651](#)

VLANs (continued)

MAC addresses

displaying [2-458](#)number of [2-445](#)media types [2-653, 2-658](#)normal-range [2-651, 2-656](#)restarting [2-530](#)saving the configuration [2-651](#)shutting down [2-530](#)SNMP traps for VTP [2-535, 2-538](#)suspending [2-530](#)variables [2-656](#)

VLAN Trunking Protocol

See VTP

VM mode [2-510](#)

VMPS

configuring servers [2-668](#)displaying [2-521](#)error recovery timer [2-112](#)reconfirming dynamic VLAN assignments [2-665](#)vmmps reconfirm (global configuration) command [2-666](#)vmmps reconfirm (privileged EXEC) command [2-665](#)vmmps retry command [2-667](#)vmmps server command [2-668](#)

voice VLAN

configuring [2-634](#)setting port priority [2-627](#)

VQP

and dynamic-access ports [2-609](#)clearing client statistics [2-52](#)displaying information [2-521](#)per-server retry count [2-667](#)reconfirmation interval [2-666](#)reconfirming dynamic VLAN assignments [2-665](#)

VTP

changing characteristics [2-670](#)clearing pruning counters [2-53](#)

VTP (continued)

configuring

domain name [2-670, 2-674](#)file name [2-670](#)mode [2-670, 2-674](#)password [2-670, 2-674](#)counters display fields [2-525](#)displaying information [2-524](#)

enabling

pruning [2-670, 2-674](#)Version 2 [2-670, 2-674](#)mode [2-670, 2-674](#)pruning [2-670, 2-674](#)saving the configuration [2-651, 2-660](#)statistics [2-524](#)status [2-524](#)status display fields [2-527](#)vtp (global configuration) command [2-670](#)vtp (VLAN configuration) command [2-674](#)

