



INDEX

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5, 2-21, 2-27, 2-29, 2-31, 2-33, 2-35, 2-116, 2-255, 2-433, B-7, B-36](#)
- AAA methods [2-3](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-164](#)
 - MAC, displaying [2-541](#)
- access mode [2-735](#)
- access ports [2-735](#)
- ACEs [2-107, 2-363](#)
- ACLs
 - deny [2-105](#)
 - displaying [2-416](#)
 - for non-IP protocols [2-259](#)
 - IP [2-164](#)
 - on Layer 2 interfaces [2-164](#)
 - permit [2-361](#)
- address aliasing [2-343](#)
- aggregate-port learner [2-355](#)
- allowed VLANs [2-750](#)
- archive copy-sw command [2-6](#)
- archive download-sw command [2-9](#)
- archive tar command [2-12](#)
- archive upload-sw command [2-15](#)
- arp access-list command [2-17](#)
- authentication command bounce-port ignore [2-19](#)
- authentication command disable-port ignore [2-20](#)
- authentication control-direction command [2-21](#)
- authentication event command [2-23](#)
- authentication failed VLAN
 - See dot1x auth-fail vlan
- authentication fallback command [2-27](#)
- authentication host-mode command [2-29](#)
- authentication mac-move permit command [2-31](#)
- authentication open command [2-33](#)
- authentication order command [2-35](#)
- authentication periodic command [2-37](#)
- authentication port-control command [2-39](#)
- authentication priority command [2-41](#)
- authentication timer command [2-43](#)
- authentication violation command [2-45](#)
- auth-fail max-attempts
 - See dot1x auth-fail max-attempts
- auth-fail vlan
 - See dot1x auth-fail vlan
- auth open command [2-33](#)
- auth order command [2-35](#)
- authorization state of controlled port [2-133](#)
- auth timer command [2-43](#)
- autonegotiation of duplex mode [2-144](#)
- auto qos voip command [2-47](#)
- Auto Smartports macros
 - LLDP [2-284](#)

B

BackboneFast, for STP [2-659](#)

backup interfaces

 configuring [2-728](#)

 displaying [2-480](#)

boot (boot loader) command [A-2](#)

boot auto-copy-sw command [2-51](#)

boot config-file command [2-52](#)

boot enable-break command [2-53](#)

boot helper command [2-54](#)

boot helper-config file command [2-55](#)

booting

 Cisco IOS image [2-58](#)

 displaying environment variables [2-429](#)

 interrupting [2-53](#)

 manually [2-56](#)

boot loader

 accessing [A-1](#)

 booting

 Cisco IOS image [A-2](#)

 helper image [2-54](#)

directories

 creating [A-15](#)

 displaying a list of [A-7](#)

 removing [A-19](#)

displaying

 available commands [A-12](#)

 memory heap utilization [A-13](#)

 version [A-26](#)

environment variables

 described [A-20](#)

 displaying settings [A-20](#)

 location of [A-21](#)

 setting [A-20](#)

 unsetting [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-16, A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-56](#)boot private-config-file command [2-57](#)boot system command [2-58](#)BPDU filtering, for spanning tree [2-660, 2-695](#)BPDU guard, for spanning tree [2-662, 2-695](#)broadcast storm control [2-716](#)

C

candidate switches

See clusters

cat (boot loader) command [A-4](#)channel-group command [2-60](#)channel-protocol command [2-63](#)

Cisco SoftPhone

auto-QoS configuration [2-47](#)trusting packets sent from [2-335](#)

CISP

See Client Information Signalling Protocol

cisp

debug platform cisp command [B-36](#)cisp enable command [2-64](#)class command [2-65](#)class-map command [2-67](#)

class maps

- creating [2-67](#)
- defining the match criteria [2-296](#)
- displaying [2-434](#)

class of service

See CoS

- clear dot1x command [2-69](#)
- clear eap sessions command [2-70](#)
- clear errdisable interface [2-71](#)
- clear ip arp inspection log command [2-72](#)
- clear ip arp inspection statistics command [2-73](#)
- clear ip dhcp snooping database command [2-74](#)
- clear lacp command [2-76](#)
- clear mac address-table command [2-77, 2-78](#)
- clear nmsp statistics command [2-79](#)
- clear pagp command [2-80](#)
- clear port-security command [2-81](#)
- clear spanning-tree counters command [2-83](#)
- clear spanning-tree detected-protocols command [2-84](#)
- clear vmps statistics command [2-85](#)
- clear vtp counters command [2-86](#)
- Client Information Signalling Protocol [2-64, 2-116, 2-433, B-7, B-36](#)
- cluster commander-address command [2-87](#)
- cluster discovery hop-count command [2-89](#)
- cluster enable command [2-90](#)
- cluster holdtime command [2-91](#)
- cluster member command [2-92](#)
- cluster outside-interface command [2-94](#)
- cluster run command [2-95](#)
- clusters
 - adding candidates [2-92](#)
 - binding to HSRP group [2-96](#)
 - building manually [2-92](#)
 - communicating with
 - devices outside the cluster [2-94](#)
 - members by using Telnet [2-387](#)
 - debug messages, display [B-8](#)

- displaying
 - candidate switches [2-437](#)
 - debug messages [B-8](#)
 - member switches [2-439](#)
 - status [2-435](#)
- hop-count limit for extended discovery [2-89](#)
- HSRP standby groups [2-96](#)
- redundancy [2-96](#)
- SNMP trap [2-649](#)
- cluster standby-group command [2-96](#)
- cluster timer command [2-98](#)
- command modes defined [1-2](#)
- command switch
 - See clusters
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-52, 2-57](#)
- configuring multiple interfaces [2-160](#)
- config-vlan mode
 - commands [2-771](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-305](#)
 - overriding the incoming value [2-305](#)
- CoS-to-DSCP map [2-309](#)
- CPU ASIC statistics, displaying [2-441](#)
- crashinfo files [2-153](#)
- critical VLAN [2-24](#)

D

- debug authentication [B-2](#)
- debug auto qos command [B-4](#)
- debug backup command [B-6](#)
- debug cisp command [B-7](#)
- debug cluster command [B-8](#)
- debug dot1x command [B-10](#)
- debug dtp command [B-12](#)
- debug eap command [B-13](#)
- debug etherchannel command [B-14](#)
- debug ilpower command [B-15](#)
- debug interface command [B-16](#)
- debug ip dhcp snooping command [B-17](#)
- debug ip igmp filter command [B-19](#)
- debug ip igmp max-groups command [B-20](#)
- debug ip igmp snooping command [B-21](#)
- debug ip verify source packet command [B-18](#)
- debug lacp command [B-22](#)
- debug lldp packets command [B-23](#)
- debug mac-notification command [B-24](#)
- debug macro command [B-25](#)
- debug matm command [B-26](#)
- debug matm move update command [B-27](#)
- debug monitor command [B-28](#)
- debug mvrdbg command [B-30](#)
- debug nmsp command [B-31](#)
- debug nvram command [B-32](#)
- debug pagp command [B-33](#)
- debug platform acl command [B-34](#)
- debug platform backup interface command [B-35](#)
- debug platform cisp command [B-36](#)
- debug platform cli-redirection main command [B-37](#)
- debug platform configuration command [B-38, B-44](#)
- debug platform cpu-queues command [B-39](#)
- debug platform dot1x command [B-41](#)
- debug platform etherchannel command [B-42](#)
- debug platform forw-tcam command [B-43](#)
- debug platform ip arp inspection command [B-45](#)
- debug platform ip dhcp command [B-46](#)
- debug platform ip igmp snooping command [B-47](#)
- debug platform ip source-guard command [B-49](#)
- debug platform led command [B-50](#)
- debug platform matm command [B-51](#)
- debug platform messaging application command [B-52](#)
- debug platform phy command [B-54](#)
- debug platform pm command [B-56](#)
- debug platform port-asic command [B-58](#)
- debug platform port-security command [B-59](#)

debug platform qos-acl-tcam command [B-60](#)
debug platform resource-manager command [B-61](#)
debug platform snmp command [B-62](#)
debug platform span command [B-63](#)
debug platform stack-manager command [B-64](#)
debug platform supervisor-asic command [B-65](#)
debug platform sw-bridge command [B-66](#)
debug platform tcam command [B-67](#)
debug platform udd command [B-69](#)
debug platform vlan command [B-70](#)
debug pm command [B-71](#)
debug port-security command [B-73](#)
debug qos-manager command [B-74](#)
debug spanning-tree backbonefast command [B-77](#)
debug spanning-tree bpdu command [B-78](#)
debug spanning-tree bpdu-opt command [B-79](#)
debug spanning-tree command [B-75](#)
debug spanning-tree mstp command [B-80](#)
debug spanning-tree switch command [B-82](#)
debug spanning-tree uplinkfast command [B-84](#)
debug sw-vlan command [B-85](#)
debug sw-vlan ifs command [B-87](#)
debug sw-vlan notification command [B-88](#)
debug sw-vlan vtp command [B-90](#)
debug udd command [B-92](#)
debug vqpc command [B-94](#)
define interface-range command [2-99](#)
delete (boot loader) command [A-6](#)
delete command [2-102](#)
deny (ARP access-list configuration) command [2-103](#)
deny command [2-105](#)
detect mechanism, causes [2-145](#)
DHCP snooping
 accepting untrusted packets from edge switch [2-192](#)
 enabling
 on a VLAN [2-197](#)
 option 82 [2-190, 2-192](#)
 trust on an interface [2-195](#)

- error recovery timer [2-151](#)
- rate limiting [2-194](#)
- DHCP snooping binding database
 - binding file, configuring [2-188](#)
 - bindings
 - adding [2-186](#)
 - deleting [2-186](#)
 - displaying [2-500](#)
 - clearing database agent statistics [2-74](#)
 - database agent, configuring [2-188](#)
 - displaying
 - binding entries [2-500](#)
 - database agent status [2-503, 2-505](#)
 - renewing [2-395](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-102](#)
- domain name, VTP [2-782](#)
- dot1x auth-fail max-attempts [2-110](#)
- dot1x auth-fail vlan [2-112](#)
- dot1x command [2-108](#)
- dot1x control-direction command [2-114](#)
- dot1x credentials (global configuration) command [2-116](#)
- dot1x critical global configuration command [2-117](#)
- dot1x critical interface configuration command [2-119](#)
- dot1x default command [2-121](#)
- dot1x fallback command [2-122](#)
- dot1x guest-vlan command [2-123](#)
- dot1x host-mode command [2-125](#)
- dot1x initialize command [2-127](#)
- dot1x mac-auth-bypass command [2-128](#)
- dot1x max-reauth-req command [2-130](#)
- dot1x max-req command [2-131](#)
- dot1x pae command [2-132](#)
- dot1x port-control command [2-133](#)
- dot1x re-authenticate command [2-135](#)
- dot1x reauthentication command [2-136](#)
- dot1x supplicant force-multicast command [2-137](#)
- dot1x test eapol-capable command [2-138](#)
- dot1x test timeout command [2-139](#)
- dot1x timeout command [2-140](#)
- dot1x violation-mode command [2-142](#)
- DSCP-to-CoS map [2-309](#)
- DSCP-to-DSCP-mutation map [2-309](#)
- DTP [2-736](#)
- DTP flap
 - error detection for [2-145](#)
 - error recovery timer [2-151](#)
- DTP negotiation [2-737](#)
- dual-purpose uplink ports
 - displaying the active media [2-488](#)
 - selecting the type [2-299](#)
- duplex command [2-143](#)
- dynamic-access ports
 - configuring [2-726](#)
 - restrictions [2-727](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-172](#)
 - define [2-17](#)
 - deny packets [2-103](#)
 - display [2-420](#)
 - permit packets [2-359](#)
 - clear
 - log buffer [2-72](#)
 - statistics [2-73](#)
 - display
 - ARP ACLs [2-420](#)
 - configuration and operating state [2-495](#)
 - log buffer [2-495](#)
 - statistics [2-495](#)
 - trust state and rate limit [2-495](#)
 - enable per VLAN [2-182](#)
 - log buffer
 - clear [2-72](#)
 - configure [2-176](#)
 - display [2-495](#)
 - rate-limit incoming ARP packets [2-174](#)

- statistics
 - clear [2-73](#)
 - display [2-495](#)
- trusted interface state [2-178](#)
- type of packet logged [2-183](#)
- validation checks [2-180](#)

dynamic auto VLAN membership mode [2-735](#)

dynamic desirable VLAN membership mode [2-735](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-131](#)

response time before retransmitting [2-140](#)

environment variables, displaying [2-429](#)

errdisable detect cause command [2-145](#)

errdisable detect cause small-frame comand [2-148](#)

errdisable recovery cause small-frame [2-150](#)

errdisable recovery command [2-151](#)

error conditions, displaying [2-469](#)

error disable detection [2-145](#)

error-disabled interfaces, displaying [2-480](#)

EtherChannel

assigning Ethernet interface to channel group [2-60](#)

creating port-channel logical interface [2-158](#)

debug EtherChannel/PAGP, display [B-14](#)

debug platform-specific events, display [B-42](#)

displaying [2-473](#)

interface information, displaying [2-480](#)

LACP

clearing channel-group information [2-76](#)

debug messages, display [B-22](#)

displaying [2-532](#)

modes [2-60](#)

port priority for hot-standby ports [2-240](#)

restricting a protocol [2-63](#)

system priority [2-242](#)

load-distribution methods [2-370](#)

PAGP

aggregate-port learner [2-355](#)

clearing channel-group information [2-80](#)

debug messages, display [B-33](#)

displaying [2-593](#)

error detection for [2-145](#)

error recovery timer [2-151](#)

learn method [2-355](#)

modes [2-60](#)

physical-port learner [2-355](#)

priority of interface for transmitted traffic [2-357](#)

Ethernet controller, internal register display [2-443](#)

Ethernet statistics, collecting [2-399](#)

exception crashinfo command [2-153](#)

extended discovery of candidate switches [2-89](#)

extended-range VLANs

and allowed VLAN list [2-750](#)

and pruning-eligible list [2-750](#)

configuring [2-770](#)

extended system ID for STP [2-668](#)

F

fallback profile command [2-154](#)

fallback profiles, displaying [2-476](#)

fan information, displaying [2-465](#)

file name, VTP [2-782](#)

files, deleting [2-102](#)

flash_init (boot loader) command [A-9](#)

flexible authentication ordering [2-35](#)

Flex Links

configuring [2-728](#)

configuring preferred VLAN [2-730](#)

displaying [2-480](#)

flowcontrol command [2-156](#)

format (boot loader) command [A-10](#)

forwarding results, display [C-5](#)
 frame forwarding information, displaying [C-5](#)
 front-end controller, counter and status information [C-7](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-416](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-368](#)
 hop-count limit for clusters [2-89](#)
 host connection, port configuration [2-734](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-96](#)
 standby group [2-96](#)

I

IEEE 802.1x
 and switchport modes [2-736](#)
 violation error recovery [2-151](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-111, 2-122, 2-155](#)
 IGMP filters
 applying [2-200](#)
 debug messages, display [B-19](#)
 IGMP groups, setting maximum [2-202](#)
 IGMP maximum groups, debugging [B-20](#)
 IGMP profiles
 creating [2-204](#)
 displaying [2-508](#)

IGMP snooping
 adding ports as a static member of a group [2-220](#)
 displaying [2-509, 2-514, 2-516](#)
 enabling [2-206](#)
 enabling the configurable-leave timer [2-208](#)
 enabling the Immediate-Leave feature [2-217](#)
 flooding query count [2-214](#)
 interface topology change notification behavior [2-216](#)
 multicast table [2-512](#)
 querier [2-210](#)
 query solicitation [2-214](#)
 report suppression [2-212](#)
 switch topology change notification behavior [2-214](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-345](#)
 immediate-leave processing [2-217](#)
 Immediate-Leave processing, IPv6 [2-238](#)
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-158](#)
 interface range command [2-160](#)
 interface-range macros [2-99](#)
 interfaces
 assigning Ethernet interface to channel group [2-60](#)
 configuring [2-143](#)
 configuring multiple [2-160](#)
 creating port-channel logical [2-158](#)
 debug messages, display [B-16](#)
 disabling [2-645](#)
 displaying the MAC address table [2-553](#)
 restarting [2-645](#)
 interface speed, configuring [2-705](#)
 interface vlan command [2-162](#)
 internal registers, displaying [2-443, 2-452](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [2-145](#)
 error recovery timer [2-151](#)

ip access-group command [2-164](#)
 ip address command [2-167](#)
 IP addresses, setting [2-167](#)
 ip admission command [2-169](#)
 ip admission name proxy http command [2-170](#)
 ip arp inspection filter vlan command [2-172](#)
 ip arp inspection limit command [2-174](#)
 ip arp inspection log-buffer command [2-176](#)
 ip arp inspection trust command [2-178](#)
 ip arp inspection validate command [2-180](#)
 ip arp inspection vlan command [2-182](#)
 ip arp inspection vlan logging command [2-183](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [2-186](#)
 ip dhcp snooping command [2-185](#)
 ip dhcp snooping database command [2-188](#)
 ip dhcp snooping information option allow-untrusted command [2-192](#)
 ip dhcp snooping information option command [2-190](#)
 ip dhcp snooping limit rate command [2-194](#)
 ip dhcp snooping trust command [2-195](#)
 ip dhcp snooping verify command [2-196](#)
 ip dhcp snooping vlan command [2-197](#)
 ip dhcp snooping vlan information option format-type circuit-id string command [2-198](#)
 ip igmp filter command [2-200](#)
 ip igmp max-groups command [2-202](#)
 ip igmp profile command [2-204](#)
 ip igmp snooping command [2-206](#)
 ip igmp snooping last-member-query-interval command [2-208](#)
 ip igmp snooping querier command [2-210](#)
 ip igmp snooping report-suppression command [2-212](#)
 ip igmp snooping tcn command [2-214](#)
 ip igmp snooping tcn flood command [2-216](#)
 ip igmp snooping vlan immediate-leave command [2-217](#)
 ip igmp snooping vlan mrouter command [2-218](#)
 ip igmp snooping vlan static command [2-220](#)
 IP multicast addresses [2-342](#)

IP phones
 auto-QoS configuration [2-47](#)
 trusting packets sent from [2-335](#)
 IP-precedence-to-DSCP map [2-309](#)
 ip source binding command [2-222](#)
 IP source guard
 disabling [2-226](#)
 displaying
 binding entries [2-518](#)
 configuration [2-520](#)
 dynamic binding entries only [2-500](#)
 enabling [2-226](#)
 static IP source bindings [2-222](#)
 ip ssh command [2-224](#)
 ipv6 mld snooping command [2-227](#)
 ipv6 mld snooping last-listener-query count command [2-229](#)
 ipv6 mld snooping last-listener-query-interval command [2-231](#)
 ipv6 mld snooping listener-message-suppression command [2-233](#)
 ipv6 mld snooping robustness-variable command [2-234](#)
 ipv6 mld snooping tcn command [2-236](#)
 ipv6 mld snooping vlan command [2-238](#)
 IPv6 SDM template [2-400](#)
 ip verify source command [2-226](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [2-240](#)
 lacp system-priority command [2-242](#)

- Layer 2 traceroute
 - IP addresses [2-761](#)
 - MAC addresses [2-758](#)
 - line configuration mode [1-3, 1-5](#)
 - Link Aggregation Control Protocol
 - See EtherChannel
 - link flap
 - error detection for [2-145](#)
 - error recovery timer [2-151](#)
 - link state group command [2-248](#)
 - link state track command [2-250](#)
 - load-distribution methods for EtherChannel [2-370](#)
 - location (global configuration) command [2-244](#)
 - location (interface configuration) command [2-246](#)
 - logging event command [2-251](#)
 - logging event power-inline-status command [2-252](#)
 - logging file command [2-253](#)
 - logical interface [2-158](#)
 - loopback error
 - detection for [2-145](#)
 - recovery timer [2-151](#)
 - loop guard, for spanning tree [2-670, 2-674](#)
-
- ## M
- mab request format attribute 32 command [2-255](#)
 - mac access-group command [2-257](#)
 - MAC access-groups, displaying [2-541](#)
 - MAC access list configuration mode [2-259](#)
 - mac access-list extended command [2-259](#)
 - MAC access lists [2-105](#)
 - MAC addresses
 - disabling MAC address learning per VLAN [2-262](#)
 - displaying
 - aging time [2-547](#)
 - all [2-545](#)
 - dynamic [2-551](#)
 - MAC address-table move updates [2-556](#)
 - notification settings [2-555, 2-558](#)
 - number of addresses in a VLAN [2-549](#)
 - per interface [2-553](#)
 - per VLAN [2-562](#)
 - static [2-560](#)
 - static and dynamic entries [2-543](#)
 - dynamic
 - aging time [2-261](#)
 - deleting [2-77](#)
 - displaying [2-551](#)
 - enabling MAC address notification [2-266](#)
 - enabling MAC address-table move update [2-264](#)
 - persistent stack [2-713](#)
 - static
 - adding and removing [2-268](#)
 - displaying [2-560](#)
 - dropping on an interface [2-269](#)
 - tables [2-545](#)
 - MAC address notification, debugging [B-24](#)
 - mac address-table aging-time [2-257](#)
 - mac address-table aging-time command [2-261](#)
 - mac address-table learning command [2-262](#)
 - mac address-table move update command [2-264](#)
 - mac address-table notification command [2-266](#)
 - mac address-table static command [2-268](#)
 - mac address-table static drop command [2-269](#)
 - macro apply command [2-271](#)
 - macro auto device command [2-274](#)
 - macro auto execute command [2-276](#)
 - macro auto file command [2-282](#)
 - macro auto global processing command [2-284](#)
 - macro auto mac-address-group command [2-286](#)
 - macro auto sticky command [2-288](#)
 - macro description command [2-289](#)
 - macro global command [2-290](#)
 - macro global description command [2-293](#)
 - macro name command [2-294](#)
 - macros
 - adding a description [2-289](#)
 - adding a global description [2-293](#)

- applying [2-290](#)
 - creating [2-294](#)
 - displaying [2-595](#)
 - interface range [2-99, 2-160](#)
 - specifying parameter values [2-290](#)
 - tracing [2-290](#)
- maps
 - QoS
 - defining [2-309](#)
 - displaying [2-574](#)
- match (class-map configuration) command [2-296](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-298](#)
- media-type command [2-299](#)
- member switches
 - See clusters
- memory (boot loader) command [A-13](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
 - configuring [2-233, 2-234](#)
 - configuring queries [2-229, 2-231](#)
 - configuring topology change notification [2-236](#)
 - displaying [2-522, 2-524, 2-526, 2-528](#)
 - enabling [2-227](#)
- MLD snooping on a VLAN, enabling [2-238](#)
- mls qos aggregate-policer command [2-303](#)
- mls qos command [2-301](#)
- mls qos cos command [2-305](#)
- mls qos dscp-mutation command [2-307](#)
- mls qos map command [2-309](#)
- mls qos queue-set output buffers command [2-313](#)
- mls qos queue-set output threshold command [2-315](#)
- mls qos rewrite ip dscp command [2-317](#)
- mls qos srr-queue input bandwidth command [2-319](#)
- mls qos srr-queue input buffers command [2-321](#)
- mls qos-srr-queue input cos-map command [2-323](#)
- mls qos srr-queue input dscp-map command [2-325](#)
- mls qos srr-queue input priority-queue command [2-327](#)
- mls qos srr-queue input threshold command [2-329](#)
- mls qos-srr-queue output cos-map command [2-331](#)
- mls qos srr-queue output dscp-map command [2-333](#)
- mls qos trust command [2-335](#)
- mode, MVR [2-342](#)
- Mode button, and password recovery [2-402](#)
- modes, commands [1-2](#)
- monitor session command [2-337](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-615](#)
 - interoperability [2-84](#)
 - link type [2-672](#)
 - MST region
 - aborting changes [2-678](#)
 - applying changes [2-678](#)
 - configuration name [2-678](#)
 - configuration revision number [2-678](#)
 - current or pending display [2-678](#)
 - displaying [2-615](#)
 - MST configuration mode [2-678](#)
 - VLANs-to-instance mapping [2-678](#)
- path cost [2-680](#)
- protocol mode [2-676](#)
- restart protocol migration process [2-84](#)
- root port
 - loop guard [2-670](#)
 - preventing from becoming designated [2-670](#)
 - restricting which can be root [2-670](#)
 - root guard [2-670](#)
- root switch
 - affects of extended system ID [2-668](#)
 - hello-time [2-683, 2-691](#)
 - interval between BDPU messages [2-684](#)
 - interval between hello BPDU messages [2-683, 2-691](#)
 - max-age [2-684](#)
 - maximum hop count before discarding BPDU [2-685](#)

- port priority for selection of [2-687](#)
- primary or secondary [2-691](#)
- switch priority [2-690](#)
- state changes
 - blocking to forwarding state [2-697](#)
 - enabling BPDU filtering [2-660, 2-695](#)
 - enabling BPDU guard [2-662, 2-695](#)
 - enabling Port Fast [2-695, 2-697](#)
 - forward-delay time [2-682](#)
 - length of listening and learning states [2-682](#)
 - rapid transition to forwarding [2-672](#)
 - shutting down Port Fast-enabled ports [2-695](#)
- state information display [2-614](#)
- MTU
 - configuring size [2-755](#)
 - displaying global setting [2-627](#)
- Multicast Listener Discovery
 - See MLD
- multicast group address, MVR [2-345](#)
- multicast groups, MVR [2-343](#)
- Multicast Listener Discovery
 - See MLD
- multicast router learning method [2-218](#)
- multicast router ports, configuring [2-218](#)
- multicast router ports, IPv6 [2-238](#)
- multicast storm control [2-716](#)
- multicast VLAN, MVR [2-342](#)
- multicast VLAN registration
 - See MVR
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [2-343](#)
 - configuring [2-342](#)
 - configuring interfaces [2-345](#)
 - debug messages, display [B-30](#)
 - displaying [2-583](#)
 - displaying interface information [2-585](#)
 - members, displaying [2-587](#)

- mvr (global configuration) command [2-342](#)
- mvr (interface configuration) command [2-345](#)
- mvr vlan group command [2-346](#)

N

- native VLANs [2-750](#)
- Network Admission Control Software Configuration Guide [2-169, 2-171](#)
- network-policy (global configuration) command [2-349](#)
- network-policy command [2-348](#)
- network-policy profile (network-policy configuration) command [2-351](#)
- nmsp attachment suppress command [2-354](#)
- nmsp command [2-353](#)
- nonegotiate, speed [2-705](#)
- nonegotiating DTP messaging [2-737](#)
- non-IP protocols
 - denying [2-105](#)
 - forwarding [2-361](#)
- non-IP traffic access lists [2-259](#)
- non-IP traffic forwarding
 - denying [2-105](#)
 - permitting [2-361](#)
- normal-range VLANs [2-770, 2-775](#)
- no vlan command [2-770](#)

O

- online diagnostics
 - global configuration mode
 - clearing health monitoring diagnostic test schedule [2-72](#)
 - setting health monitoring diagnostic testing [2-72](#)
 - setting up health monitoring diagnostic test schedule [2-72](#)

P**PAgP**

See EtherChannel

pagp learn-method command [2-355](#)

pagp port-priority command [2-357](#)

password, VTP [2-783](#)

password-recovery mechanism, enabling and disabling [2-402](#)

permit (ARP access-list configuration) command [2-359](#)

permit (MAC access-list configuration) command [2-361](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-355](#)

PID, displaying [2-494](#)

PIM-DVMRP, as multicast router learning method [2-218](#)

PoE

configuring the power budget [2-375](#)

configuring the power management mode [2-372](#)

displaying controller register values [2-450](#)

displaying power management information [2-603](#)

logging of status [2-252](#)

monitoring power [2-377](#)

policing power consumption [2-377](#)

police aggregate command [2-366](#)

police command [2-364](#)

policed-DSCP map [2-309](#)

policy-map command [2-368](#)

policy maps

applying to an interface [2-404, 2-409](#)

creating [2-368](#)

displaying [2-598](#)

hierarchical [2-368](#)

policers

displaying [2-567](#)

for a single class [2-364](#)

for multiple classes [2-303, 2-366](#)

policed-DSCP map [2-309](#)

- traffic classification
 - defining the class [2-65](#)
 - defining trust states [2-763](#)
 - setting DSCP or IP precedence values [2-407](#)
 - Port Aggregation Protocol
 - See EtherChannel
 - port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-142](#)
 - debug messages, display [B-10](#)
 - enabling IEEE 802.1x
 - globally [2-108](#)
 - per interface [2-133](#)
 - guest VLAN [2-123](#)
 - host modes [2-125](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-127, 2-139](#)
 - MAC authentication bypass [2-128](#)
 - manual control of authorization state [2-133](#)
 - PAE as authenticator [2-132](#)
 - periodic re-authentication
 - enabling [2-136](#)
 - time between attempts [2-140](#)
 - quiet period between failed authentication exchanges [2-140](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-135](#)
 - resetting configurable IEEE 802.1x parameters [2-121](#)
 - switch-to-authentication server retransmission time [2-140](#)
 - switch-to-client frame-retransmission number [2-130 to 2-131](#)
 - switch-to-client retransmission time [2-140](#)
 - test for IEEE 802.1x readiness [2-138](#)
 - port-channel load-balance command [2-370](#)
 - Port Fast, for spanning tree [2-697](#)
 - port ranges, defining [2-99](#)
 - ports, debugging [B-71](#)
 - ports, protected [2-748](#)
 - port security
 - aging [2-744](#)
 - debug messages, display [B-73](#)
 - enabling [2-739](#)
 - violation error recovery [2-151](#)
 - port trust states for QoS [2-335](#)
 - port types, MVR [2-345](#)
 - power information, displaying [2-465](#)
 - power inline command [2-372](#)
 - power inline consumption command [2-375](#)
 - power inline police command [2-377](#)
 - Power over Ethernet
 - See PoE
 - priority-queue command [2-380](#)
 - priority value, stack member [2-622, 2-721](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-494](#)
 - protected ports, displaying [2-486](#)
 - pruning
 - VLANs [2-750](#)
 - VTP
 - displaying interface information [2-480](#)
 - enabling [2-783](#)
 - pruning-eligible VLAN list [2-751](#)
 - PVST+
 - See STP
-
- ## Q
- QoS
 - auto-QoS
 - configuring [2-47](#)
 - debug messages, display [B-4](#)
 - displaying [2-425](#)
 - class maps
 - creating [2-67](#)
 - defining the match criteria [2-296](#)
 - displaying [2-434](#)
 - defining the CoS value for an incoming packet [2-305](#)
 - displaying configuration information [2-425, 2-566](#)
 - DSCP transparency [2-317](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-307](#)

- defining DSCP-to-DSCP-mutation map [2-309](#)

egress queues

- allocating buffers [2-313](#)

- defining the CoS output queue threshold map [2-331](#)

- defining the DSCP output queue threshold map [2-333](#)

- displaying buffer allocations [2-570](#)

- displaying CoS output queue threshold map [2-574](#)

- displaying DSCP output queue threshold map [2-574](#)

- displaying queueing strategy [2-570](#)

- displaying queue-set settings [2-577](#)

- enabling bandwidth shaping and scheduling [2-709](#)

- enabling bandwidth sharing and scheduling [2-711](#)

- limiting the maximum output on a port [2-707](#)

- mapping a port to a queue-set [2-382](#)

- mapping CoS values to a queue and threshold [2-331](#)

- mapping DSCP values to a queue and threshold [2-333](#)

- setting maximum and reserved memory allocations [2-315](#)

- setting WTD thresholds [2-315](#)

- enabling [2-301](#)

ingress queues

- allocating buffers [2-321](#)

- assigning SRR scheduling weights [2-319](#)

- defining the CoS input queue threshold map [2-323](#)

- defining the DSCP input queue threshold map [2-325](#)

- displaying buffer allocations [2-570](#)

- displaying CoS input queue threshold map [2-574](#)

- displaying DSCP input queue threshold map [2-574](#)

- displaying queueing strategy [2-570](#)

- displaying settings for [2-568](#)

- enabling the priority queue [2-327](#)

- mapping CoS values to a queue and threshold [2-323](#)

- mapping DSCP values to a queue and threshold [2-325](#)

- setting WTD thresholds [2-329](#)

maps

- defining [2-309](#), [2-323](#), [2-325](#), [2-331](#), [2-333](#)

- displaying [2-574](#)

policy maps

- applying an aggregate policer [2-366](#)

- applying to an interface [2-404](#), [2-409](#)

- creating [2-368](#)

- defining policers [2-303](#), [2-364](#)

- displaying policers [2-567](#)

- displaying policy maps [2-598](#)

- hierarchical [2-368](#)

- policed-DSCP map [2-309](#)

- setting DSCP or IP precedence values [2-407](#)

- traffic classifications [2-65](#)

- trust states [2-763](#)

- port trust states [2-335](#)

- queues, enabling the expedite [2-380](#)

statistics

- in-profile and out-of-profile packets [2-570](#)

- packets enqueued or dropped [2-570](#)

- sent and received CoS values [2-570](#)

- sent and received DSCP values [2-570](#)

- trusted boundary for IP phones [2-335](#)

quality of service

- See QoS

- querytime, MVR [2-342](#)

- queue-set command [2-382](#)

R

- radius-server dead-criteria command [2-383](#)

- radius-server host command [2-385](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-387](#)

re-authenticating IEEE 802.1x-enabled ports [2-135](#)

re-authentication

periodic [2-136](#)

time between attempts [2-140](#)

receiver ports, MVR [2-345](#)

receiving flow-control packets [2-156](#)

recovery mechanism

causes [2-151](#)

display [2-71](#), [2-431](#), [2-467](#), [2-471](#)

timer interval [2-151](#)

redundancy for cluster switches [2-96](#)

reload command [2-389](#)

remote command [2-391](#)

remote-span command [2-393](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)

renew ip dhcp snooping database command [2-395](#)

reset (boot loader) command [A-18](#)

resource templates, displaying [2-608](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-399](#)

root guard, for spanning tree [2-670](#)

RSPAN

configuring [2-337](#)

displaying [2-580](#)

filter RSPAN traffic [2-337](#)

remote-span command [2-393](#)

sessions

displaying [2-580](#)

S

SDM mismatch mode [2-623](#)

sdm prefer command [2-400](#)

SDM templates

displaying [2-608](#)

dual IPv4 and IPv6 [2-400](#)

secure ports, limitations [2-741](#)

sending flow-control packets [2-156](#)

service password-recovery command [2-402](#)

service-policy command [2-404](#)

session command [2-406](#)

set (boot loader) command [A-20](#)

set command [2-407](#)

setup command [2-409](#)

setup express command [2-412](#)

shell trigger command [2-414](#)

show access-lists command [2-416](#)

show archive status command [2-419](#)

show arp access-list command [2-420](#)

show authentication command [2-421](#)

show auto qos command [2-425](#)

show boot command [2-429](#)

show cable-diagnostics tdr command [2-431](#)

show cisp command [2-433](#)

show class-map command [2-434](#)

show cluster candidates command [2-437](#)

show cluster command [2-435](#)

show cluster members command [2-439](#)

show controllers cpu-interface command [2-441](#)

show controllers ethernet-controller command [2-443](#)

show controllers power inline command [2-450](#)

show controllers tcam command [2-452](#)

show controller utilization command [2-454](#)

show dot1x command [2-456](#)

show dtp [2-460](#)

show eap command [2-462](#)

show env command [2-465](#)

show errdisable detect command [2-467](#)

- show errdisable flap-values command [2-469](#)
- show errdisable recovery command [2-471](#)
- show etherchannel command [2-473](#)
- show fallback profile command [2-476](#)
- show flowcontrol command [2-478](#)
- show interfaces command [2-480](#)
- show interfaces counters command [2-491](#)
- show inventory command [2-494](#)
- show ip arp inspection command [2-495](#)
- show ip dhcp snooping binding command [2-500](#)
- show ip dhcp snooping command [2-499](#)
- show ip dhcp snooping database command [2-503, 2-505](#)
- show ip igmp profile command [2-508](#)
- show ip igmp snooping address command [2-524](#)
- show ip igmp snooping command [2-509, 2-522](#)
- show ip igmp snooping groups command [2-512](#)
- show ip igmp snooping mrouter command [2-514, 2-526](#)
- show ip igmp snooping querier command [2-516, 2-528](#)
- show ip source binding command [2-518](#)
- show ipv6 route updated [2-530](#)
- show ip verify source command [2-520](#)
- show lacp command [2-532](#)
- show link state group command [2-539](#)
- show location [2-536](#)
- show mac access-group command [2-541](#)
- show mac address-table address command [2-545](#)
- show mac address-table aging time command [2-547](#)
- show mac address-table command [2-543](#)
- show mac address-table count command [2-549](#)
- show mac address-table dynamic command [2-551](#)
- show mac address-table interface command [2-553](#)
- show mac address-table learning command [2-555](#)
- show mac address-table move update command [2-556](#)
- show mac address-table notification command [2-78, 2-558, B-27](#)
- show mac address-table static command [2-560](#)
- show mac address-table vlan command [2-562](#)
- show macro auto command [2-564](#)
- show mls qos aggregate-policer command [2-567](#)
- show mls qos command [2-566](#)
- show mls qos input-queue command [2-568](#)
- show mls qos interface command [2-570](#)
- show mls qos maps command [2-574](#)
- show mls qos queue-set command [2-577](#)
- show mls qos vlan command [2-579](#)
- show monitor command [2-580](#)
- show mvr command [2-583](#)
- show mvr interface command [2-585](#)
- show mvr members command [2-587](#)
- show network-policy profile command [2-589](#)
- show nmsp command [2-590](#)
- show pagp command [2-593](#)
- show parser macro command [2-595](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform frontend-controller command [C-7](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stack manager command [C-28](#)
- show platform stp-instance command [C-27](#)
- show platform tb command [C-32](#)
- show platform team command [C-34](#)
- show platform vlan command [C-36](#)
- show policy-map command [2-598](#)
- show port security command [2-600](#)

- show power inline command [2-603](#)
- show sdm prefer command [2-608](#)
- show setup express command [2-610](#)
- show shell command [2-611](#)
- show spanning-tree command [2-614](#)
- show storm-control command [2-620](#)
- show switch command [2-622](#)
- show system mtu command [2-627](#)
- show trust command [2-763](#)
- show udd command [2-629](#)
- show version command [2-632](#)
- show vlan command [2-634](#)
- show vlan command, fields [2-635](#)
- show vmpls command [2-637](#)
- show vtp command [2-640](#)
- shutdown command [2-645](#)
- shutdown vlan command [2-646](#)
- small violation-rate command [2-647](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-653](#)
- SNMP informs, enabling the sending of [2-649](#)
- snmp-server enable traps command [2-649](#)
- snmp-server host command [2-653](#)
- snmp trap mac-notification change command [2-657](#)
- SNMP traps
 - enabling MAC address notification trap [2-657](#)
 - enabling the MAC address notification feature [2-266](#)
 - enabling the sending of [2-649](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-6](#)
 - deleting [2-102](#)
 - downloading [2-9](#)
 - upgrading [2-6, 2-9](#)
 - uploading [2-15](#)
- software version, displaying [2-632](#)
- source ports, MVR [2-345](#)

SPAN

- configuring [2-337](#)
- debug messages, display [B-28](#)
- displaying [2-580](#)
- filter SPAN traffic [2-337](#)
- sessions
 - add interfaces to [2-337](#)
 - displaying [2-580](#)
 - start new [2-337](#)
- spanning-tree backbonefast command [2-659](#)
- spanning-tree bpduguard command [2-662](#)
- spanning-tree bpdufilter command [2-660](#)
- spanning-tree cost command [2-664](#)
- spanning-tree etherchannel command [2-666](#)
- spanning-tree extend system-id command [2-668](#)
- spanning-tree guard command [2-670](#)
- spanning-tree link-type command [2-672](#)
- spanning-tree loopguard default command [2-674](#)
- spanning-tree mode command [2-676](#)
- spanning-tree mst configuration command [2-678](#)
- spanning-tree mst cost command [2-680](#)
- spanning-tree mst forward-time command [2-682](#)
- spanning-tree mst hello-time command [2-683](#)
- spanning-tree mst max-age command [2-684](#)
- spanning-tree mst max-hops command [2-685](#)
- spanning-tree mst port-priority command [2-687](#)
- spanning-tree mst pre-standard command [2-689](#)
- spanning-tree mst priority command [2-690](#)
- spanning-tree mst root command [2-691](#)
- spanning-tree portfast (global configuration) command [2-695](#)
- spanning-tree portfast (interface configuration) command [2-697](#)
- spanning-tree port-priority command [2-693](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-699](#)
- spanning-tree uplinkfast command [2-700](#)
- spanning-tree vlan command [2-702](#)

- speed command [2-705](#)
- srr-queue bandwidth limit command [2-707](#)
- srr-queue bandwidth share command [2-711](#)
- SSH, configuring version [2-224](#)
- stack-mac persistent timer command [2-713](#)
- stack member
 - access [2-406](#)
 - number [2-622, 2-724](#)
 - priority value [2-721](#)
 - provisioning [2-722](#)
 - reloading [2-389](#)
- stacks, switch
 - disabling a member [2-719](#)
 - enabling a member [2-719](#)
 - MAC address [2-713](#)
 - provisioning a new member [2-722](#)
 - reloading [2-389](#)
 - stack member access [2-406](#)
 - stack member number [2-622, 2-724](#)
 - stack member priority value [2-622, 2-721](#)
- static-access ports, configuring [2-726](#)
- statistics, Ethernet group [2-399](#)
- sticky learning, enabling [2-739](#)
- storm-control command [2-716](#)
- STP
 - BackboneFast [2-659](#)
 - counters, clearing [2-83](#)
 - debug messages, display
 - BackboneFast events [B-77](#)
 - MSTP [B-80](#)
 - optimized BPDUs handling [B-79](#)
 - spanning-tree activity [B-75](#)
 - switch shim [B-82](#)
 - transmitted and received BPDUs [B-78](#)
 - UplinkFast [B-84](#)
 - detection of indirect link failures [2-659](#)
 - EtherChannel misconfiguration [2-666](#)
 - extended system ID [2-668](#)
 - path cost [2-664](#)
 - protocol modes [2-676](#)
 - root port
 - accelerating choice of new [2-700](#)
 - loop guard [2-670](#)
 - preventing from becoming designated [2-670](#)
 - restricting which can be root [2-670](#)
 - root guard [2-670](#)
 - UplinkFast [2-700](#)
 - root switch
 - affects of extended system ID [2-668, 2-703](#)
 - hello-time [2-702](#)
 - interval between BDPU messages [2-702](#)
 - interval between hello BPDU messages [2-702](#)
 - max-age [2-702](#)
 - port priority for selection of [2-693](#)
 - primary or secondary [2-702](#)
 - switch priority [2-702](#)
 - state changes
 - blocking to forwarding state [2-697](#)
 - enabling BPDU filtering [2-660, 2-695](#)
 - enabling BPDU guard [2-662, 2-695](#)
 - enabling Port Fast [2-695, 2-697](#)
 - enabling timer to recover from error state [2-151](#)
 - forward-delay time [2-702](#)
 - length of listening and learning states [2-702](#)
 - shutting down Port Fast-enabled ports [2-695](#)
 - state information display [2-614](#)
 - VLAN options [2-690, 2-702](#)
- Switched Port Analyzer
 - See SPAN
 - switchport access command [2-726](#)
 - switchport backup interface command [2-728](#)
 - switchport block command [2-732](#)
 - switchport host command [2-734](#)
 - switchport mode command [2-735](#)
 - switchport nonegotiate command [2-737](#)
 - switchport port-security aging command [2-744](#)
 - switchport port-security command [2-739](#)
 - switchport priority extend command [2-746](#)

switchport protected command [2-748](#)
 switchports, displaying [2-480](#)
 switchport trunk command [2-750](#)
 switchport voice vlan command [2-753](#)
 switch priority command [2-719, 2-721](#)
 switch provision command [2-722](#)
 switch renumber command [2-724](#)
 system message logging [2-252](#)
 system message logging, save message to flash [2-253](#)
 system mtu command [2-755](#)
 system resource templates [2-400](#)

T

tar files, creating, listing, and extracting [2-12](#)
 TDR, running [2-757](#)
 Telnet, using to communicate to cluster switches [2-387](#)
 temperature information, displaying [2-465](#)
 templates, SDM [2-400](#)
 templates, system resources [2-400](#)
 test cable-diagnostics tdr command [2-757](#)
 traceroute mac command [2-758](#)
 traceroute mac ip command [2-761](#)
 trunking, VLAN mode [2-735](#)
 trunk mode [2-735](#)
 trunk ports [2-735](#)
 trunks, to non-DTP device [2-736](#)
 trusted boundary for QoS [2-335](#)
 trusted port states for QoS [2-335](#)
 type (boot loader) command [A-23](#)

U

UDLD

aggressive mode [2-765, 2-767](#)
 debug messages, display [B-92](#)
 enable globally [2-765](#)
 enable per interface [2-767](#)

error recovery timer [2-151](#)
 message timer [2-765](#)
 normal mode [2-765, 2-767](#)
 reset a shutdown interface [2-769](#)
 status [2-629](#)

udld command [2-765](#)

udld port command [2-767](#)

udld reset command [2-769](#)

unicast storm control [2-716](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-732](#)

unknown unicast traffic, preventing [2-732](#)

unset (boot loader) command [A-24](#)

upgrading

software images

copying [2-6](#)

downloading [2-9](#)

monitoring status of [2-419](#)

UplinkFast, for STP [2-700](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)

version mismatch mode [2-623, C-29](#)

vlan (global configuration) command [2-770](#)

VLAN configuration

rules [2-773](#)

saving [2-770](#)

VLAN configuration mode

commands

VLAN [2-775](#)

VTP [2-788](#)

description [1-4](#)

entering [2-770, 2-776](#)

summary [1-3](#)

VLAN ID range [2-770](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-770](#)

configuring [2-770, 2-775](#)

debug messages, display

ISL [B-88](#)

VLAN IOS file system error tests [B-87](#)

VLAN manager activity [B-85](#)

VTP [B-90](#)

displaying configurations [2-634](#)

enabling guest VLAN supplicant [2-111, 2-122, 2-155](#)

extended-range [2-770](#)

MAC addresses

displaying [2-562](#)

number of [2-549](#)

media types [2-773](#)

normal-range [2-770, 2-775](#)

restarting [2-646](#)

saving the configuration [2-770](#)

shutting down [2-646](#)

SNMP traps for VTP [2-651, 2-654](#)

suspending [2-646](#)

VLAN Trunking Protocol

See VTP

VM mode [2-623, C-29](#)

VMPS

configuring servers [2-780](#)

displaying [2-637](#)

error recovery timer [2-151](#)

reconfirming dynamic VLAN assignments [2-777](#)

vmmps reconfirm (global configuration) command [2-778](#)

vmmps reconfirm (privileged EXEC) command [2-777](#)

vmmps retry command [2-779](#)

vmmps server command [2-780](#)

voice VLAN

configuring [2-753](#)

setting port priority [2-746](#)

VQP

and dynamic-access ports [2-727](#)

clearing client statistics [2-85](#)

displaying information [2-637](#)

per-server retry count [2-779](#)

reconfirmation interval [2-778](#)

reconfirming dynamic VLAN assignments [2-777](#)

VTP

changing characteristics [2-782](#)

clearing pruning counters [2-86](#)

configuring

domain name [2-782](#)

file name [2-782](#)

mode [2-782](#)

password [2-783](#)

counters display fields [2-641](#)

displaying information [2-640](#)

enabling

pruning [2-783](#)

Version 2 [2-783](#)

enabling per port [2-787](#)

mode [2-782](#)

pruning [2-783](#)

saving the configuration [2-770](#)

statistics [2-640](#)

status [2-640](#)

status display fields [2-643](#)

vtp (global configuration) command [2-782](#)

vtp interface configuration) command [2-787](#)

vtp primary command [2-789](#)