



## INDEX

### A

aaa accounting dot1x command **2-1**  
aaa authentication dot1x command **2-3**  
aaa authorization network command **2-5, 2-24, 2-30, 2-32, 2-34, 2-36, 2-38, 2-138, 2-308, 2-504, B-7, B-36**  
AAA methods **2-3**  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP **2-191**  
        MAC, displaying **2-633**  
    access list, IPv6 **2-264**  
    access map configuration mode **2-349**  
    access mode **2-834**  
    access ports **2-834**  
    ACEs **2-122, 2-424**  
    ACLs  
        deny **2-120**  
        displaying **2-486**  
        for non-IP protocols **2-312**  
        IP **2-191**  
        matching **2-349**  
        on Layer 2 interfaces **2-191**  
        permit **2-422**  
    action command **2-6**  
    address aliasing **2-397**  
    aggregate-port learner **2-410**  
    allowed VLANs **2-854**  
    archive copy-sw command **2-8**  
    archive download-sw command **2-11**

archive tar command **2-15**  
archive upload-sw command **2-18**  
arp access-list command **2-20**  
authentication command bounce-port ignore **2-22**  
authentication command disable-port ignore **2-23**  
authentication control-direction command **2-24**  
authentication event command **2-26**  
authentication failed VLAN  
    See dot1x auth-fail vlan  
authentication fallback command **2-30**  
authentication host-mode command **2-32**  
authentication mac-move permit command **2-34**  
authentication open command **2-36**  
authentication order command **2-38**  
authentication periodic command **2-40**  
authentication port-control command **2-42**  
authentication priority command **2-44**  
authentication timer command **2-46**  
authentication violation command **2-48**  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
auth open command **2-36**  
auth order command **2-38**  
authorization state of controlled port **2-157**  
auth timer command **2-46**  
autonegotiation of duplex mode **2-170**  
auto qos voip command **2-50**  
Auto Smartports macros  
    LLDP **2-337**

**B**

BackboneFast, for STP **2-754**

backup interfaces

- configuring **2-827**

- displaying **2-562**

boot (boot loader) command **A-2**

boot auto-copy-sw command **2-55**

boot auto-download-sw command **2-56**

boot config-file command **2-58**

boot enable-break command **2-59**

boot helper command **2-60**

boot helper-config file command **2-61**

booting

- Cisco IOS image **2-64**

- displaying environment variables **2-499**

- interrupting **2-56, 2-59**

- manually **2-62**

boot loader

- accessing **A-1**

booting

- Cisco IOS image **A-2**

- helper image **2-60**

directories

- creating **A-15**

- displaying a list of **A-7**

- removing **A-19**

displaying

- available commands **A-12**

- memory heap utilization **A-13**

- version **A-26**

environment variables

- described **A-20**

- displaying settings **A-20**

- location of **A-21**

- setting **A-20**

- unsetting **A-24**

files

- copying **A-5**

deleting **A-6**

displaying a list of **A-7**

displaying the contents of **A-4, A-16, A-23**

renaming **A-17**

file system

- formatting **A-10**

- initializing flash **A-9**

- running a consistency check **A-11**

prompt **A-1**

resetting the system **A-18**

boot manual command **2-62**

boot private-config-file command **2-63**

boot system command **2-64**

BPDU filtering, for spanning tree **2-755, 2-790**

BPDU guard, for spanning tree **2-757, 2-790**

broadcast storm control **2-811**

**C**

candidate switches

See clusters

cat (boot loader) command **A-4**

Catalyst 3750G Integrated Wireless LAN Controller Switch **2-475**

CDP, enabling protocol tunneling for **2-289**

channel-group command **2-66**

channel-protocol command **2-70**

Cisco SoftPhone

- auto-QoS configuration **2-50**

- trusting packets sent from **2-388**

CISP

See Client Information Signalling Protocol

cisp

- debug platform cisp command **B-36**

cisp enable command **2-71**

class command **2-72**

class-map command **2-74**

class maps

- creating **2-74**

- defining the match criteria **2-351**  
 displaying **2-505**
- class of service  
 See CoS
- clear dot1x command **2-76**
- clear eap sessions command **2-77**
- clear errdisable interface **2-78**
- clear ip arp inspection log command **2-79**
- clear ip arp inspection statistics command **2-80**
- clear ipc command **2-83**
- clear ip dhcp snooping database command **2-81**
- clear ipv6 dhcp conflict command **2-84**
- clear l2protocol-tunnel counters command **2-85**
- clear lacp command **2-86**
- clear mac address-table command **2-87, 2-89**
- clear nmfp statistics command **2-90**
- clear pagp command **2-91**
- clear port-security command **2-92**
- clear spanning-tree counters command **2-94**
- clear spanning-tree detected-protocols command **2-95**
- clear vmps statistics command **2-96**
- clear vtp counters command **2-97**
- Client Information Signalling Protocol **2-71, 2-138, 2-504, B-7, B-36**
- cluster commander-address command **2-98**
- cluster discovery hop-count command **2-100**
- cluster enable command **2-101**
- cluster holdtime command **2-102**
- cluster member command **2-103**
- cluster outside-interface command **2-105**
- cluster run command **2-106**
- clusters  
 adding candidates **2-103**  
 binding to HSRP group **2-107**  
 building manually **2-103**  
 communicating with  
   devices outside the cluster **2-105**  
   members by using Telnet **2-454**  
 debug messages, display **B-8**
- displaying  
 candidate switches **2-508**  
 debug messages **B-8**  
 member switches **2-510**  
 status **2-506**
- hop-count limit for extended discovery **2-100**
- HSRP standby groups **2-107**
- redundancy **2-107**
- SNMP trap **2-743**
- cluster standby-group command **2-107**
- cluster timer command **2-109**
- command modes defined **1-2**
- command switch  
 See clusters
- configuration files  
 password recovery disable considerations **A-1**  
 specifying the name **2-58, 2-63**
- configuring multiple interfaces **2-187**
- config-vlan mode  
 commands **2-878**
- controller, wireless **2-475**
- copy (boot loader) command **A-5**
- CoS  
 assigning default value to incoming packets **2-358**  
 assigning to Layer 2 protocol packets **2-292**  
 overriding the incoming value **2-358**
- CoS-to-DSCP map **2-362**
- CPU ASIC statistics, displaying **2-512**
- crashinfo files **2-180**
- critical VLAN **2-27**
- 
- D**
- debug authentication **B-2**  
 debug auto qos command **B-4**  
 debug backup command **B-6**  
 debug cisp command **B-7**  
 debug cluster command **B-8**  
 debug dot1x command **B-10**

- debug dtp command **B-12**  
 debug eap command **B-13**  
 debug etherchannel command **B-14**  
 debug ilpower command **B-15**  
 debug interface command **B-16**  
 debug ip dhcp snooping command **B-17**  
 debug ip igmp filter command **B-19**  
 debug ip igmp max-groups command **B-20**  
 debug ip igmp snooping command **B-21**  
 debug ip verify source packet command **B-18**  
 debug lacp command **B-22**  
 debug lldp packets command **B-23**  
 debug mac-notification command **B-24**  
 debug macro command **B-25**  
 debug matm command **B-26**  
 debug matm move update command **B-27**  
 debug monitor command **B-28**  
 debug mvrdbg command **B-30**  
 debug nmfp command **B-31**  
 debug nvram command **B-32**  
 debug pagp command **B-33**  
 debug platform acl command **B-34**  
 debug platform backup interface command **B-35**  
 debug platform cisp command **B-36**  
 debug platform cli-redirection main command **B-37**  
 debug platform configuration command **B-38, B-46**  
 debug platform cpu-queues command **B-39**  
 debug platform device-manager command **B-41**  
 debug platform dot1x command **B-42**  
 debug platform etherchannel command **B-43**  
 debug platform fallback-bridging command **B-44**  
 debug platform forw-tcam command **B-45**  
 debug platform ip arp inspection command **B-47**  
 debug platform ipc command **B-57**  
 debug platform ip dhcp command **B-48**  
 debug platform ip igmp snooping command **B-49**  
 debug platform ip multicast command **B-51**  
 debug platform ip source-guard command **B-53**  
 debug platform ip unicast command **B-54**  
 debug platform ip wccp command **B-56**  
 debug platform led command **B-58**  
 debug platform matm command **B-59**  
 debug platform messaging application command **B-60**  
 debug platform phy command **B-61**  
 debug platform pm command **B-63**  
 debug platform port-asic command **B-65**  
 debug platform port-security command **B-66**  
 debug platform qos-acl-tcam command **B-67**  
 debug platform remote-commands command **B-68**  
 debug platform resource-manager command **B-69**  
 debug platform snmp command **B-70**  
 debug platform span command **B-71**  
 debug platform stack-manager command **B-72**  
 debug platform supervisor-asic command **B-73**  
 debug platform sw-bridge command **B-74**  
 debug platform tcam command **B-75**  
 debug platform udld command **B-78**  
 debug platform vlan command **B-79**  
 debug platform wireless-controller **B-104**  
 debug pm command **B-80**  
 debug port-security command **B-82**  
 debug qos-manager command **B-83**  
 debug spanning-tree backbonefast command **B-86**  
 debug spanning-tree bpdu command **B-87**  
 debug spanning-tree bpdu-opt command **B-88**  
 debug spanning-tree command **B-84**  
 debug spanning-tree mstp command **B-89**  
 debug spanning-tree switch command **B-91**  
 debug spanning-tree uplinkfast command **B-93**  
 debug sw-vlan command **B-94**  
 debug sw-vlan ifs command **B-96**  
 debug sw-vlan notification command **B-97**  
 debug sw-vlan vtp command **B-99**  
 debug udld command **B-101**  
 debug vqpc command **B-103**  
 define interface-range command **2-110**  
 delete (boot loader) command **A-6**  
 delete command **2-112**

- deny (ARP access-list configuration) command **2-113**  
 deny (IPv6) command **2-115**  
 deny command **2-120**  
 detect mechanism, causes **2-171**  
 DHCP snooping  
   accepting untrusted packets from edge switch **2-222**  
   enabling  
     on a VLAN **2-229**  
     option 82 **2-220, 2-222**  
     trust on an interface **2-227**  
   error recovery timer **2-177**  
   rate limiting **2-226**  
 DHCP snooping binding database  
   binding file, configuring **2-218**  
   bindings  
     adding **2-216**  
     deleting **2-216**  
     displaying **2-582**  
   clearing database agent statistics **2-81**  
   database agent, configuring **2-218**  
   displaying  
     binding entries **2-582**  
     database agent status **2-585, 2-587**  
   renewing **2-462**  
 dir (boot loader) command **A-7**  
 directories, deleting **2-112**  
 domain name, VTP **2-894**  
 dot1x auth-fail max-attempts **2-132**  
 dot1x auth-fail vlan **2-134**  
 dot1x command **2-130**  
 dot1x control-direction command **2-136**  
 dot1x credentials (global configuration) command **2-138**  
 dot1x critical global configuration command **2-139**  
 dot1x critical interface configuration command **2-141**  
 dot1x default command **2-143**  
 dot1x fallback command **2-144**  
 dot1x guest-vlan command **2-145**  
 dot1x host-mode command **2-148**  
 dot1x initialize command **2-150**  
   dot1x mac-auth-bypass command **2-151**  
   dot1x max-reauth-req command **2-153**  
   dot1x max-req command **2-154**  
   dot1x multiple-hosts command **2-155**  
   dot1x pae command **2-156**  
   dot1x port-control command **2-157**  
   dot1x re-authenticate command **2-159**  
   dot1x re-authentication command **2-160**  
   dot1x reauthentication command **2-161**  
   dot1x supplicant force-multicast command **2-162**  
   dot1x test eapol-capable command **2-163**  
   dot1x test timeout command **2-164**  
   dot1x timeout command **2-165**  
   dot1x violation-mode command **2-168**  
   dropping packets, with ACL matches **2-6**  
   drop threshold, Layer 2 protocol tunneling **2-289**  
   DSCP-to-CoS map **2-362**  
   DSCP-to-DSCP-mutation map **2-362**  
   DTP **2-835**  
   DTP flap  
     error detection for **2-171**  
     error recovery timer **2-177**  
   DTP negotiation **2-839**  
   dual-purpose uplink ports  
     displaying configurable options **2-565**  
   duplex command **2-169**  
   dynamic-access ports  
     configuring **2-823**  
     restrictions **2-824**  
   dynamic ARP inspection  
     ARP ACLs  
       apply to a VLAN **2-199**  
       define **2-20**  
       deny packets **2-113**  
       display **2-490**  
       permit packets **2-414**  
     clear  
       log buffer **2-79**  
       statistics **2-80**

- display
- ARP ACLs **2-490**
  - configuration and operating state **2-577**
  - log buffer **2-577**
  - statistics **2-577**
  - trust state and rate limit **2-577**
  - enable per VLAN **2-209**
  - error detection for **2-171**
  - error recovery timer **2-177**
  - log buffer
    - clear **2-79**
    - configure **2-203**
    - display **2-577**
  - rate-limit incoming ARP packets **2-201**
  - statistics
    - clear **2-80**
    - display **2-577**
  - trusted interface state **2-205**
  - type of packet logged **2-210**
  - validation checks **2-207**
  - dynamic auto VLAN membership mode **2-834**
  - dynamic desirable VLAN membership mode **2-834**
  - Dynamic Host Configuration Protocol (DHCP)
    - See DHCP snooping
  - Dynamic Trunking Protocol
    - See DTP
- 
- E**
- EAP-request/identity frame
- maximum number to send **2-154**
  - response time before retransmitting **2-165**
- encapsulation methods **2-854**
- environment variables, displaying **2-499**
- errdisable detect cause command **2-171**
- errdisable detect cause small-frame comand **2-174**
- errdisable recovery cause small-frame **2-176**
- errdisable recovery command **2-177**
- error conditions, displaying **2-548**
- error disable detection **2-171**
- error-disabled interfaces, displaying **2-562**
- EtherChannel
  - assigning Ethernet interface to channel group **2-66**
  - creating port-channel logical interface **2-185**
  - debug EtherChannel/PAgP, display **B-14**
  - debug platform-specific events, display **B-43**
  - displaying **2-552**
  - enabling Layer 2 protocol tunneling for
    - LACP **2-290**
    - PAgP **2-290**
    - UDLD **2-290**
  - interface information, displaying **2-562**
- LACP
  - clearing channel-group information **2-86**
  - debug messages, display **B-22**
  - displaying **2-624**
  - modes **2-66**
  - port priority for hot-standby ports **2-293**
  - restricting a protocol **2-70**
  - system priority **2-295**
- load-distribution methods **2-432**
- PAgP
  - aggregate-port learner **2-410**
  - clearing channel-group information **2-91**
  - debug messages, display **B-33**
  - displaying **2-685**
  - error detection for **2-171**
  - error recovery timer **2-177**
  - learn method **2-410**
  - modes **2-66**
  - physical-port learner **2-410**
  - priority of interface for transmitted traffic **2-412**
- Ethernet controller, internal register display **2-514**
- Ethernet statistics, collecting **2-465**
- exception crashinfo command **2-180**
- extended discovery of candidate switches **2-100**
- extended-range VLANs
  - and allowed VLAN list **2-854**

and pruning-eligible list **2-854**  
 configuring **2-877**

extended system ID for STP **2-763**

## F

fallback profile command **2-181**  
 fallback profiles, displaying **2-555**  
 fan information, displaying **2-542**  
 file name, VTP **2-894**  
 files, deleting **2-112**  
 flash\_init (boot loader) command **A-9**  
 flexible authentication ordering **2-38**  
**Flex Links**  
 configuring **2-827**  
 configuring preferred VLAN **2-830**  
 displaying **2-562**  
 flowcontrol command **2-183**  
 format (boot loader) command **A-10**  
 forwarding packets, with ACL matches **2-6**  
 forwarding results, display **C-6**  
 frame forwarding information, displaying **C-6**  
 front-end controller, counter and status information **C-8**  
 fsck (boot loader) command **A-11**

## G

global configuration mode **1-2, 1-4**

## H

hardware ACL statistics **2-486**  
 help (boot loader) command **A-12**  
 hierarchical policy maps **2-430**  
 hop-count limit for clusters **2-100**  
 host connection, port configuration **2-833**  
 host ports, private VLANs **2-837**  
 Hot Standby Router Protocol

See HSRP

## HSRP

binding HSRP group to cluster **2-107**  
 standby group **2-107**

**I**  
 IEEE 802.1Q trunk ports and native VLANs **2-886**

IEEE 802.1Q tunnel ports  
 configuring **2-834**  
 displaying **2-531**  
 limitations **2-835**

IEEE 802.1x  
 and switchport modes **2-835**  
 violation error recovery **2-177**  
 See also port-based authentication  
**IEEE 802.1X Port Based Authentication**  
 enabling guest VLAN supplicant **2-133, 2-144, 2-182**

**IGMP filters**  
 applying **2-232**  
 debug messages, display **B-19**  
 IGMP groups, setting maximum **2-234**  
 IGMP maximum groups, debugging **B-20**  
**IGMP profiles**  
 creating **2-236**  
 displaying **2-590**

**IGMP snooping**  
 adding ports as a static member of a group **2-252**  
 displaying **2-591, 2-596, 2-598**  
 enabling **2-238**  
 enabling the configurable-leave timer **2-240**  
 enabling the Immediate-Leave feature **2-249**  
 flooding query count **2-246**  
 interface topology change notification behavior **2-248**  
 multicast table **2-594**  
 querier **2-242**  
 query solicitation **2-246**  
 report suppression **2-244**  
 switch topology change notification behavior **2-246**

images

    See software images

Immediate-Leave feature, MVR **2-399**

immediate-leave processing **2-249**

Immediate-Leave processing, IPv6 **2-285**

interface configuration mode **1-2, 1-4**

interface port-channel command **2-185**

interface range command **2-187**

interface-range macros **2-110**

interfaces

    assigning Ethernet interface to channel group **2-66**

    configuring **2-169**

    configuring multiple **2-187**

    creating port-channel logical **2-185**

    debug messages, display **B-16**

    disabling **2-739**

    displaying the MAC address table **2-645**

    restarting **2-739**

    interface speed, configuring **2-800**

    interface vlan command **2-189**

    internal registers, displaying **2-514, 2-524**

Internet Group Management Protocol

    See IGMP

invalid GBIC

    error detection for **2-171**

    error recovery timer **2-177**

ip access-group command **2-191**

ip address command **2-194**

IP addresses, setting **2-194**

IP address matching **2-349**

ip admission command **2-196**

ip admission name proxy http command **2-197**

ip arp inspection filter vlan command **2-199**

ip arp inspection limit command **2-201**

ip arp inspection log-buffer command **2-203**

ip arp inspection trust command **2-205**

ip arp inspection validate command **2-207**

ip arp inspection vlan command **2-209**

ip arp inspection vlan logging command **2-210**

ip device tracking command **2-214**

ip device tracking probe command **2-212**

IP DHCP snooping

    See DHCP snooping

ip dhcp snooping binding command **2-216**

ip dhcp snooping command **2-215**

ip dhcp snooping database command **2-218**

ip dhcp snooping information option allow-untrusted command **2-222**

ip dhcp snooping information option command **2-220**

ip dhcp snooping information option format remote-id command **2-224**

ip dhcp snooping limit rate command **2-226**

ip dhcp snooping trust command **2-227**

ip dhcp snooping verify command **2-228**

ip dhcp snooping vlan command **2-229**

ip dhcp snooping vlan information option format-type circuit-id string command **2-230**

ip igmp filter command **2-232**

ip igmp max-groups command **2-234, 2-259, 2-261**

ip igmp profile command **2-236**

ip igmp snooping command **2-238**

ip igmp snooping last-member-query-interval command **2-240**

ip igmp snooping querier command **2-242**

ip igmp snooping report-suppression command **2-244**

ip igmp snooping tcn command **2-246**

ip igmp snooping tcn flood command **2-248**

ip igmp snooping vlan immediate-leave command **2-249**

ip igmp snooping vlan mrouter command **2-250**

ip igmp snooping vlan static command **2-252**

IP multicast addresses **2-396**

IP phones

    auto-QoS configuration **2-50**

    trusting packets sent from **2-388**

IP-precedence-to-DSCP map **2-362**

ip snap forwarding command **2-254**

ip source binding command **2-255**

IP source guard

    disabling **2-263**

displaying  
 binding entries **2-600**  
 configuration **2-602**  
 dynamic binding entries only **2-582**  
 enabling **2-263**  
 static IP source bindings **2-255**

ip ssh command **2-257**

IPv6 access list, deny conditions **2-115**

ipv6 access-list command **2-264**

ipv6 address dhcp command **2-267**

ipv6 dhcp client request vendor command **2-268**

ipv6 dhcp ping packets command **2-269**

ipv6 dhcp pool command **2-270**

ipv6 dhcp server command **2-272**

ipv6 mld snooping command **2-274**

ipv6 mld snooping last-listener-query count command **2-276**

ipv6 mld snooping last-listener-query-interval command **2-278**

ipv6 mld snooping listener-message-suppression command **2-280**

ipv6 mld snooping robustness-variable command **2-281**

ipv6 mld snooping tcn command **2-283**

ipv6 mld snooping vlan command **2-285**

IPv6 SDM template **2-466**

ipv6 traffic-filter command **2-287**

ip verify source command **2-263**

**J**

jumbo frames  
 See MTU

**L**

l2protocol-tunnel command **2-289**  
 l2protocol-tunnel cos command **2-292**  
 LACP

See EtherChannel

lacp port-priority command **2-293**  
 lacp system-priority command **2-295**  
 Layer 2 mode, enabling **2-821**  
 Layer 2 protocol ports, displaying **2-621**  
 Layer 2 protocol-tunnel  
     error detection for **2-171**  
     error recovery timer **2-177**  
 Layer 2 protocol tunnel counters **2-85**  
 Layer 2 protocol tunneling error recovery **2-290**  
 Layer 2 traceroute  
     IP addresses **2-868**  
     MAC addresses **2-865**  
 Layer 3 mode, enabling **2-821**  
 line configuration mode **1-3, 1-5**  
 Link Aggregation Control Protocol  
     See EtherChannel  
 link flap  
     error detection for **2-171**  
     error recovery timer **2-177**  
 link state group command **2-301**  
 link state track command **2-303**  
 load-distribution methods for EtherChannel **2-432**  
 location (global configuration) command **2-297**  
 location (interface configuration) command **2-299**  
 logging event command **2-304**  
 logging event power-inline-status command **2-305**  
 logging file command **2-306**  
 logical interface **2-185**  
 loopback error  
     detection for **2-171**  
     recovery timer **2-177**  
 loop guard, for spanning tree **2-765, 2-769**

**M**

mab request format attribute 32 command **2-308**  
 mac access-group command **2-310**  
 MAC access-groups, displaying **2-633**  
 MAC access list configuration mode **2-312**

- mac access-list extended command [2-312](#)
- MAC access lists [2-120](#)
- MAC addresses
- disabling MAC address learning per VLAN [2-315](#)
  - displaying
    - aging time [2-639](#)
    - all [2-637](#)
    - dynamic [2-643](#)
  - MAC address-table move updates [2-648](#)
  - notification settings [2-647, 2-650](#)
  - number of addresses in a VLAN [2-641](#)
  - per interface [2-645](#)
  - per VLAN [2-654](#)
  - static [2-652](#)
  - static and dynamic entries [2-635](#)
- dynamic
- aging time [2-314](#)
  - deleting [2-87](#)
  - displaying [2-643](#)
- enabling MAC address notification [2-319](#)
- enabling MAC address-table move update [2-317](#)
- matching [2-349](#)
- persistent stack [2-808](#)
- static
- adding and removing [2-321](#)
  - displaying [2-652](#)
  - dropping on an interface [2-322](#)
- tables [2-637](#)
- MAC address notification, debugging [B-24](#)
- mac address-table aging-time [2-310, 2-349](#)
- mac address-table aging-time command [2-314](#)
- mac address-table learning command [2-315](#)
- mac address-table move update command [2-317](#)
- mac address-table notification command [2-319](#)
- mac address-table static command [2-321](#)
- mac address-table static drop command [2-322](#)
- macro apply command [2-324](#)
- macro auto device command [2-327](#)
- macro auto execute command [2-329](#)
- macro auto file command [2-335](#)
- macro auto global processing command [2-337](#)
- macro auto mac-address-group command [2-339](#)
- macro auto sticky command [2-341](#)
- macro description command [2-342](#)
- macro global command [2-343](#)
- macro global description command [2-346](#)
- macro name command [2-347](#)
- macros
- adding a description [2-342](#)
  - adding a global description [2-346](#)
  - applying [2-343](#)
  - creating [2-347](#)
  - displaying [2-687](#)
  - interface range [2-110, 2-187](#)
  - specifying parameter values [2-343](#)
  - tracing [2-343](#)
- maps
- QoS
- defining [2-362](#)
  - displaying [2-666](#)
- VLAN
- creating [2-883](#)
  - defining [2-349](#)
  - displaying [2-729](#)
- match (access-map configuration) command [2-349](#)
- match (class-map configuration) command [2-351](#)
- maximum transmission unit
- See MTU
- mdix auto command [2-353](#)
- member switches
- See clusters
- memory (boot loader) command [A-13](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
- configuring [2-280, 2-281](#)
  - configuring queries [2-276, 2-278](#)
  - configuring topology change notification [2-283](#)
  - displaying [2-611, 2-613, 2-615, 2-617](#)

- enabling **2-274**
- MLD snooping on a VLAN, enabling **2-285**
- mls qos aggregate-policer command **2-356**
- mls qos command **2-354**
- mls qos cos command **2-358**
- mls qos dscp-mutation command **2-360**
- mls qos map command **2-362**
- mls qos queue-set output buffers command **2-366**
- mls qos queue-set output threshold command **2-368**
- mls qos rewrite ip dscp command **2-370**
- mls qos srr-queue input bandwidth command **2-372**
- mls qos srr-queue input buffers command **2-374**
- mls qos-srr-queue input cos-map command **2-376**
- mls qos srr-queue input dscp-map command **2-378**
- mls qos srr-queue input priority-queue command **2-380**
- mls qos srr-queue input threshold command **2-382**
- mls qos-srr-queue output cos-map command **2-384**
- mls qos srr-queue output dscp-map command **2-386**
- mls qos trust command **2-388**
- mls qos vlan-based command **2-390**
- mode, MVR **2-396**
- Mode button, and password recovery **2-470**
- modes, commands **1-2**
- monitor session command **2-391**
- more (boot loader) command **A-16**
- MSTP
- displaying **2-706**
  - interoperability **2-95**
  - link type **2-767**
  - MST region
    - aborting changes **2-773**
    - applying changes **2-773**
    - configuration name **2-773**
    - configuration revision number **2-773**
    - current or pending display **2-773**
    - displaying **2-706**
    - MST configuration mode **2-773**
    - VLANs-to-instance mapping **2-773**
    - path cost **2-775**
  - protocol mode **2-771**
  - restart protocol migration process **2-95**
  - root port
    - loop guard **2-765**
    - preventing from becoming designated **2-765**
    - restricting which can be root **2-765**
    - root guard **2-765**
  - root switch
    - affects of extended system ID **2-763**
    - hello-time **2-778, 2-786**
    - interval between BDPU messages **2-779**
    - interval between hello BPDU messages **2-778, 2-786**
    - max-age **2-779**
    - maximum hop count before discarding BPDU **2-780**
    - port priority for selection of **2-782**
    - primary or secondary **2-786**
    - switch priority **2-785**
  - state changes
    - blocking to forwarding state **2-792**
    - enabling BPDU filtering **2-755, 2-790**
    - enabling BPDU guard **2-757, 2-790**
    - enabling Port Fast **2-790, 2-792**
    - forward-delay time **2-777**
    - length of listening and learning states **2-777**
    - rapid transition to forwarding **2-767**
    - shutting down Port Fast-enabled ports **2-790**
    - state information display **2-705**
  - MTU
    - configuring size **2-862**
    - displaying global setting **2-718**
  - Multicast Listener Discovery
    - See MLD
    - multicast group address, MVR **2-399**
    - multicast groups, MVR **2-397**
  - Multicast Listener Discovery
    - See MLD
    - multicast router learning method **2-250**

multicast router ports, configuring **2-250**

multicast router ports, IPv6 **2-285**

multicast storm control **2-811**

multicast VLAN, MVR **2-396**

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing **2-397**

configuring **2-396**

configuring interfaces **2-399**

debug messages, display **B-30**

displaying **2-675**

displaying interface information **2-677**

members, displaying **2-679**

mvr (global configuration) command **2-396**

mvr (interface configuration) command **2-399**

mvr vlan group command **2-400**

## N

native VLANs **2-854**

native VLAN tagging **2-886**

Network Admission Control Software Configuration Guide **2-196, 2-198**

network-policy (global configuration) command **2-403**

network-policy command **2-402**

network-policy profile (network-policy configuration) command **2-405**

nmsp attachment suppress command **2-408**

nmsp command **2-407**

nonegotiate, speed **2-800**

nonegotiating DTP messaging **2-839**

non-IP protocols

denying **2-120**

forwarding **2-422**

non-IP traffic access lists **2-312**

non-IP traffic forwarding

denying **2-120**

permitting **2-422**

non-stop forwarding **2-409**

normal-range VLANs **2-877, 2-882**

no vlan command **2-877**

nsf command **2-409**

## O

online diagnostics

displaying

configured boot-up coverage level **2-528**

current scheduled tasks **2-528**

event logs **2-528**

supported test suites **2-528**

test ID **2-528**

test results **2-528**

test statistics **2-528**

global configuration mode

clearing health monitoring diagnostic test schedule **2-79**

clearing test-based testing schedule **2-126**

setting health monitoring diagnostic testing **2-79**

setting test-based testing **2-126**

setting up health monitoring diagnostic test schedule **2-79**

setting up test-based testing **2-126**

health monitoring diagnostic tests, configuring **2-123**

scheduled switchover

disabling **2-126**

enabling **2-126**

scheduling

enabling **2-126**

removing **2-126**

testing, starting **2-128**

test interval, setting **2-126**

**P**

PAgP

See EtherChannel

pagp learn-method command **2-410**pagp port-priority command **2-412**password, VTP **2-895**password-recovery mechanism, enabling and disabling **2-470**permit (ARP access-list configuration) command **2-414**permit (IPv6) command **2-416**permit (MAC access-list configuration) command **2-422**

per-VLAN spanning-tree plus

See STP

physical-port learner **2-410**PID, displaying **2-576**PIM-DVMRP, as multicast router learning method **2-250**

PoE

configuring the power budget **2-437**configuring the power management mode **2-434**displaying controller register values **2-522**displaying power management information **2-695**logging of status **2-305**police aggregate command **2-427**police command **2-425**policed-DSCP map **2-362**policy-map command **2-429**

policy maps

applying to an interface **2-472, 2-479**creating **2-429**displaying **2-690**hierarchical **2-430**

policers

displaying **2-659**for a single class **2-425**for multiple classes **2-356, 2-427**policed-DSCP map **2-362**

traffic classification

defining the class **2-72**defining trust states **2-870**setting DSCP or IP precedence values **2-477**

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list **2-3**configuring violation modes **2-168**debug messages, display **B-10**

enabling IEEE 802.1x

globally **2-130**per interface **2-157**guest VLAN **2-145**host modes **2-148**IEEE 802.1x AAA accounting methods **2-1**initialize an interface **2-150, 2-164**MAC authentication bypass **2-151**manual control of authorization state **2-157**PAE as authenticator **2-156**

periodic re-authentication

enabling **2-161**time between attempts **2-165**quiet period between failed authentication exchanges **2-165**re-authenticating IEEE 802.1x-enabled ports **2-159**resetting configurable IEEE 802.1x parameters **2-143**switch-to-authentication server retransmission time **2-165**switch-to-client frame-retransmission number **2-153 to 2-154**switch-to-client retransmission time **2-165**test for IEEE 802.1x readiness **2-163**port-channel load-balance command **2-432**Port Fast, for spanning tree **2-792**port ranges, defining **2-110**ports, debugging **B-80**ports, protected **2-852**

port security

aging **2-846**debug messages, display **B-82**enabling **2-841**

- violation error recovery [2-177](#)
  - port trust states for QoS [2-388](#)
  - port types, MVR [2-399](#)
  - power information, displaying [2-542](#)
  - power inline command [2-434](#)
  - power inline consumption command [2-437](#)
  - Power over Ethernet
    - See PoE
  - power rps command (user EXEC) [2-439](#)
  - priority-queue command [2-442](#)
  - priority value, stack member [2-713, 2-816](#)
  - private-vlan command [2-444](#)
  - private-vlan mapping command [2-447](#)
  - private VLANs
    - association [2-850](#)
    - configuring [2-444](#)
    - configuring ports [2-837](#)
    - displaying [2-724](#)
    - host ports [2-837](#)
    - mapping
      - configuring [2-850](#)
      - displaying [2-562](#)
    - promiscuous ports [2-837](#)
  - privileged EXEC mode [1-2, 1-3](#)
  - product identification information, displaying [2-576](#)
  - promiscuous ports, private VLANs [2-837](#)
  - protected ports, displaying [2-568](#)
  - pruning
    - VLANs [2-854](#)
    - VTP
      - displaying interface information [2-562](#)
      - enabling [2-895](#)
  - pruning-eligible VLAN list [2-856](#)
  - PVST+
    - See STP
- 
- Q**
- QoS
    - auto-QoS
      - configuring [2-50](#)
      - debug messages, display [B-4](#)
      - displaying [2-495](#)
    - class maps
      - creating [2-74](#)
      - defining the match criteria [2-351](#)
      - displaying [2-505](#)
      - defining the CoS value for an incoming packet [2-358](#)
      - displaying configuration information [2-495, 2-658](#)
      - DSCP transparency [2-370](#)
      - DSCP trusted ports
        - applying DSCP-to-DSCP-mutation map to [2-360](#)
        - defining DSCP-to-DSCP-mutation map [2-362](#)
      - egress queues
        - allocating buffers [2-366](#)
        - defining the CoS output queue threshold map [2-384](#)
        - defining the DSCP output queue threshold map [2-386](#)
        - displaying buffer allocations [2-662](#)
        - displaying CoS output queue threshold map [2-666](#)
        - displaying DSCP output queue threshold map [2-666](#)
        - displaying queueing strategy [2-662](#)
        - displaying queue-set settings [2-669](#)
        - enabling bandwidth shaping and scheduling [2-804](#)
        - enabling bandwidth sharing and scheduling [2-806](#)
        - limiting the maximum output on a port [2-802](#)
        - mapping a port to a queue-set [2-449](#)
        - mapping CoS values to a queue and threshold [2-384](#)
        - mapping DSCP values to a queue and threshold [2-386](#)
        - setting maximum and reserved memory allocations [2-368](#)
        - setting WTD thresholds [2-368](#)
      - enabling [2-354](#)

- ingress queues
- allocating buffers [2-374](#)
  - assigning SRR scheduling weights [2-372](#)
  - defining the CoS input queue threshold map [2-376](#)
  - defining the DSCP input queue threshold map [2-378](#)
  - displaying buffer allocations [2-662](#)
  - displaying CoS input queue threshold map [2-666](#)
  - displaying DSCP input queue threshold map [2-666](#)
  - displaying queueing strategy [2-662](#)
  - displaying settings for [2-660](#)
  - enabling the priority queue [2-380](#)
  - mapping CoS values to a queue and threshold [2-376](#)
  - mapping DSCP values to a queue and threshold [2-378](#)
  - setting WTD thresholds [2-382](#)
- maps
- defining [2-362, 2-376, 2-378, 2-384, 2-386](#)
  - displaying [2-666](#)
- policy maps
- applying an aggregate policer [2-427](#)
  - applying to an interface [2-472, 2-479](#)
  - creating [2-429](#)
  - defining policers [2-356, 2-425](#)
  - displaying policers [2-659](#)
  - displaying policy maps [2-690](#)
  - hierarchical [2-430](#)
  - policed-DSCP map [2-362](#)
  - setting DSCP or IP precedence values [2-477](#)
  - traffic classifications [2-72](#)
  - trust states [2-870](#)
- port trust states [2-388](#)
- queues, enabling the expedite [2-442](#)
- statistics
- in-profile and out-of-profile packets [2-662](#)
  - packets enqueued or dropped [2-662](#)
  - sent and received CoS values [2-662](#)
  - sent and received DSCP values [2-662](#)
  - trusted boundary for IP phones [2-388](#)
  - VLAN-based [2-390](#)
- quality of service
- See QoS
- querytime, MVR [2-396](#)
- queue-set command [2-449](#)
- 
- R**
- radius-server dead-criteria command [2-450](#)
- radius-server host command [2-452](#)
- rapid per-VLAN spanning-tree plus
- See STP
- rapid PVST+
- See STP
- rcommand command [2-454](#)
- re-authenticating IEEE 802.1x-enabled ports [2-159](#)
- re-authentication
- periodic [2-161](#)
  - time between attempts [2-165](#)
- receiver ports, MVR [2-399](#)
- receiving flow-control packets [2-183](#)
- recovery mechanism
- causes [2-177](#)
  - display [2-78, 2-501, 2-546, 2-550](#)
  - timer interval [2-178](#)
- redundancy for cluster switches [2-107](#)
- redundant power supply
- See RPS
- reload command [2-456](#)
- remote command [2-458](#)
- remote-span command [2-460](#)
- Remote Switched Port Analyzer
- See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-462](#)
- reset (boot loader) command [A-18](#)
- resource templates, displaying [2-698](#)

- restricted VLAN  
 See dot1x auth-fail vlan
- rmdir (boot loader) command **A-19**
- rmon collection stats command **2-465**
- root guard, for spanning tree **2-765**
- routed ports  
 IP addresses on **2-195**  
 number supported **2-195**
- RPS 2300  
 configuring **2-439**  
 managing **2-439**
- RSPAN  
 configuring **2-391**  
 displaying **2-672**  
 filter RSPAN traffic **2-391**  
 remote-span command **2-460**  
 sessions  
 displaying **2-672**
- 
- S**
- scheduled switchover  
 disabling **2-126**  
 enabling **2-126**
- SDM mismatch mode **2-467, 2-714**
- sdm prefer command **2-466**
- SDM templates  
 allowed resources **2-468**  
 and stacking **2-467**  
 displaying **2-698**  
 dual IPv4 and IPv6 **2-466**  
 secure ports, limitations **2-843**  
 sending flow-control packets **2-183**  
 service password-recovery command **2-470**  
 service-policy command **2-472**  
 session command **2-475**  
 set (boot loader) command **A-20**  
 set command **2-477**  
 setup command **2-479**
- setup express command **2-482**  
 shell trigger command **2-484**  
 show access-lists command **2-486**  
 show archive status command **2-489**  
 show arp access-list command **2-490**  
 show authentication command **2-491**  
 show auto qos command **2-495**  
 show boot command **2-499**  
 show cable-diagnostics tdr command **2-501**  
 show cisp command **2-504**  
 show class-map command **2-505**  
 show cluster candidates command **2-508**  
 show cluster command **2-506**  
 show cluster members command **2-510**  
 show controllers cpu-interface command **2-512**  
 show controllers ethernet-controller command **2-514**  
 show controllers power inline command **2-522**  
 show controllers team command **2-524**  
 show controller utilization command **2-526**  
 show dot1q-tunnel command **2-531**  
 show dot1x command **2-532**  
 show dtp **2-537**  
 show eap command **2-539**  
 show env command **2-542**  
 show errdisable detect command **2-546**  
 show errdisable flap-values command **2-548**  
 show errdisable recovery command **2-550**  
 show etherchannel command **2-552**  
 show fallback profile command **2-555**  
 show flowcontrol command **2-557**  
 show idprom command **2-559**  
 show interfaces command **2-562**  
 show interfaces counters command **2-573**  
 show inventory command **2-576**  
 show ip arp inspection command **2-577**  
 show ipc command **2-604**  
 show ip dhcp snooping binding command **2-582**  
 show ip dhcp snooping command **2-581**  
 show ip dhcp snooping database command **2-585, 2-587**

- show ip igmp profile command **2-590**  
 show ip igmp snooping address command **2-613**  
 show ip igmp snooping command **2-591, 2-611**  
 show ip igmp snooping groups command **2-594**  
 show ip igmp snooping mrouter command **2-596, 2-615**  
 show ip igmp snooping querier command **2-598, 2-617**  
 show ip source binding command **2-600**  
 show ipv6 access-list command **2-608**  
 show ipv6 dhcp conflict command **2-610**  
 show ipv6 route updated **2-619**  
 show ip verify source command **2-602**  
 show l2protocol-tunnel command **2-621**  
 show lacp command **2-624**  
 show link state group command **2-631**  
 show location **2-628**  
 show mac access-group command **2-633**  
 show mac address-table address command **2-637**  
 show mac address-table aging time command **2-639**  
 show mac address-table command **2-635**  
 show mac address-table count command **2-641**  
 show mac address-table dynamic command **2-643**  
 show mac address-table interface command **2-645**  
 show mac address-table learning command **2-647**  
 show mac address-table move update command **2-648**  
 show mac address-table notification command **2-89, 2-650, B-27**  
 show mac address-table static command **2-652**  
 show mac address-table vlan command **2-654**  
 show macro auto command **2-656**  
 show mls qos aggregate-policer command **2-659**  
 show mls qos command **2-658**  
 show mls qos input-queue command **2-660**  
 show mls qos interface command **2-662**  
 show mls qos maps command **2-666**  
 show mls qos queue-set command **2-669**  
 show mls qos vlan command **2-671**  
 show monitor command **2-672**  
 show mvr command **2-675**  
 show mvr interface command **2-677**  
 show mvr members command **2-679**  
 show network-policy profile command **2-681**  
 show nmfp command **2-682**  
 show pagp command **2-685**  
 show parser macro command **2-687**  
 show platform acl command **C-2**  
 show platform backup interface command **C-3**  
 show platform configuration command **C-4**  
 show platform etherchannel command **C-5**  
 show platform forward command **C-6**  
 show platform frontend-controller command **C-8**  
 show platform igmp snooping command **C-9**  
 show platform ipc trace command **C-17**  
 show platform ip multicast command **C-11**  
 show platform ip unicast command **C-12**  
 show platform ipv6 unicast command **C-18**  
 show platform ip wccp command **C-16**  
 show platform layer4op command **C-20**  
 show platform mac-address-table command **C-21**  
 show platform messaging command **C-22**  
 show platform monitor command **C-23**  
 show platform mvr table command **C-24**  
 show platform pm command **C-25**  
 show platform port-asic command **C-26**  
 show platform port-security command **C-31**  
 show platform qos command **C-32**  
 show platform resource-manager command **C-33**  
 show platform snmp counters command **C-35**  
 show platform spanning-tree command **C-36**  
 show platform stack manager command **C-38**  
 show platform stp-instance command **C-37**  
 show platform tb command **C-42**  
 show platform team command **C-44**  
 show platform vlan command **C-47**  
 show policy-map command **2-690**  
 show port security command **2-692**  
 show power inline command **2-695**  
 show sdm prefer command **2-698**  
 show setup express command **2-701**

- show shell command **2-702**
- show spanning-tree command **2-705**
- show storm-control command **2-711**
- show switch command **2-713**
- show system mtu command **2-718**
- show trust command **2-870**
- show udld command **2-719**
- show version command **2-722**
- show vlan access-map command **2-729**
- show vlan command **2-724**
- show vlan command, fields **2-726**
- show vlan filter command **2-730**
- show vmps command **2-731**
- show vtp command **2-734**
- shutdown command **2-739**
- shutdown threshold, Layer 2 protocol tunneling **2-289**
- shutdown vlan command **2-740**
- small violation-rate command **2-741**
- Smartports macros
- See macros
- SNMP host, specifying **2-748**
- SNMP informs, enabling the sending of **2-743**
- snmp-server enable traps command **2-743**
- snmp-server host command **2-748**
- snmp trap mac-notification change command **2-752**
- SNMP traps
- enabling MAC address notification trap **2-752**
  - enabling the MAC address notification feature **2-319**
  - enabling the sending of **2-743**
- SoftPhone
- See Cisco SoftPhone
- software images
- copying **2-8**
  - deleting **2-112**
  - downloading **2-11**
  - upgrading **2-8, 2-11**
  - uploading **2-18**
- software version, displaying **2-722**
- source ports, MVR **2-399**
- SPAN
- configuring **2-391**
  - debug messages, display **B-28**
  - displaying **2-672**
  - filter SPAN traffic **2-391**
  - sessions
    - add interfaces to **2-391**
    - displaying **2-672**
    - start new **2-391**
  - spanning-tree backbonefast command **2-754**
  - spanning-tree bpdufilter command **2-755**
  - spanning-tree bpduguard command **2-757**
  - spanning-tree cost command **2-759**
  - spanning-tree etherchannel command **2-761**
  - spanning-tree extend system-id command **2-763**
  - spanning-tree guard command **2-765**
  - spanning-tree link-type command **2-767**
  - spanning-tree loopguard default command **2-769**
  - spanning-tree mode command **2-771**
  - spanning-tree mst configuration command **2-773**
  - spanning-tree mst cost command **2-775**
  - spanning-tree mst forward-time command **2-777**
  - spanning-tree mst hello-time command **2-778**
  - spanning-tree mst max-age command **2-779**
  - spanning-tree mst max-hops command **2-780**
  - spanning-tree mst port-priority command **2-782**
  - spanning-tree mst pre-standard command **2-784**
  - spanning-tree mst priority command **2-785**
  - spanning-tree mst root command **2-786**
  - spanning-tree portfast (global configuration) command **2-790**
  - spanning-tree portfast (interface configuration) command **2-792**
  - spanning-tree port-priority command **2-788**
- Spanning Tree Protocol
- See STP
- spanning-tree transmit hold-count command **2-794**
- spanning-tree uplinkfast command **2-795**
- spanning-tree vlan command **2-797**

- speed command **2-800**
- srr-queue bandwidth limit command **2-802**
- srr-queue bandwidth share command **2-806**
- SSH, configuring version **2-257**
- stack-mac persistent timer command **2-808**
- stack member
- access **2-475**
  - number **2-713, 2-819**
  - priority value **2-816**
  - provisioning **2-817**
  - reloading **2-456**
- stacks, switch
- disabling a member **2-814**
  - enabling a member **2-814**
  - MAC address **2-808**
  - provisioning a new member **2-817**
  - reloading **2-456**
  - stack member access **2-475**
  - stack member number **2-713, 2-819**
  - stack member priority value **2-713, 2-816**
- static-access ports, configuring **2-823**
- statistics, Ethernet group **2-465**
- sticky learning, enabling **2-841**
- storm-control command **2-811**
- STP
- BackboneFast **2-754**
  - counters, clearing **2-94**
  - debug messages, display
    - BackboneFast events **B-86**
    - MSTP **B-89**
    - optimized BPDUs handling **B-88**
    - spanning-tree activity **B-84**
    - switch shim **B-91**
    - transmitted and received BPDUs **B-87**
    - UplinkFast **B-93**  - detection of indirect link failures **2-754**
  - enabling protocol tunneling for **2-289**
  - EtherChannel misconfiguration **2-761**
  - extended system ID **2-763**
- path cost **2-759**
- protocol modes **2-771**
- root port
- accelerating choice of new **2-795**
  - loop guard **2-765**
  - preventing from becoming designated **2-765**
  - restricting which can be root **2-765**
  - root guard **2-765**
  - UplinkFast **2-795**
- root switch
- affects of extended system ID **2-763, 2-798**
  - hello-time **2-797**
  - interval between BDPU messages **2-797**
  - interval between hello BPDU messages **2-797**
  - max-age **2-797**
  - port priority for selection of **2-788**
  - primary or secondary **2-797**
  - switch priority **2-797**
- state changes
- blocking to forwarding state **2-792**
  - enabling BPDU filtering **2-755, 2-790**
  - enabling BPDU guard **2-757, 2-790**
  - enabling Port Fast **2-790, 2-792**
  - enabling timer to recover from error state **2-177**
  - forward-delay time **2-797**
  - length of listening and learning states **2-797**
  - shutting down Port Fast-enabled ports **2-790**
  - state information display **2-705**
  - VLAN options **2-785, 2-797**
- SVIs, creating **2-189**
- SVI status calculation **2-825**
- Switched Port Analyzer
- See SPAN
- switching characteristics
- modifying **2-821**
  - returning to interfaces **2-821**
- switchport access command **2-823**
- switchport autostate exclude command **2-825**
- switchport backup interface command **2-827**

switchport block command **2-831**  
 switchport command **2-821**  
 switchport host command **2-833**  
 switchport mode command **2-834**  
 switchport mode private-vlan command **2-837**  
 switchport nonegotiate command **2-839**  
 switchport port-security aging command **2-846**  
 switchport port-security command **2-841**  
 switchport priority extend command **2-848**  
 switchport private-vlan command **2-850**  
 switchport protected command **2-852**  
 switchports, displaying **2-562**  
 switchport trunk command **2-854**  
 switchport voice vlan command **2-857, 2-858**  
 switch priority command **2-814, 2-816**  
 switch provision command **2-817**  
 switch renumber command **2-819**  
 system env temperature threshold yellow command **2-860**  
 system message logging **2-305**  
 system message logging, save message to flash **2-306**  
 system mtu command **2-862**  
 system resource templates **2-466**

---

**T**

tar files, creating, listing, and extracting **2-15**  
 TDR, running **2-864**  
 Telnet, using to communicate to cluster switches **2-454**  
 temperature information, displaying **2-542**  
 templates, system resources **2-466**  
 test cable-diagnostics tdr command **2-864**  
 traceroute mac command **2-865**  
 traceroute mac ip command **2-868**  
 trunking, VLAN mode **2-834**  
 trunk mode **2-834**  
 trunk ports **2-834**  
 trunks, to non-DTP device **2-835**  
 trusted boundary for QoS **2-388**  
 trusted port states for QoS **2-388**

tunnel ports, Layer 2 protocol, displaying **2-621**  
 type (boot loader) command **A-23**

---

**U**

UDLD  
     aggressive mode **2-872, 2-874**  
     debug messages, display **B-101**  
     enable globally **2-872**  
     enable per interface **2-874**  
     error recovery timer **2-177**  
     message timer **2-872**  
     normal mode **2-872, 2-874**  
     reset a shutdown interface **2-876**  
     status **2-719**  
 udld command **2-872**  
 udld port command **2-874**  
 udld reset command **2-876**  
 unicast storm control **2-811**  
 UniDirectional Link Detection  
     See UDLD

unknown multicast traffic, preventing **2-831**  
 unknown unicast traffic, preventing **2-831**  
 unset (boot loader) command **A-24**  
 upgrading  
     software images  
         copying **2-8**  
         downloading **2-11**  
         monitoring status of **2-489**  
 UplinkFast, for STP **2-795**  
 user EXEC mode **1-2, 1-3**

---

**V**

version (boot loader) command **A-26**  
 version mismatch mode **2-714, C-39**  
 vlan (global configuration) command **2-877**  
 vlan access-map command **2-883**

- VLAN access map configuration mode **2-883**  
 VLAN access maps  
   actions **2-6**  
   displaying **2-729**  
 VLAN-based QoS **2-390**  
 VLAN configuration  
   rules **2-880**  
   saving **2-877**  
 VLAN configuration mode  
   commands  
     VLAN **2-882**  
     VTP **2-900**  
   description **1-4**  
   entering **2-877, 2-885**  
   summary **1-3**  
 vlan dot1q tag native command **2-886**  
 vlan filter command **2-887**  
 VLAN filters, displaying **2-730**  
 VLAN ID range **2-877**  
 VLAN maps  
   applying **2-887**  
   creating **2-883**  
   defining **2-349**  
   displaying **2-729**  
 VLAN Query Protocol  
   See VQP  
 VLANs  
   adding **2-877**  
   configuring **2-877, 2-882**  
   debug messages, display  
     ISL **B-97**  
     VLAN IOS file system error tests **B-96**  
   VLAN manager activity **B-94**  
   VTP **B-99**  
   displaying configurations **2-724**  
   enabling guest VLAN supplicant **2-133, 2-144, 2-182**  
   extended-range **2-877**  
   MAC addresses  
     displaying **2-654**  
   number of **2-641**  
   media types **2-880**  
   normal-range **2-877, 2-882**  
   private **2-837**  
     configuring **2-444**  
     displaying **2-724**  
     See also private VLANs  
   restarting **2-740**  
   saving the configuration **2-877**  
   shutting down **2-740**  
   SNMP traps for VTP **2-746, 2-749**  
   suspending **2-740**  
 VLAN Trunking Protocol  
   See VTP  
 VM mode **2-714, C-39**  
 VMPS  
   configuring servers **2-892**  
   displaying **2-731**  
   error recovery timer **2-178**  
   reconfirming dynamic VLAN assignments **2-889**  
   vmpls reconfirm (global configuration) command **2-890**  
   vmpls reconfirm (privileged EXEC) command **2-889**  
   vmpls retry command **2-891**  
   vmpls server command **2-892**  
   voice VLAN  
     configuring **2-857, 2-858**  
     setting port priority **2-848**  
 VQP  
   and dynamic-access ports **2-824**  
   clearing client statistics **2-96**  
   displaying information **2-731**  
   per-server retry count **2-891**  
   reconfirmation interval **2-890**  
   reconfirming dynamic VLAN assignments **2-889**  
 VTP  
   changing characteristics **2-894**  
   clearing pruning counters **2-97**  
   configuring  
     domain name **2-894**

file name **2-894**  
mode **2-894**  
password **2-895**  
counters display fields **2-735**  
displaying information **2-734**  
enabling  
    pruning **2-895**  
    tunneling for **2-289**  
    Version 2 **2-895**  
enabling per port **2-899**  
mode **2-894**  
pruning **2-895**  
saving the configuration **2-877**  
statistics **2-734**  
status **2-734**  
status display fields **2-737**  
vtp (global configuration) command **2-894**  
vtp interface configuration) command **2-899**  
vtp primary command **2-901**

---

## W

wireless controller, accessing **2-475**  
wireless controller switch. **B-104**

---

## X

XENPAK module serial EEPROM information **2-518,**  
**2-559**