



## INDEX

### Symbols

\$ matches the end of a string **1-7**  
( ) in commands **1-11**  
\* matches 0 or more sequences of a pattern **1-7**  
+ matches 1 or more sequences of a pattern **1-7**  
. matches any single character **1-7**  
? command **1-1**  
? matches 0 or 1 occurrence of a pattern **1-7**  
^ matches the beginning of a string **1-7**  
\_ matches a comma (,), left brace ({), left parenthesis **1-7**  
“ **1-10**

### Numerics

10-Gigabit Ethernet uplink  
    selecting **2-273**  
    showing the mode **2-697, 2-699**  
802.1Q trunk ports and native VLANs **2-1123**  
802.1Q tunnel ports  
    configuring **2-1055**  
802.1S Multiple Spanning Tree  
    see MST  
802.1X  
    configuring for multiple hosts **2-219**  
    configuring for single host **2-219**  
    configuring multiple domains **2-219**  
    disabling port control **2-211**  
    enabling port control **2-211**  
802.1X Critical Authentication  
    disabling on a port **2-213**  
    disabling on a VLAN **2-216**  
EAPOL

disabling send success packets **2-214**  
enabling send success packets **2-214**  
enabling on a port **2-213**  
enabling on a VLAN **2-216**  
returning delay time to default setting **2-215**  
setting delay time on a port **2-215**  
802.1X critical authentication  
    configure parameters **2-25**  
802.1X critical recovery delay, configuring **2-25**  
802.1X Port Based Authentication  
    debugging 802.1X Port Based Authentication **2-150**  
    displaying port based authentication **2-680**  
    enabling accounting for authentication sessions **2-4**  
    enabling authentication on the system **2-230**  
    enabling guest VLAN **2-217**  
    enabling guest VLAN supplicant **2-210, 2-218**  
    enabling manual control of auth state **2-226**  
    enabling periodic re-authentication of the client **2-229**  
    initializing re-authentication of dot1x ports **2-228**  
    initializing state machines **2-221**  
    receive session termination message upon reboot **2-5**  
    setting maximum number for EAP requests **2-224**  
    setting the reauthentication timer **2-231**

### A

aaa authorization network command **2-212**  
abbreviating commands  
    context-sensitive help **1-1**  
Access Gateway Module  
    connecting to a module **2-22**  
    connecting to a remote module **2-589**  
    connecting to a specific remote module **2-618**

- access-group
  - displaying mac interface **2-820**
  - show mode interface **2-553, 2-639, 2-906**
- access groups
  - IP **2-6, 2-206**
- access lists
  - clearing an access template **2-104**
  - defining ARP **2-21**
  - displaying ARP information **2-643**
  - See also ACLs, MAC ACLs, and VACLS
- access maps
  - applying with VLAN filter **2-1125**
- access-node-identifier, setting for the switch **2-556**
- access-policies, applying using host-mode **2-30**
- ACLs
  - access-group mode **2-6**
  - balancing hardware regions **2-12**
  - capturing control packets **2-8**
  - determining ACL hardware programming **2-10**
  - disabling hardware statistics **2-259**
  - displaying mac access-group interface **2-820**
  - enabling hardware staticstics **2-259**
  - using ACL naming conventions for MAC ACLs **2-404**
- action clause
  - specifying drop or forward action in a VACL **2-13**
- addresses, configuring a maximum **2-530**
- adjacency
  - debugging the adjacency table **2-141**
  - disabling the debug facility **2-141**
  - displaying information about the adjacency table **2-640**
  - displaying IPC table entries **2-141**
- aggregate policer
  - displaying information **2-907**
- aging time
  - displaying MAC address aging time **2-823**
  - MAC address table **2-407, 2-409**
- alarms
  - displaying operational status **2-684**
- alternation
  - description **1-10**
- anchoring
  - description **1-10**
- ancp, show multicast **2-642**
- ANCP client
  - port identifier **2-16**
  - remote server **2-17**
  - set router to become **2-18**
- ARP
  - access list, displaying detailed information **2-643**
  - defining access-lists **2-21**
- ARP inspection
  - enforce certain types of checking **2-295**
- ARP packet
  - deny based on DHCP bindings **2-185**
  - permit based on DHCP bindings **2-508**
- authentication **2-25, 2-32**
  - changing the control-direction **2-23**
  - configure actions for events
    - configuring the actions **2-26**
    - configuring port-control **2-36**
    - enabling reauthentication **2-35**
    - enabling Webauth fallback **2-29**
    - host-mode configuration **2-30**
    - setting priority of methods **2-38**
    - setting the timer **2-40**
    - setting username **2-1110**
    - specifying the order of methods **2-33**
    - using an MD5-type encryption method **2-1110**
    - verifying MD5 signature **2-1112**
    - verifying the checksum for Flash memory **2-1112**
  - authentication control-direction command **2-23**
  - authentication critical recovery delay command **2-25**
  - authentication event command **2-26**
  - authentication fallback command **2-29**
  - authentication host-mode **2-30**
  - authentication methods, setting priority **2-38**

- authentication methods, specifying the order of attempts [2-33](#)
- authentication open command [2-32](#)
- authentication order command [2-33](#)
- authentication periodic command [2-35](#)
- authentication port-control command [2-36](#)
- authentication priority command [2-38](#)
- authentication timer, setting [2-40](#)
- authentication timer command [2-40](#)
- authentication violation command [2-42](#)
- auth fail VLAN
- enable on a port [2-210](#)
  - set max number of attempts [2-209](#)
- Auth Manager
- configuring
    - authentication timer [2-40](#)
- authorization state
- enabling manual control [2-226](#)
- authorization state of a controlled port [2-226](#)
- automatic installation
- displaying status [2-649](#)
- automatic medium-dependent interface crossover
- See Auto-MDIX
- Auto-MDIX
- disabling [2-455](#)
  - enabling [2-455](#)
- auto-negotiate interface speed
- example [2-1025](#)
- auto-QoS
- configuring for VoIP [2-64](#)
  - displaying configuration [2-650](#)
- auto qos srnd4 command [2-52](#)
- average-packet-size (netflow-lite monitor submode) command [2-73](#)
- 
- B**
- baby giants
- displaying the system MTU setting [2-947](#)
- BackboneFast
- displaying debugging messages [2-172](#)
  - displaying spanning tree status [2-930](#)
  - enabling debugging [2-172](#)
  - bandwidth command [2-75](#)
  - bindings
    - store for DHCP snooping [2-307](#)
  - BOOT environment variable
    - displaying information [2-653](#)
  - bootflash
    - displaying information [2-651](#)
  - BPDUs
    - debugging spanning tree activities [2-170](#)
  - bridge protocol data units
    - See BPDUs
  - broadcast suppression level
    - configuring [2-1026, 2-1028](#)
    - enabling [2-1026, 2-1028](#)
- 
- C**
- cable diagnostics
- TDR
- displaying test results [2-654](#)
  - testing conditions of copper cables [2-1086](#)
- call home
- displaying information [2-656](#)
  - e-mailing output [2-83](#)
  - entering configuration submode [2-78](#)
  - executing [2-83](#)
  - manually send test message [2-86](#)
  - receiving information [2-81](#)
  - sending alert group message [2-84](#)
  - submitting information [2-81](#)
- call home destination profiles
- displaying [2-658](#)
- Catalyst 4507R [2-528](#)
- CDP

- configuring tunneling encapsulation rate **2-389**
- displaying
  - neighbor information **2-661**
- enabling protocol tunneling for **2-384**
- set drop threshold for **2-387**
- CEF**
  - displaying next-hop information **2-736**
  - displaying VLAN configuration information **2-736**
- chassis**
  - displaying
    - chassis MAC address ranges **2-817**
    - current and peak traffic meter readings **2-817**
    - percentage of backplane utilization **2-817**
    - switching clock failure recovery mode **2-817**
- circuit-id**
  - setting for an interface **2-558**
- circuit-id, setting for an interface VLAN range** **2-559**
- cisco-desktop**
  - macro apply **2-418**
- Cisco Express Forwarding**
  - See **CEF**
- cisco-phone**
  - macro apply **2-420**
- cisco-router**
  - macro apply **2-422**
- cisco-switch**
  - macro apply **2-424**
- CISP**
  - See Client Information Signalling Protocol
- cisp enable command** **2-91**
- class maps**
  - creating **2-95**
    - defining the match criteria **2-448**
- monitor capture** **2-461**
- clear commands**
  - clearing Gigabit Ethernet interfaces **2-102**
  - clearing IGMP group cache entries **2-111**
  - clearing interface counters **2-97**
  - clearing IP access lists **2-104, 2-105**
- clearing IP ARP inspection statistics VLAN **2-106**
- clearing IP DHCP snooping database statistics **2-110**
- clearing MFIB counters and routes **2-114**
- clearing MFIB fastdrop entries **2-115**
- clearing PAgP channel information **2-124**
- clearing QoS aggregate counters **2-128**
- clearing VLAN interfaces **2-103**
- clear ip wccp command** **2-116**
- clear netflow-lite exporter statistics command** **2-121**
- clear netflow-lite monitor statistics interface command** **2-122**
- clear nmfp statistics command** **2-123**
- Client Information Signalling Protocol** **2-212**
- Client Information Signalling Protocol, enabling** **2-91**
- CLI string search**
  - anchoring **1-10**
  - expressions **1-7**
  - filtering **1-6**
  - multiple-character patterns **1-8**
  - multipliers **1-9**
  - parentheses for recall **1-11**
  - searching outputs **1-6**
  - single-character patterns **1-7**
  - using **1-6**
- command** **2-461**
- command modes**
  - accessing privileged EXEC mode **1-5**
  - exiting **1-5**
  - understanding user EXEC and configuration modes **1-5**
- condition interface**
  - debugging interface-related activities **2-143**
- condition vlan**
  - debugging VLAN output **2-146**
- configuration, saving** **1-11**
- configuring**
  - root as secondary **2-1009**
- configuring a SPAN session to monitor**
  - limit SPAN source traffic **2-474**

configuring critical recovery **2-25**

configuring forward delay **2-1005**

configuring root as primary **2-1009**

## CoPP

attaching

policy map to control plane **2-616**

displaying

policy-map class information **2-881**

entering configuration mode **2-133**

removing

service policy from control plane **2-616**

## CoS

assigning to Layer 2 protocol packets **2-386**

cos (netflow-lite exporter submode) command **2-135**

counter command **2-137**

## counters

clearing interface counters **2-97**

critical authentication, configure 802.1X parameters **2-25**

critical recovery, configuring 802.1X parameter **2-25**

## D

### DAI

clear statistics **2-106**

### DBL

displaying qos dbl **2-908**

### debug commands

debugging backup events **2-142**

debugging DHCP snooping events **2-155**

debugging DHCP snooping messages **2-156**

debugging EtherChannel/PAgP/shim **2-151**

debugging IPC activity **2-154**

debugging IP DHCP snooping security messages **2-157**

debugging NVRAM activities **2-161**

debugging PAgP activities **2-162**

debugging port manager activities **2-165**

debugging spanning tree activities **2-170**

debugging spanning tree backbonefast **2-172**

debugging spanning tree UplinkFast **2-175**

debugging supervisor redundancy **2-169**

debugging VLAN manager activities **2-176**

displaying monitor activity **2-159**

displaying the adjacency table **2-141**

enabling debug dot1x **2-150**

enabling debugging messages for ISL VLAN IDs **2-179**

enabling debugging messages for VTP **2-180**

enabling debugging of UDLD activity **2-181**

enabling switch shim debugging **2-173**

enabling VLAN manager file system error tests **2-177**

limiting debugging output for VLANs **2-146**

limiting interface debugging output **2-143**

limiting output for debugging standby state changes **2-144**

shortcut to the debug condition interface **2-153**

### debugging

activity monitoring **2-159**

DHCP snooping events **2-155**

DHCP snooping packets **2-156**

IPC activities **2-154**

IP DHCP snooping security packets **2-157**

NVRAM activities **2-161**

PAgP activities **2-162**

PAgP shim **2-151**

PM activities **2-165**

PPPoE Intermediate Agent **2-167**

spanning tree BackboneFast events **2-172**

spanning tree switch shim **2-173**

spanning tree UplinkFast events **2-175**

VLAN manager activities **2-176**

VLAN manager IOS file system error tests **2-177**

VTP protocol debug messages **2-180**

debug nmsp command **2-160**

debug spanning tree switch **2-173**

debug sw-vlan vtp **2-180**

default form of a command, using **1-6**

destination (netflow-lite exporter submode) command **2-187**

- detect mechanism, causes **2-246**
- device-sensor filter-list command **2-197**
- device-sensor filter-list dhcp command **2-200**
- device-sensor filter-spec command **2-202**
- device-sensor notify command **2-204**
- DHCP
- clearing database statistics **2-110**
  - DHCP bindings
    - configuring bindings **2-305**
    - deny ARP packet based on matches **2-185**
    - permit ARP packet based on matches **2-508**
  - DHCP snooping
    - clearing binding entries **2-107**
    - clearing database **2-109**
    - displaying binding table **2-738**
    - displaying configuration information **2-737**
    - displaying status of DHCP database **2-742**
    - displaying status of error detection **2-687**
    - enabling DHCP globally **2-304**
    - enabling IP source guard **2-346**
    - enabling on a VLAN **2-314**
    - enabling option 82 **2-309, 2-311**
    - enabling option-82 **2-316**
    - enabling rate limiting on an interface **2-312**
    - enabling trust on an interface **2-313**
    - establishing binding configuration **2-305**
    - renew binding database **2-591**
    - store generated bindings **2-307**
  - diagnostic fpga soft-error recover command **2-206**
  - diagnostic test
    - bootup packet memory **2-674**
    - displaying attributes **2-668**
    - display module-based results **2-670**
    - running **2-208**
    - show results for TDR **2-654**
    - testing conditions of copper cables **2-1086**
  - displaying error disable recovery **2-689**
  - displaying inline power status **2-895**
  - displaying monitoring activity **2-159**
- displaying PoE policing and monitoring status **2-903**
- displaying EEPROM information
- GBIC **2-700**
- displaying SPAN session information **2-947, 2-1028**
- document conventions **1-xxiv**
- document organization **1-xxiii**
- DoS
- CoPP
    - attaching policy map to control plane **2-616**
    - displaying policy-map class information **2-881**
    - entering configuration mode **2-133**
    - removing service policy from control plane **2-616**
  - entering
  - CoPP configuration mode **2-133**
- DOS attack
- protecting system's resources **2-290**
- dot1x credentials (global configuration) command **2-212**
- drop threshold, Layer 2 protocol tunneling **2-387**
- dscp (netflow-lite exporter submode command **2-233**
- DSCP rewrite for IP packets
- enable **2-579**
- DTP flap
- error detection for **2-246**
- dual-active detection (virtual switch) command **2-235**
- dual-active recovery ip address command **2-238**
- dual-capable port
- selecting a connector **2-457**
- duplex mode
- configuring autonegotiation on an interface **2-240**
  - configuring full duplex on an interface **2-240**
  - configuring half duplex on an interface **2-240**
- dynamic ARP inspection
- error detection for **2-246**
  - preventing **2-290**
- Dynamic Host Configuration Protocol
- See DHCP

**E**

## EAP

restarting authentication process **2-224**

EDCS-587028 **2-644, 2-817**

EIGRP (Enhanced IGRP)

filters

routing updates, preventing **2-505**

enabling

debugging for UDLD **2-181**

voice VLANs **2-1042, 2-1043, 2-1045, 2-1047, 2-1048**

enabling open access **2-32**

environmental

alarms **2-684**

displaying information **2-684**

status **2-684**

temperature **2-684**

epm access control command **2-242**

erase a file **2-243**

errdisable detect cause command **2-246**

error disable detection **2-246**

clearing error disable on an interface **2-99**

enabling error disable detection **2-99, 2-246**

enabling per-VLAN on BPDU guard **2-246**

error-disabled state

displaying **2-720**

error disable recovery

configuring recovery mechanism variables **2-249**

displaying recovery timer information **2-689**

enabling ARP inspection timeout **2-249**

specifying recovery cause **2-249**

EtherChannel

assigning interfaces to EtherChannel groups **2-87**

debugging EtherChannel **2-151**

debugging PAgP shim **2-151**

debugging spanning tree activities **2-170**

displaying information for a channel **2-691**

PAgP

error detection for **2-246**

removing interfaces from EtherChannel groups **2-87**

EtherChannel guard

detecting STP misconfiguration **2-995**

Explicit Host Tracking

clearing the database **2-113**

enabling per-VLAN **2-328**

exporter (netflow-lite monitor submode) command **2-254**

expressions

matching multiple expression occurrences **1-9**

multiple-character patterns **1-8**

multiplying pattern occurrence **1-11**

single-character patterns **1-7**

Extensible Authentication Protocol

See EAP

**F**

fallback profile, specifying **2-29**

field replaceable unit (FRU)

displaying status information **2-684**

filters

EIGRP

routing updates, preventing **2-505**

Flash memory file system

displaying file system information **2-651**

verifying checksum **2-1112**

flow control

configuring a gigabit interface for pause frames **2-256**

displaying per-interface statistics for flow control **2-695**

**G**

GBIC

displaying EEPROM information **2-700**

generic-error-message, setting for the switch **2-556**

Gigabit Ethernet interface

clearing the hardware logic **2-102**

Gigabit Ethernet uplink

selecting **2-273**  
 showing the mode **2-697, 2-699**

global configuration mode  
 using **1-5**

---

**H**

hardware module  
 resetting a module by toggling the power **2-266**

hardware statistics  
 disabling **2-259**  
 enabling **2-259**

hardware uplink  
 selecting the mode **2-273**  
 showing the mode **2-697, 2-699**

helper addresses, IP **2-757**

hot standby protocol  
 debugging **2-144**  
 disabling debugging **2-144**  
 limiting output **2-144**

hw-module beacon command **2-260**

hw-module module start command **2-261**

hw-module module stop command **2-263**

hw-module system max-port-num-mode 1/2 command **2-267**

hw-module system max-port-num-mode 1/2 switch 1/2/all command **2-268**

hw-module uplink mode command **2-271**

---

identifier-string, setting for the switch **2-556**

ID mapping, creating an ANCP client **2-16**

IDPROMs

displaying SEEPROM information  
 chassis **2-700**  
 clock module **2-700**  
 fan trays **2-700**  
 module **2-700**

mux buffer **2-700**  
 power supplies **2-700**  
 supervisor engine **2-700**

ifIndex persistence  
 clearing SNMP ifIndex commands **2-977**  
 compress SNMP ifIndex table format **2-984**  
 disabling globally **2-983**  
 disabling on an interface **2-979**  
 enabling globally **2-983**  
 enabling on an interface **2-979**

IGMP

applying filters for host joining on Layer 2 interfaces **2-318**  
 clearing IGMP group cache entries **2-111**  
 configuring frequency for IGMP host-query messages **2-321**  
 creating an IGMP profile **2-320**  
 displaying IGMP interface configuration information **2-744**  
 displaying profiles **2-746**  
 setting maximum group numbers **2-319**

IGMP profiles

displaying **2-746**

IGMP snooping

clearing the EHT database **2-113**  
 configuring a Layer 2 interface as a group member **2-334**  
 configuring a Layer 2 interface as a multicast router **2-332**  
 configuring a static VLAN interface **2-334**  
 displaying multicast information **2-753**  
 displaying VLAN information **2-747, 2-751, 2-754**  
 enabling **2-323**  
 enabling immediate-leave processing **2-330**  
 enabling on a VLAN **2-327**  
 enabling per-VLAN Explicit Host Tracking **2-328**

Immediate-Leave feature, MVR **2-483**

informs

enabling **2-981**

inline power

- displaying inline power status [2-895](#)
- In Service Software Upgrade
  - See ISSU
- inspection log
  - clearing log buffer [2-105](#)
- interface
  - displaying suppressed multicast bytes [2-711, 2-713](#)
- interface (virtual switch) command [2-281](#)
- interface capabilities
  - displaying [2-709](#)
- interface configuration mode
  - summary [1-5](#)
- interface link
  - display cable disconnect time [2-717](#)
- interfaces
  - configuring dot1q tunnel ports [2-1055](#)
  - creating an interface-range macro [2-184](#)
  - debugging output of interface related activities [2-143](#)
  - displaying description [2-716](#)
  - displaying error-disabled state [2-720](#)
  - displaying information when tunneling is enabled [2-805](#)
  - displaying status [2-716](#)
  - displaying traffic for a specific interface [2-706](#)
  - entering interface configuration mode [2-279, 2-281](#)
  - executing a command on multiple ports in a range [2-284](#)
  - selecting an interface to configure [2-279, 2-281](#)
  - setting a CoS value for Layer 2 packets [2-386](#)
  - setting drop threshold for Layer 2 packets [2-387](#)
  - setting the interface type [2-1055](#)
- interface speed
  - configuring interface speed [2-1023](#)
- interface transceiver
  - displaying diagnostic data [2-724](#)
- internal VLAN allocation
  - configuring [2-1128](#)
  - default setting [2-1128](#)
  - displaying allocation information [2-961](#)
- Internet Group Management Protocol
  - See IGMP
- invalid GBIC
  - error detection for [2-246](#)
- IP address of remote ANCP server, setting [2-17](#)
- IP ARP
  - applying ARP ACL to VLAN [2-288](#)
  - clearing inspection statistics [2-106](#)
  - clearing status of log buffer [2-105](#)
  - controlling packet logging [2-299](#)
  - enabling dynamic inspection [2-297](#)
  - limit rate of incoming requests [2-290](#)
  - set per-port config trust state [2-294](#)
  - showing status of dynamic ARP inspection [2-731](#)
  - showing status of log buffer [2-734](#)
- IPC
  - debugging IPC activities [2-154](#)
- IP DHCP Snooping
  - See DHCP snooping
- IP header validation
  - disabling [2-345](#)
  - enabling [2-345](#)
- IP interfaces
  - displaying usability status [2-756](#)
- IP multicast
  - displaying multicast routing table information [2-762](#)
- IP multicast addresses [2-480](#)
- ip multicast multipath command [2-338](#)
- IP packets
  - enable DSCP rewrite [2-579](#)
- IP phone and standard desktop
  - enabling Cisco-recommended features [2-420](#)
- IP Port Security
  - enabling [2-346](#)
- IP source binding
  - adding or deleting [2-342](#)
  - displaying bindingstagging [2-767](#)
- IP source guard
  - debugging messages [2-157](#)

displaying configuration and filters [2-768](#)  
 enabling on DHCP snooping [2-346](#)  
 IPv4 statistics, enabling collection [2-137](#)  
 IPv6 MLD  
   configuring queries [2-363, 2-365](#)  
   configuring snooping  
     last-listener-query-intervals [2-365](#)  
   configuring snooping  
     listener-message-suppression [2-367](#)  
   configuring snooping robustness-variables [2-368](#)  
   configuring tcn topology change notifications [2-370](#)  
   counting snooping last-listener-queries [2-363](#)  
   displaying information [2-781](#)  
   displaying ports for a switch or VLAN [2-783](#)  
   displaying querier information [2-784](#)  
   enabling snooping [2-361](#)  
     enabling snooping on a VLAN [2-371](#)  
 IPv6 statistics, enabling collection [2-137](#)  
 ip wccp check services all command [2-353](#)  
 ip wccp command [2-350](#)  
 ip wccp group-address command [2-350](#)  
 ip wccp group-list command [2-350](#)  
 ip wccp group-listen command [2-355](#)  
 ip wccp password command [2-350, 2-352](#)  
 ip wccp redirect command [2-357](#)  
 ip wccp redirect exclude in command [2-359](#)  
 ip wccp redirect-list command [2-350](#)  
 ISSU  
   canceling process [2-373](#)  
   configuring rollback timer [2-383](#)  
   displaying capability [2-786](#)  
   displaying client information [2-788](#)  
   displaying compatibility matrix [2-790](#)  
   displaying endpoint information [2-795](#)  
   displaying entities [2-796](#)  
   displaying FSM session [2-797](#)  
   displaying messages [2-798](#)  
   displaying negotiated [2-800](#)  
   displaying rollback-timer [2-801](#)

displaying session information [2-802](#)  
 displaying software version [2-803](#)  
 displaying state [2-803](#)  
 forcing switchover to standby supervisor engine [2-381](#)  
 loading new image [2-377](#)  
 starting process [2-379](#)  
 stopping rollback timer [2-375](#)

---

**J**

Jumbo frames  
   enabling jumbo frames [2-479](#)

---

**L**

LACP  
   deselecting channeling protocol [2-89](#)  
   enabling LACP on an interface [2-89](#)  
   setting channeling protocol [2-89](#)  
 lacp port-priority command [2-391](#)  
 lacp system-priority command [2-392](#)  
 Layer 2  
   displaying ACL configuration [2-820](#)  
 Layer 2 interface type  
   specifying a nontrunking, nontagged single VLAN interface [2-1055](#)  
   specifying a trunking VLAN interface [2-1055](#)  
 Layer 2 protocol ports  
   displaying [2-805](#)  
 Layer 2 protocol-tunnel  
   error detection for [2-246](#)  
 Layer 2 protocol tunneling error recovery [2-389](#)  
 Layer 2 switching  
   enabling voice VLANs [2-1042, 2-1043, 2-1045, 2-1047, 2-1048](#)  
   modifying switching characteristics [2-1042, 2-1043, 2-1045, 2-1047, 2-1048](#)  
 Layer 2 traceroute  
   IP addresses [2-1091](#)

- Layer 3 interface, assign counters [2-137](#)
- Layer 3 switching
- displaying information about an adjacency table [2-640](#)
  - displaying port status [2-722](#)
  - displaying status of native VLAN tagging [2-722](#)
- license right-to-use activate command [2-393](#)
- license right-to-use deactivate command [2-394](#)
- link flap
- error detection for [2-246](#)
- link-status event messages
- disabling
    - globally [2-396, 2-399](#)
    - on an interface [2-397, 2-400](#)
  - enabling
    - globally [2-396, 2-399](#)
    - on an interface [2-397, 2-400](#)
- LLDP
- enabling power negotiation [2-395](#)
- lldp tlv-select power-management command [2-395](#)
- log buffer
- show status [2-734](#)
- logging
- controlling IP ARP packets [2-299](#)
- loopback error
- detection for [2-246](#)
- 
- M**
- MAB, display information [2-817](#)
- MAB, enable and configure [2-402](#)
- mab command [2-402](#)
- MAC Access Control Lists
- See MAC ACLs
- MAC ACLs
- defining extended MAC access list [2-404](#)
  - displaying MAC ACL information [2-957](#)
  - naming an ACL [2-404](#)
- mac-address (virtual switch) command [2-407](#)
- MAC addresses
- disabling MAC address learning per VLAN [2-413](#)
  - displaying
    - notification settings [2-242, 2-780, 2-831](#)
- MAC address filtering
- configuring [2-417](#)
  - disabling [2-417](#)
  - enabling [2-417](#)
- MAC address learning on a VLAN, enabling [2-413](#)
- MAC address table
- adding static entries [2-445](#)
  - clearing dynamic entries [2-118, 2-120](#)
  - configuring aging time [2-407, 2-409](#)
  - displaying dynamic table entry information [2-827](#)
  - displaying entry count [2-825](#)
  - displaying information [2-821](#)
  - displaying interface-based information [2-829](#)
  - displaying multicast information [2-832](#)
  - displaying notification information [2-834](#)
  - displaying protocol-based information [2-836](#)
  - displaying static table entry information [2-838](#)
  - displaying the MAC address aging time [2-823](#)
  - displaying VLAN-based information [2-841](#)
  - enabling authentication bypass [2-222](#)
  - enabling notifications [2-415](#)
  - learning in the protocol buckets [2-410](#)
  - removing static entries [2-445](#)
- mac address-table learning vlan command [2-413](#)
- MAC address tables
- adding static entries [2-417](#)
  - deleting secure or specific addresses [2-125](#)
  - disabling IGMP snooping on static MAC addresses [2-417](#)
  - removing static entries [2-417](#)
- mac-address-table static [2-417](#)
- MAC address unicast filtering
- dropping unicast traffic [2-417](#)
- MAC authentication bypass (MAB), display information [2-817](#)

- MAC authorization bypass(MAB), enable and configure **2-402**
- macro  
  displaying descriptions **2-444**  
macro auto global processing command **2-426, 2-428, 2-431, 2-433, 2-435, 2-437, 2-439, 2-441, 2-843**  
macro auto monitor command **2-438**  
macro keywords  
  help strings **2-2**  
macros  
  adding a global description **2-444**  
  cisco global **2-442**  
  system-cpp **2-443**  
mapping secondary VLANs to MST instance **2-572**  
mapping VLAN(s) to an MST instance **2-277**  
match (class-map configuration) command **2-14, 2-189, 2-191, 2-193, 2-195, 2-448, 2-575, 2-1030, 2-1032, 2-1034, 2-1036, 2-1040**  
maximum transmission unit (MTU)  
  displaying the system MTU setting **2-947**  
  setting the maximum Layer 2 payload size **2-1082**  
MD5  
  verifying MD5 signature **2-1112**  
message digest 5  
  See MD5  
MFIB  
  clearing ip mfib counters **2-114**  
  clearing ip mfib fastdrop **2-115**  
  displaying all active MFIB routes **2-759**  
  displaying MFIB fastdrop table entries **2-761**  
  enabling IP MFIB fastdrops **2-337**  
MLD  
  configuring snooping  
    last-listener-query-intervals **2-365**  
  configuring snooping  
    listener-message-suppression **2-367**  
  configuring snooping robustness-variables **2-368**  
  configuring topology change notifications **2-370**  
  counting snooping last-listener-queries **2-363**  
  enabling snooping **2-361**  
  enabling snooping on a VLAN **2-371**  
MLD snooping  
  displaying **2-784**  
mode, MVR **2-480**  
modes  
  access-group **2-6**  
  show access-group interface **2-553, 2-639, 2-906**  
  switching between PVST+, MST, and Rapid PVST **2-1000**  
  See also command modes  
module password clearing **2-101**  
module reset  
  resetting a module by toggling the power **2-266**  
monitor capture {access-list | class-map} command **2-460**  
monitor capture mycap match command **2-467**  
monitor capture start command **2-469**  
--More-- prompt  
  filter **1-6**  
  search **1-7**  
MST  
  designating the primary and secondary root **2-1009**  
  displaying MST protocol information **2-935**  
  displaying region configuration information **2-935**  
  displaying spanning tree information **2-935**  
  entering MST configuration submode **2-1003**  
  setting configuration revision number **2-608**  
  setting path cost and port priority for instances **2-1001**  
  setting the forward delay timer for all instances **2-1005**  
  setting the hello-time delay timer for all instances **2-1006**  
  setting the max-age timer for all instances **2-1007**  
  setting the MST region name **2-486**  
  specifying the maximum number of hops **2-1008**  
  switching between PVST+ and Rapid PVST **2-1000**  
  using the MST configuration submode revision command **2-608**  
  using the submode name command **2-486**  
MTU  
  displaying global MTU settings **2-947**

- multi-auth, setting **2-30**
- Multicast Listener Discovery  
See MLD
- multicast
- enabling storm control **2-1028**
  - show ancp **2-642**
- multicast/unicast packets
- prevent forwarding **2-1054**
- Multicast Forwarding Information Base  
See MFIB
- multicast group address, MVR **2-483**
- multicast VLAN, MVR **2-480**
- multicast VLAN registration
- See MVR
- multi-domain, setting **2-30**
- multiple-character patterns **1-8**
- Multiple Spanning Tree  
See MST
- MVR
- configuring **2-480**
  - configuring interfaces **2-483**
  - displaying **2-863**
  - displaying interface information **2-864**
  - members, displaying **2-866**
  - mvr (global configuration) command **2-480**
  - mvr (interface configuration) command **2-483**
  - mvr vlan group command **2-484**
- 
- N**
- native VLAN
- controlling tagging of traffic **2-1075**
  - displaying ports eligible for native tagging **2-959**
  - displaying ports eligible for tagging **2-959**
  - enabling tagging on 802.1Q trunk ports **2-1123**
  - specifying the tagging of traffic **2-1076**
- NetFlow
- enabling NetFlow statistics **2-340**
  - including infer fields in routing statistics **2-340**
- netflow-lite exporter command **2-487**
- netflow-lite monitor command **2-489**
- netflow-lite sampler command **2-491**
- next-hop
- displaying CEF VLAN information **2-736**
  - nmstp attachment suppress command **2-494**
  - nmstp command **2-493**
  - no form of a command, using **1-6**
- NVRAM
- debugging NVRAM activities **2-161**
- 
- O**
- open access on a port, enabling **2-32**
- options timeout (netflow-lite exporter submode) command **2-252, 2-495**
- output
- pattern searches **1-7**
- 
- P**
- packet counters (statistics)
- clear for PPPoE Intermediate Agent **2-127**
  - packet counters, display for PPPoE Intermediate Agent **2-904**
  - packet forwarding
    - prevent unknown packets **2-1054**  - packet memory failure
    - direct switch action upon detection **2-207**  - packet memory test
    - bootup, displaying results **2-674, 2-676**
    - ongoing, displaying results **2-678**  - packet-offset (netflow-lite sampler submode) command **2-497**
  - packet rate (netflow-lite sampler submode) command **2-499**
  - packet-section size (netflow-lite sampler submode) command **2-501**
  - PACL
    - access-group mode **2-6**

- paging prompt  
see --More-- prompt
- PAgP  
  clearing port channel information **2-124**  
  debugging PAgP activity **2-162**  
  deselecting channeling protocol **2-89**  
  displaying port channel information **2-876, 2-878**  
  hot standby mode  
    returning to defaults **2-504**  
    selecting ports **2-504**  
  input interface of incoming packets  
    learning **2-503**  
    returning to defaults **2-503**  
  setting channeling protocol **2-89**
- parentheses **1-11**
- password  
  clearing on an intelligent line module **2-101**  
  establishing enhanced password security **2-1110**  
  setting username **2-1110**
- PBR  
  displaying route maps **1-xxiv**  
  redistributing route maps **1-xxiv**
- PM activities  
  debugging **2-165**  
  disabling debugging **2-165**
- PoE  
  error detection for **2-246**
- PoE policing  
  configure on an interface **2-541**
- PoE policing and monitoring  
  displaying status **2-903**
- police (percent) command **2-515**
- police (two rates) command **2-517, 2-519**
- police command **2-510**
- policing, configure PoE **2-541**
- policing and monitoring status  
  displaying PoE **2-903**
- Policy Based Routing  
  See PBR
- policy maps  
  creating **2-523**  
  marking **2-620**  
  See also QoS, hierarchical policies  
  traffic classification  
    defining the class  
    defining trust states **2-1098**
- port, dual-capable  
  selecting the connector **2-457**
- Port Aggregation Protocol  
  See PAgP
- port-based authentication  
  displaying debug messages **2-150**  
  displaying statistics and status **2-680**  
  enabling 802.1X **2-226**  
  host modes **2-219**  
  manual control of authorization state **2-226**  
  periodic re-authentication  
    enabling **2-229**  
  re-authenticating 802.1X-enabled ports **2-228**  
  switch-to-client frame-retransmission number **2-224**
- port channel  
  accessing **2-283**  
  creating **2-283**  
  displaying information **2-876, 2-878**  
  load distribution method  
    resetting to defaults **2-525**  
    setting **2-525**
- port-channel standalone-disable command **2-527**
- port control, changing from unidirectional or bidirectional **2-23**
- port-control value, configuring **2-36**
- port range  
  executing **2-284**
- port security  
  debugging ports security **2-166**  
  deleting secure or specific addresses **2-125**  
  displaying settings for an interface or switch **2-889**  
  enabling **2-1060**

- filter source IP and MAC addresses **2-346**
  - setting action upon security violation **2-1060**
  - setting the rate limit for bad packets **2-1060**
  - sticky port **2-1060**
  - Port Trust Device**
    - displaying **2-909**
  - port types, MVR** **2-483**
  - power efficient-ethernet auto command **2-533**
  - power inline four-pair forced command **2-538**
  - power inline logging global command **2-540**
  - power negotiation through LLDP, enabling **2-395**
  - power status**
    - displaying inline power **2-895**
    - displaying power status **2-895**
  - power supply**
    - configuring combined and redundant power on the Catalyst 4507R **2-528**
    - configuring inline power **2-534**
    - configuring power consumption **2-528**
    - displaying the EEPROM **2-700**
    - setting inline power state **2-532**
  - PPPoE Discovery**
    - enable vendor-tag stripping on packets**PPPoE Server**
      - enable vendor-tag stripping on Discovery packets **2-562**
  - PPPoE Discovery packets, limit rate arriving on an interface **2-560**
  - PPPoE Intermediate Agent**
    - clear statistics (packet counters) **2-127**
    - debugging **2-167**
  - pppoe intermediate-agent**
    - enable intermediate agent on a switch **2-552**
    - enable on an interface VLAN range **2-555**
    - enable PPPoE Intermediate Agent on an interface **2-553**
    - enable vendor-tag stripping of Discovery packets **2-562**
    - format-type (global) **2-556**
    - limit rate of PPPoE Discovery packets **2-560**
    - set circuit-id or remote-id for an interface **2-558**
  - set circuit-id or remote-id for an interface VLAN range **2-559**
  - set trust configuration on an interface **2-560, 2-561**
  - PPPoE Intermediate Agent, display configuration and statistics (packet counters)** **2-904**
  - priority command **2-563**
  - priority-queue command **2-139**
  - Private VLAN**
    - See PVLANS
  - privileged EXEC mode, summary** **1-5**
  - prompts**
    - system **1-5**
  - protocol tunneling**
    - configuring encapsulation rate **2-389**
    - disabling **2-384**
    - displaying port information **2-805**
    - enabling **2-384**
    - setting a CoS value for Layer 2 packets **2-386**
    - setting a drop threshold for Layer 2 packets **2-387**
  - PVLANS**
    - configuring isolated, primary, and community PVLANS **2-565**
    - controlling tagging of native VLAN traffic **2-1075**
    - disabling sticky-ARP **2-343**
    - displaying map information for VLAN SVIs **2-719**
    - displaying PVLAN information **2-965**
    - enabling interface configuration mode **2-1055**
    - enabling sticky-ARP **2-343**
    - mapping VLANs to the same SVI **2-569**
    - specifying host ports **2-1055**
    - specifying promiscuous ports **2-1055**
  - PVST+**
    - switching between PVST and MST **2-1000**
- 
- ## Q
- QoS**
    - account Layer 2 encapsulation **2-577**
    - attaching a policy-map to an interface **2-611**

automatic configuration **2-44, 2-48, 2-52, 2-56, 2-60, 2-64, 2-67**  
 class maps  
     creating **2-95**  
     defining the match criteria **2-448**  
 clearing aggregate counters **2-128**  
 configuring auto **2-64**  
     defining a named aggregate policer **2-579**  
 displaying aggregate policer information **2-907**  
 displaying auto configuration **2-650**  
 displaying class maps information **2-664**  
 displaying configuration information **2-650**  
 displaying configurations of policies **2-884**  
 displaying policy map information **2-880, 2-887**  
 displaying QoS information **2-906**  
 displaying QoS map information **2-911**  
 egress queue-sets  
     enabling the priority queue **2-139**  
 enabling global configuration mode **2-56, 2-576**  
 enabling per-VLAN QoS for a Layer 2 interface **2-581**  
 hierarchical policies  
     average-rate traffic shaping on a class **2-633**  
     bandwidth allocation for a class **2-75, 2-94**  
     creating a service policy **2-614**  
     marking **2-620**  
     strict priority queueing (LLQ) **2-563**  
 policy maps  
     creating **2-523**  
     marking **2-620**  
     traffic classifications  
         trust states **2-1098**  
 setting the trust state **2-579**  
 specifying flow-based match criteria **2-451**  
 Supervisor Engine 6-E  
     setting CoS **2-622**  
     setting DSCP **2-625**  
     setting precedence values **2-628**  
     setting QoS group identifiers **2-631**

QoS CoS  
     configuring for tunneled Layer 2 protocol packets **2-386**  
 quality of service  
     See QoS  
 querytime, MVR **2-480**  
 question command **1-1**  
 queueing information  
     displaying **2-909**  
 queue limiting  
     configuring packet limits **2-581**  


---

**R**  
 Rapid PVST  
     switching between PVST and MST **2-1000**  
 re-authenticating 802.1X-enabled ports **2-228**  
 re-authentication  
     periodic **2-229**  
     set the time **2-231**  
 reauthentication, enabling **2-35**  
 reboots  
     restoring bindings across **2-305**  
 receiver ports, MVR **2-483**  
 recovery mechanism  
     display **2-100, 2-689**  
 redundancy  
     accessing the main CPU **2-583**  
     changing from active to standby supervisor engine **2-587**  
     displaying information **2-913**  
     displaying ISSU config-sync failure information **2-917**  
     displaying redundancy facility information **2-913**  
     displaying RF client list **2-913**  
     displaying RF operational counters **2-913**  
     displaying RF states **2-913**  
     enabling automatic synchronization **2-72**  
     forcing switchover to standby supervisor engine **2-587**

- mismatched command listing [2-585](#)  
 set the mode [2-458](#)  
 synchronizing the route processor configurations [2-445](#)
- related documentation [1-xxiv](#)  
 remote-id, setting for an interface [2-558](#)  
 remote-id, setting for an interface VLAN range [2-559](#)  
 remote SPAN  
   See RSPAN  
 renew commands  
   ip dhcp snooping database [2-591](#)  
 rep admin vlan command [2-592](#)  
 rep block port command [2-593](#)  
 rep lsl-age-timer command [2-597](#)  
 rep preempt delay command [2-599](#)  
 rep preempt segment command [2-601](#)  
 rep segment command [2-602](#)  
 rep stcn command [2-605](#)  
 resetting PVLAN trunk  
   setting switchport to trunk [2-1055](#)  
 retry failed authentication, configuring [2-26](#)  
 rj45 connector, selecting the connector [2-457](#)  
 ROM monitor mode  
   summary [1-6](#)  
 Route Processor Redundancy  
   See redundancy  
 router, set to become ANCP client [2-18](#)  
 RPF  
   disabling IPv4 exists-only checks [2-348](#)  
   enabling IPv4 exists-only checks [2-348](#)  
 RPR  
   set the redundancy mode [2-458](#)  
 RSPAN  
   converting VLAN to RSPAN VLAN [2-590](#)  
   displaying list [2-967](#)
- 
- S**  
 sampler (netflow-lite monitor submode) command [2-609](#)
- saving configuration changes [1-11](#)  
 secure address, configuring [2-528](#)  
 secure ports, limitations [2-1061](#)  
 server (AAA) alive actions, configuring [2-26](#)  
 server (AAA) dead actions, configuring [2-26](#)  
 service-policy command (policy-map class) [2-614](#)  
 session classification, defining [2-30](#)  
 set the redundancy mode [2-458](#)  
 sfp connector, selecting the connector [2-457](#)  
 shape command [2-633](#)  
 shell trigger command [2-637, 2-923](#)  
 show ancp multicast [2-642](#)  
 show authentication interface command [2-644](#)  
 show authentication registration command [2-644](#)  
 show authentication sessions command [2-644](#)  
 show capture command [2-855](#)  
 show commands  
   filtering parameters [1-7](#)  
   searching and filtering [1-6](#)  
   show platform commands [1-11](#)  
 show device-sensor cache command [2-666](#)  
 show interfaces (virtual switch) command [2-709](#)  
 show interfaces counters (virtual switch) command [2-713](#)  
 show ipv6 snooping counters command [2-780](#)  
 show ip wccp command [2-771](#)  
 show ip wccp detail command [2-771](#)  
 show ip wccp view command [2-771](#)  
 show license right-to-use command [2-811](#)  
 show mab command [2-817](#)  
 show mac address-table learning command [2-242, 2-831](#)  
 show macro auto monitor device command [2-846, 2-848, 2-850](#)  
 show monitor capture command [2-857, 2-859](#)  
 show monitor capture file command [2-859](#)  
 show mvr command [2-863](#)  
 show mvr interface command [2-864](#)  
 show mvr members command [2-866](#)  
 show netflow-lite exporter command [2-868](#)  
 show netflow-lite monitor command [2-870](#)

- show netflow-lite sampler command **2-872**  
 show nmfp command **2-873**  
 show pagp dual-active (virtual switch) command **2-878**  
 show switch virtual (virtual switch) command **2-941**  
 show vlan group command **2-960**  
 show vlan mapping command **2-962**  
 show vslp (virtual switch) command **2-970**  
 Simple Network Management Protocol  
   See SNMP  
 single-character patterns  
   special characters **1-7**  
 single-host, setting **2-30**  
 slaveslot0  
   displaying information on the standby supervisor **2-926**  
 slot0  
   displaying information about the system **2-928**  
 SNMP  
   debugging spanning tree activities **2-170**  
   ifIndex persistence  
     clearing SNMP ifIndex commands **2-977**  
     compress SNMP ifIndex table format **2-984**  
     disabling globally **2-983**  
     disabling on an interface **2-979**  
     enabling globally **2-983**  
     enabling on an interface **2-979**  
   informs  
     disabling **2-981**  
     enabling **2-981**  
   traps  
     configuring to send when storm occurs **2-1026**  
     disabling **2-981**  
     enabling **2-981**  
     mac-notification  
       adding **2-985**  
       removing **2-985**  
 source (netflow-lite exporter submode) command **2-986**  
 source ports, MVR **2-483**  
 SPAN commands  
   configuring a SPAN session to monitor **2-474**  
   displaying SPAN session information **2-947, 2-1028**  
 SPAN enhancements  
   displaying status **2-855**  
 Spanning Tree Protocol  
   See STP  
 SPAN session  
   displaying session information **2-855**  
   filter ACLs **2-474**  
   specify encapsulation type **2-474**  
   turn off host learning based on ingress packets **2-474**  
 special characters  
   anchoring, table **1-10**  
 SSO **2-458**  
 standard desktop  
   enabling Cisco-recommended features **2-418**  
 standard desktop and Cisco IP phone  
   enabling Cisco-recommended features **2-420**  
 sticky address, configuring **2-529**  
 sticky-ARP  
   disabling on PVLANS **2-343**  
   enabling on PVLANS **2-343**  
 sticky port  
   deleting **2-125**  
   enabling security **2-1060**  
 storm control  
   configuring for action when storm occurs **2-1026**  
   disabling suppression mode **2-687**  
   displaying settings **2-938**  
   enabling **2-1026**  
   enabling broadcast **2-1026, 2-1028**  
   enabling multicast **2-1026, 2-1028**  
   enabling suppression mode **2-687**  
   enabling timer to recover from error disable **2-249**  
   enabling unicast **2-1026, 2-1028**  
   multicast, enabling **2-1028**  
   setting high and low levels **2-1026**  
   setting suppression level **2-687**  
 STP

- configuring link type for a port **2-998**
  - configuring tunneling encapsulation rate **2-389**
  - debugging all activities **2-170**
  - debugging spanning tree activities **2-170**
  - debugging spanning tree BackboneFast events **2-172**
  - debugging spanning tree UplinkFast **2-175**
  - detecting misconfiguration **2-995**
  - displaying active interfaces only **2-930**
  - displaying BackboneFast status **2-930**
  - displaying bridge status and configuration **2-930**
  - displaying spanning tree debug messages **2-170**
  - displaying summary of interface information **2-930**
  - enabling BPDU filtering by default on all PortFast ports **2-1014**
  - enabling BPDU filtering on an interface **2-991**
  - enabling BPDU guard by default on all PortFast ports **2-1016**
  - enabling BPDU guard on an interface **2-993**
  - enabling extended system ID **2-996**
  - enabling loop guard as a default on all ports **2-999**
  - enabling PortFast by default on all access ports **2-1017**
  - enabling PortFast mode **2-1012**
  - enabling protocol tunneling for **2-384**
  - enabling root guard **2-997**
  - enabling spanning tree BackboneFast **2-990**
  - enabling spanning tree on a per VLAN basis **2-1021**
  - enabling spanning tree UplinkFast **2-1019**
  - setting an interface priority **2-1018**
  - setting drop threshold for **2-387**
  - setting pathcost **2-994**
  - setting the default pathcost calculation method **2-1011**
  - subinterface configuration mode, summary **1-6**
  - SVI
    - creating a Layer 3 interface on a VLAN **2-286**
  - switch (virtual switch) command **2-1042**
  - switch convert mode (virtual switch) command **2-1043**
  - switching characteristics
    - excluding from link-up calculation **2-1052**
    - modifying **2-1052**
  - returning to interfaces
  - capture function **2-1052**
  - switchport **2-1076**
  - switchport interfaces
    - displaying status of Layer 3 port **2-722**
    - displaying status of native VLAN tagging **2-722**
  - switchport vlan mapping command **2-1080**
  - switch shim
    - debugging **2-173**
    - disabling debugging **2-173**
  - switch to router connection
    - enabling Cisco-recommended features **2-422**
  - switch to switch connection
    - enabling Cisco-recommended features **2-424**
  - switch virtual domain (virtual switch) command **2-1045**
  - switch virtual interface
    - See SVI
  - switch virtual link (virtual switch) command **2-1047**
  - sw-vlan **2-176**
  - system prompts **1-5**
- 
- T**
- Tab key
    - command completion **1-1**
  - tables
    - characters with special meaning **1-7**
    - mac access-list extended subcommands **2-404**
    - multipliers **1-9**
    - relationship between duplex and speed commands **2-1024**
    - show cable-diagnostics tdr command output fields **2-655**
    - show cdp neighbors detail field descriptions **2-663**
    - show cdp neighbors field descriptions **2-662**
    - show ip dhcp snooping command output **2-645, 2-817**
    - show ip interface field descriptions **2-757**
    - show policy-map control-plane field descriptions **2-883**

show vlan command output fields **2-966**  
 show vtp command output fields **2-974**  
 special characters **1-9**  
 special characters used for anchoring **1-10**  
 speed command options **2-451, 2-1024**  
 valid interface types **2-279, 2-281**

## TAC

displaying information useful to TAC **2-948**

## TCAM

debugging spanning tree activities **2-170**

## TDR

displaying cable diagnostic test results **2-654**

test condition of copper cables **2-1086**

## temperature readings

displaying information **2-684**

template data timeout (netflow-lite exporter submode) command **2-1084**

## timer information

**2-689**

## traffic monitor

display status **2-817**

## traffic shaping

enable on an interface **2-635**

transport udp (netflow-lite exporter submode) command **2-1094**

transport udp load-share (netflow-lite exporter submode) command **2-1096**

## traps, enabling

**2-981**

## trunk encapsulation

setting format **2-1076**

## trunk interfaces

displaying trunk interfaces information **2-729**

trunk port, configuring VLAN mapping **2-1080**

trunk ports, display VLAN mapping information **2-962**

trust configuration, setting on an interface **2-560, 2-561**

## trust state

setting **2-294**

ttl (netflow-lite exporter submode) command **2-1100**

## tunnel ports

displaying information about Layer 2 protocol **2-805**

## TX queues

allocating bandwidth **2-1102**  
 returning to default values **2-1102**  
 setting priority to high **2-1102**  
 specifying burst size **2-1102**  
 specifying traffic rate **2-1102**

**U**

## UDLD

displaying administrative and operational status **2-950**  
 enabling by default on all fiber interfaces **2-1104**  
 enabling on an individual interface **2-1106**  
 preventing a fiber interface from being enabled **2-1106**  
 resetting all shutdown ports **2-1108**  
 setting the message timer **2-1104**

## Unidirectional Link Detection

See UDLD

unidirection port control, changing from bidirectional **2-23**

unknown multicast traffic, preventing **2-1054**

unknown unicast traffic, preventing **2-1054**

user EXEC mode, summary **1-5**

## username

setting password and privilege level **2-1110**

**V**

## VACLs

access-group mode **2-6**  
 applying VLAN access maps **2-1125**  
 displaying VLAN access map information **2-957**  
 specifying an action in a VLAN access map **2-13**  
 specifying the match clause for a VLAN access-map sequence **2-446**  
 using a VLAN filter **2-1125**

## VLAN

applying an ARP ACL **2-288**  
 configuring **2-1114**

- configuring service policies **2-1119**
- converting to RSPAN VLAN **2-590**
- displaying CEF information **2-736**
- displaying CEF next-hop information **2-736**
- displaying information on switch interfaces **2-747, 2-751**
- displaying information on VLAN switch interfaces **2-754**
- displaying information sorted by group IP address **2-747, 2-751**
- displaying IP address and version information **2-747, 2-751**
- displaying Layer 2 VLAN information **2-953**
- displaying statistical information **2-853**
- displaying VLAN information **2-955**
- enabling dynamic ARP inspection **2-297**
- enabling Explicit Host Tracking **2-328**
- enabling guest per-port **2-217**
- enabling guest VLAN supplicant **2-210, 2-218**
- entering VLAN configuration mode **2-1119, 2-1121**
- native frames
  - enabling tagging on all 802.1Q trunk ports **2-1123**
  - pruning the list for VTP **2-1076**
  - setting the list of allowed **2-1076**
- VLAN, create or modify a group **2-1126**
- VLAN Access Control Lists
  - See VACLS
- VLAN access map
  - See VACLS
- VLAN database
  - resetting **2-607**
- VLAN debugging
  - limiting output **2-146**
- vlan group command **2-1126**
- VLAN groups, display VLANs mapped **2-960**
- VLAN link-up calculation
  - excluding a switch port **2-1052**
  - including a switch port **2-1052**
- VLAN manager
  - debugging **2-176**
- disabling debugging **2-176**
- IOS file system error tests
  - debugging **2-177**
  - disabling debugging **2-177**
- VLAN mapping
  - configuring **2-1080**
  - displaying **2-962**
  - VLAN mapping, configure on trunk port **2-1080**
  - VLAN mapping on trunk ports, display information **2-962**
  - VLAN Query Protocol
    - See VQP
  - VLAN query protocol (VQPC)
    - debugging **2-183**
  - VLANs
    - clearing
      - counters **2-131**
    - clearing hardware logic **2-103**
    - configuring
      - internal allocation scheme **2-1128**
    - displaying
      - internal VLAN allocation information **2-961**
      - RSPAN VLANs **2-967**
      - entering VLAN configuration mode **2-1121**
  - VMPS
    - configuring servers **2-1132**
    - reconfirming dynamic VLAN assignments **2-183, 2-1130**
  - voice VLANs
    - enabling **2-1048**
  - VoIP
    - configuring auto-QoS **2-64**
  - VQP
    - per-server retry count **2-1131**
    - reconfirming dynamic VLAN assignments **2-183, 2-1130**
  - vrf (netflow-lite exporter submode) command **2-1134**
  - VTP
    - configuring the administrative domain name **2-1139**
    - configuring the device in VTP client mode **2-1138**

configuring the device in VTP server mode [2-1142](#)

configuring the device in VTP transparent mode [2-1143](#)

configuring tunnel encapsulation rate [2-389](#)

creating a VTP domain password [2-1140](#)

displaying domain information [2-973](#)

displaying statistics information [2-973](#)

enabling protocol tunneling for [2-384](#)

enabling pruning in the VLAN database [2-1141](#)

enabling VTP version 2 mode [2-1144](#)

modifying the VTP configuration storage file name [2-1137](#)

set drop threshold for [2-387](#)

VTP protocol code

activating debug messages [2-180](#)

deactivating debug messages [2-180](#)

---

## W

Webauth fallback, enabling [2-29](#)