



## APPENDIX **B**

# Cisco ME 2400 Ethernet Access Switch Debug Commands

---

This appendix describes the **debug** privileged EXEC commands that have been created or changed for use with the Cisco ME 2400 Ethernet Access switch. These commands are helpful in diagnosing and resolving internetworking problems and should be enabled only under the guidance of Cisco technical support staff.



### Caution

---

Because debugging output is assigned high priority in the CPU process, it can render the system unusable. For this reason, use the **debug** commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco technical support staff. It is best to use the **debug** commands during periods of lower network traffic and fewer users. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect system use.

---

# debug dot1x

Use the **debug dot1x** privileged EXEC command to enable debugging of the IEEE 802.1x feature. Use the **no** form of this command to disable debugging.

**debug dot1x** {all | errors | events | packets | registry | state-machine}

**no debug dot1x** {all | errors | events | packets | registry | state-machine}

## Syntax Description

|                      |                                                         |
|----------------------|---------------------------------------------------------|
| <b>all</b>           | Display all IEEE 802.1x debug messages.                 |
| <b>errors</b>        | Display IEEE 802.1x error debug messages.               |
| <b>events</b>        | Display IEEE 802.1x event debug messages.               |
| <b>packets</b>       | Display IEEE 802.1x packet debug messages.              |
| <b>registry</b>      | Display IEEE 802.1x registry invocation debug messages. |
| <b>state-machine</b> | Display state-machine related-events debug messages.    |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug dot1x** command is the same as the **no debug dot1x** command.

## Related Commands

| Command               | Description                                                                                                              |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled.                                                      |
| <b>show dot1x</b>     | Displays IEEE 802.1x statistics, administrative status, and operational status for the switch or for the specified port. |

# debug etherchannel

Use the **debug etherchannel** privileged EXEC command to enable debugging of the EtherChannel/PAgP shim. This shim is the software module that is the interface between the Port Aggregation Protocol (PAgP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

**debug etherchannel** [**all** | **detail** | **error** | **event** | **idb**]

**no debug etherchannel** [**all** | **detail** | **error** | **event** | **idb**]



## Note

PAgP is available only on network node interfaces (NNIs) or enhanced network interfaces (ENIs).

## Syntax Description

|               |                                                                    |
|---------------|--------------------------------------------------------------------|
| <b>all</b>    | (Optional) Display all EtherChannel debug messages.                |
| <b>detail</b> | (Optional) Display detailed EtherChannel debug messages.           |
| <b>error</b>  | (Optional) Display EtherChannel error debug messages.              |
| <b>event</b>  | (Optional) Debug major EtherChannel event messages.                |
| <b>idb</b>    | (Optional) Display PAgP interface descriptor block debug messages. |



## Note

Though visible in the command-line help strings, the **linecard** keyword is not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

If you do not specify a keyword, all debug messages appear.

The **undebg etherchannel** command is the same as the **no debug etherchannel** command.

## Related Commands

| Command                  | Description                                                         |
|--------------------------|---------------------------------------------------------------------|
| <b>show debugging</b>    | Displays information about the types of debugging that are enabled. |
| <b>show etherchannel</b> | Displays EtherChannel information for the channel.                  |

# debug interface

Use the **debug interface** privileged EXEC command to enable debugging of interface-related activities. Use the **no** form of this command to disable debugging.

**debug interface** {*interface-id* | **null** *interface-number* | **port-channel** *port-channel-number* | **vlan** *vlan-id*}

**no debug interface** {*interface-id* | **null** *interface-number* | **port-channel** *port-channel-number* | **vlan** *vlan-id*}

## Syntax Description

|                                                |                                                                                                                                                        |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>interface-id</i>                            | Display debug messages for the specified physical port, identified by type switch number/module number/ port, for example <b>gigabitethernet 0/2</b> . |
| <b>null</b> <i>interface-number</i>            | Display debug messages for null interfaces. The <i>interface-number</i> is always <b>0</b> .                                                           |
| <b>port-channel</b> <i>port-channel-number</i> | Display debug messages for the specified EtherChannel port-channel interface. The <i>port-channel-number</i> range is 1 to 48.                         |
| <b>vlan</b> <i>vlan-id</i>                     | Display debug messages for the specified VLAN. The <i>vlan-id</i> range is 1 to 4094.                                                                  |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

If you do not specify a keyword, all debug messages appear.

The **undebug interface** command is the same as the **no debug interface** command.

## Related Commands

| Command                  | Description                                                         |
|--------------------------|---------------------------------------------------------------------|
| <b>show debugging</b>    | Displays information about the types of debugging that are enabled. |
| <b>show etherchannel</b> | Displays EtherChannel information for the channel.                  |

# debug ip igmp filter

Use the **debug ip igmp filter** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) filter events. Use the **no** form of this command to disable debugging.

**debug ip igmp filter**

**no debug ip igmp filter**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebug ip igmp filter</b> command is the same as the <b>no debug ip igmp filter</b> command. |
|-------------------------|------------------------------------------------------------------------------------------------------|

|                         |                       |                                                                     |
|-------------------------|-----------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>        | <b>Description</b>                                                  |
|                         | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug ip igmp max-groups

Use the **debug ip igmp max-groups** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) maximum groups events. Use the **no** form of this command to disable debugging.

**debug ip igmp max-groups**

**no debug ip igmp max-groups**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg ip igmp max-groups</b> command is the same as the <b>no debug ip igmp max-groups</b> command. |
|-------------------------|-------------------------------------------------------------------------------------------------------------|

|                         |                       |                                                                     |
|-------------------------|-----------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>        | <b>Description</b>                                                  |
|                         | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug ip igmp snooping

Use the **debug ip igmp snooping** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) snooping activity. Use the **no** form of this command to disable debugging.

**debug ip igmp snooping** [**group** | **management** | **querier** | **router** | **timer**]

**no debug ip igmp snooping** [**group** | **management** | **querier** | **router** | **timer**]

## Syntax Description

|                   |                                                                      |
|-------------------|----------------------------------------------------------------------|
| <b>group</b>      | (Optional) Display IGMP snooping group activity debug messages.      |
| <b>management</b> | (Optional) Display IGMP snooping management activity debug messages. |
| <b>querier</b>    | (Optional) Display IGMP snooping querier debug messages.             |
| <b>router</b>     | (Optional) Display IGMP snooping router activity debug messages.     |
| <b>timer</b>      | (Optional) Display IGMP snooping timer event debug messages.         |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug ip igmp snooping** command is the same as the **no debug ip igmp snooping** command.

## Related Commands

| Command                                         | Description                                                           |
|-------------------------------------------------|-----------------------------------------------------------------------|
| <a href="#">debug platform ip igmp snooping</a> | Displays information about platform-dependent IGMP snooping activity. |
| <a href="#">show debugging</a>                  | Displays information about the types of debugging that are enabled.   |

# debug lacp

Use the **debug lacp** privileged EXEC command to enable debugging of Link Aggregation Control Protocol (LACP) activity. Use the **no** form of this command to disable debugging.

**debug lacp** [**all** | **event** | **fsm** | **misc** | **packet**]

**no debug lacp** [**all** | **event** | **fsm** | **misc** | **packet**]



## Note

LACP is available only on network node interfaces (NNIs) and enhanced network interfaces (ENIs).

## Syntax Description

|               |                                                              |
|---------------|--------------------------------------------------------------|
| <b>all</b>    | (Optional) Display all LACP debug messages.                  |
| <b>event</b>  | (Optional) Display LACP event debug messages.                |
| <b>fsm</b>    | (Optional) Display LACP finite state-machine debug messages. |
| <b>misc</b>   | (Optional) Display miscellaneous LACP debug messages.        |
| <b>packet</b> | (Optional) Display LACP packet debug messages.               |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg lacp** command is the same as the **no debug lacp** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |
| <b>show lacp</b>      | Displays LACP channel-group information.                            |



# debug mac-notification

Use the **debug mac-notification** privileged EXEC command to enable debugging of MAC notification events. Use the **no** form of this command to disable debugging.

**debug mac-notification**

**no debug mac-notification**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg mac-notification</b> command is the same as the <b>no debug mac-notification</b> command. |
|-------------------------|---------------------------------------------------------------------------------------------------------|

|                         |                                            |                                                                                                  |
|-------------------------|--------------------------------------------|--------------------------------------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>                             | <b>Description</b>                                                                               |
|                         | <b>show debugging</b>                      | Displays information about the types of debugging that are enabled.                              |
|                         | <b>show mac address-table notification</b> | Displays the MAC address notification information for all interfaces or the specified interface. |

# debug matm

Use the **debug matm** privileged EXEC command to enable debugging of platform-independent MAC address management. Use the **no** form of this command to disable debugging.

**debug matm**

**no debug matm**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** Debugging is disabled.

---

**Command Modes** Privileged EXEC

---

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

---



---

**Usage Guidelines** The **undebg matm** command is the same as the **no debug matm** command.

---

| Related Commands | Command                             | Description                                                           |
|------------------|-------------------------------------|-----------------------------------------------------------------------|
|                  | <a href="#">debug platform matm</a> | Displays information about platform-dependent MAC address management. |
|                  | <a href="#">show debugging</a>      | Displays information about the types of debugging that are enabled.   |

---

# debug monitor

Use the **debug monitor** privileged EXEC command to enable debugging of the Switched Port Analyzer (SPAN) feature. Use the **no** form of this command to disable debugging.

**debug monitor** { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

**no debug monitor** { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

| Syntax Description   |  |                                                                                    |
|----------------------|--|------------------------------------------------------------------------------------|
| <b>all</b>           |  | Display all SPAN debug messages.                                                   |
| <b>errors</b>        |  | Display detailed SPAN error debug messages.                                        |
| <b>idb-update</b>    |  | Display SPAN interface description block (IDB) update-trace debug messages.        |
| <b>info</b>          |  | Display SPAN informational-tracing debug messages.                                 |
| <b>list</b>          |  | Display SPAN port and VLAN-list tracing debug messages.                            |
| <b>notifications</b> |  | Display SPAN notification debug messages.                                          |
| <b>platform</b>      |  | Display SPAN platform-tracing debug messages.                                      |
| <b>requests</b>      |  | Display SPAN request debug messages.                                               |
| <b>snmp</b>          |  | Display SPAN and Simple Network Management Protocol (SNMP) tracing debug messages. |

| Defaults | Debugging is disabled. |
|----------|------------------------|
|----------|------------------------|

| Command Modes | Privileged EXEC |
|---------------|-----------------|
|---------------|-----------------|

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

| Usage Guidelines | The <b>undebg monitor</b> command is the same as the <b>no debug monitor</b> command. |
|------------------|---------------------------------------------------------------------------------------|
|------------------|---------------------------------------------------------------------------------------|

| Related Commands | Command               | Description                                                                         |
|------------------|-----------------------|-------------------------------------------------------------------------------------|
|                  | <b>show debugging</b> | Displays information about the types of debugging that are enabled.                 |
|                  | <b>show monitor</b>   | Displays information about all SPAN and remote SPAN (RSPAN) sessions on the switch. |

# debug mvrdbg

Use the **debug mvrdbg** privileged EXEC command to enable debugging of Multicast VLAN Registration (MVR). Use the **no** form of this command to disable debugging.

**debug mvrdbg {all | events | igmpsn | management | ports}**

**no debug mvrdbg {all | events | igmpsn | management | ports}**

## Syntax Description

|                   |                                                                                         |
|-------------------|-----------------------------------------------------------------------------------------|
| <b>all</b>        | Display all MVR activity debug messages.                                                |
| <b>events</b>     | Display MVR event-handling debug messages.                                              |
| <b>igmpsn</b>     | Display MVR Internet Group Management Protocol (IGMP) snooping-activity debug messages. |
| <b>management</b> | Display MVR management-activity debug messages.                                         |
| <b>ports</b>      | Display MVR port debug messages.                                                        |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug mvrdbg** command is the same as the **no debug mvrdbg** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |
| <b>show mvr</b>       | Displays the current MVR configuration.                             |

# debug nvram

Use the **debug nvram** privileged EXEC command to enable debugging of NVRAM activity. Use the **no** form of this command to disable debugging.

**debug nvram**

**no debug nvram**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebug nvram</b> command is the same as the <b>no debug nvram</b> command. |
|-------------------------|------------------------------------------------------------------------------------|

| Related Commands | Command               | Description                                                         |
|------------------|-----------------------|---------------------------------------------------------------------|
|                  | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug pagp

Use the **debug pagp** privileged EXEC command to enable debugging of Port Aggregation Protocol (PAgP) activity. Use the **no** form of this command to disable debugging.

**debug pagp** [**all** | **event** | **fsm** | **misc** | **packet**]

**no debug pagp** [**all** | **event** | **fsm** | **misc** | **packet**]



## Note

PAgP is available only on network node interfaces (NNIs) and enhanced network interfaces (ENIs).

## Syntax Description

|               |                                                              |
|---------------|--------------------------------------------------------------|
| <b>all</b>    | (Optional) Display all PAgP debug messages.                  |
| <b>event</b>  | (Optional) Display PAgP event debug messages.                |
| <b>fsm</b>    | (Optional) Display PAgP finite state-machine debug messages. |
| <b>misc</b>   | (Optional) Display miscellaneous PAgP debug messages.        |
| <b>packet</b> | (Optional) Display PAgP packet debug messages.               |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug pagp** command is the same as the **no debug pagp** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |
| <b>show pagp</b>      | Displays PAgP channel-group information.                            |

# debug platform acl

Use the **debug platform acl** privileged EXEC command to enable debugging of the access control list (ACL) manager. Use the **no** form of this command to disable debugging.

**debug platform acl** { **all** | **exit** | **label** | **main** | **vacl** | **vmap** | **warn** }

**no debug platform acl** { **all** | **exit** | **label** | **main** | **vacl** | **vmap** | **warn** }

## Syntax Description

|              |                                                   |
|--------------|---------------------------------------------------|
| <b>all</b>   | Display all ACL manager debug messages.           |
| <b>exit</b>  | Display ACL exit-related debug messages.          |
| <b>label</b> | Display ACL label-related debug messages.         |
| <b>main</b>  | Display the main or important ACL debug messages. |
| <b>vacl</b>  | Display VLAN ACL-related debug messages.          |
| <b>vmap</b>  | Display ACL VLAN-map-related debug messages.      |
| <b>warn</b>  | Display ACL warning-related debug messages.       |



### Note

Though visible in the command-line help strings, the **racl** and **stack** keywords are not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform acl** command is the same as the **no debug platform acl** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform cpu-queues

Use the **debug platform cpu-queues** privileged EXEC command to enable debugging of platform central processing unit (CPU) receive queues. Use the **no** form of this command to disable debugging.

```
debug platform cpu-queues {broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | software-fwd-q |
  stp-q}
```

```
no debug platform cpu-queues {broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | software-fwd-q |
  stp-q}
```

## Syntax Description

|                          |                                                                                                                |
|--------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>broadcast-q</b>       | Display debug messages about packets received by the broadcast queue.                                          |
| <b>cbt-to-spt-q</b>      | Display debug messages about packets received by the core-based tree to shortest-path tree (cbt-to-spt) queue. |
| <b>cpuhub-q</b>          | Display debug messages about packets received by the CPU heartbeat queue.                                      |
| <b>host-q</b>            | Display debug messages about packets received by the host queue.                                               |
| <b>icmp-q</b>            | Display debug messages about packets received by the Internet Control Message Protocol (ICMP) queue.           |
| <b>igmp-snooping-q</b>   | Display debug messages about packets received by the Internet Group Management Protocol (IGMP)-snooping queue. |
| <b>layer2-protocol-q</b> | Display debug messages about packets received by the Layer 2 protocol queue.                                   |
| <b>logging-q</b>         | Display debug messages about packets received by the logging queue.                                            |
| <b>remote-console-q</b>  | Display debug messages about packets received by the remote console queue.                                     |
| <b>software-fwd-q</b>    | Debug packets received by the software forwarding queue.                                                       |
| <b>stp-q</b>             | Debug packets received by the Spanning Tree Protocol (STP) queue.                                              |



## Note

Though visible in the command-line help strings, the **routing-protocol-Q** and **rpffail-q** keywords are not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform cpu-queues** command is the same as the **no debug platform cpu-queues** command.



**Related Commands**

| Command        | Description                                                         |
|----------------|---------------------------------------------------------------------|
| show debugging | Displays information about the types of debugging that are enabled. |

# debug platform dot1x

Use the **debug platform dot1x** privileged EXEC command to enable debugging of IEEE 802.1x events. Use the **no** form of this command to disable debugging.

**debug platform dot1x** { **initialization** | **interface-configuration** | **rpc** }

**no debug platform dot1x** { **initialization** | **interface-configuration** | **rpc** }

## Syntax Description

|                                |                                                                         |
|--------------------------------|-------------------------------------------------------------------------|
| <b>initialization</b>          | Display IEEE 802.1x initialization sequence debug messages.             |
| <b>interface-configuration</b> | Display IEEE 802.1x interface configuration-related debug messages.     |
| <b>rpc</b>                     | Display IEEE 802.1x remote procedure call (RPC) request debug messages. |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform dot1x** command is the same as the **no debug platform dot1x** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform etherchannel

Use the **debug platform etherchannel** privileged EXEC command to enable debugging of platform-dependent EtherChannel events. Use the **no** form of this command to disable debugging.

**debug platform etherchannel {init | link-up | rpc-detailed | rpc-generic | warnings}**

**no debug platform etherchannel {init | link-up | rpc-detailed | rpc-generic | warnings}**

| Syntax Description |                     |                                                                           |
|--------------------|---------------------|---------------------------------------------------------------------------|
|                    | <b>init</b>         | Display EtherChannel module initialization debug messages.                |
|                    | <b>link-up</b>      | Display EtherChannel link-up and link-down related debug messages.        |
|                    | <b>rpc-detailed</b> | Display detailed EtherChannel remote procedure call (RPC) debug messages. |
|                    | <b>rpc-generic</b>  | Display EtherChannel RPC generic debug messages.                          |
|                    | <b>warnings</b>     | Display EtherChannel warning debug messages.                              |

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

|                         |                                                                                                                   |
|-------------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg platform etherchannel</b> command is the same as the <b>no debug platform etherchannel</b> command. |
|-------------------------|-------------------------------------------------------------------------------------------------------------------|

| Related Commands | Command               | Description                                                         |
|------------------|-----------------------|---------------------------------------------------------------------|
|                  | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform forw-tcam

Use the **debug platform forw-tcam** privileged EXEC command to enable debugging of the forwarding ternary content addressable memory (TCAM) manager. Use the **no** form of this command to disable debugging.

**debug platform forw-tcam** [adjustment | allocate | audit | error | move | read | write]

**no debug platform forw-tcam** [adjustment | allocate | audit | error | move | read | write]

## Syntax Description

|                   |                                                            |
|-------------------|------------------------------------------------------------|
| <b>adjustment</b> | (Optional) Display TCAM manager adjustment debug messages. |
| <b>allocate</b>   | (Optional) Display TCAM manager allocation debug messages. |
| <b>audit</b>      | (Optional) Display TCAM manager audit messages.            |
| <b>error</b>      | (Optional) Display TCAM manager error messages.            |
| <b>move</b>       | (Optional) Display TCAM manager move messages.             |
| <b>read</b>       | (Optional) Display TCAM manager read messages.             |
| <b>write</b>      | (Optional) Display TCAM manager write messages.            |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

If you do not specify a keyword, all forwarding TCAM manager debug messages appear.

The **undebg platform forw-tcam** command is the same as the **no debug platform forw-tcam** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform ip dhcp

Use the **debug platform ip dhcp** privileged EXEC command to debug DHCP events. Use the **no** form of this command to disable debugging.

**debug platform ip dhcp** [**all** | **error** | **event** | **packet** | **rpc**]

**no debug platform ip dhcp** [**all** | **error** | **event** | **packet** | **rpc**]

| Syntax Description |            |                                                                  |
|--------------------|------------|------------------------------------------------------------------|
| <b>all</b>         | (Optional) | Display all DHCP debug messages.                                 |
| <b>error</b>       | (Optional) | Display DHCP error debug messages.                               |
| <b>event</b>       | (Optional) | Display DHCP event debug messages.                               |
| <b>packet</b>      | (Optional) | Display DHCP packet-related debug messages.                      |
| <b>rpc</b>         | (Optional) | Display DHCP remote procedure call (RPC) request debug messages. |

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

**Usage Guidelines** The **undebg platform ip dhcp** command is the same as the **no debug platform ip dhcp** command.

| Related Commands | Command                                       | Description                                                         |
|------------------|-----------------------------------------------|---------------------------------------------------------------------|
|                  | <a href="#">show ip dhcp snooping</a>         | Displays the DHCP snooping configuration.                           |
|                  | <a href="#">show ip dhcp snooping binding</a> | Displays the DHCP snooping binding information.                     |
|                  | <a href="#">show debugging</a>                | Displays information about the types of debugging that are enabled. |

## debug platform ip igmp snooping

Use the **debug platform ip igmp snooping** privileged EXEC command to enable debugging of platform-dependent Internet Group Management Protocol (IGMP) snooping. Use the **no** form of this command to disable debugging.

**debug platform ip igmp snooping** { **all** | **di** | **error** | **event** | **group** | **mgmt** | **pak** | **retry** | **rpc** | **warn** }

**debug platform ip igmp snooping pak** { *ip-address* | **error** | **ipopt** | **leave** | **query** | **report** | **rx** | **svi** | **tx** }

**debug platform ip igmp snooping rpc** [ **cfg** | **misc** | **vlan** ]

**no debug platform ip igmp snooping** { **all** | **di** | **error** | **event** | **group** | **mgmt** | **pak** | **retry** | **rpc** | **warn** }

### Syntax Description

|                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>                                                                                                                                        | Display all IGMP snooping debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>di</b>                                                                                                                                         | Display IGMP snooping destination index (di) coordination remote procedure call (RPC) debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>error</b>                                                                                                                                      | Display IGMP snooping error messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>event</b>                                                                                                                                      | Display IGMP snooping event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>group</b>                                                                                                                                      | Display IGMP snooping group debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>mgmt</b>                                                                                                                                       | Display IGMP snooping management debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>pak</b> { <i>ip-address</i>   <b>error</b>   <b>ipopt</b>   <b>leave</b>   <b>query</b>   <b>report</b>   <b>rx</b>   <b>svi</b>   <b>tx</b> } | Display IGMP snooping packet event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <i>ip-address</i>—IP address of the IGMP group.</li> <li>• <b>error</b>—Display IGMP snooping packet error debug messages.</li> <li>• <b>ipopt</b>—Display IGMP snooping IP bridging options debug messages.</li> <li>• <b>leave</b>—Display IGMP snooping leave debug messages.</li> <li>• <b>query</b>—Display IGMP snooping query debug messages.</li> <li>• <b>report</b>—Display IGMP snooping report debug messages.</li> <li>• <b>rx</b>—Display IGMP snooping received packet debug messages.</li> <li>• <b>svi</b>—Display IGMP snooping switched virtual interface (SVI) packet debug messages.</li> <li>• <b>tx</b>—Display IGMP snooping sent packet debug messages.</li> </ul> |
| <b>private-vlan</b>                                                                                                                               | Display IGMP snooping private VLAN messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>retry</b>                                                                                                                                      | Display IGMP snooping retry debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>rpc</b> [ <b>cfg</b>   <b>misc</b>   <b>vlan</b> ]                                                                                             | Display IGMP snooping remote procedure call (RPC) event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>cfg</b>—(Optional) Display IGMP snooping RPC debug messages.</li> <li>• <b>misc</b>—(Optional) IGMP snooping miscellaneous RPC debug messages.</li> <li>• <b>vlan</b>—(Optional) IGMP snooping VLAN assert RPC debug messages.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>warn</b>                                                                                                                                       | Display IGMP snooping warning messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |


**Note**

Though visible in the command-line help strings, the **rpc l3mm** keyword is not supported.

**Defaults**

Debugging is disabled.

**Command Modes**

Privileged EXEC

**Command History**

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

**Usage Guidelines**

The **undebg platform ip igmp snooping** command is the same as the **no debug platform ip igmp snooping** command.

**Related Commands**

| Command                                | Description                                                             |
|----------------------------------------|-------------------------------------------------------------------------|
| <a href="#">debug ip igmp snooping</a> | Displays information about platform-independent IGMP snooping activity. |
| <b>show debugging</b>                  | Displays information about the types of debugging that are enabled.     |

# debug platform led

Use the **debug platform led** privileged EXEC command to enable debugging of light-emitting diode (LED) actions. Use the **no** form of this command to disable debugging.

**debug platform led** {generic | signal}

**no debug platform led** {generic | signal}

## Syntax Description

|                |                                            |
|----------------|--------------------------------------------|
| <b>generic</b> | Display LED generic action debug messages. |
| <b>signal</b>  | Display LED signal bit map debug messages. |



## Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug platform led** command is the same as the **no debug platform led** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |



# debug platform matm

Use the **debug platform matm** privileged EXEC command to enable debugging of platform-dependent MAC address management. Use the **no** form of this command to disable debugging.

**debug platform matm {aging | all | ec-aging | errors | learning | rpc | secure-address | warnings}**

**no debug platform matm {aging | all | ec-aging | errors | learning | rpc | secure-address | warnings}**

| Syntax Description    |  |                                                                                    |
|-----------------------|--|------------------------------------------------------------------------------------|
| <b>aging</b>          |  | Display MAC address aging debug messages.                                          |
| <b>all</b>            |  | Display all platform MAC address management event debug messages.                  |
| <b>ec-aging</b>       |  | Display EtherChannel address aging-related debug messages.                         |
| <b>errors</b>         |  | Display MAC address management error messages.                                     |
| <b>learning</b>       |  | Display MAC address management address-learning debug messages.                    |
| <b>rpc</b>            |  | Display MAC address management remote procedure call (RPC) related debug messages. |
| <b>secure-address</b> |  | Display MAC address management secure address learning debug messages.             |
| <b>warning</b>        |  | Display MAC address management warning messages.                                   |

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

**Usage Guidelines** The **undebug platform matm** command is the same as the **no debug platform matm** command.

| Related Commands | Command                        | Description                                                             |
|------------------|--------------------------------|-------------------------------------------------------------------------|
|                  | <a href="#">debug matm</a>     | Displays information about platform-independent MAC address management. |
|                  | <a href="#">show debugging</a> | Displays information about the types of debugging that are enabled.     |

# debug platform messaging application

Use the **debug platform messaging application** privileged EXEC command to enable debugging of application messaging activity. Use the **no** form of this command to disable debugging.

**debug platform messaging application** {all | badpak | cleanup | events | memerr | messages | usererr}

**no debug platform messaging application** {all | badpak | cleanup | events | memerr | messages | usererr}

## Syntax Description

|                 |                                                   |
|-----------------|---------------------------------------------------|
| <b>all</b>      | Display all application-messaging debug messages. |
| <b>badpak</b>   | Display bad-packet debug messages.                |
| <b>cleanup</b>  | Display clean-up debug messages.                  |
| <b>events</b>   | Display event debug messages.                     |
| <b>memerr</b>   | Display memory-error debug messages.              |
| <b>messages</b> | Display application-messaging debug messages.     |
| <b>usererr</b>  | Display user-error debug messages.                |



## Note

Though visible in the command-line help strings, the **stackchg** keyword is not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform messaging application** command is the same as the **no debug platform messaging application** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform phy

Use the **debug platform phy** privileged EXEC command to enable debugging of PHY driver information. Use the **no** form of this command to disable debugging.

**debug platform phy** { **automdix** | **cablediag** | **dual-purpose** | **flcd** { **configure** | **ipc** | **iter** | **trace** } | **flowcontrol** | **forced** | **init-seq** | **link-status** | **read** | **sfp** | **show-controller** | **speed** | **write** }

**no debug platform phy** { **automdix** | **cablediag** | **dual-purpose** | **flcd** { **configure** | **ipc** | **iter** | **trace** } | **flowcontrol** | **forced** | **init-seq** | **link-status** | **read** | **sfp** | **show-controller** | **speed** | **write** }

| Syntax Description                                                         |                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>automdix</b>                                                            | Display PHY automatic medium-dependent interface crossover (Auto-MDIX) debug messages.                                                                                                                                                                                                                                                                                          |
| <b>cablediag</b>                                                           | Display PHY cable-diagnostic debug messages.                                                                                                                                                                                                                                                                                                                                    |
| <b>dual-purpose</b>                                                        | Display dual-purpose PHY events.                                                                                                                                                                                                                                                                                                                                                |
| <b>flcd</b> { <b>configure</b>   <b>ipc</b>   <b>iter</b>   <b>trace</b> } | Display PHY FLCD debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>configure</b>—Display PHY configure debug messages.</li> <li>• <b>ipc</b>—Display Interprocess Communication Protocol (IPC) debug messages.</li> <li>• <b>iter</b>—Display iter debug messages.</li> <li>• <b>trace</b>—Display trace debug messages.</li> </ul> |
| <b>flowcontrol</b>                                                         | Display PHY flowcontrol debug messages.                                                                                                                                                                                                                                                                                                                                         |
| <b>forced</b>                                                              | Display PHY forced-mode debug messages.                                                                                                                                                                                                                                                                                                                                         |
| <b>init-seq</b>                                                            | Display PHY initialization-sequence debug messages.                                                                                                                                                                                                                                                                                                                             |
| <b>link-status</b>                                                         | Display PHY link-status debug messages.                                                                                                                                                                                                                                                                                                                                         |
| <b>read</b>                                                                | Display PHY-read debug messages.                                                                                                                                                                                                                                                                                                                                                |
| <b>sfp</b>                                                                 | Display PHY small form-factor pluggable (SFP) modules debug messages.                                                                                                                                                                                                                                                                                                           |
| <b>show-controller</b>                                                     | Display PHY show-controller debug messages.                                                                                                                                                                                                                                                                                                                                     |
| <b>speed</b>                                                               | Display PHY speed-change debug messages.                                                                                                                                                                                                                                                                                                                                        |
| <b>write</b>                                                               | Display PHY-write debug messages.                                                                                                                                                                                                                                                                                                                                               |



## Note

Although visible in the command-line help, the **xenpak** keyword is not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

**■ debug platform phy****Command History**

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

**Usage Guidelines**

The **undebbug platform phy** command is the same as the **no debug platform phy** command.

**Related Commands**

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform pm

Use the **debug platform pm** privileged EXEC command to enable debugging of the platform-dependent port manager software module. Use the **no** form of this command to disable debugging.

**debug platform pm** { **all** | **counters** | **errdisable** | **etherchnl** | **exceptions** | **hpm-events** | **idb-events** | **if-numbers** | **ios-events** | **link-status** | **platform** | **pm-events** | **pm-vectors** [**detail**] | **rpc** [**general** | **oper-info** | **state** | **vectors** | **vp-events**] | **soutput** | **sync** | **vlangs** }

**no debug platform pm** { **all** | **counters** | **errdisable** | **etherchnl** | **exceptions** | **hpm-events** | **idb-events** | **if-numbers** | **ios-events** | **link-status** | **platform** | **pm-events** | **pm-vectors** [**detail**] | **rpc** [**general** | **oper-info** | **state** | **vectors** | **vp-events**] | **soutput** | **sync** | **vlangs** }

| Syntax Description                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>                                                                                          | Display all port-manager debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>counters</b>                                                                                     | Display counters for remote procedure call (RPC) debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>errdisable</b>                                                                                   | Display error-disabled related-events debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>etherchnl</b>                                                                                    | Display EtherChannel related-events debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>exceptions</b>                                                                                   | Display system exception debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>hpm-events</b>                                                                                   | Display platform port-manager event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>idb-events</b>                                                                                   | Display interface descriptor block (IDB) related-events debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>if-numbers</b>                                                                                   | Display interface-number translation-event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>ios-events</b>                                                                                   | Display IOS event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>link-status</b>                                                                                  | Display interface link-detection event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>platform</b>                                                                                     | Display port-manager function-event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>pm-events</b>                                                                                    | Display port manager event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>pm-vectors</b> [ <b>detail</b> ]                                                                 | Display port-manager vector-related-event debug messages. The keyword has this meaning: <ul style="list-style-type: none"> <li>• <b>detail</b>—Display vector-function details.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                    |
| <b>rpc</b> [ <b>general</b>   <b>oper-info</b>   <b>state</b>   <b>vectors</b>   <b>vp-events</b> ] | Display RPC related-event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>general</b>—(Optional) Display RPC general events.</li> <li>• <b>oper-info</b>—(Optional) Display operational- and informational-related RPC messages.</li> <li>• <b>state</b>—(Optional) Display administrative- and operational-related RPC messages.</li> <li>• <b>vectors</b>—(Optional) Display vector-related RPC messages.</li> <li>• <b>vp-events</b>—(Optional) Display virtual ports related-events RP messages.</li> </ul> |
| <b>soutput</b>                                                                                      | Display IDB output vector event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>sync</b>                                                                                         | Display operational synchronization and VLAN line-state event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>vlangs</b>                                                                                       | Display VLAN creation and deletion event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

 debug platform pm**Note**

Though visible in the command-line help strings, the **stack-manager** keyword is not supported.

**Defaults**

Debugging is disabled.

**Command Modes**

Privileged EXEC

**Command History**

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

**Usage Guidelines**

The **undebg platform pm** command is the same as the **no debug platform pm** command.

**Related Commands**

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform policer cpu uni-eni

Use the **debug platform policer cpu uni-eni** privileged EXEC command to enable debugging of the control-plane policer for user network interfaces (UNIs) and enhanced network interfaces (ENIs). This command displays information messages when any changes are made to CPU protection. Use the **no** form of this command to disable debugging.

**debug platform policer cpu uni-eni**

**no debug platform policer cpu uni-eni**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

| Command History | Release    | Modification                                                                                                      |
|-----------------|------------|-------------------------------------------------------------------------------------------------------------------|
|                 | 12.2(25)EX | This command was introduced.                                                                                      |
|                 | 12.2(44)SE | The command was changed from <b>debug platform policer cpu uni</b> to <b>debug platform policer cpu uni-eni</b> . |
|                 |            |                                                                                                                   |

|                         |                                                                                                                                  |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebug platform policer cpu uni-eni</b> command is the same as the <b>no debug platform policer cpu uni-eni</b> command. |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------|

| Related Commands | Command                          | Description                                                                                                                |
|------------------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------|
|                  | <b>show debugging</b>            | Displays information about the types of debugging that are enabled.                                                        |
|                  | <b>show platform policer cpu</b> | Displays control plane policer statistics per feature or the indexes and the corresponding feature for the specified port. |

# debug platform port-asic

Use the **debug platform port-asic** privileged EXEC command to enable debugging of the port application-specific integrated circuit (ASIC) driver. Use the **no** form of this command to disable debugging.

**debug platform port-asic {interrupt | periodic | read | write}**

**no debug platform port-asic {interrupt | periodic | read | write}**

## Syntax Description

|                  |                                                              |
|------------------|--------------------------------------------------------------|
| <b>interrupt</b> | Display port-ASIC interrupt-related function debug messages. |
| <b>periodic</b>  | Display port-ASIC periodic-function-call debug messages.     |
| <b>read</b>      | Display port-ASIC read debug messages.                       |
| <b>write</b>     | Display port-ASIC write debug messages.                      |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform port-asic** command is the same as the **no debug platform port-asic** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |



# debug platform port-security

Use the **debug platform port-security** privileged EXEC command to enable debugging of platform-dependent port-security information. Use the **no** form of this command to disable debugging.

**debug platform port-security** {add | aging | all | delete | errors | rpc | warnings}

**no debug platform port-security** {add | aging | all | delete | errors | rpc | warnings}

## Syntax Description

|                 |                                                     |
|-----------------|-----------------------------------------------------|
| <b>add</b>      | Display secure address addition debug messages.     |
| <b>aging</b>    | Display secure address aging debug messages.        |
| <b>all</b>      | Display all port-security debug messages.           |
| <b>delete</b>   | Display secure address deletion debug messages.     |
| <b>errors</b>   | Display port-security error debug messages.         |
| <b>rpc</b>      | Display remote procedure call (RPC) debug messages. |
| <b>warnings</b> | Display warning debug messages.                     |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform port-security** command is the same as the **no debug platform port-security** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform qos-acl-tcam

Use the **debug platform qos-acl-tcam** privileged EXEC command to enable debugging of the quality of service (QoS) and access control list (ACL) ternary content addressable memory (TCAM) manager software. Use the **no** form of this command to disable debugging.

**debug platform qos-acl-tcam** {all | ctcam | errors | labels | mask | rpc | tcam}

**no debug platform qos-acl-tcam** {all | ctcam | errors | labels | mask | rpc | tcam}

## Syntax Description

|               |                                                                         |
|---------------|-------------------------------------------------------------------------|
| <b>all</b>    | Display all QoS and ACL TCAM (QATM) manager debug messages.             |
| <b>ctcam</b>  | Display Cisco TCAM (CTCAM) related-events debug messages.               |
| <b>errors</b> | Display QATM error-related-events debug messages.                       |
| <b>labels</b> | Display QATM label-related-events debug messages.                       |
| <b>mask</b>   | Display QATM mask-related-events debug messages.                        |
| <b>rpc</b>    | Display QATM remote procedure call (RPC) related-events debug messages. |
| <b>tcam</b>   | Display QATM TCAM-related events debug messages.                        |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform qos-acl-tcam** command is the same as the **no debug platform qos-acl-tcam** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform remote-commands

Use the **debug platform remote-commands** privileged EXEC command to enable debugging of remote commands. Use the **no** form of this command to disable debugging.

**debug platform remote-commands**

**no debug platform remote-commands**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg platform remote-commands</b> command is the same as the <b>no debug platform remote-commands</b> command. |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------|

|                         |                       |                                                                     |
|-------------------------|-----------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>        | <b>Description</b>                                                  |
|                         | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform resource-manager

Use the **debug platform resource-manager** privileged EXEC command to enable debugging of the resource manager software. Use the **no** form of this command to disable debugging.

**debug platform resource-manager** { **all** | **dm** | **erd** | **errors** | **madmed** | **sd** | **stats** | **vld** }

**no debug platform resource-manager** { **all** | **dm** | **erd** | **errors** | **madmed** | **sd** | **stats** | **vld** }

## Syntax Description

|               |                                                                                               |
|---------------|-----------------------------------------------------------------------------------------------|
| <b>all</b>    | Display all resource manager debug messages.                                                  |
| <b>dm</b>     | Display destination-map debug messages.                                                       |
| <b>erd</b>    | Display equal-cost-route descriptor-table debug messages.                                     |
| <b>errors</b> | Display error debug messages.                                                                 |
| <b>madmed</b> | Display the MAC address descriptor table and multi-expansion descriptor table debug messages. |
| <b>sd</b>     | Display the station descriptor table debug messages.                                          |
| <b>stats</b>  | Display statistics debug messages.                                                            |
| <b>vld</b>    | Display the VLAN-list descriptor debug messages.                                              |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform resource-manager** command is the same as the **no debug platform resource-manager** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform snmp

Use the **debug platform snmp** privileged EXEC command to enable debugging of the platform-dependent Simple Network Management Protocol (SNMP) software. Use the **no** form of this command to disable debugging.

**debug platform snmp**

**no debug platform snmp**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg platform snmp</b> command is the same as the <b>no debug platform snmp</b> command. |
|-------------------------|---------------------------------------------------------------------------------------------------|

|                         |                       |                                                                     |
|-------------------------|-----------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>        | <b>Description</b>                                                  |
|                         | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform span

Use the **debug platform span** privileged EXEC command to enable debugging of the platform-dependent Switched Port Analyzer (SPAN) software. Use the **no** form of this command to disable debugging.

**debug platform span**

**no debug platform span**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg platform span</b> command is the same as the <b>no debug platform span</b> command. |
|-------------------------|---------------------------------------------------------------------------------------------------|

|                         |                       |                                                                     |
|-------------------------|-----------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>        | <b>Description</b>                                                  |
|                         | <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform supervisor-asic

Use the **debug platform supervisor-asic** privileged EXEC command to enable debugging of the supervisor application-specific integrated circuit (ASIC). Use the **no** form of this command to disable debugging.

**debug platform supervisor-asic {all | errors | receive | send}**

**no debug platform supervisor-asic {all | errors | receive | send}**

## Syntax Description

|                |                                                     |
|----------------|-----------------------------------------------------|
| <b>all</b>     | Display all supervisor-ASIC event debug messages.   |
| <b>errors</b>  | Display the supervisor-ASIC error debug messages.   |
| <b>jumbo</b>   | Display the supervisor-ASIC jumbo debug messages.   |
| <b>receive</b> | Display the supervisor-ASIC receive debug messages. |
| <b>send</b>    | Display the supervisor-ASIC send debug messages.    |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug platform supervisor-asic** command is the same as the **no debug platform supervisor-asic** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform sw-bridge

Use the **debug platform sw-bridge** privileged EXEC command to enable debugging of the software bridging function. Use the **no** form of this command to disable debugging.

**debug platform sw-bridge** { **broadcast** | **control** | **multicast** | **packet** | **unicast** }

**no debug platform sw-bridge** { **broadcast** | **control** | **multicast** | **packet** | **unicast** }

## Syntax Description

|                  |                                                |
|------------------|------------------------------------------------|
| <b>broadcast</b> | Display broadcast-data debug messages.         |
| <b>control</b>   | Display protocol-packet debug messages.        |
| <b>multicast</b> | Display multicast-data debug messages.         |
| <b>packet</b>    | Display sent and received data debug messages. |
| <b>unicast</b>   | Display unicast-data debug messages.           |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug platform sw-bridge** command is the same as the **no debug platform sw-bridge** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |



# debug platform tcam

Use the **debug platform tcam** privileged EXEC command to enable debugging of ternary content addressable memory (TCAM) access and lookups. Use the **no** form of this command to disable debugging.

```
debug platform tcam {log | read | search | write}
```

```
debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
debug platform tcam read {reg | ssram | tcam}
```

```
debug platform tcam search
```

```
debug platform tcam write {forw-ram | reg | tcam}
```

```
no debug platform tcam {log | read | search | write}
```

```
no debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
no debug platform tcam read {reg | ssram | tcam}
```

```
no debug platform tcam search
```

```
no debug platform tcam write {forw-ram | reg | tcam}
```

| Syntax Description                                 |                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>log l2 {acl {input   output}   local   qos}</b> | Display Layer 2 field-based CAM look-up type debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>acl {input   output}</b>—Display input or output ACL look-up debug messages.</li> <li>• <b>local</b>—Display local forwarding look-up debug messages.</li> <li>• <b>qos</b>—Display classification and quality of service (QoS) look-up debug messages.</li> </ul> |
| <b>read {reg   ssram   tcam}</b>                   | Display TCAM-read debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>reg</b>—Display TCAM-register read debug messages.</li> <li>• <b>ssram</b>—Display synchronous static RAM (SSRAM)-read debug messages.</li> <li>• <b>tcam</b>—Display TCAM-read debug messages.</li> </ul>                                                                                    |
| <b>search</b>                                      | Display supervisor-initiated TCAM-search results debug messages.                                                                                                                                                                                                                                                                                                                                              |
| <b>write {forw-ram   reg   tcam}</b>               | Display TCAM-write debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>forw-ram</b>—Display forwarding-RAM write debug messages.</li> <li>• <b>reg</b>—Display TCAM-register write debug messages.</li> <li>• <b>tcam</b>—Display TCAM-write debug messages.</li> </ul>                                                                                             |

**debug platform tcam****Note**

Though visible in the command-line help strings, the **log l3 acl**, **l3 ipv6 {acl {input | output} | local | qos | secondary}**, the **l3 local**, and the **l3 secondary** keywords are not supported.

**Defaults**

Debugging is disabled.

**Command Modes**

Privileged EXEC

**Command History**

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

**Usage Guidelines**

The **undebbug platform tcam** command is the same as the **no debug platform tcam** command.

**Related Commands**

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform uddld

Use the **debug platform uddld** privileged EXEC command to enable debugging of the platform-dependent UniDirectional Link Detection (UDLD) software. Use the **no** form of this command to disable debugging.

**debug platform uddld** [**all** | **error** | **rpc** {**events** | **messages**}]

**no debug platform uddld** [**all** | **error** | **rpc** {**events** | **messages**}]

## Syntax Description

|                                                |                                                                                                                                                                                                                                                    |
|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>                                     | (Optional) Display all UDLD debug messages.                                                                                                                                                                                                        |
| <b>error</b>                                   | (Optional) Display error condition debug messages.                                                                                                                                                                                                 |
| <b>rpc</b> { <b>events</b>   <b>messages</b> } | (Optional) Display UDLD remote procedure call (RPC) debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li><b>events</b>—Display UDLD RPC events.</li> <li><b>messages</b>—Display UDLD RPC messages.</li> </ul> |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform uddld** command is the same as the **no debug platform uddld** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug platform vlan

Use the **debug platform vlan** privileged EXEC command to enable debugging of the VLAN manager software. Use the **no** form of this command to disable debugging.

**debug platform vlan {errors | mvid | rpc}**

**no debug platform vlan {errors | mvid | rpc}**

## Syntax Description

|               |                                                             |
|---------------|-------------------------------------------------------------|
| <b>errors</b> | Display VLAN error debug messages.                          |
| <b>mvid</b>   | Display mapped VLAN ID allocations and free debug messages. |
| <b>rpc</b>    | Display remote procedure call (RPC) debug messages.         |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg platform vlan** command is the same as the **no debug platform vlan** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

# debug pm

Use the **debug pm** privileged EXEC command to enable debugging of port manager (PM) activity. The port manager is a state machine that controls all the logical and physical interfaces. All features, such as VLANs, UniDirectional Link Detection (UDLD), and so forth, work with the port manager to provide switch functions. Use the **no** form of this command to disable debugging.

**debug pm** {all | assert | card | cookies | etherchnl | hatable | messages | port | registry | sm | span | split | vlan | vp}

**no debug pm** {all | assert | card | cookies | etherchnl | hatable | messages | port | registry | sm | span | split | vlan | vp}

| Syntax Description |  |                                                       |
|--------------------|--|-------------------------------------------------------|
| <b>all</b>         |  | Display all PM debug messages.                        |
| <b>assert</b>      |  | Display assert debug messages.                        |
| <b>card</b>        |  | Display line-card related-events debug messages.      |
| <b>cookies</b>     |  | Display internal PM cookie validation debug messages. |
| <b>etherchnl</b>   |  | Display EtherChannel related-events debug messages.   |
| <b>hatable</b>     |  | Display Host Access Table events debug messages.      |
| <b>messages</b>    |  | Display PM debug messages.                            |
| <b>port</b>        |  | Display port related-events debug messages.           |
| <b>registry</b>    |  | Display PM registry invocation debug messages.        |
| <b>sm</b>          |  | Display state-machine related-events debug messages.  |
| <b>span</b>        |  | Display spanning-tree related-events debug messages.  |
| <b>split</b>       |  | Display split-processor debug messages.               |
| <b>vlan</b>        |  | Display VLAN related-events debug messages.           |
| <b>vp</b>          |  | Display virtual port related-events debug messages.   |



## Note

Though visible in the command-line help strings, the **scp** and **pvlan** keywords are not supported.

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

**Usage Guidelines** The **undebug pm** command is the same as the **no debug pm** command.

 debug pm**Related Commands**

| Command        | Description                                                         |
|----------------|---------------------------------------------------------------------|
| show debugging | Displays information about the types of debugging that are enabled. |

# debug port-security

Use the **debug port-security** privileged EXEC command to enable debugging of the allocation and states of the port security subsystem. Use the **no** form of this command to disable debugging.

**debug port-security**

**no debug port-security**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg port-security</b> command is the same as the <b>no debug port-security</b> command. |
|-------------------------|---------------------------------------------------------------------------------------------------|

|                         |                                    |                                                                     |
|-------------------------|------------------------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>                     | <b>Description</b>                                                  |
|                         | <b>show debugging</b>              | Displays information about the types of debugging that are enabled. |
|                         | <a href="#">show port-security</a> | Displays port-security settings for an interface or for the switch. |

# debug qos-manager

Use the **debug qos-manager** privileged EXEC command to enable debugging of the quality of service (QoS) manager software. Use the **no** form of this command to disable debugging.

**debug qos-manager {all | event | verbose}**

**no debug qos-manager {all | event | verbose}**

## Syntax Description

|                |                                                   |
|----------------|---------------------------------------------------|
| <b>all</b>     | Display all QoS-manager debug messages.           |
| <b>event</b>   | Display QoS-manager related-event debug messages. |
| <b>verbose</b> | Display QoS-manager detailed debug messages.      |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg qos-manager** command is the same as the **no debug qos-manager** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |



# debug spanning-tree

Use the **debug spanning-tree** privileged EXEC command to enable debugging of spanning-tree activities. Use the **no** form of this command to disable debugging.

**debug spanning-tree** {all | bpdud | bpdud-opt | config | etherchannel | events | exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization}

**no debug spanning-tree** {all | bpdud | bpdud-opt | config | etherchannel | events | exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization}

| Syntax Description     |  |                                                                                                                                                                                                                                                                                 |
|------------------------|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>             |  | Display all spanning-tree debug messages.                                                                                                                                                                                                                                       |
| <b>bpdud</b>           |  | Display spanning-tree bridge protocol data unit (BPDU) debug messages. See the <a href="#">debug spanning-tree bpdud</a> command.                                                                                                                                               |
| <b>bpdud-opt</b>       |  | Display optimized BPDU handling debug messages. See the <a href="#">debug spanning-tree bpdud-opt</a> command                                                                                                                                                                   |
| <b>config</b>          |  | Display spanning-tree configuration change debug messages.                                                                                                                                                                                                                      |
| <b>etherchannel</b>    |  | Display EtherChannel-support debug messages.                                                                                                                                                                                                                                    |
| <b>events</b>          |  | Display spanning-tree topology event debug messages.                                                                                                                                                                                                                            |
| <b>exceptions</b>      |  | Display spanning-tree exception debug messages.                                                                                                                                                                                                                                 |
| <b>general</b>         |  | Display general spanning-tree activity debug messages.                                                                                                                                                                                                                          |
| <b>mstp</b>            |  | Debug Multiple Spanning Tree Protocol events. See the <a href="#">debug spanning-tree mstp</a> command                                                                                                                                                                          |
| <b>pvst+</b>           |  | Display per-VLAN spanning-tree plus (PVST+) event debug messages.                                                                                                                                                                                                               |
| <b>root</b>            |  | Display spanning-tree root-event debug messages.                                                                                                                                                                                                                                |
| <b>snmp</b>            |  | Display spanning-tree Simple Network Management Protocol (SNMP) handling debug messages.                                                                                                                                                                                        |
| <b>switch</b>          |  | Display switch shim command debug messages. This shim is the software module that is the interface between the generic Spanning Tree Protocol (STP) code and the platform-specific code of various switch platforms. See the <a href="#">debug spanning-tree switch</a> command |
| <b>synchronization</b> |  | Display the spanning-tree synchronization event debug messages.                                                                                                                                                                                                                 |



## Note

Though visible in the command-line help strings, the **backbonefast**, **csuf/csrt**, and **uplinkfast** keywords are not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

**debug spanning-tree****Command History**

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

**Usage Guidelines**

The **undebg spanning-tree** command is the same as the **no debug spanning-tree** command.

**Related Commands**

| Command                   | Description                                                         |
|---------------------------|---------------------------------------------------------------------|
| <b>show debugging</b>     | Displays information about the types of debugging that are enabled. |
| <b>show spanning-tree</b> | Displays spanning-tree state information.                           |

# debug spanning-tree bpdu

Use the **debug spanning-tree bpdu** privileged EXEC command to enable debugging of sent and received spanning-tree bridge protocol data units (BPDUs). Use the **no** form of this command to disable debugging.

**debug spanning-tree bpdu** [receive | transmit]

**no debug spanning-tree bpdu** [receive | transmit]

## Syntax Description

|                 |                                                                            |
|-----------------|----------------------------------------------------------------------------|
| <b>receive</b>  | (Optional) Display the nonoptimized path for received BPDU debug messages. |
| <b>transmit</b> | (Optional) Display the nonoptimized path for sent BPDU debug messages.     |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebg spanning-tree bpdu** command is the same as the **no debug spanning-tree bpdu** command.

## Related Commands

| Command                   | Description                                                         |
|---------------------------|---------------------------------------------------------------------|
| <b>show debugging</b>     | Displays information about the types of debugging that are enabled. |
| <b>show spanning-tree</b> | Displays spanning-tree state information.                           |

# debug spanning-tree bpd-opt

Use the **debug spanning-tree bpd-opt** privileged EXEC command to enable debugging of optimized spanning-tree bridge protocol data units (BPDUs) handling. Use the **no** form of this command to disable debugging.

**debug spanning-tree bpd-opt** [**detail** | **packet**]

**no debug spanning-tree bpd-opt** [**detail** | **packet**]

|                           |               |                                                                         |
|---------------------------|---------------|-------------------------------------------------------------------------|
| <b>Syntax Description</b> | <b>detail</b> | (Optional) Display detailed optimized BPDU-handling debug messages.     |
|                           | <b>packet</b> | (Optional) Display packet-level optimized BPDU-handling debug messages. |

|                 |                        |
|-----------------|------------------------|
| <b>Defaults</b> | Debugging is disabled. |
|-----------------|------------------------|

|                      |                 |
|----------------------|-----------------|
| <b>Command Modes</b> | Privileged EXEC |
|----------------------|-----------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

|                         |                                                                                                                   |
|-------------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | The <b>undebg spanning-tree bpd-opt</b> command is the same as the <b>no debug spanning-tree bpd-opt</b> command. |
|-------------------------|-------------------------------------------------------------------------------------------------------------------|

|                         |                                    |                                                                     |
|-------------------------|------------------------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>                     | <b>Description</b>                                                  |
|                         | <b>show debugging</b>              | Displays information about the types of debugging that are enabled. |
|                         | <a href="#">show spanning-tree</a> | Displays spanning-tree state information.                           |

# debug spanning-tree mstp

Use the **debug spanning-tree mstp** privileged EXEC command to enable debugging of the Multiple Spanning Tree Protocol (MSTP) software. Use the **no** form of this command to disable debugging.

**debug spanning-tree mstp** { **all** | **boundary** | **bpdu-rx** | **bpdu-tx** | **errors** | **flush** | **init** | **migration** | **pm** | **proposals** | **region** | **roles** | **sanity\_check** | **sync** | **tc** | **timers** }

**no debug spanning-tree mstp** { **all** | **boundary** | **bpdu-rx** | **bpdu-tx** | **errors** | **flush** | **init** | **migration** | **pm** | **proposals** | **region** | **roles** | **sanity\_check** | **sync** | **tc** | **timers** }

| Syntax Description  |                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>          | Enable all the debugging messages.                                                                                                                                                                                                                                                                                                                                       |
| <b>boundary</b>     | Debug flag changes at these boundaries: <ul style="list-style-type: none"> <li>An multiple spanning-tree (MST) region and a single spanning-tree region running Rapid Spanning Tree Protocol (RSTP)</li> <li>An MST region and a single spanning-tree region running IEEE 802.1D</li> <li>An MST region and another MST region with a different configuration</li> </ul> |
| <b>bpdu-rx</b>      | Debug the received MST bridge protocol data units (BPDUs).                                                                                                                                                                                                                                                                                                               |
| <b>bpdu-tx</b>      | Debug the sent MST BPDUs.                                                                                                                                                                                                                                                                                                                                                |
| <b>errors</b>       | Debug MSTP errors.                                                                                                                                                                                                                                                                                                                                                       |
| <b>flush</b>        | Debug the port flushing mechanism.                                                                                                                                                                                                                                                                                                                                       |
| <b>init</b>         | Debug the initialization of the MSTP data structures.                                                                                                                                                                                                                                                                                                                    |
| <b>migration</b>    | Debug the protocol migration state machine.                                                                                                                                                                                                                                                                                                                              |
| <b>pm</b>           | Debug MSTP port manager events.                                                                                                                                                                                                                                                                                                                                          |
| <b>proposals</b>    | Debug handshake messages between the designated switch and the root switch.                                                                                                                                                                                                                                                                                              |
| <b>region</b>       | Debug the region synchronization between the switch processor (SP) and the route processor (RP).                                                                                                                                                                                                                                                                         |
| <b>roles</b>        | Debug MSTP roles.                                                                                                                                                                                                                                                                                                                                                        |
| <b>sanity_check</b> | Debug the received BPDU sanity check messages.                                                                                                                                                                                                                                                                                                                           |
| <b>sync</b>         | Debug the port synchronization events.                                                                                                                                                                                                                                                                                                                                   |
| <b>tc</b>           | Debug topology change notification events.                                                                                                                                                                                                                                                                                                                               |
| <b>timers</b>       | Debug the MSTP timers for start, stop, and expire events.                                                                                                                                                                                                                                                                                                                |

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

**debug spanning-tree mstp****Usage Guidelines**

The **undebbug spanning-tree mstp** command is the same as the **no debug spanning-tree mstp** command.

**Related Commands**

| Command                   | Description                                                         |
|---------------------------|---------------------------------------------------------------------|
| <b>show debugging</b>     | Displays information about the types of debugging that are enabled. |
| <b>show spanning-tree</b> | Displays spanning-tree state information.                           |

# debug spanning-tree switch

Use the **debug spanning-tree switch** privileged EXEC command to enable debugging of the software interface between the Spanning Tree Protocol (STP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

**debug spanning-tree switch** { **all** | **errors** | **flush** | **general** | **helper** | **pm** | **rx** { **decode** | **errors** | **interrupt** | **process** } | **state** | **tx** [ **decode** ] }

**no debug spanning-tree switch** { **all** | **errors** | **flush** | **general** | **helper** | **pm** | **rx** { **decode** | **errors** | **interrupt** | **process** } | **state** | **tx** [ **decode** ] }

## Syntax Description

|                             |                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>                  | Display all spanning-tree switch debug messages.                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>errors</b>               | Display debug messages for the interface between the spanning-tree software module and the port manager software module.                                                                                                                                                                                                                                                                                                                   |
| <b>flush</b>                | Display debug messages for the shim flush operation.                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>general</b>              | Display general event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>helper</b>               | Display spanning-tree helper-task debug messages. Helper tasks handle bulk spanning-tree updates.                                                                                                                                                                                                                                                                                                                                          |
| <b>pm</b>                   | Display port-manager event debug messages.                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>rx</b>                   | Display received bridge protocol data unit (BPDU) handling debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li>• <b>decode</b>—Display decoded received packets.</li> <li>• <b>errors</b>—Display receive error debug messages.</li> <li>• <b>interrupt</b>—Display interrupt service request (ISR) debug messages.</li> <li>• <b>process</b>—Display process receive BPDU debug messages.</li> </ul> |
| <b>state</b>                | Display spanning-tree port state change debug messages;                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>tx</b> [ <b>decode</b> ] | Display sent BPDU handling debug messages. The keyword has this meaning: <ul style="list-style-type: none"> <li>• <b>decode</b>—(Optional) Display decoded sent packets.</li> </ul>                                                                                                                                                                                                                                                        |



## Note

Though visible in the command-line help strings, the **uplinkfast** keyword is not supported.

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

**debug spanning-tree switch****Usage Guidelines**

The **undebg spanning-tree switch** command is the same as the **no debug spanning-tree switch** command.

**Related Commands**

| Command                   | Description                                                         |
|---------------------------|---------------------------------------------------------------------|
| <b>show debugging</b>     | Displays information about the types of debugging that are enabled. |
| <b>show spanning-tree</b> | Displays spanning-tree state information.                           |



# debug sw-vlan

Use the **debug sw-vlan** privileged EXEC command to enable debugging of VLAN manager activities. Use the **no** form of this command to disable debugging.

**debug sw-vlan** {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | notification | packets | registries}

**no debug sw-vlan** {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | notification | packets | registries}

| Syntax Description             |  |                                                                                                                                                                                                                                                                                          |
|--------------------------------|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>badpmcookies</b>            |  | Display debug messages for VLAN manager incidents of bad port manager cookies.                                                                                                                                                                                                           |
| <b>cfg-vlan {bootup   cli}</b> |  | Display config-vlan debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li><b>bootup</b>—Display messages when the switch is booting up.</li> <li><b>cli</b>—Display messages when the command-line interface (CLI) is in config-vlan mode.</li> </ul> |
| <b>events</b>                  |  | Display debug messages for VLAN manager events.                                                                                                                                                                                                                                          |
| <b>ifs</b>                     |  | See the <a href="#">debug sw-vlan ifs</a> command.                                                                                                                                                                                                                                       |
| <b>management</b>              |  | Display debug messages for VLAN manager management of internal VLANs.                                                                                                                                                                                                                    |
| <b>notification</b>            |  | See the <a href="#">debug sw-vlan notification</a> command.                                                                                                                                                                                                                              |
| <b>packets</b>                 |  | Display debug messages for packet handling and encapsulation processes.                                                                                                                                                                                                                  |
| <b>registries</b>              |  | Display debug messages for VLAN manager registries.                                                                                                                                                                                                                                      |

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

**Usage Guidelines** The **undebug sw-vlan** command is the same as the **no debug sw-vlan** command.

| Related Commands | Command               | Description                                                                                                                      |
|------------------|-----------------------|----------------------------------------------------------------------------------------------------------------------------------|
|                  | <b>show debugging</b> | Displays information about the types of debugging that are enabled.                                                              |
|                  | <b>show vlan</b>      | Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain. |

# debug sw-vlan ifs

Use the **debug sw-vlan ifs** privileged EXEC command to enable debugging of the VLAN manager IOS file system (IFS) error tests. Use the **no** form of this command to disable debugging.

```
debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

```
no debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

## Syntax Description

|                             |                                                                                                                                                                                                                                                                                                               |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>open {read   write}</b>  | Display VLAN manager IFS file-open operation debug messages. The keywords have these meanings: <ul style="list-style-type: none"> <li><b>read</b>—Display VLAN manager IFS file-read operation debug messages.</li> <li><b>write</b>—Display VLAN manager IFS file-write operation debug messages.</li> </ul> |
| <b>read {1   2   3   4}</b> | Display file-read operation debug messages for the specified error test (1, 2, 3, or 4).                                                                                                                                                                                                                      |
| <b>write</b>                | Display file-write operation debug messages.                                                                                                                                                                                                                                                                  |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug sw-vlan ifs** command is the same as the **no debug sw-vlan ifs** command.

When selecting the file read operation, Operation **1** reads the file header, which contains the header verification word and the file version number. Operation **2** reads the main body of the file, which contains most of the domain and VLAN information. Operation **3** reads type length version (TLV) descriptor structures. Operation **4** reads TLV data.

## Related Commands

| Command               | Description                                                                                                                      |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled.                                                              |
| <b>show vlan</b>      | Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain. |

# debug sw-vlan notification

Use the **debug sw-vlan notification** privileged EXEC command to enable debugging of the activation and deactivation of VLAN IDs. Use the **no** form of this command to disable debugging.

**debug sw-vlan notification** {accfwdchange | allowedvlancfgchange | fwdchange | linkchange | modechange | statechange}

**no debug sw-vlan notification** {accfwdchange | allowedvlancfgchange | fwdchange | linkchange | modechange | statechange}

| Syntax Description          |  |                                                                                                                    |
|-----------------------------|--|--------------------------------------------------------------------------------------------------------------------|
| <b>accfwdchange</b>         |  | Display debug messages for VLAN manager notification of aggregated access interface spanning-tree forward changes. |
| <b>allowedvlancfgchange</b> |  | Display debug messages for VLAN manager notification of changes to the allowed VLAN configuration.                 |
| <b>fwdchange</b>            |  | Display debug messages for VLAN manager notification of spanning-tree forwarding changes.                          |
| <b>linkchange</b>           |  | Display debug messages for VLAN manager notification of interface link-state changes.                              |
| <b>modechange</b>           |  | Display debug messages for VLAN manager notification of interface mode changes.                                    |
| <b>statechange</b>          |  | Display debug messages for VLAN manager notification of interface state changes.                                   |



## Note

Though visible in the command-line help strings, the **pruningcfgchange** keyword is not supported.

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

| Command History | Release    | Modification                 |
|-----------------|------------|------------------------------|
|                 | 12.2(25)EX | This command was introduced. |

**Usage Guidelines** The **undebg sw-vlan notification** command is the same as the **no debug sw-vlan notification** command.

 debug sw-vlan notification

| Related Commands | Command        | Description                                                                                                                      |
|------------------|----------------|----------------------------------------------------------------------------------------------------------------------------------|
|                  | show debugging | Displays information about the types of debugging that are enabled.                                                              |
|                  | show vlan      | Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain. |

# debug udld

Use the **debug udld** privileged EXEC command to enable debugging of the UniDirectional Link Detection (UDLD) feature. Use the **no** form of this command to disable UDLD debugging.

**debug udld {events | packets | registries}**

**no debug udld {events | packets | registries}**

|                           |                   |                                                                                                                                                           |
|---------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax Description</b> | <b>events</b>     | Display debug messages for UDLD process events as they occur.                                                                                             |
|                           | <b>packets</b>    | Display debug messages for the UDLD process as it receives packets from the packet queue and tries to send them at the request of the UDLD protocol code. |
|                           | <b>registries</b> | Display debug messages for the UDLD process as it processes registry calls from the UDLD process-dependent module and other feature modules.              |

**Defaults** Debugging is disabled.

**Command Modes** Privileged EXEC

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | 12.2(25)EX     | This command was introduced. |

**Usage Guidelines** The **undebg udld** command is the same as the **no debug udld** command.

For **debug udld events**, these debugging messages appear:

- General UDLD program logic flow
- State machine state changes
- Program actions for the set and clear ErrDisable state
- Neighbor cache additions and deletions
- Processing of configuration commands
- Processing of link-up and link-down indications

For **debug udld packets**, these debugging messages appear:

- General packet processing program flow on receipt of an incoming packet
- Indications of the contents of the various pieces of packets received (such as type length versions [TLVs]) as they are examined by the packet reception code
- Packet transmission attempts and the outcome

For **debug udd registries**, these categories of debugging messages appear:

- Sub-block creation
- Fiber-port status changes
- State change indications from the port manager software
- MAC address registry calls

---

**Related Commands**

| Command               | Description                                                                             |
|-----------------------|-----------------------------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled.                     |
| <b>show udd</b>       | Displays UDD administrative and operational status for all ports or the specified port. |

# debug vqpc

Use the **debug vqpc** privileged EXEC command to enable debugging of the VLAN Query Protocol (VQP) client. Use the **no** form of this command to disable debugging.

**debug vqpc** [**all** | **cli** | **events** | **learn** | **packet**]

**no debug vqpc** [**all** | **cli** | **events** | **learn** | **packet**]

## Syntax Description

|               |                                                                                |
|---------------|--------------------------------------------------------------------------------|
| <b>all</b>    | (Optional) Display all VQP client debug messages.                              |
| <b>cli</b>    | (Optional) Display the VQP client command-line interface (CLI) debug messages. |
| <b>events</b> | (Optional) Display VQP client event debug messages.                            |
| <b>learn</b>  | (Optional) Display VQP client address learning debug messages.                 |
| <b>packet</b> | (Optional) Display VQP client packet information debug messages.               |

## Defaults

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

| Release    | Modification                 |
|------------|------------------------------|
| 12.2(25)EX | This command was introduced. |

## Usage Guidelines

The **undebug vqpc** command is the same as the **no debug vqpc** command.

## Related Commands

| Command               | Description                                                         |
|-----------------------|---------------------------------------------------------------------|
| <b>show debugging</b> | Displays information about the types of debugging that are enabled. |

■ debug vqpc