

Software version TC6.2
JULY 2013

ADMINISTRATOR GUIDE

CISCO TELEPRESENCE SYSTEMS
EX60 AND EX90



Thank you for choosing Cisco!

Your Cisco TelePresence System EX90/EX60 has been designed to give you many years of safe, reliable operation.

This part of the EX90/EX60 documentation is aimed at administrators working with the setup of the system.

Our main objective with this Administrator Guide is to address your goals and needs. Please let us know how well we succeeded!

May we recommend that you visit the Cisco web site regularly for updated versions of this guide.

The user documentation can be found on our web site. Go to:

► <http://www.cisco.com/go/telepresence/docs>

How to use this guide

The top menu bar and the entries in the Table of contents are all hyperlinks. You can click on them to go to the topic.

Table of contents

Introduction.....	4	Deleting trust lists (CUCM only).....	40
User documentation.....	5	Troubleshooting	41
Software	5	Downloading log files.....	42
What's new in this version	6	Upgrading the system software.....	43
EX90 system overview.....	8	Backup and restore.....	44
EX60 system overview.....	9	System recovery: Revert to the previously used software version	45
How to use the Touch controller.....	10	System recovery: Factory reset	46
Using the web interface	11	Restarting the system	47
Starting the web interface	12	System settings	48
Changing the system password	13	Overview of the system settings	49
The interactive menu	14	Audio settings	52
System information	15	Cameras settings.....	54
Placing a call	16	Conference settings	56
Sharing content.....	17	FacilityService settings.....	62
Controlling and monitoring a call	18	H323 settings.....	63
Controlling the camera	19	Network settings.....	66
Local layout control.....	20	NetworkServices settings.....	73
Capturing snapshots.....	21	Phonebook settings	77
Managing the favorites list.....	22	Provisioning settings.....	78
Favorite list folders.....	23	RTP settings.....	80
System configuration	24	Security settings.....	81
Changing system settings.....	25	SerialPort settings.....	83
Setting the Administrator Settings menu password	26	SIP settings.....	84
System status	27	Standby settings	87
Choosing a wallpaper	28	SystemUnit settings.....	88
Choosing a ringtone.....	29	Time settings	90
Peripherals overview	30	UserInterface settings.....	91
User administration	31	Video settings.....	92
Adding a sign in banner	35	Experimental settings	103
Managing the video system's certificates.....	36	Setting passwords.....	104
Managing the list of trusted certificate authorities	37	Setting the system password	105
Adding audit certificates.....	38	Setting the menu password.....	106
Setting strong security mode	39		

Appendices.....	107
Cisco VCS provisioning.....	108
Audio outputs and microphones.....	109
Optimal definition profiles	110
ClearPath – Packet loss resilience	111
EX90 dimensions	112
EX60 dimensions – wall mounting and arm mounting	113
Factory resetting.....	114
Factory resetting the Touch 8” controller	115
Technical specifications.....	116
Supported RFCs	119
User documentation on the Cisco web site.....	120
Cisco contacts	121

CHAPTER 1

INTRODUCTION



This document provides you with the information required to administer your product.

Products covered in this guide

- Cisco TelePresence System EX60
- Cisco TelePresence System EX90

User documentation

The user documentation for the Cisco TelePresence EX series includes several guides suitable for various user groups:

- **Installation guides:**
How to install the products
- **Getting started guide:**
Initial configurations required to get the system up and running
- **Administering TC Endpoints on CUCM:**
Tasks to perform to start using the product with the Cisco Unified Communications Manager (CUCM)
- **Administrator guide (this guide):**
Information required to administer your product
- **Quick reference guides:**
How to use the product
- **User guides:**
How to use the product
- **Knowledge base articles**
- **Video conferencing room primer:**
General guidelines for room design and best practice
- **Video conference room acoustics guidelines:**
Things to do to improve the perceived audio quality
- **Software release notes**
- **Regulatory compliance and safety information guide**
- **Legal & license information**

Downloading the user documentation

We recommend you visit the Cisco web site regularly for updated versions of the user documentation. Go to:

► <http://www.cisco.com/go/ex-docs>

Guidance how to find the documents on the Cisco web site are included in the

► [User documentation on the Cisco web site](#) appendix.

Software

You can download the software for your product from the Cisco web site. Go to:

► <http://www.cisco.com/cisco/software/navigator.html>

We recommend reading the Software Release Notes (TC6), go to:

► http://www.cisco.com/en/US/products/ps11327/tsd_products_support_series_home.html

What's new in this version

This section provides an overview of the new and changed system settings and new features in the TC6.2 software version.

Software release notes

For a complete overview of the news and changes, we recommend reading the Software Release Notes (TC6). Go to:

► http://www.cisco.com/en/US/products/ps11327/tsd_products_support_series_home.html

Software download

For software download go to:

► <http://www.cisco.com/cisco/software/navigator.html>

New features and improvements

Cisco Unified Communication Manager (CUCM) redundancy support

The TelePresence endpoints have CUCM redundancy support with failover and fallback. The TelePresence endpoint will automatically register to the next CUCM in the cluster if the connection to the active CUCM is lost.

If the TelePresence endpoint loses its connection to the primary CUCM, the call is preserved, but no additional features like content sharing, putting participants on hold etc. will be available. The next call will be handled by the secondary CUCM and all call features are available again. When the primary CUCM is back online, the endpoint will automatically register with the primary CUCM.

More details can be found in the *Administering TC endpoints on CUCM* guide for TC6.2.

Improved provisioning from CUCM

Several TelePresence endpoint parameters are added to CUCM and can be provisioned to the endpoint.

More details can be found in the *Administering TC endpoints on CUCM* guide for TC6.2.

Support for CUCM provisioning of the endpoint password when using the encrypted security profile

TelePresence endpoints can be fully and securely provisioned from CUCM. When the TelePresence endpoint is set up with an encrypted security profile in CUCM, the endpoint will read the *admin* password from the CUCM. The password can not be empty, and the user name must be *admin*.

More details can be found in the *Administering TC endpoints on CUCM* guide for TC6.2.

Support for auto discovery of the CUCM

The TelePresence endpoints have support for auto discovery of the CUCM through DHCP Option 150. If the network provides the CUCM address through DHCP Option 150, the endpoint will automatically register to the CUCM after a factory reset.

More details can be found in the *Administering TC endpoints on CUCM* guide for TC6.2.

Support for IPv4, IPv6 and dual stack

The video system is able to operate on IPv4, IPv6 or both at the same time (dual stack). This is configured using the *Network IPStack* setting. Which IP version to use for calls is configured using the *Conference CallProtocolIPStack* setting.

G.729 audio codec support in H.323 calls

Support for the G.729AB audio codec is added in H.323 calls in order to provide better IP phone interoperability. G.729 has been supported in SIP calls as from software version TC6.1.

Lync 2013 support for point-to-point calls

You can set up video calls between TelePresence systems and Lync 2013 users. HD quality at full frame rate (720p30) is supported in both directions. This feature is disabled by default. It must be enabled using the *Conference LyncCompatibility Mode* setting. It also requires version X8 of the VCS (Video Communication Server).

You can see the Lync 2013 users in the TelePresence system's directory (phone book), provided that TMS (TelePresence Management System) version 13.x or later is used.

Interactive Connectivity Establishment (ICE) support

TelePresence systems can use the ICE protocol (RFC 5245) to find the best media path through the network. ICE separates signalling and media, and is a NAT traversal solution that finds the shortest route for audio and video.

This feature is disabled by default. It must be enabled using the *SIP Profile Ice* settings. Both endpoints in the call must support ICE, and a valid TURN (Traversal Using Relay NAT) server must be defined.

ICE is not supported when registered to the current version of CUCM.

Check the TC6 software release notes for further details.

Active control: Providing end users conference control with TelePresence Server

Active Control gives more control and improved experience for the end user during conferences hosted on a Cisco TelePresence Server. Using your Cisco Touch controller, you can interact with the server to control the local experience of the meeting. You will see the participant list with indicators that show who is the active speaker and who is sharing content, you can change your local video layout, disconnect participants, etc.

This feature is disabled by default. It must be enabled using the *Experimental Conference ActiveControl Mode* setting.

Active control requires a Cisco TelePresence Server 3.1 or later, and the server must be behind a Conductor (version XC2.2 or later), i.e. not registered directly to VCS or CUCM. CUCM must be version 9.1.2 or later, and VCS must be version X7 or later. The feature is only supported for SIP calls. H.323 interworking scenarios are not supported.

Check the TC6 software release notes for further details.

Extended Binary Floor Control Protocol (BFCP) port range

When using SIP as a call protocol, UDP ports 5070 to 5077 are used for the BFCP connection (presentation channel). If a firewall is blocking ports in this range, the presentation channel will not be established and the presentation will be sent in the main video channel.

In earlier software releases, only port 5070 was used. The range is extended to support ICE.

On-screen indicator showing that the camera privacy shutter is closed

When you are in a call and the camera privacy shutter is closed, an indicator will be displayed on the local screen.

The incoming video PIP (picture-in-picture) can be moved to predefined positions on the screen

When in a call, and showing your own desktop locally (ViewPC mode), the incoming video PIP is placed in the upper center of your screen as default. Now, using the Touch controller, you can drag and drop the PIP in different predefined positions.

Web interface enhancements

- A *System recovery* page is introduced. The page provides access to the following recovery alternatives: software image swapping and factory reset. Easy access to configuration and log file back up is also provided.

System configuration changes

New configurations

Conference CallProtocolIPStack: <IPv4/IPv6>

Conference LyncCompatibility: <Off/On>

Network IPv4 Assignment: <Static/DHCP>
Replacing Network Assignment

SIP Profile Ice Mode: <Off/On>

SIP Profile Ice DefaultCandidate: <Host/Rflx/Relay>

SIP Profile Turn Server: <S: 0, 255>

SIP Profile Turn UserName: <S: 0, 128>

SIP Profile Turn Password: <S: 0, 128>

Configurations that are removed

Network Assignment
Replaced by Network IPv4 Assignment

Configurations that are modified

Network IPStack

OLD: <IPv4/IPv6>

NEW: <Dual/IPv4/IPv6>

EX90 system overview

The system is delivered with:

- EX90 unit
- Touch controller with cable
- Handset with cable
- DVI-D to DVI-I cable (recommended for optimal PC image quality)
- VGA to DVI-I cable
- Stereo audio cable 3.5 mm
- Ethernet cable
- AC adapter and power cable

The camera can be tilted and used as a document camera.



Detach the rear side cover when connecting cables.

When finished, snap on the rear cover.



A handset can be attached to the Touch controller.

EX60 system overview

The system is delivered with:

- EX60 unit
- Touch controller with cable
- Handset with cable
- DVI-D to DVI-I cable (recommended for optimal PC image quality)
- VGA to DVI-I cable
- Stereo audio cable 3.5 mm
- Ethernet cable
- AC adapter and power cable

The camera can be tilted and used as a document camera.



EX60, front view

Touch controller



EX60, rear view
(without rear cover)

Detach the rear side cover when connecting cables.

When finished, snap on the rear cover.



A handset can be attached to the Touch controller.

How to use the Touch controller

The principal operating device for your Cisco TelePresence System EX90 or EX60 system is a Touch controller.

The basic function of the Touch controller is illustrated below.

The Touch controller and its use are described in full detail in the User Guide for your video system.

Basic operating principles




Tap the touch screen to wake up the system, if needed.



Tap a button to activate its function.



Scroll in lists as shown.

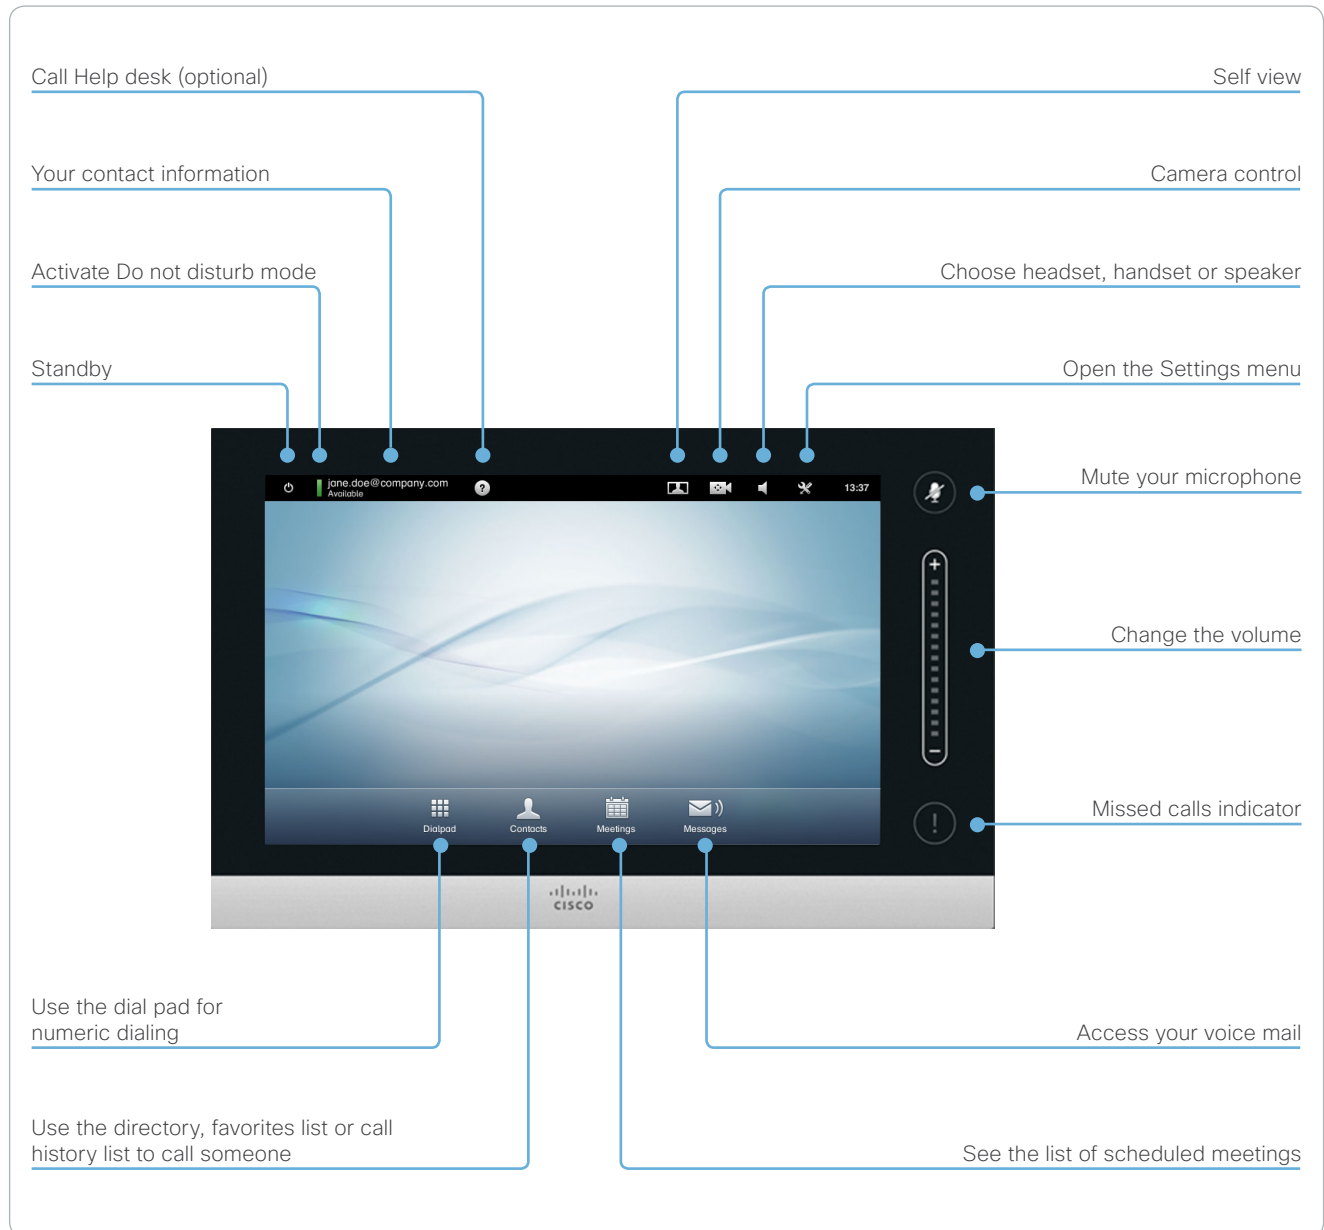

CHAPTER 2

USING THE WEB INTERFACE

The Cisco TelePresence System EX90/EX60 can be configured using the Touch controller or the web interface.

For full access to the system settings, the web interface must be used – the Touch controller provides access to a limited set of parameters only.

The Touch controller and its use are described in the EX90 and EX60 User Guides; the web interface is described in this guide.



Starting the web interface

The web interface provides full configuration access to your video conference system.

You can connect from a computer and administer the system remotely.

In this chapter you will find information how to use the web interface for system configuration and maintenance.


We recommend that you use the latest release of one of the major web browser.

1. Connect to the video system

Open a web browser and enter the IP address of the video system in the address bar.



To find the IP address (IPv4 or IPv6), tap [Settings](#) (⚙️) on the Touch controller.

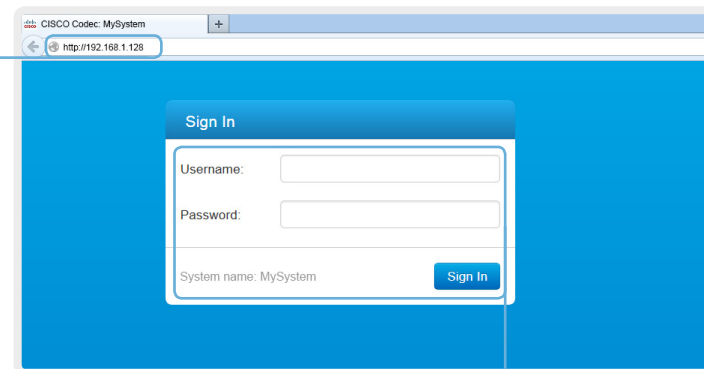


2. Sign in

Enter the user name and password for your video system and click [Sign In](#).



The system is delivered with a default user named *admin* with no password (i.e. leave the [Password](#) field blank when signing in for the first time).

We strongly recommend that you set a password for the *admin* user, see the next page.

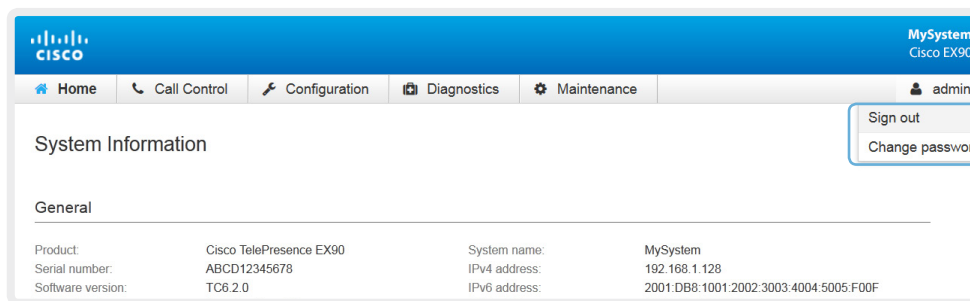

Signing out


Hover the mouse over your user name and choose [Sign out](#) from the drop-down list.

Changing the system password



We strongly recommend that you set a password for any user with ADMIN rights in order to restrict access to system configuration. This includes the default *admin* user.

You can read more about password protection in the [Setting passwords](#) chapter.

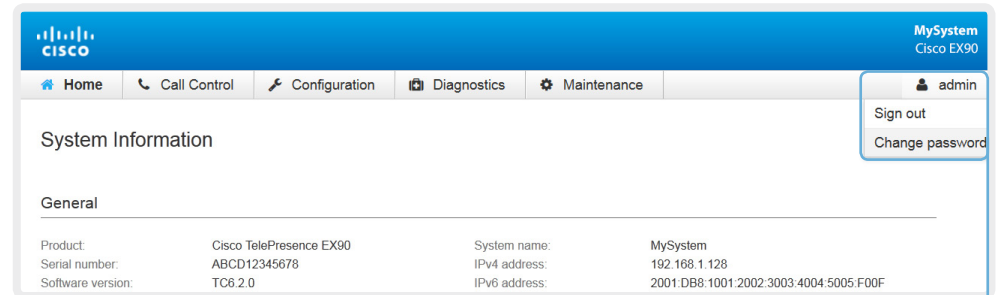

1. Open the Change Password dialog

Hover the mouse over your user name, and choose [Change password](#) in the drop-down list.

Change Password: admin

Current password	<input type="password"/>
New password	<input type="password"/>
Repeat new password	<input type="password"/>
<input type="button" value="Change password"/> <input type="button" value="Cancel"/>	

2. Set the new password

Enter your current and new passwords as requested, and click [Change password](#) for the change to take effect.



If the password currently is not set, leave the [Current password](#) field blank.

The interactive menu

The web interface provides access to tasks and configurations. They are available from the main menu, which appears near the top of the page when you have signed in.

When you hover the mouse over an item in the main menu, you can navigate to its related sub-pages.

Main menu

Hover the mouse over a main menu item in order to see the titles of the related sub-pages.

Click a sub-page's title to open it. Only pages that the user has access rights for can be opened; the others are greyed out*.

Click [Home](#) on the main menu to return to the System Information page.

Sub-pages


Call Control
Call Control
Favorites Management

Configuration
System Configuration
System Status
Personalization
Peripherals
User Administration
Sign In Banner
Startup Scripts
API
Security

Diagnostics
Troubleshooting
Log Files

Maintenance
Software Upgrade
Backup and Restore
System Recovery
Restart

* You can read more about user administration, user roles and access rights in the [User administration](#) section.

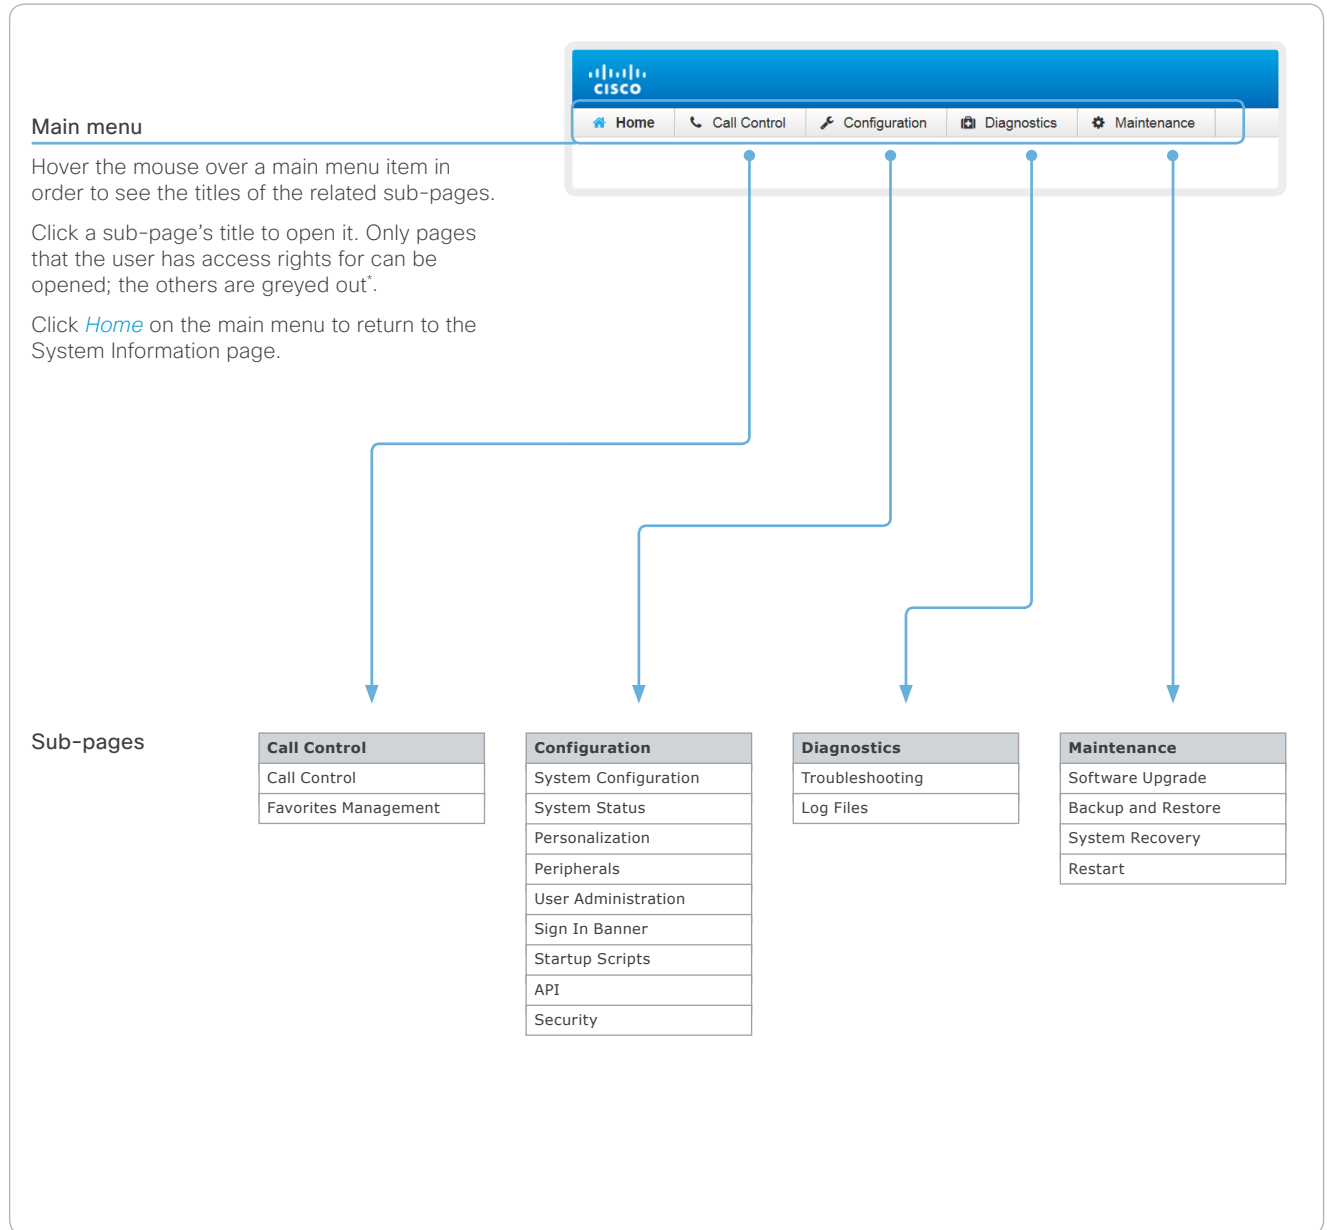

System information

The video system's Home page shows an overview of the basic set-up and status of the system*.

This includes information like system name and product type, which software version the system runs, its IP address, etc. Also the registration status for the video networks (SIP and H.323) is included, as well as the number/URI to use when making a call to the system.

Home

System Information

General

Product:	Cisco TelePresence EX90	System name:	MySystem
Serial number:	ABCD12345678	IPv4 address:	192.168.1.128
Software version:	TC6.2.0	IPv6 address:	2001:DB8:1001:2002:3003:4004:5005:F00F
Installed options:	PremiumResolution	MAC address:	01:23:45:67:89:AB
Valid release key:	Yes	Temperature:	58.5°C / 137.3°F

H323

Status:	Registered	Number:	123456
Gatekeeper:	192.168.1.1	ID:	firstname.lastname@company.com


SIP

Status:	Registered	URI:	firstname.lastname@company.com
Proxy:	192.168.1.2		

* The system information shown in the illustration serve as an example. Your system may be different.

Placing a call

You can use the Call Control page to place a call.

 Even if the web interface is used to initiate the call, it is the video system (display, microphones and loudspeakers) that is used for the call; it is not the PC running the web interface.

Calling

You can call someone either by choosing a contact name in the *Favorites*, *Directory* or *History* lists, or by typing a complete URI or number in the *Search or Dial* field. Then click [Call](#) in the associated contact card.

Searching the contact lists

Enter one or more characters in the *Search or Dial* field. Matching entries from the *Favorites*, *Directory* and *History* lists will be listed as you type.

Select the correct entry in the list before you click [Call](#).

Calling more than one

A point-to-point video call (a call involving two parties only) may be expanded to include more participants.

If your system supports the optional built-in MultiSite feature (not available for EX60), up to four participants, yourself included, can join the video call. The call will then become a video conference.


One additional participant can join on audio-only.

Follow the same procedure to call the next conference participant as you did when calling the first participant.

Navigate to: Call Control > Call Control


Call Control

Main Source



⏮
⏭

Presentation Source



Start Presentation

Contacts

Favorites

Directory

History


Meeting Rooms

Sales and Support Offices

Andrea Carter

Participants

End All



participant@company.com

participant@company.com

ⓘ
⏸
📞

Calling someone

Click a contact name, either in the *Favorites*, *Directory* or *History* lists. Then click [Call](#) in the contact card.

Alternatively, enter the complete URI or number in the *Search and Dial* field. Then click the [Call](#) button that appears next to the URI or number.

Holding and resuming

Use the ⏸ button next to the participant's name to put him on hold.

To resume the call, use the ▶ button that is present when the participant is on hold.

Ending a call

Click the [End all](#) button to terminate a call or conference.

To disconnect just one participant in a conference, click the 📞 button for that participant.

D14726.11 EX Series Administrator Guide TC6.2, JULY 2013.

16

www.cisco.com — Copyright © 2010–2013 Cisco Systems, Inc. All rights reserved.

Sharing content


You can connect a presentation source to one of the external inputs of your video system. Most often a PC is used as presentation source, but other options may be available depending on your system setup.

While in a call you can share content with the far end, that is the other participant(s) in the call.

If you are not in a call, the content is shared locally on your display.

Navigate to: Call Control > Call Control

Call Control



↺
□

No presets

Contacts

×

Favorites

Directory

History

Meeting Rooms


Sales and Support Offices

Andrea Carter

Participants

Change Layout

End All



participant@company.com




participant@company.com

ⓘ


⏸

📞

Microphone: On

Presentation Source



Start Presentation

Sharing content


1. Choose a Presentation source from the drop-down list.
2. Click [Start Presentation](#).

Stop content sharing:
Click the [Stop Presentation](#) button that becomes visible while sharing.

Controlling and monitoring a call

You can control and monitor several call features using the Call Control page.

Navigate to: Call Control > Call Control

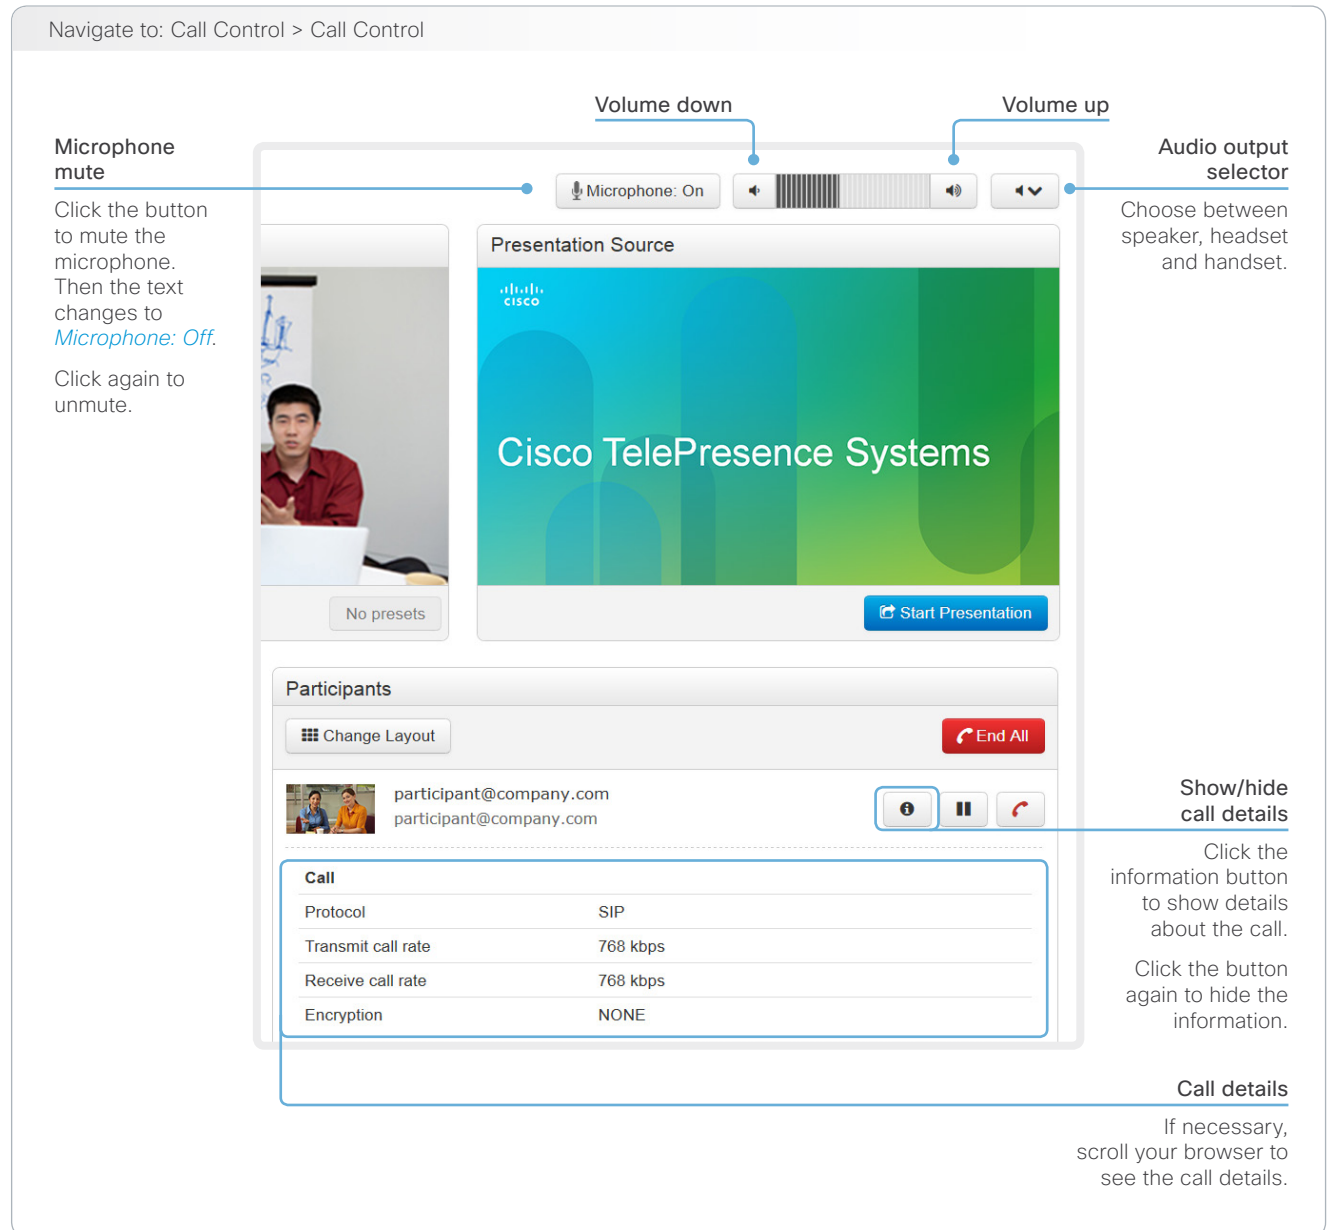

Microphone mute
Click the button to mute the microphone. Then the text changes to *Microphone: Off*. Click again to unmute.

Volume down
Volume up

Audio output selector
Choose between speaker, headset and handset.

Participants
Change Layout End All

Show/hide call details
Click the information button to show details about the call. Click the button again to hide the information.

Call details
If necessary, scroll your browser to see the call details.

Call	
Protocol	SIP
Transmit call rate	768 kbps
Receive call rate	768 kbps
Encryption	NONE

Controlling the camera

You can control the camera from the Call Control page (only available for EX90).

The camera controls (zoom) are available when the cursor is placed in the Main Source video area. Live snapshots are automatically taken during this period.

Note that the camera controls are not available if the system is in standby mode.

Navigate to: Call Control > Call Control

Call Control



Zoom

Use + and - to zoom in and out.

Local layout control


You can choose a local layout using the Call Control page.

 
 
The term layout is used to describe the various ways the videos from the conference participants and a presentation can appear on your screen. Different types of meetings will require different layouts.

Navigate to: Call Control > Call Control

Call Control


Main Source







No presets

Contacts



 
Participants




Change Layout


Change Layout




Auto




Equal



Prominent



Overlay



Single

Change the layout

Click [Change Layout](#), and choose your preferred layout in the window that opens.

You may change the layout while in a call.

Capturing snapshots

The snapshot feature, which is disabled by default, allows snapshots captured by your video system to be displayed on the Call Control page. Captures from your video system's camera as well as from its presentation channel will be displayed.

This feature might come in handy when administering the video system from a remote location, e.g. to check the camera view.

To use web snapshots you have to sign in with ADMIN credentials.

Enabling the snapshot feature

The snapshot feature is disabled by default. The feature must be enabled using the Touch controller.

- Tap [Settings](#) (⚙️) > [Administrator Settings](#) > [Web Snapshots](#) and choose **On**.


Far end snapshots while in a call

While in a call, snapshots of the remote participant's main camera and presentation channel (far end) will be captured and displayed as shown in the illustration. The snapshots are updated approximately every 20 seconds.



Far end snapshots are captured even if web snapshots are disallowed on the far end video system. Web snapshots are prohibited only for encrypted calls.

Navigate to: Call Control > Call Control

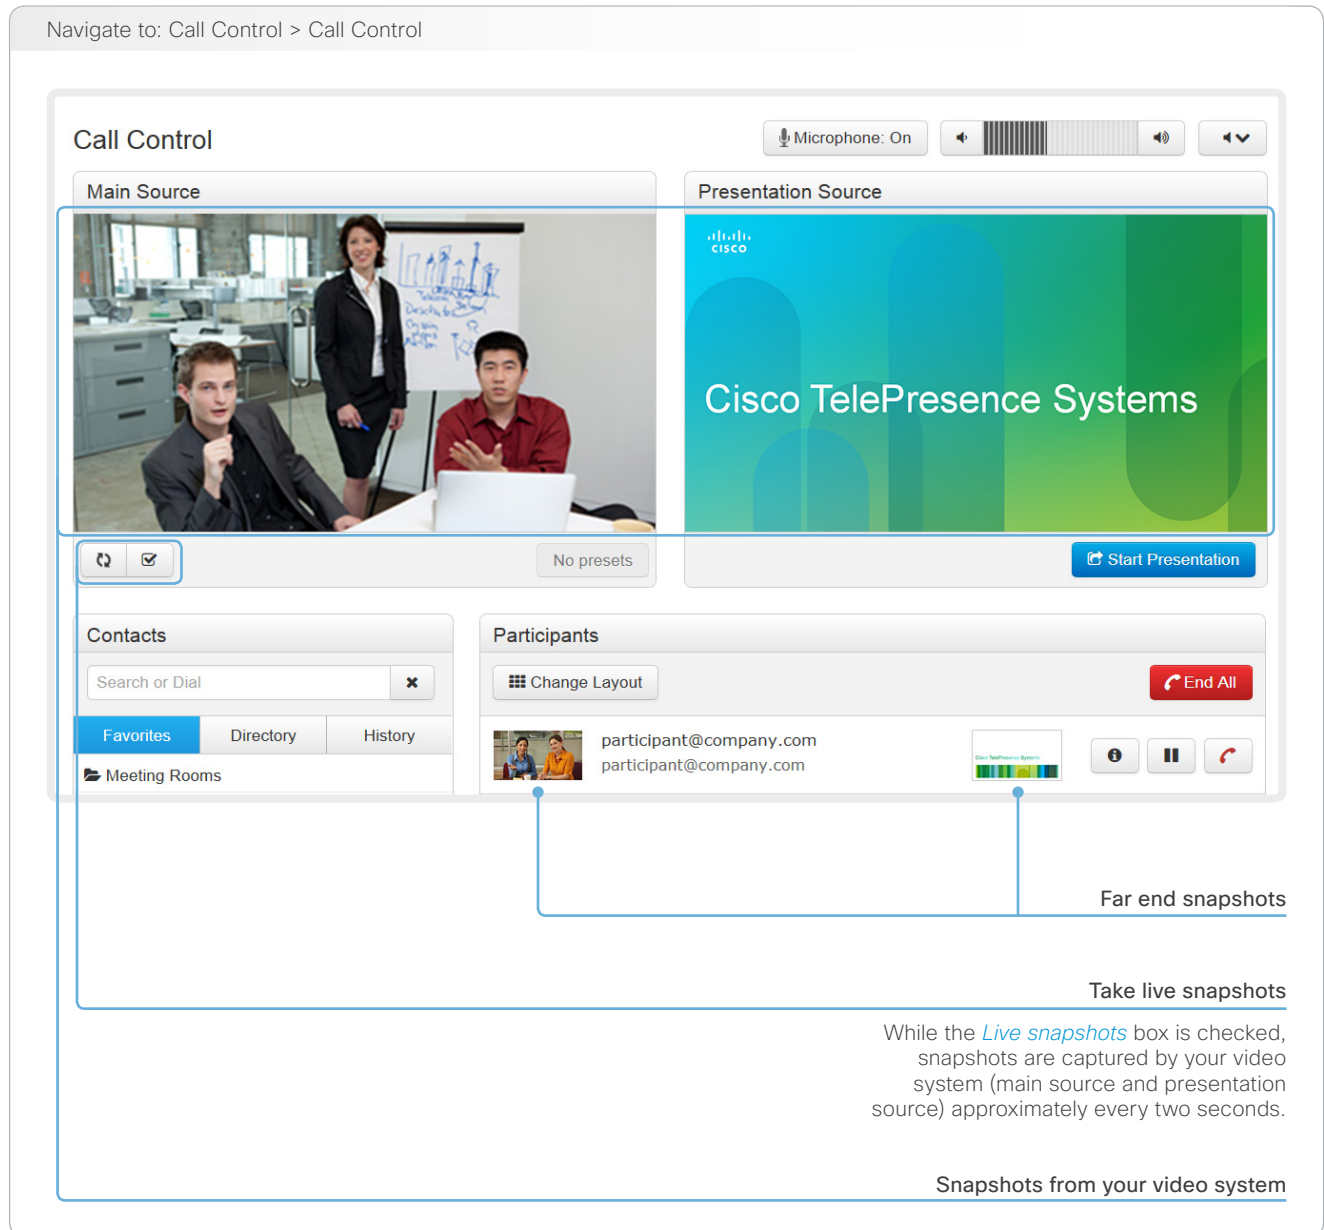

The screenshot shows the 'Call Control' interface. At the top, there's a navigation bar with 'Call Control' and a breadcrumb 'Navigate to: Call Control > Call Control'. Below this, the interface is divided into several sections:

- Main Source:** Displays a video feed of three people in a meeting room. Below the video are icons for 'Refresh' and 'Check'.
- Presentation Source:** Displays a Cisco TelePresence Systems logo. Below the video is a 'Start Presentation' button.
- Contacts:** Includes a search bar and tabs for 'Favorites', 'Directory', and 'History'. A 'Meeting Rooms' link is also present.
- Participants:** Shows a list of participants. One participant is highlighted with a 'Change Layout' button and an 'End All' button. Below the participant list, there are icons for 'Info', 'Pause', and 'End'.


Annotations on the screenshot include:

- Far end snapshots:** A blue line points from this text to the 'Main Source' and 'Presentation Source' video feeds.
- Take live snapshots:** A blue line points from this text to the 'Live snapshots' checkbox in the 'Participants' section.
- Snapshots from your video system:** A blue line points from this text to the 'Main Source' video feed.

Managing the favorites list

The entries in the favorites list can be accessed from the Touch controller and the Web interface.

Navigate to: Call Control > Favorites Management

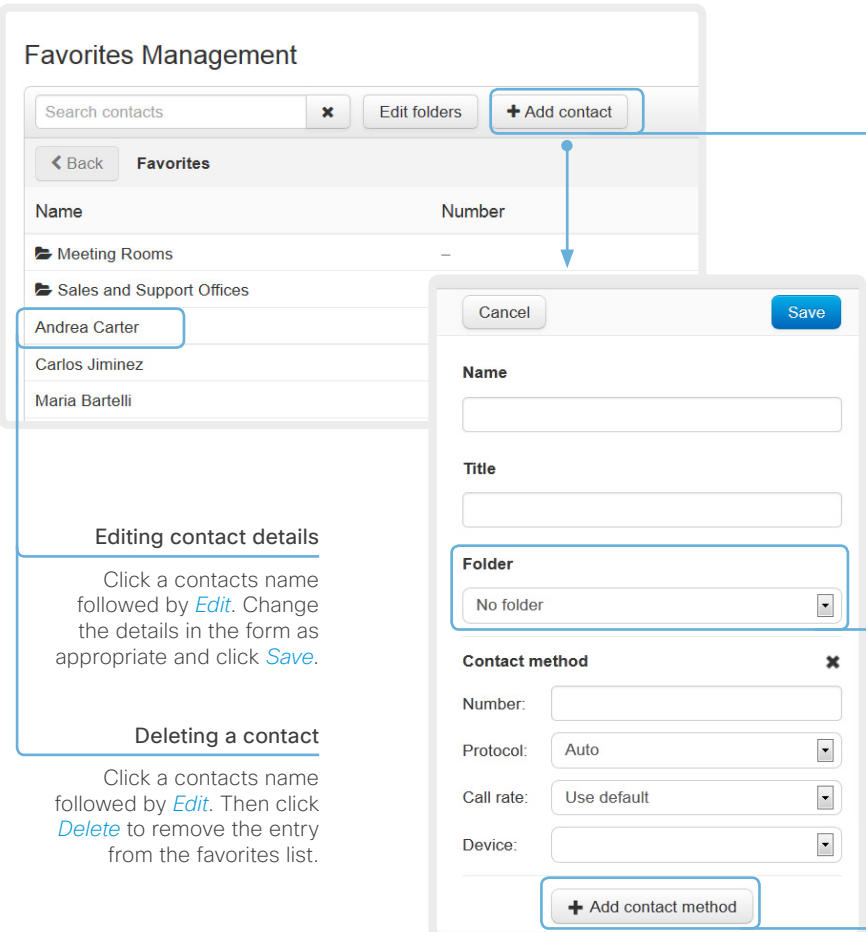

Adding a contact

Click [Add contact](#) and fill in the form that pops up. Then click [Save](#) to store the contact in the favorites list.

Editing contact details

Click a contacts name followed by [Edit](#). Change the details in the form as appropriate and click [Save](#).

Deleting a contact

Click a contacts name followed by [Edit](#). Then click [Delete](#) to remove the entry from the favorites list.

Storing a contact in a folder

Choose the appropriate folder from the drop down list. No folder means that the contact will be stored at the top level.

Adding a contact method*

You can store more than one contact method for each contact, e.g. video, telephone and mobile.

* Note that only the first contact method will appear in the Favorites list on the Cisco TelePresence Touch controller.

Favorite list folders

The entries in the favorites list can be organized in folders.

Navigate to: Call Control > Favorites Management

Favorites Management

Favorites

Name	Number
Meeting Rooms	-
Sales and Support Offices	-
Andrea Carter	carter@company.com
Carlos Jimenez	jimenez@company.com
Maria Bartelli	bartelli@company.com

Editing folders

- Click [Edit folders](#).
- Click the name of an existing folder to view and edit its details; or click [Add folder](#) and fill in its details to create a new folder.
- Click [Save folder](#) to store the details; or click [Delete folder](#) to remove the folder and all its contacts and sub-folders.

Opening a folder

Click the folder name to open the folder and show its list of contacts.

Edit folders

Select a folder to edit

Meeting Rooms
Sales and Support Offices

Folder name

Parent folder

Favorites Management

Sales and Support Offices

Name	Number
Berlin Sales Office	berlin@company.com
Buenos Aires Training Center	buenosaires@company.com
Cairo Sales Office	cairo@company.com
Osaka Sales Office	osaka@company.com

System configuration

The system settings are grouped in several categories. When you choose a category in the left pane all related settings appear to the right*.

Each system setting is further described in the [System settings](#) chapter.

Navigate to: Configuration > System Configuration

Searching for settings

Enter as many letters as needed in the search field.
All settings (value space included) containing these letters will be highlighted.

System Configuration

Search... x

Set Administrator Settings menu password

Refresh Collapse all Expand all

Conference 1

CallProtocolIPStack	IPv4	Save	
Encryption Mode	Off	Save	
IncomingMultisiteCall Mode	Allow	Save	
LyncCompatibility Mode	Off	Save	
MaxReceiveCallRate	6000	Save	(64 to 6000)
MaxTotalReceiveCallRate	10000	Save	(64 to 10000)
MaxTotalTransmitCallRate	10000	Save	(64 to 10000)
MaxTransmitCallRate	6000	Save	(64 to 6000)
MicUnmuteOnDisconnect Mode	On	Save	
Multipoint Mode	Auto	Save	
PacketLossResilience Mode	On	Save	
TelephonyPrefix		Save	(0 to 80 characters)

AutoAnswer

Delay	0	Save	(0 to 50)
Mode	Off	Save	

Selecting a category

The system settings are structured in categories. Choose a category in order to display the related settings.

Expanding and collapsing lists

Use these buttons to expand and collapse all or individual lists.

* The configuration shown in the illustration serve as an example. Your system may be configured differently.

Changing system settings

All system settings can be changed from the System Configuration page*. The value space for a setting is specified either in a drop-down list or by text following the input field.


Different settings may require different user credentials. In order to be sure that an administrator is able to change all system settings, the user must possess all user roles.

You can read more about user administration and user roles in the ► [User administration](#) chapter.

Navigate to: Configuration > System Configuration

Drop-down list

Click the arrow to open the drop-down list. Choose the preferred value and click [Save](#) for the change to take effect.

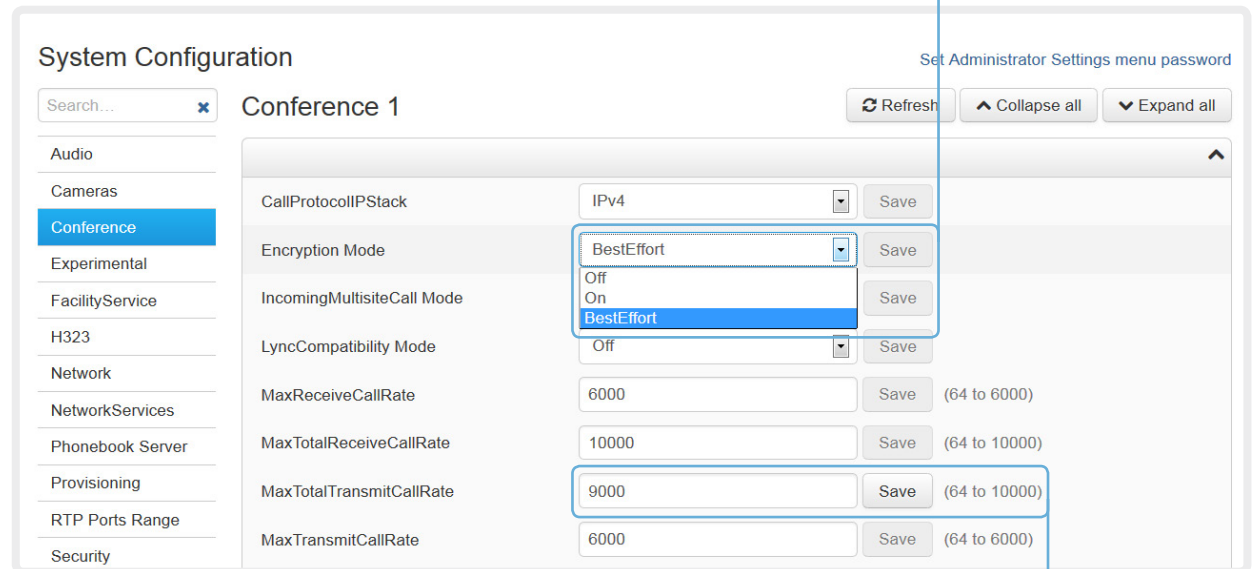

System Configuration

Search... x

Conference 1

Set Administrator Settings menu password

Refresh Collapse all Expand all

CallProtocolIPStack	IPv4	Save	
Encryption Mode	BestEffort	Save	
IncomingMultisiteCall Mode	Off	Save	
LyncCompatibility Mode	Off	Save	
MaxReceiveCallRate	6000	Save	(64 to 6000)
MaxTotalReceiveCallRate	10000	Save	(64 to 10000)
MaxTotalTransmitCallRate	9000	Save	(64 to 10000)
MaxTransmitCallRate	6000	Save	(64 to 6000)

Text input field

Enter text in the input field and click [Save](#) for the change to take effect.

* The configuration shown in the illustration serve as an example. Your system may be configured differently.

Setting the Administrator Settings menu password

When starting up the video conference system for the first time anyone can access the Administrator Settings menu with the Touch controller because the menu password is not set.



We strongly recommend that you define a menu password, because the Administrator Settings may severely affect the behavior of the video conference system.

You can read more about password protection in the [Setting passwords](#) chapter.

Navigate to: Configuration > System Configuration

System Configuration

Conference 1

Set Administrator Settings menu password

Audio

Changing the menu password

Click [Set/Change Administrator Settings menu password](#) to open this dialog.

Enter the new password in the text input field and click [Save](#) to store it.

Use the [Unlock](#) button to remove the password and leave the Administrator menu unprotected (not recommended).

Set Administrator Settings menu password

Password

By specifying an advanced menu password, users will be prompted for a password when trying to enter the advanced settings via an end-point's user interface. Providing an empty password disables the advanced settings password check.

System status

The system status is grouped in several categories. When you choose a category in the left column, the related status appears in the window to the right*.

Navigate to: Configuration > System Status

Searching for status entries

Enter as many letters as needed in the search field.
All entries (value space included) containing these letters will be highlighted.

System Status

- Audio
- Camera
- Conference**
- Diagnostics
- Experimental
- H320 Gateway
- H323 Gatekeeper
- HttpFeedback
- ICE
- MediaChannels
- Network
- NetworkServices
- Preset
- Provisioning
- Security
- SIP
- Standby
- SystemUnit

Conference

DoNotDisturb	Inactive
LoudestSite	
Multipoint Mode	MultiSite

ActiveSpeaker

Mode	Auto
SiteId	0

Presentation

LastLocalSource	2
LocalSendingMode	Off
LocalSource	0
Mode	Off
Protocol	
SiteId	0

Resolution

Selecting a category

The system status is structured in categories. Choose a category in order to display the related status information.

Expanding and collapsing lists

Use these buttons to expand and collapse all or individual lists.

* The status shown in the illustration serve as an example. The status of your system may be different.

Choosing a wallpaper

You can choose from a set of predefined wallpapers to use as background on your display.

If you want the company logo or another custom picture as background on the main display, you may upload and use a custom wallpaper.

The custom wallpaper applies to only the main display and will not appear on the Touch controller.


Navigate to: Configuration > Personalization : Wallpaper tab

Personalization


Wallpaper

Ringtone


Select active wallpaper




None




Wallpaper01




Wallpaper02




Wallpaper03

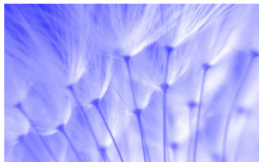


Wallpaper04



Wallpaper05

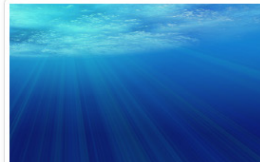

Wallpaper06



Wallpaper07

Upload custom wallpaper

Only .png files with a maximum resolution of 1920x1200 are supported.

No file selected

Browse...

Upload

Uploading a custom wallpaper file

Click [Browse...](#) and locate your custom wallpaper image file.

The file format must be .png and the maximum image size is 1920 × 1200 pixels.

Click [Upload](#) to save the file on the video system.

Choosing a wallpaper

Choose a wallpaper from the list.

If you have uploaded a custom wallpaper, it will appear in the list together with the predefined wallpapers.

The chosen wallpaper is highlighted.

Choosing a ringtone

You can choose from a set of predefined ringtones. The chosen ringtone can be played back from this page.




Even if the web interface is used to initiate the playback it is the video system that plays back the ringtone; it is not the PC running the web interface.

Navigate to: Configuration > Personalization : Ringtone tab

Choosing a ringtone


Choose a ringtone from the drop-down list, and click [Save](#) to make it the active ringtone.

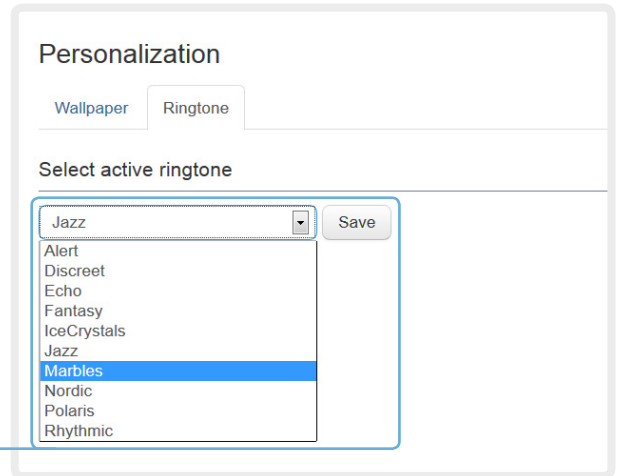

Playing back a ringtone

Click the play button (▶) to play back the ringtone.

Use the stop button (■) to end the playback.

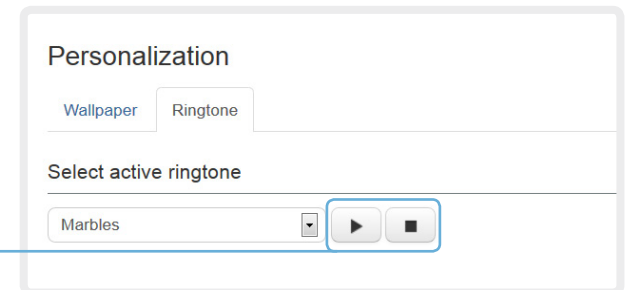


You must save the ringtone before it can be played back.

Peripherals overview

This page shows an overview of the video inputs and outputs, and the devices that are connected to the video system, for example camera(s), microphone(s), a Touch controller or ISDN Link*.

Managing ISDN Link

If an ISDN Link is paired to the video system it can be managed from this page.

How to configure and use the ISDN Link are described in the ISDN Link documentation on <http://www.cisco.com/go/isdnlink-docs>

* The peripherals shown in the illustration serve as examples. Your system may have different peripherals and video input/output configurations.

Navigate to: Configuration > Peripherals

Peripherals

Cameras

Camera 1	Cisco EX90 ...
----------	----------------

Video Inputs

Input 1 – HDMI	PC
Input 2 – DVI	PC
Input 3 – CAMERA	SelfView

Video Outputs

Output 1 – HDMI	–
Output 2 – LCD	1920x1200, 60Hz

ISDN Link

No ISDN Link devices are connected.

[Manage ISDN Link](#)

Touch Panel

Name:	Cisco TelePresence Touch
:	
:	
:	

User administration

You can manage your video conference system's user accounts from this page. You can create new users, edit the details of existing users, and delete users.

The default user account

The system comes with a default administrator user account with full access rights. The username is *admin* and no password is set.



It is highly recommended to set a password for the *admin* user.

Read more about passwords in the [Setting passwords](#) chapter.

About user roles

A user account must hold one or a combination of several *user roles*.

The following three user roles, with *non-overlapping rights*, exist:

- **ADMIN:** A user holding this role can create new users and change most settings. The user neither can upload audit certificates nor change the security audit settings.
- **USER:** A user holding this role can make calls and search the phone book. The user can modify a few settings, e.g. adjusting the audio volume and changing the menu language.
- **AUDIT:** A user holding this role can change the security audit configurations and upload audit certificates.



An administrator user account with full access rights, like the default *admin* user, must possess all the three roles.

Navigate to: Configuration > User Administration

User Administration

User	Roles	Status
admin	Admin, Audit, User	Active
user1	User	Active

Add new user...

Default user account

The system comes with *admin* as the default user account. This user has full access rights.

User administration, continued

Creating a new user account

Follow these steps in order to create a new user account:

1. Click [Add new user....](#)
2. Fill in the Username, Password and PIN code*, and check the appropriate user roles check boxes.

As a default the user has to change the password and PIN code when signing in for the first time.

Do not fill in the Client Certificate DN (Distinguished Name) field unless you want to use certificate login on https.

3. Set the Status to **Active** to activate the user.
4. Click [Create User](#) to save the changes.
Use the [Back](#) button to leave without making any changes.

Navigate to: Configuration > User Administration

User Administration

User	Roles
admin	Admin, Audit, User
user1	User

[Add new user...](#)

Add new user

[Back](#)

Username

Roles ☐ Admin ☐ Audit ☒ User

Status ☒ Active ☐ Inactive

Client Certificate DN

☒ Require password change on next user sign in
☒ Require PIN change on next user sign in

Password

Repeat Password

PIN

Repeat PIN

Used if login-required has been enabled on telepresence device menu

[Create User](#)

* The password is used with the web interface and command line interface; the PIN code is used with the remote control and on-screen menu.

User administration, continued

Changing user privileges

Follow these steps in order to change the user privileges:

1. Click the name of an existing user to open the Editing user window.
2. Check the appropriate user roles check boxes, decide if the user has to change the password and PIN code on the next sign in, and fill in the Client Certificate DN field if using certificate login on https.
3. Click [Update User](#) to save the changes.
Use the [Back](#) button to leave without making any changes.

Changing the password or PIN code

Follow these steps in order to change the password or PIN code:

1. Click the name of an existing user to open the Editing user window.
2. Enter the new password or PIN code in the appropriate input fields.
3. Click [Change Password](#) or [Change PIN](#) to save the change.
Use the [Back](#) button to leave without making any changes.

Navigate to: Configuration > User Administration

User Administration

User	Roles
admin	Admin
user1	User

Add new user...

Editing user: user1

[Back](#)

User Privileges

Roles

☐ Admin

☐ Audit

☒ User

Status

☒ Active

☐ Inactive

Client Certificate DN

☐ Require password change on next user sign in

☐ Require PIN change on next user sign in

[Update User](#)

Change Password

Password

Repeat Password

[Change Password](#)

Change PIN

PIN

Repeat PIN

Used if login-required has been enabled on telepresence device menu

[Change PIN](#)

User administration, continued

Deactivating a user account

Follow these steps in order to deactivate a user account:



Always keep at least one user with ADMIN rights **Active**.

1. Click the name of an existing user to open the Editing user window.
2. Set the Status to **Inactive**.
3. Click [Update User](#) to save the changes.
Use the [Back](#) button to leave without making any changes.

Deleting a user account

Follow these steps in order to delete a user account:



It is not possible to delete the default *admin* user. There must always be at least one user with ADMIN rights on the system.

1. Click the name of an existing user to open the Editing user window.
2. Click [Delete user...](#) and confirm when prompted.

Navigate to: Configuration > User Administration

User Administration

User	Roles
admin	Admin Audit User
user1	User

Add new user...

Editing user: user1

Back

User Privileges

Roles

- ☐ Admin
- ☐ Audit
- ☒ User

Status

- ☒ Active
- ☐ Inactive

Client Certificate DN

Delete user

Delete user1...

Adding a sign in banner

A sign in banner is a message that is shown to the user when signing in.

If a system administrator wants to provide initial information to all users, he can create a sign in banner. The message will be shown when the user signs in to the web interface or the command line interface.

Navigate to: Configuration > Sign In Banner

Sign In Banner

The Sign In Banner will be displayed when signing in using SSH, telnet, web and RS-232.


The information you type here will be shown to all users when they sign in.

Save

Adding a sign in banner

Enter the message that you want to present to the user when signing in, and click [Save](#) to activate the banner.

```
login as: admin
The information you type here will be shown to all users when they sign in.
Using keyboard-interactive authentication.
Password: █
```

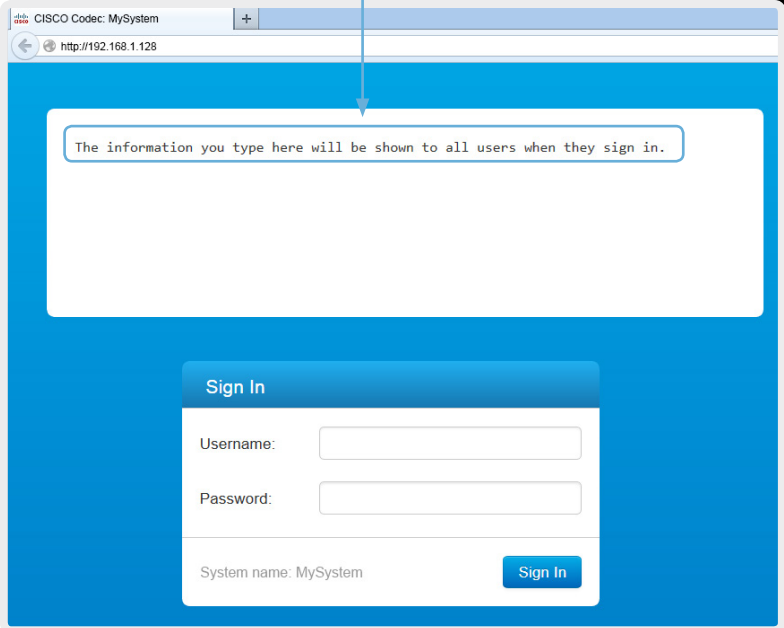

The screenshot shows the Cisco Codec web interface. At the top, there is a blue header bar. Below it, a white box contains the sign in banner message: "The information you type here will be shown to all users when they sign in." Below this box is a "Sign In" button. Underneath the button is a form with "Username:" and "Password:" labels and corresponding input fields. At the bottom of the form, it says "System name: MySystem" and has another "Sign In" button.

Managing the video system's certificates

Certificate validation may be required when using TLS (Transport Layer Security).

A server or client may require that your video system presents a valid certificate to them before communication can be set up.

The video system's certificates are text files that verify the authenticity of the system. These certificates may be issued by a certificate authority (CA).

The certificates are listed as shown in the illustration to the right*. They can be used for the following services: HTTPS, SIP and IEEE 802.1X.

You can store several certificates on the system, but only one certificate can be used for each service at a time.

If authentication fails, the connection will not be established.

Navigate to: Configuration > Security

Security

Certificates

Certificate	Issuer	HTTPS	SIP	802.1X		
Certificate_A	CertificateAuthority_A	Off	On	Off	Delete...	View Certificate
Certificate_B	CertificateAuthority_B	On	Off	Off	Delete...	View Certificate

Add certificate...

Certificate: No file selected [Browse...](#)

Private key (optional): No file selected [Browse...](#)

Password (optional):

This system supports PEM formatted certificate files (.pem). The certificate file may contain the certificate and a RSA or DSA encrypted private key with or without a password. Optionally the private key file may be supplied separately.

[Add certificate...](#)


Adding a certificate

1. Click [Add certificate...](#) to open the certificate dialog.
2. Click [Browse...](#) and find the Certificate and Private key file(s) on your computer.
3. Fill in the [Password](#) if required.
4. Click the blue [Add certificate...](#) button to store the certificate on your system.

Enabling and disabling certificates

Use the buttons to switch a certificate on or off for the different services.

You can also view a certificate, and delete a certificate using the corresponding buttons.

 Contact your system administrator to obtain the following file(s):

- Certificate (file format: .PEM)
- Private key, may be included in the same file as the certificate (file format: .PEM format)
- Password (required only if the private key is encrypted)

The certificate and the private key will be stored in the same file on the video system.

* The certificates and certificate issuers shown in the illustration serve as examples. Your system may have other certificate(s).

Managing the list of trusted certificate authorities

Certificate validation may be required when using TLS (Transport Layer Security).

Your video system may be set up to require that a server or client presents its certificate to the system before communication can be set up.

The certificates are text files that verify the authenticity of the server or client. The certificates must be signed by a trusted certificate authority (CA).

To be able to verify the signature of the certificates, a list of trusted CAs must reside on the video system. The certificates of the CAs are listed as shown in the illustration to the right*.

The list must include all CAs needed in order to verify certificates for HTTPS, SIP and IEEE 802.1X connections.

If the server cannot be authenticated, the connection will not be established.

* The certificate and certificate issuers shown in the illustration serve as examples. Your system will have other certificate(s).

Navigate to: Configuration > Security

Security

Certificates

Certificate Authorities

Certificate	Issuer	
CA_Certificate_1	Issuer_1	Delete... View Certificate

CA file


No file selected

[Browse...](#)


This system supports PEM formatted (.pem) CA-files with one or more certificates within the file.

[Add certificate authority...](#)

Uploading a list of certificate authorities

 The entries in a new file with CA certificates will be appended to the existing list, that is, the previously stored certificates will not be deleted.

- i. Click [Show CAs...](#) to list the existing CA certificates.
- ii. Click [Add Certificate Authority...](#)
- iii. Click [Browse...](#) and find the file containing a list of CA certificates (file format: .PEM) on your computer.
- iv. Click the blue [Add certificate authority...](#) button to store the new CA certificate(s) on your system.

 Contact your system administrator to obtain the CA certificate list (file format: .PEM).

Viewing and deleting certificates

You can view a certificate, and delete a certificate using the corresponding buttons.

Adding audit certificates

Audit logging records all sign in activity and configuration changes on your video system.

Audit logging is disabled by default, but you can enable it using the [Security > Audit > Logging > Mode](#) setting on the web interface.

In ExternalSecure audit logging mode the video system sends encrypted audit logs to an external audit server (syslog server), which identity must be verified by a signed certificate.


To be able to verify the signature of the audit server certificates, a list of trusted audit certificate authorities (CAs) must reside on the video system.

If the audit server cannot be authenticated, the logs will not be sent.



Always upload the audit certificate list before enabling secure audit logging.

Navigate to: Configuration > Security / Configuration > System Configuration

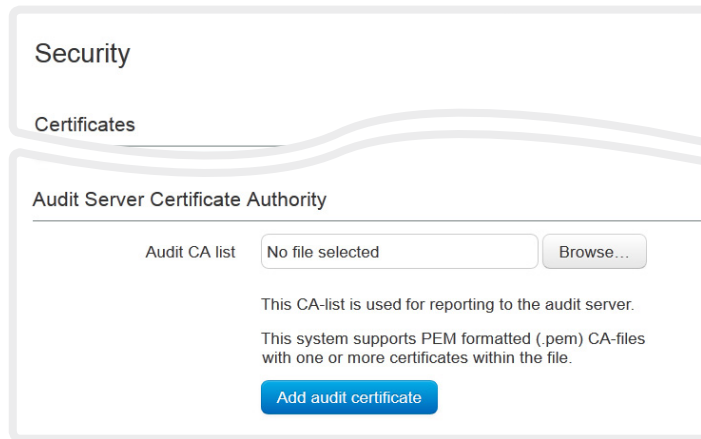

1. Upload a list of audit server certificates




The entries in a new file with CA certificates will overwrite the existing list, that is, any previously stored audit certificates will be lost when you add a new file.

- Click [Add audit server certificate authority...](#)
- Click [Browse...](#) and find the file containing the list of audit CA certificates (.PEM format) on your computer.
- Click [Add audit certificate](#) to store the certificate(s) on your system.



Contact your system administrator to obtain the Audit CA list (file format: .PEM).

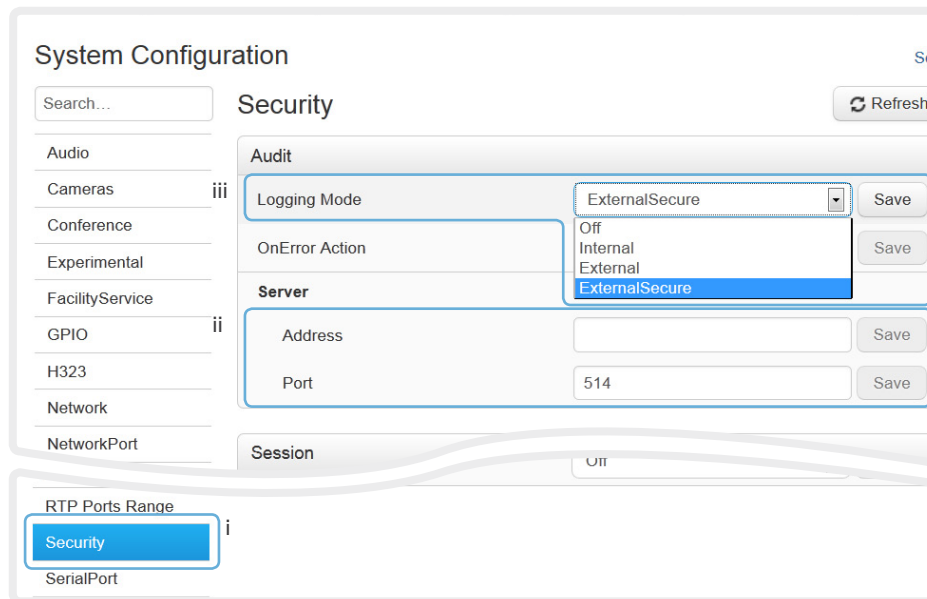

2. Enable secure audit logging

- Go to the [System Configuration](#) page and choose the [Security](#) category.
- Enter the [Address](#) and [Port](#) number of the audit server. Click [Save](#) for the changes to take effect.
- Choose **ExternalSecure** from the [Logging Mode](#) drop-down list. Click [Save](#) for the change to take effect.

Setting strong security mode

Strong security mode should be used only when compliance with DoD JITC regulations is required.



Read the warning carefully before setting strong security mode.

Strong security mode sets very strict password requirements, and requires all users to change their password on the next sign in.

Software upload from TMS, web snapshots and calling from the web interface are prohibited in strong security mode.

Navigate to: Configuration > Security

Setting strong security mode

1. Click [Configure strong security mode...](#) and read the warning carefully before continuing.
2. If you want to use strong security mode, check the [I understand the risks of strong security mode](#) check box and click [Enable strong security mode](#).
3. Change the password to meet the strict criteria shown in the warning. How to change the system password: is described in the [Setting passwords](#) section.
4. Restart the codec for the change to take effect.

Security

Strong security mode

WARNING

You are now about to enter strong security mode, required to adhere to DoD JITC regulations

This will introduce the following:

- All users must change their password/PIN on the next sign in (including admin)
- New passwords must meet the following criteria:
 - Minimum 15 characters
 - Minimum 2 uppercase alphabetic characters
 - Minimum 2 lowercase alphabetic characters
 - Minimum 2 numerical characters
 - Minimum 2 non-alphanumeric (special) characters
 - No more than 2 consecutive characters may be the same
 - Must be different from the last 10 previous passwords used
 - Not more than 2 characters from the previous password can be in the same position
- Passwords must be changed at least every 30 days
- Passwords cannot be changed more than once per 24 hours
- 3 failed sign ins will lock the user account until an administrator re-activates the account
- Software upload from TMS will not be possible
- Web snapshots will not be available

☒ I understand the risks of strong security mode

[Enable strong security mode](#)

certificate au...

Strong security mode

This will disable strong security mode.

[Disable strong security mode](#)

Return to normal mode

1. When in strong security mode, the system can be restored to normal mode by clicking [Configure strong security mode...](#) followed by [Disable strong security mode](#).
2. Restart the codec for the change to take effect.

Deleting trust lists (CUCM only)

The Cisco Unified Communications Manager (CUCM) and Certification Authority Proxy Function (CAPF) information that is shown on the Security page is only relevant for video systems that are registered to CUCM.

The web interface can be used to delete an existing Certificate Trust List (CTL) that is stored on the video system. Normally, you will not delete the old CTL file, but there are a few cases when you will need to delete it.

For more information about CUCM, CAPF and trust lists, read the *Administering TC Endpoints on CUCM* guide available on the Cisco web site.

Navigate to: Configuration > Security

Security

Certificates

Cisco Unified Communications Manager (CUCM) - Certification Authority Proxy Function (CAPF) Information

CUCM status	CUCM is enabled.
CTL status	CTL is installed.
ITL status	ITL is not installed.
LSC status	Certificates are not installed.
Operation status	No pending operations.

Delete CTL/ITL

Troubleshooting

The troubleshooting page lists the status for some common sources of errors. The list may be different for different products and installations*.

Note that errors are clearly marked in red color; warnings are yellow.

Navigate to: Diagnostics > Troubleshooting

Run diagnostics
Click [Re-run diagnostics](#) to make sure the information in the list is up-to-date.

Troubleshooting [Re-run diagnostics](#)

Diagnostics check of the most common system misconfigurations that may cause the TelePresence device to underperform or not work as expected.

CRITICAL: Valid Admin Password
No admin password set. Please [secure the system with an admin password](#).

WARNING: Do not disturb mode
Do not disturb is turned on. Until this is [turned off](#), the system cannot accept calls.

OK: System Name
The device has a [system name](#) set.

OK: System Temperature
The system is running at an acceptable temperature.

OK: Standby Control

Not Applicable: H320 Gateway Status

Not Applicable: ISDN Link compatibility

* The messages shown in the illustration serve as examples. Your system may show other information.

Downloading log files

The log files* are Cisco specific debug files which may be requested by the Cisco support organization if you need technical support.

The *current log files* are time stamped event log files.

All current log files are archived in a time stamped *historical log file* each time the system restarts. If the maximum number of historical log files is reached, the oldest one will be overwritten.

Navigate to: Diagnostics > Log Files

Downloading all files

Click [Download log files archive](#) and follow the instructions.

Open a log file

Click the file name to open the log file in the web browser.

Log Files

[Download log files archive](#)

Current logs

File Name ▼	Size	Last Modified
arm0-system.log	11 KB	2013-03-16 10:16
arm1-system.log	11 KB	2013-03-16 10:16
arm2-system.log	11 KB	2013-03-16 10:16
arm3-system.log	20 KB	2013-03-21 15:28
arm4-system.log	11 KB	2013-03-21 14:27
console	3 KB	2013-03-18 14:43

Historical logs

File Name ▼	Size	Last Modified
log.0.tar.gz	55 KB	2013-01-29 22:41
log.1.tar.gz	100 KB	2013-02-14 22:15
log.2.tar.gz	62 KB	2013-02-17 14:07
log.3.tar.gz	57 KB	2013-02-26 15:58
log.4.tar.gz	54 KB	2013-03-11 22:16
log.5.tar.gz	91 KB	2013-03-16 09:23
log.6.tar.gz	53 KB	2013-01-17 12:37
log.7.tar.gz	53 KB	2013-01-17 12:41
log.8.tar.gz	66 KB	2013-01-23 22:15
log.9.tar.gz	54 KB	2013-01-24 22:30
log.tar.gz	91 KB	2013-03-16 09:23

* The log files shown in the illustration serve as examples. Your system may have other files.

Upgrading the system software

This video conference system is using TC software. The version described in this document is TC6.2.



Contact your system administrator if you have questions about the software version.

Software release notes

For a complete overview of the news and changes, we recommend reading the Software Release Notes (TC6).

Go to: ► http://www.cisco.com/en/US/products/ps11327/tsd_products_support_series_home.html

New software

For software download, go to the Cisco Download Software web page:

► <http://www.cisco.com/cisco/software/navigator.html>. Then navigate to your product.

The file name is something like “s52000tc6_2_0.pkg” (each software version has a unique file name).

Release key and option keys

You need a valid *release key* to be able to use the TC software. As from version TC6.1, any TC release key will do.

For older releases the release key is specific for each main release (e.g. TC4, TC5, TC6). If you want to downgrade the software to TC6.0 or older, take care to have the correct key.

An *option key* is required to activate optional functionality. You may have several option keys in your system.

The available options are:

- Premium resolution
- MultiSite (only EX90)
- Dual display (only EX90)

Navigate to: Maintenance > Software Upgrade

Software Upgrade

Software package

Current software version is TC6.2.0

☐ Upgrade automatically after upload

Release key The system has valid release keys for TC5, TC6 and TC6.1+

Option key

About Release and Options Keys

Any valid release key may be used to upgrade to a newer version.

Successful downgrade to TC6.0 or lower will require a valid release key for the specific version you are going to downgrade to.

Contact your Cisco representative to obtain the required release key and information about available option keys. You need to provide the serial number to get release and option keys. The serial number for this TelePresence device is ...

Adding release and option keys

If you already have a valid release key and the proper option keys installed on your system, you can skip this point and continue with the software installation.

If you do not have the required key(s), contact your Cisco representative to obtain them. Then perform the following steps:

- i. Enter the *Release key* in the appropriate text input field and click [Add](#).
- ii. Enter an *Option Key* in the appropriate text input field and click [Add](#).

If you have more than one option key, repeat step ii for all of them.



Each system has unique keys, for example:

- 1TC006-1-0C22E348 (release key)
- 1R000-1-AA7A4A09 (option key)

Installing new software

Download the appropriate software package from the Cisco Software Download web page (see link to the left) and store it on your local computer. This is a .pkg file.

- i. Click [Browse...](#) and find the downloaded .pkg file that contains the new software.
- ii. Check the [Upgrade automatically after upload](#) check box, then click [Upload](#) to start the installation process straight away.

Keep the check box unchecked if you want to upload the software now and do the installation later.

The complete installation may take up to 30 minutes. You can follow the progress on the web page. The system restarts automatically after the installation.



You must sign in anew in order to continue working with the web interface after the restart.

Backup and restore

All the system settings, which are available on the System configuration page, can be listed on-screen or stored as a text file (.tsh).

The .tsh file can be loaded back onto the system, thereby restoring the configuration.

Navigate to: Maintenance > Backup and Restore

Backing up or showing the current configuration

Click [Preview backup](#) to display the current settings on-screen.

Click [Take backup](#) to store the configuration as a text file (.tsh).

Backup and Restore

Take backup of configuration

This will create a backup file of the configurations on the TelePresence system. The backup file can be used to restore the TelePresence system to a previous state.

[Take backup](#) [Preview backup](#)

Restore configuration from backup

Restore the TelePresence system from a backup file. Some configurations may require a reboot to take effect.

[Browse...](#) [Restore](#)

Restoring an earlier configuration

Click [Browse...](#) and find the file (.tsh) with the configuration you want to restore.

Click [Restore](#) to reconfigure the system as defined in the file.

System recovery: Revert to the previously used software version

If there is a severe problem with the video system, switching to the previously used software version may help solving the problem. The previously used software image still resides on the system, so you do not have to download the software again.

Reverting to the previously used software version should only be done by a system administrator or in contact with Cisco technical support.

We strongly recommend that you backup your system's log files and configuration before you swap to the other software image.

Navigate to: Maintenance > System Recovery : Save Data tab and Software Recovery Swap tab

System Recovery

In order to recover the system when experiencing a severe issue, a Software Recovery Swap or a Factory Reset can be performed. These recovery methods should only be attempted by a system administrator or in contact with Cisco technical support. The preferred recovery method is to perform a Software Recovery Swap and Factory Reset as last resort.

Save Data **Software Recovery Swap** Factory Reset

Backup logs and configurations

A factory reset deletes all logs and system configurations. Settings, Please consider taking a backup of logs and the system's configuration.

The log files may be useful to help Cisco identify the cause of the issue you are experiencing. The configuration backup may be used to restore the configurations back to the current settings.

[Download Logs](#) [Download Configuration Backup](#)

1. Backing up log files and system configuration

We recommend that you backup your system's log files and configuration before you swap to the other software image.

Click the [Download Logs](#) and [Download Configuration Backup](#) buttons and follow the instructions to save the files on your computer.

Save Data **Software Recovery Swap** Factory Reset

Software Recovery Swap

A Software Recovery Swap will change the running software to the previously used software image which is stored on an inactive partition.

You are currently running TC6.2.0.

[Switch to software: TC6.1.0](#)

2. Reverting to the previously used software version

1. Revert to the previously used software version by clicking [Switch to software TCx.y.z...](#), where x.y.z indicates the software version.

2. Click [Yes](#) to confirm your choice, or [Cancel](#) if you have changed your mind.

Wait while the system resets. The system will restart automatically when finished.

System recovery: Factory reset

If there is a severe problem with the video system, the last resort may be to reset it to its default factory settings. Always consider reverting to the previously used software image before performing a factory reset. In many situations this will recover the system*.

A factory reset should only be performed by a system administrator or in contact with Cisco technical support.

When factory resetting the video system the following happens:

- The call logs will be deleted.
- Passwords will be reset to default.
- All system parameters will be reset to default values.
- All files that have been uploaded to the system will be deleted. This includes, but is not limited to, custom backgrounds, certificates, and the favorites list (My contacts).
- The previous (inactive) software image will be deleted.
- Release keys and option keys will **not** be affected.

The system restarts automatically after the reset. It is using the same software image as before.

We strongly recommend that you backup your system's log files and configuration before you perform a factory reset.



It is *not* possible to undo a factory reset.

There are more information about performing a factory reset in the ► [Factory resetting](#) appendix.

* Read about software swapping in the ► [System recovery: Revert to the previously used software version](#) section.

Navigate to: Maintenance > System Recovery : Save Data tab and Factory Reset tab

System Recovery

In order to recover the system when experiencing a severe issue, a Software Recovery Swap or a Factory Reset can be performed. These recovery methods should only be attempted by a system administrator or in contact with Cisco technical support. The preferred recovery method is to perform a Software Recovery Swap and Factory Reset as last resort.

Save Data Software Recovery Swap **Factory Reset**

Backup logs and configurations

A factory reset deletes all logs and system configurations. Settings, Please consider taking a backup of logs and the system's configuration.

The log files may be useful to help Cisco identify the cause of the issue you are experiencing. The configuration backup may be used to restore the configurations back to the current settings.

[Download Logs](#)

[Download Configuration Backup](#)

1. Backing up log files and system configuration

We strongly recommend that you backup your system's log files and configuration before you perform a factory reset; otherwise these data will be lost.

Click the [Download Logs](#) and [Download Configuration Backup](#) buttons and follow the instructions to save the files on your computer.

Save Data **Software Recovery Swap** Factory Reset

Factory Reset

This will reset the TelePresence device to factory default settings, followed by an automatic reboot of the TelePresence device.

- The call logs will be deleted.
- All system parameters will be reset to default values.
- All files that have been uploaded to the TelePresence device will be deleted. This includes, but are not limited to, custom backgrounds, ring tones, certificates, and the local phonebook.
- Release keys and option keys will **not** be affected.
- Any alternate software image will be deleted.

Warning

A factory reset cannot be undone.

[Perform a factory reset...](#)

2. Performing a factory reset

Read the provided information carefully before you restore the factory settings by clicking [Perform a factory reset...](#)

Click [Reset](#) to confirm your choice, or [Cancel](#) if you have changed your mind.

Wait while the system resets. The system will restart automatically when finished.

Restarting the system

The system can be shut down or restarted remotely using the web interface.

Navigate to: Maintenance > Restart


Restart

- Restarting the TelePresence device will make it unavailable for several minutes.
- Shutting down the TelePresence device will require physical presence to turn it on again.

Restart TelePresence device...
Shutdown TelePresence device...

Restarting the system


Click [Restart TelePresence device...](#) to restart the system.



It will take a few minutes before the system is ready for use.

Shutting down the system

Click [Shutdown TelePresence device...](#) to shut down the system.



The system cannot be turned on again remotely; you must press its power button physically to turn it on.

CHAPTER 3

SYSTEM SETTINGS

The Cisco TelePresence System EX90/EX60 can be configured using the Touch controller or the web interface.

For full access to the system settings, the web interface must be used – the Touch controller provides access to a limited set of parameters only.



Overview of the system settings

In the following pages you will find a complete list of the system settings which are configured from the [System Configuration](#) page on the web interface. The examples show either the default value or an example of a value.

Open a web browser and enter the IP address of the video system; then sign in.



Tap [Settings](#) (✖) > [System Information](#) on the Touch controller to find the system's IP address (IPv4 or IPv6).

Audio settings	52	Conference [1..1] Presentation OnPlacedOnHold	60
Audio InternalSpeaker Mode.....	52	Conference [1..1] Presentation Policy.....	59
Audio Microphones Mute Enabled.....	52	Conference [1..1] Presentation RelayQuality	60
Audio PreferredOutputConnector.....	52	Conference [1..1] TelephonyPrefix.....	56
Audio SoundsAndAlerts KeyTones Mode	52	Conference [1..1] VideoBandwidth MainChannel Weight.....	59
Audio SoundsAndAlerts RingTone.....	52	Conference [1..1] VideoBandwidth Mode.....	59
Audio SoundsAndAlerts RingVolume.....	53	Conference [1..1] VideoBandwidth PresentationChannel Weight.....	59
Audio Volume.....	53	FacilityService settings	62
Audio VolumeHandset.....	53	FacilityService Service [1..5] CallType	62
Audio VolumeHeadset	53	FacilityService Service [1..5] Name.....	62
Cameras settings	54	FacilityService Service [1..5] Number	62
Cameras Camera [1..1] Backlight	54	FacilityService Service [1..5] Type	62
Cameras Camera [1..1] Brightness Level	54	H323 settings	63
Cameras Camera [1..1] Brightness Mode.....	54	H323 NAT Address	63
Cameras Camera [1..1] Focus Mode	54	H323 NAT Mode	63
Cameras Camera [1..1] FrameRate.....	54	H323 Profile [1..1] Authentication LoginName.....	63
Cameras Camera [1..1] Gamma Level.....	55	H323 Profile [1..1] Authentication Mode	63
Cameras Camera [1..1] Gamma Mode	55	H323 Profile [1..1] Authentication Password	64
Cameras Camera [1..1] Whitebalance Level.....	55	H323 Profile [1..1] CallSetup Mode.....	64
Cameras Camera [1..1] Whitebalance Mode.....	55	H323 Profile [1..1] Gatekeeper Address	64
Cameras PowerLine Frequency.....	54	H323 Profile [1..1] Gatekeeper Discovery.....	64
Conference settings	56	H323 Profile [1..1] H323Alias E164	64
Conference [1..1] AutoAnswer Delay	56	H323 Profile [1..1] H323Alias ID.....	64
Conference [1..1] AutoAnswer Mode.....	56	H323 Profile [1..1] PortAllocation.....	65
Conference [1..1] AutoAnswer Mute.....	56	Network settings	66
Conference [1..1] CallProtocolIPStack.....	56	Network [1..1] DHCP RequestTFTPServerAddress	67
Conference [1..1] DefaultCall Protocol.....	58	Network [1..1] DNS Domain Name.....	67
Conference [1..1] DefaultCall Rate.....	58	Network [1..1] DNS Server [1..3] Address.....	67
Conference [1..1] DoNotDisturb DefaultTimeout.....	57	Network [1..1] IEEE8021X AnonymousIdentity.....	70
Conference [1..1] DoNotDisturb Mode	57	Network [1..1] IEEE8021X Eap Md5	70
Conference [1..1] Encryption Mode	57	Network [1..1] IEEE8021X Eap Peap	71
Conference [1..1] FarEndControl Mode	57	Network [1..1] IEEE8021X Eap Tls	71
Conference [1..1] FarEndControl SignalCapability.....	57	Network [1..1] IEEE8021X Eap Ttls	71
Conference [1..1] IncomingMultisiteCall Mode	61	Network [1..1] IEEE8021X Identity.....	70
Conference [1..1] LyncCompatibility	56	Network [1..1] IEEE8021X Mode	69
Conference [1..1] MaxReceiveCallRate	58	Network [1..1] IEEE8021X Password.....	70
Conference [1..1] MaxTotalReceiveCallRate	59	Network [1..1] IEEE8021X TlsVerify	70
Conference [1..1] MaxTotalTransmitCallRate	58	Network [1..1] IEEE8021X UseClientCertificate	70
Conference [1..1] MaxTransmitCallRate	58	Network [1..1] IPStack.....	66
Conference [1..1] MicUnmuteOnDisconnect Mode	57	Network [1..1] IPv4 Address	66
Conference [1..1] Multipoint Mode	60		
Conference [1..1] PacketLossResilience Mode	59		

Network [1..1] IPv4 Assignment.....	66	NetworkServices SSH AllowPublicKey	76	SIP Profile [1..1] Ice.....	84
Network [1..1] IPv4 Gateway.....	66	NetworkServices SSH Mode	76	SIP Profile [1..1] IceDefaultCandidate	84
Network [1..1] IPv4 SubnetMask.....	66	NetworkServices Telnet Mode.....	76	SIP Profile [1..1] Line	86
Network [1..1] IPv6 Address	67	NetworkServices XMLAPI Mode	73	SIP Profile [1..1] Mailbox	86
Network [1..1] IPv6 Assignment.....	66	Phonebook settings	77	SIP Profile [1..1] Outbound.....	85
Network [1..1] IPv6 DHCPOptions	67	Phonebook Server [1..1] ID.....	77	SIP Profile [1..1] Proxy [1..4] Address.....	85
Network [1..1] IPv6 Gateway.....	67	Phonebook Server [1..1] Type	77	SIP Profile [1..1] Proxy [1..4] Discovery	86
Network [1..1] MTU	71	Phonebook Server [1..1] URL	77	SIP Profile [1..1] TlsVerify.....	85
Network [1..1] QoS Diffserv Audio.....	68	Provisioning settings.....	78	SIP Profile [1..1] Turn Password.....	84
Network [1..1] QoS Diffserv Data.....	68	Provisioning Connectivity.....	78	SIP Profile [1..1] Turn Server.....	84
Network [1..1] QoS Diffserv ICMPv6	69	Provisioning ExternalManager Address	79	SIP Profile [1..1] Turn UserName.....	84
Network [1..1] QoS Diffserv NTP	69	Provisioning ExternalManager Domain	79	SIP Profile [1..1] Type	86
Network [1..1] QoS Diffserv Signalling.....	69	Provisioning ExternalManager Path	79	SIP Profile [1..1] URI.....	84
Network [1..1] QoS Diffserv Video.....	68	Provisioning ExternalManager Protocol	79	Standby settings.....	87
Network [1..1] QoS Mode	68	Provisioning HttpMethod	78	Standby Control.....	87
Network [1..1] RemoteAccess Allow.....	72	Provisioning LoginName	78	Standby Delay.....	87
Network [1..1] Speed	71	Provisioning Mode	78	SystemUnit settings.....	88
Network [1..1] TrafficControl Mode.....	71	Provisioning Password.....	78	SystemUnit CallLogging Mode	88
Network [1..1] VLAN Voice Mode	72	RTP settings.....	80	SystemUnit ContactInfo Type	88
Network [1..1] VLAN Voice VlanId.....	72	RTP Ports Range Start.....	80	SystemUnit IrSensor	89
NetworkServices settings.....	73	RTP Ports Range Stop	80	SystemUnit MenuLanguage.....	88
NetworkServices CTMS Encryption	76	Security settings.....	81	SystemUnit Name	88
NetworkServices CTMS Mode	76	Security Audit Logging Mode	81	Time settings	90
NetworkServices H323 Mode	73	Security Audit OnError Action.....	81	Time DateFormat	90
NetworkServices HTTP Mode	73	Security Audit Server Address	81	Time TimeFormat.....	90
NetworkServices HTTPS Mode.....	73	Security Audit Server Port.....	81	Time Zone.....	90
NetworkServices HTTPS OCSP Mode	74	Security Session InactivityTimeout.....	82	UserInterface settings.....	91
NetworkServices HTTPS OCSP URL	74	Security Session ShowLastLogon	82	UserInterface TouchPanel DefaultPanel	91
NetworkServices HTTPS VerifyClientCertificate	74	SerialPort settings	83	Video settings.....	92
NetworkServices HTTPS VerifyServerCertificate	74	SerialPort BaudRate.....	83	Video AllowWebSnapshots.....	100
NetworkServices MultiWay Address	73	SerialPort LoginRequired	83	Video CamCtrlPip CallSetup Duration	97
NetworkServices MultiWay Protocol	73	SerialPort Mode.....	83	Video CamCtrlPip CallSetup Mode.....	97
NetworkServices NTP Address	74	SIP settings.....	84	Video ControlPanel Brightness.....	95
NetworkServices NTP Mode	74	SIP ListenPort	86	Video DefaultPresentationSource	94
NetworkServices SIP Mode.....	75	SIP Profile [1..1] Authentication [1..1] LoginName	85	Video Input DVI [2]/[1] RGBQuantizationRange.....	95
NetworkServices SNMP CommunityName	75	SIP Profile [1..1] Authentication [1..1] Password.....	85	Video Input DVI [2]/[1] Type	95
NetworkServices SNMP Host [1..3] Address	75	SIP Profile [1..1] DefaultTransport	85	Video Input HDMI [1..1] RGBQuantizationRange	94
NetworkServices SNMP Mode	75	SIP Profile [1..1] DisplayName.....	84	Video Input Source [1..3]/[1..2] CameraControl CameraiD	93
NetworkServices SNMP SystemContact.....	75			Video Input Source [1..3]/[1..2] CameraControl Mode	93
NetworkServices SNMP SystemLocation	75				

Video Input Source [1..3]/[1..2] Name.....	92	Video OSD InputMethod Cyrillic	100	Video Output LCD [2]/[1] Brightness	102
Video Input Source [1..3]/[1..2] OptimalDefinition Profile.....	93	Video OSD InputMethod InputLanguage	100	Video Output LCD [2]/[1] Green.....	102
Video Input Source [1..3]/[1..2] OptimalDefinition Threshold60fps.....	94	Video OSD LanguageSelection	99	Video Output LCD [2]/[1] MonitorRole	101
Video Input Source [1..3]/[1..2] PresentationSelection.....	93	Video OSD LoginRequired	100	Video Output LCD [2]/[1] Red	102
Video Input Source [1..3]/[1..2] Quality	94	Video OSD MenuStartupMode	99	Video Output LCD [2]/[1] Resolution.....	101
Video Input Source [1..3]/[1..2] Type	92	Video OSD MissedCallsNotification	100	Video PIP ActiveSpeaker DefaultValue Position	98
Video Input Source [1] Connector.....	92	Video OSD Mode	99	Video PIP Presentation DefaultValue Position	98
Video Input Source [2] Connector.....	92	Video OSD MyContactsExpanded.....	100	Video Selfview	96
Video Input Source [3] Connector.....	92	Video OSD Output	100	Video SelfviewController AutoResizing.....	96
Video Layout LocalLayoutFamily.....	98	Video OSD TodaysBookings	100	Video SelfviewDefault FullscreenMode	96
Video Layout RemoteLayoutFamily.....	99	Video OSD VirtualKeyboard	99	Video SelfviewDefault Mode.....	96
Video Layout ScaleToFrame	95	Video OSD WallpaperSelection.....	99	Video SelfviewDefault OnMonitorRole.....	97
Video Layout ScaleToFrameThreshold.....	96	Video Output HDMI [1] CEC Mode	101	Video SelfviewDefault PIPPosition.....	97
Video Layout Scaling	95	Video Output HDMI [1] MonitorRole	101	Video Wallpaper.....	102
Video MainVideoSource	94	Video Output HDMI [1] OverscanLevel.....	101	Experimental settings	103
Video Monitors.....	99	Video Output HDMI [1] Resolution.....	101		
Video OSD AutoSelectPresentationSource.....	100	Video Output HDMI [1] RGBQuantizationRange	100		
Video OSD EncryptionIndicator	99	Video Output Internal [3]/[2] MonitorRole	102		
		Video Output LCD [2]/[1] Blue	102		

Audio settings

Audio PreferredOutputConnector

Select the preferred connector for the audio output. When the handset is in use the audio goes to the handset, and when hung up the audio goes to the preferred output connector.

Requires user role: ADMIN

Value space: <None/HDMI/Internal/BlueTooth/Handset/Headset>

None: The default audio output is the internal speaker.

HDMI: The audio output goes to the HDMI audio channel.

Internal: The audio output goes to the internal loudspeaker. NOTE: Requires the Audio InternalSpeaker Mode setting to be enabled.

BlueTooth: The audio output goes to the Bluetooth device.

Handset: The audio output goes to the handset only.

Headset: The audio output goes to the headset.

Example: Audio PreferredOutputConnector: Internal

Audio InternalSpeaker Mode

Set the internal loudspeaker mode.

Requires user role: ADMIN

Value space: <Off/On>

Off: The internal speakers are disabled.

On: The internal speakers are enabled.

Example: Audio InternalSpeaker Mode: On

Audio Microphones Mute Enabled

Determine whether audio-mute is allowed or not. The default value is True.

Requires user role: ADMIN

Value space: <True/InCallOnly>

True: Muting of audio is always available.

InCallOnly: Muting of audio is only available when the device is in a call. When Idle it is not possible to mute the microphone. This is useful when an external telephone service/audio system is connected via the codec and is to be available when the codec is not in a call. When set to InCallOnly this will prevent the audio-system from being muted by mistake.

Example: Audio Microphones Mute Enabled: True

Audio SoundsAndAlerts KeyTones Mode

The system can be configured to make a keyboard click sound effect (key tone) when typing text or numbers on a Touch controller.

Requires user role: USER

Value space: <Off/On>

Off: No key tones will be played when you type.

On: You will hear key tones when you type.

Example: Audio SoundsAndAlerts KeyTones Mode: Off

Audio SoundsAndAlerts RingTone

Select the ring tone for incoming calls.

Requires user role: USER

Value space: <Marbles/IceCrystals/Polaris/Alert/Discreet/Fantasy/Jazz/Nordic/Echo/Rhythmic>

Range: Select a tone from the list of ring tones.

Example: Audio SoundsAndAlerts RingTone: Jazz

Audio SoundsAndAlerts RingVolume

Sets the ring volume for an incoming call.

Requires user role: USER

Value space: <0..100>

Range: The value goes in steps of 5 from 0 to 100 (from -34.5 dB to 15 dB). Volume 0 = Off.

Example: Audio SoundsAndAlerts RingVolume: 50

Audio VolumeHandset

Set the volume on the handset.

Requires user role: USER

Value space: <0..100>

Range: The value goes in steps of 5 from 0 to 100 (from -34.5 dB to 15 dB). Value 0 = Off.

Example: Audio VolumeHandset: 70

Audio VolumeHeadset

Set the volume on the headset.

Requires user role: USER

Value space: <0..100>

Range: The value goes in steps of 5 from 0 to 100 (from -34.5 dB to 15 dB). Value 0 = Off.

Example: Audio VolumeHeadset: 70

Audio Volume

Adjust the speaker volume.

Requires user role: USER

Value space: <0..100>

Range: The value must be between 0 and 100. The values from 1 to 100 correspond to the range from -34.5 dB to 15 dB (0.5 dB steps). The value 0 means that the audio is switched off.

Example: Audio Volume: 70

Cameras settings

Cameras PowerLine Frequency

Applies to cameras supporting PowerLine frequency anti-flickering, i.e. PrecisionHD 1080p cameras.

Requires user role: ADMIN

Value space: <50Hz/60Hz>

50Hz: Set to 50 Hz.

60Hz: Set to 60 Hz.

Example: Cameras PowerLine Frequency: 50Hz

Cameras Camera [1..1] Backlight

This configuration turns backlight compensation on or off. Backlight compensation is useful when there is much light behind the persons in the room. Without compensation the persons will easily appear very dark to the far end.

Requires user role: ADMIN

Value space: <Off/On>

Off: Turn off the camera backlight compensation.

On: Turn on the camera backlight compensation.

Example: Cameras Camera 1 Backlight: Off

Cameras Camera [1..1] Brightness Mode

Set the camera brightness mode.

Requires user role: ADMIN

Value space: <Auto/Manual>

Auto: The camera brightness is automatically set by the system.

Manual: Enable manual control of the camera brightness. The brightness level is set using the Cameras Camera Brightness Level setting.

Example: Cameras Camera 1 Brightness Mode: Auto

Cameras Camera [1..1] Brightness Level

Set the brightness level. NOTE: Requires the Camera Brightness Mode to be set to Manual.

Requires user role: ADMIN

Value space: <1..31>

Range: Select a value from 1 to 31.

Example: Cameras Camera 1 Brightness Level: 1

Cameras Camera [1..1] Focus Mode

Set the camera focus mode.

Requires user role: ADMIN

Value space: <Auto/Manual/ContinuousAuto>

Auto: The camera will auto focus once a call is connected, and for EX90 also after zooming the camera. The system will use auto focus only for a few seconds to set the right focus; then auto focus is turned off to prevent continuous focus adjustments of the camera.

Manual: Turn the autofocus off and adjust the camera focus manually.

ContinuousAuto: The camera focus is updated throughout the call, without being turned off.

Example: Cameras Camera 1 Focus Mode: Auto

Cameras Camera [1..1] FrameRate

Set the frame rate.

Requires user role: ADMIN

Value space: <60Hz/30Hz>

60Hz: Set the frame rate to 60 Hz.

30Hz: Set the frame rate to 30 Hz.

Example: Cameras Camera 1 FrameRate: 30Hz

Cameras Camera [1..1] Gamma Mode

The Gamma Mode setting enables gamma corrections. Gamma describes the nonlinear relationship between image pixels and monitor brightness.

Requires user role: ADMIN

Value space: <Auto/Manual>

Auto: Auto is the default and the recommended setting.

Manual: In severe light conditions, you may switch mode to manual and specify explicitly which gamma table to use by setting the Gamma Level.

Example: Cameras Camera 1 Gamma Mode: Auto

Cameras Camera [1..1] Gamma Level

By setting the Gamma Level you can select which gamma correction table to use. This setting may be useful in difficult lighting conditions, where changes to the brightness setting does not provide satisfactory results. NOTE: Requires the Gamma Mode to be set to Manual.

Requires user role: ADMIN

Value space: <0..7>

Range: Select a value from 0 to 7.

Example: Cameras Camera 1 Gamma Level: 0

Cameras Camera [1..1] Whitebalance Mode

Set the camera whitebalance mode.

Requires user role: ADMIN

Value space: <Auto/Manual>

Auto: The camera will continuously adjust the whitebalance depending on the camera view.

Manual: Enables manual control of the camera whitebalance. The whitebalance level is set using the Cameras Camera Whitebalance Level setting.

Example: Cameras Camera 1 Whitebalance Mode: Auto

Cameras Camera [1..1] Whitebalance Level

Set the whitebalance level. NOTE: Requires the Camera Whitebalance Mode to be set to manual.

Requires user role: ADMIN

Value space: <1..16>

Range: Select a value from 1 to 16.

Example: Cameras Camera 1 Whitebalance Level: 1

Conference settings

Conference [1..1] TelephonyPrefix

Enter the prefix to be used for telephony calls.

Requires user role: ADMIN

Value space: <S: 0, 80>

Format: String with a maximum of 80 characters.

Example: Conference 1 TelephonyPrefix: "520"

Conference [1..1] CallProtocolIPStack

Select if the call protocol (SIP, H323) should use the IPv4 or IPv6 address when the system has IP connectivity on both protocol versions at the same time, e.g. when the network interface (Network IPStack) is set to Dual.

Requires user role: ADMIN

Value space: <IPv4/IPv6>

IPv4: When set to IPv4, the call protocol (SIP, H323) will use IPv4.

IPv6: When set to IPv6, the call protocol (SIP, H323) will use IPv6.

Example: Conference 1 CallProtocolIPStack: IPv4

Conference [1..1] LyncCompatibility

The TelePresence endpoints, running TC6.2 software, or later are Lync 2013 ready.

NOTE: Requires version X8 of the VCS (Video Communication Server). You can make calls to Lync 2013 from your TelePresence endpoint and vice versa and the call will have support for audio and video.

NOTE: To make Lync 2013 contacts available in the phonebook on the endpoint the TMS (TelePresence Management System) version 13.x, or later, must be configured.

Requires user role: ADMIN

Value space: <Off/On>

Off: When set to Off, Lync 2013 compatibility on the endpoint is disabled. This is the default value.

On: When set to Off, Lync 2013 compatibility on the endpoint is enabled.

Example: Conference 1 LyncCompatibility: Off

Conference [1..1] AutoAnswer Mode

Set the auto answer mode.

Requires user role: ADMIN

Value space: <Off/On>

Off: An incoming call must be answered manually by tapping the Accept key on the Touch controller.

On: Enable auto answer to let the system automatically answer all incoming calls.

Example: Conference 1 AutoAnswer Mode: Off

Conference [1..1] AutoAnswer Mute

Determine if the microphone shall be muted when an incoming call is automatically answered.

NOTE: Requires that AutoAnswer Mode is switched on.

Requires user role: ADMIN

Value space: <Off/On>

Off: The incoming call will not be muted.

On: The incoming call will be muted when automatically answered.

Example: Conference 1 AutoAnswer Mute: Off

Conference [1..1] AutoAnswer Delay

Define how long (in seconds) an incoming call has to wait before it is answered automatically by the system. NOTE: Requires that AutoAnswer Mode is switched on.

Requires user role: ADMIN

Value space: <0..50>

Range: Select a value from 0 to 50 seconds.

Example: Conference 1 AutoAnswer Delay: 0

Conference [1..1] MicUnmuteOnDisconnect Mode

Determine if the microphones shall be unmuted automatically when all calls are disconnected. In a meeting room or other shared resources this may be done to prepare the system for the next user.

Requires user role: ADMIN

Value space: <Off/On>

Off: If muted during a call, let the microphones remain muted after the call is disconnected.

On: Unmute the microphones after the call is disconnected.

Example: Conference 1 MicUnmuteOnDisconnect Mode: On

Conference [1..1] DoNotDisturb Mode

Determine if there should be an alert on incoming calls.

Requires user role: USER

Value space: <Off/On/Timed>

Off: The incoming calls will come through as normal.

On: All incoming calls will be rejected and they will be registered as missed calls. The calling side will receive a busy signal. A message telling that Do Not Disturb is switched on will display on the Touch controller or main display. The calls received while in Do Not Disturb mode will be shown as missed calls.

Timed: Select this option only if using the API to switch Do Not Disturb mode on and off.

Example: Conference 1 DoNotDisturb Mode: Off

Conference [1..1] DoNotDisturb DefaultTimeout

This setting determines the default duration of a Do Not Disturb session, i.e. the period when incoming calls are rejected and registered as missed calls. The session can be terminated earlier by using the user interface (Touch controller) or the Conference DoNotDisturb Mode setting. The default value is 60 minutes.

Requires user role: ADMIN

Value space: <0..1440>

Range: Select the number of minutes (between 0 and 1440, i.e. 24 hours) before the Do Not Disturb session times out automatically.

Example: Conference 1 DoNotDisturb DefaultTimeout: 60

Conference [1..1] FarEndControl Mode

Lets you decide if the remote side (far end) should be allowed to select your video sources and control your local camera (pan, tilt, zoom).

Requires user role: ADMIN

Value space: <Off/On>

Off: The far end is not allowed to select your video sources or to control your local camera (pan, tilt, zoom).

On: Allows the far end to be able to select your video sources and control your local camera (pan, tilt, zoom). You will still be able to control your camera and select your video sources as normal.

Example: Conference 1 FarEndControl Mode: On

Conference [1..1] FarEndControl SignalCapability

Set the far end control (H.224) signal capability mode.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable the far end control signal capability.

On: Enable the far end control signal capability.

Example: Conference 1 FarEndControl SignalCapability: On

Conference [1..1] Encryption Mode

Set the conference encryption mode. A padlock with the text "Encryption On" or "Encryption Off" displays on screen for a few seconds when the conference starts.

Requires user role: ADMIN

Value space: <Off/On/BestEffort>

Off: The system will not use encryption.

On: The system will only allow calls that are encrypted.

BestEffort: The system will use encryption whenever possible.

> *In Point to point calls:* If the far end system supports encryption (AES-128), the call will be encrypted. If not, the call will proceed without encryption.

> *In MultiSite calls:* In order to have encrypted MultiSite conferences, all sites must support encryption. If not, the conference will be unencrypted.

Example: Conference 1 Encryption Mode: BestEffort

Conference [1..1] DefaultCall Protocol

Set the Default Call Protocol to be used when placing calls from the system.

Requires user role: ADMIN

Value space: <H323/Sip/H320>

H323: H323 ensures that calls are set up as H.323 calls.

Sip: Sip ensures that calls are set up as SIP calls.

H320: H320 ensures that calls are set up as H.320 calls (only applicable if connected to a Cisco TelePresence ISDN Link gateway).

Example: Conference 1 DefaultCall Protocol: H323

Conference [1..1] DefaultCall Rate

Set the Default Call Rate to be used when placing calls from the system.

Requires user role: ADMIN

Value space: <64..6000>

Range: Select a value between 64 and 6000 kbps.

Example: Conference 1 DefaultCall Rate: 768

Conference [1..1] MaxTransmitCallRate

Specify the maximum transmit bit rate to be used when placing or receiving calls. Note that this is the maximum bit rate for each individual call; use the Conference MaxTotalTransmitCallRate setting to set the aggregated maximum for all simultaneous active calls.

Requires user role: ADMIN

Value space: <64..6000>

Range: Select a value between 64 and 6000 kbps.

Example: Conference 1 MaxTransmitCallRate: 6000

Conference [1..1] MaxReceiveCallRate

Specify the maximum receive bit rate to be used when placing or receiving calls. Note that this is the maximum bit rate for each individual call; use the Conference MaxTotalReceiveCallRate setting to set the aggregated maximum for all simultaneous active calls.

Requires user role: ADMIN

Value space: <64..6000>

Range: Select a value between 64 and 6000 kbps.

Example: Conference 1 MaxReceiveCallRate: 6000

Conference [1..1] MaxTotalTransmitCallRate

This configuration applies when using a video system's built-in MultiSite feature (optional) to host a multipoint video conference.

Specify the maximum overall transmit bit rate allowed. The bit rate will be divided fairly among all active calls at any time. This means that the individual calls will be up-speeded or down-speeded as appropriate when someone leaves or enters a multipoint conference, or when a call is put on hold (suspended) or resumed.

The maximum transmit bit rate for each individual call is defined in the Conference MaxTransmitCallRate setting.

Requires user role: ADMIN

Value space: <64..10000>

Range: Select a value between 64 and 10000.

Example: Conference 1 MaxTotalTransmitCallRate: 9000

Conference [1..1] MaxTotalReceiveCallRate

This configuration applies when using a video system's built-in MultiSite feature (optional) to host a multipoint video conference.

Specify the maximum overall receive bit rate allowed. The bit rate will be divided fairly among all active calls at any time. This means that the individual calls will be up-speeded or down-speeded as appropriate when someone leaves or enters a multipoint conference, or when a call is put on hold (suspended) or resumed.

The maximum receive bit rate for each individual call is defined in the Conference MaxReceiveCallRate setting.

Requires user role: ADMIN

Value space: <64..10000>

Range: Select a value between 64 and 10000.

Example: Conference 1 MaxTotalReceiveCallRate: 9000

Conference [1..1] VideoBandwidth Mode

Set the conference video bandwidth mode.

Requires user role: ADMIN

Value space: <Dynamic/Static>

Dynamic: The available transmit bandwidth for the video channels are distributed among the currently active channels. If there is no presentation, the main video channels will use the bandwidth of the presentation channel.

Static: The available transmit bandwidth is assigned to each video channel, even if it is not active.

Example: Conference 1 VideoBandwidth Mode: Dynamic

Conference [1..1] VideoBandwidth MainChannel Weight

The available transmit video bandwidth is distributed on the main channel and presentation channel according to "MainChannel Weight" and "PresentationChannel Weight". If the main channel weight is 2 and the presentation channel weight is 1, then the main channel will use twice as much bandwidth as the presentation channel.

Requires user role: ADMIN

Value space: <1..10>

Range: 1 to 10.

Example: Conference 1 VideoBandwidth MainChannel Weight: 5

Conference [1..1] VideoBandwidth PresentationChannel Weight

The available transmit video bandwidth is distributed on the main channel and presentation channel according to "MainChannel Weight" and "PresentationChannel Weight". If the main channel weight is 2 and the presentation channel weight is 1, then the main channel will use twice as much bandwidth as the presentation channel.

Requires user role: ADMIN

Value space: <1..10>

Range: 1 to 10.

Example: Conference 1 VideoBandwidth PresentationChannel Weight: 5

Conference [1..1] PacketLossResilience Mode

Set the packetloss resilience mode. This configuration will only take effect for calls initiated after the configuration is set.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable the packetloss resilience.

On: Enable the packetloss resilience.

Example: Conference 1 PacketLossResilience Mode: On

Conference [1..1] Presentation Policy

Control how the presentation service is to be performed.

Requires user role: ADMIN

Value space: <LocalRemote/LocalOnly>

LocalRemote: The presentation will be shown locally and sent to remote side.

LocalOnly: The presentation will only be shown locally.

Example: Conference 1 Presentation Policy: LocalRemote

Conference [1..1] Presentation RelayQuality

NOTE: Applies only to EX90.

This configuration applies to video systems that are using the built-in MultiSite feature (optional) to host a multipoint video conference. When a remote user shares a presentation, the video system (codec) will transcode the presentation and send it to the other participants in the multipoint conference. The RelayQuality setting specifies whether to give priority to high frame rate or to high resolution for the presentation source.

Requires user role: ADMIN

Value space: <Motion/Sharpness>

Motion: Gives the highest possible frame rate. Used when there is a need for higher frame rates, typically when there is a lot of motion in the picture.

Sharpness: Gives the highest possible resolution. Used when you want the highest quality of detailed images and graphics.

Example: Conference 1 Presentation RelayQuality: Sharpness

Conference [1..1] Presentation OnPlacedOnHold

Define whether or not to continue sharing a presentation after the remote site has put you on hold.

Requires user role: ADMIN

Value space: <Stop/NoAction>

Stop: The video system stops the presentation sharing when the remote site puts you on hold. The presentation will not continue when the call is resumed.

NoAction: The video system will not stop the presentation sharing when put on hold. The presentation will not be shared while you are on hold, but it will continue automatically when the call is resumed.

Example: Conference 1 Presentation OnPlacedOnHold: Stop

Conference [1..1] Multipoint Mode

Define how the video system handles multiparty video conferences.

If registered to a Cisco TelePresence Video Communication Server (VCS), the video system can either use its own built-in MultiSite feature (available only for EX90), or it can rely on the MultiWay network solution. MultiWay requires that the video network includes a multipoint control unit (MCU).

If registered to a Cisco Unified Communications Manager (CUCM) version 8.6.2 or newer, the video system can use either the CUCM conference bridge, or the video system's own built-in MultiSite feature. Which one to use is set-up by CUCM.

Both Multiway and the CUCM conference bridge allows you to set up conferences with many participants. The MultiSite feature allows up to four participants (yourself included) plus one additional audio call.

Note that the MultiSite feature is optional and may not be available on all EX90 units. MultiSite is not available for EX60.

Requires user role: ADMIN

Value space: <Auto/Off/MultiSite/MultiWay/CUCMMediaResourceGroupList>

Auto: If a MultiWay address is specified in the NetworkServices MultiWay Address setting, MultiWay takes priority over MultiSite. If neither MultiWay nor MultiSite is available, the Multipoint Mode is set to Off automatically.

Off: Multiparty conferences are not allowed.

MultiSite: Multiparty conferences are set up using MultiSite. If MultiSite is chosen when the MultiSite feature is not available, the Multipoint Mode will be set to Off.

MultiWay: Multiparty conferences are set up using MultiWay. The Multipoint Mode will be set to Off automatically if the MultiWay service is unavailable, for example if a server address is not specified in the NetworkServices MultiWay Address setting.

CUCMMediaResourceGroupList: Multiparty conferences (ad hoc conferences) are hosted by the CUCM configured conference bridge. This setting is provisioned by CUCM in a CUCM environment and should never be set manually by the user.

Example: Conference 1 Multipoint Mode: Auto

Conference [1..1] IncomingMultisiteCall Mode

Select whether or not to allow incoming calls when already in a call/conference.

Requires user role: ADMIN

Value space: <Allow/Deny>

Allow: You will be notified when someone calls you while you are already in a call. You can accept the incoming call or not. The ongoing call may be put on hold while answering the incoming call; or you may merge the calls (requires MultiSite or MultiWay support).

Deny: An incoming call will be rejected if you are already in a call. You will not be notified about the incoming call. However, the call will appear as a missed call in the call history list.

Example: Conference 1 IncomingMultisiteCall Mode: Allow

FacilityService settings

FacilityService Service [1..5] Type

Up to five different facility services can be supported simultaneously. With this setting you can select what kind of services they are.

A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set.

Only FacilityService Service 1 with Type Helpdesk is available on the Touch controller.

Requires user role: ADMIN

Value space: <Other/Concierge/Helpdesk/Emergency/Security/Catering/Transportation>

Other: Select this option for services not covered by the other options.

Concierge: Select this option for concierge services.

Helpdesk: Select this option for helpdesk services.

Emergency: Select this option for emergency services.

Security: Select this option for security services.

Catering: Select this option for catering services.

Transportation: Select this option for transportation services.

Example: FacilityService Service 1 Type: Helpdesk

FacilityService Service [1..5] Name

Set the name of each facility service. Up to five different facility services are supported.

A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set.

Only FacilityService Service 1 is available on the Touch controller, and its Name is used on the facility service call button.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters.

Example: FacilityService Service 1 Name: ""

FacilityService Service [1..5] Number

Set the number for each facility service. Up to five different facility services are supported.

A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set.

Only FacilityService Service 1 is available on the Touch controller.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters.

Example: FacilityService Service 1 Number: ""

FacilityService Service [1..5] CallType

Set the call type for each facility service. Up to five different facility services are supported.

A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set.

Only FacilityService Service 1 is available on the Touch controller.

Requires user role: ADMIN

Value space: <Video/Audio>

Video: Select this option for video calls.

Audio: Select this option for audio calls.

Example: FacilityService Service 1 CallType: Video

H323 settings

H323 NAT Mode

The firewall traversal technology creates a secure path through the firewall barrier, and enables proper exchange of audio/video data when connected to an external video conferencing system (when the IP traffic goes through a NAT router). NOTE: NAT does not work in conjunction with gatekeepers.

Requires user role: ADMIN

Value space: <Auto/Off/On>

Auto: The system will determine if the H323 NAT Address or the real IP address should be used in signaling. This makes it possible to place calls to endpoints on the LAN as well as endpoints on the WAN. If the H323 NAT Address is wrong or not set, the real IP address will be used.

Off: The system will signal the real IP address.

On: The system will signal the configured H323 NAT Address instead of its real IP address in Q.931 and H.245. The NAT Server Address will be shown in the startup-menu as: "My IP Address: 10.0.2.1". If the H323 NAT Address is wrong or not set, H.323 calls cannot be set up.

Example: H323 NAT Mode: Off

H323 NAT Address

Enter the external/global IP address to the router with NAT support. Packets sent to the router will then be routed to the system. Note that NAT cannot be used when registered to a gatekeeper.

In the router, the following ports must be routed to the system's IP address:

- * Port 1720
- * Port 5555-6555
- * Port 2326-2487

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address or IPv6 address.

Example: H323 NAT Address: ""

H323 Profile [1..1] Authentication Mode

Set the authentication mode for the H.323 profile.

Requires user role: ADMIN

Value space: <Off/On>

Off: If the H.323 Gatekeeper Authentication Mode is set to Off the system will not try to authenticate itself to a H.323 Gatekeeper, but will still try a normal registration.

On: If the H.323 Gatekeeper Authentication Mode is set to On and a H.323 Gatekeeper indicates that it requires authentication, the system will try to authenticate itself to the gatekeeper. NOTE: Requires the Authentication LoginName and Authentication Password to be defined on both the codec and the Gatekeeper.

Example: H323 Profile 1 Authentication Mode: Off

H323 Profile [1..1] Authentication LoginName

The system sends the Authentication Login Name and the Authentication Password to a H.323 Gatekeeper for authentication. The authentication is a one way authentication from the codec to the H.323 Gatekeeper, i.e. the system is authenticated to the gatekeeper. If the H.323 Gatekeeper indicates that no authentication is required, the system will still try to register. NOTE: Requires the H.323 Gatekeeper Authentication Mode to be enabled.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: H323 Profile 1 Authentication LoginName: ""

H323 Profile [1..1] Authentication Password

The system sends the Authentication Login Name and the Authentication Password to a H.323 Gatekeeper for authentication. The authentication is a one way authentication from the codec to the H.323 Gatekeeper, i.e. the system is authenticated to the gatekeeper. If the H.323 Gatekeeper indicates that no authentication is required, the system will still try to register. NOTE: Requires the H.323 Gatekeeper Authentication Mode to be enabled.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: H323 Profile 1 Authentication Password: ""

H323 Profile [1..1] CallSetup Mode

The H.323 Call Setup Mode defines whether to use a Gatekeeper or Direct calling when establishing H323 calls.

NOTE: Direct H.323 calls can be made even though the H.323 Call Setup Mode is set to Gatekeeper.

Requires user role: ADMIN

Value space: <Direct/Gatekeeper>

Direct: An IP address must be used when dialing in order to make the H323 call.

Gatekeeper: The system will use a Gatekeeper to make a H.323 call. When selecting this option the H323 Profile Gatekeeper Address and H323 Profile Gatekeeper Discovery settings must also be configured.

Example: H323 Profile 1 CallSetup Mode: Gatekeeper

H323 Profile [1..1] Gatekeeper Discovery

Determine how the system shall register to a H.323 Gatekeeper.

Requires user role: ADMIN

Value space: <Manual/Auto>

Manual: The system will use a specific Gatekeeper identified by the Gatekeeper's IP address.

Auto: The system will automatically try to register to any available Gatekeeper. If a Gatekeeper responds to the request sent from the codec within 30 seconds this specific Gatekeeper will be used. This requires that the Gatekeeper is in auto discovery mode as well. If no Gatekeeper responds, the system will not use a Gatekeeper for making H.323 calls and hence an IP address must be specified manually.

Example: H323 Profile 1 Gatekeeper Discovery: Manual

H323 Profile [1..1] Gatekeeper Address

Enter the IP address of the Gatekeeper. NOTE: Requires the H.323 Call Setup Mode to be set to Gatekeeper and the Gatekeeper Discovery to be set to Manual.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: A valid IPv4 address, IPv6 address or DNS name.

Example: H323 Profile 1 Gatekeeper Address: "192.0.2.0"

H323 Profile [1..1] H323Alias E164

The H.323 Alias E.164 defines the address of the system, according to the numbering plan implemented in the H.323 Gatekeeper. The E.164 alias is equivalent to a telephone number, sometimes combined with access codes.

Requires user role: ADMIN

Value space: <S: 0, 30>

Format: Compact string with a maximum of 30 characters. Valid characters are 0-9, * and #.

Example: H323 Profile 1 H323Alias E164: "90550092"

H323 Profile [1..1] H323Alias ID

Lets you specify the H.323 Alias ID which is used to address the system on a H.323 Gatekeeper and will be displayed in the call lists. Example: "firstname.lastname@company.com", "My H.323 Alias ID"

Requires user role: ADMIN

Value space: <S: 0, 49>

Format: String with a maximum of 49 characters.

Example: H323 Profile 1 H323Alias ID: "firstname.lastname@company.com"

H323 Profile [1..1] PortAllocation

The H.323 Port Allocation setting affects the H.245 port numbers used for H.323 call signalling.

Requires user role: ADMIN

Value space: <Dynamic/Static>

Dynamic: The system will allocate which ports to use when opening a TCP connection. The reason for doing this is to avoid using the same ports for subsequent calls, as some firewalls consider this as a sign of attack. When Dynamic is selected, the H.323 ports used are from 11000 to 20999. Once 20999 is reached they restart again at 11000. For RTP and RTCP media data, the system is using UDP ports in the range 2326 to 2487. Each media channel is using two adjacent ports, ie 2330 and 2331 for RTP and RTCP respectively. The ports are automatically selected by the system within the given range. Firewall administrators should not try to deduce which ports are used when, as the allocation schema within the mentioned range may change without any further notice.

Static: When set to Static the ports are given within a static predefined range [5555-6555].

Example: H323 Profile 1 PortAllocation: Dynamic

Network settings

Network [1..1] IPStack

Select if the system should use IPv4, IPv6 or Dual on the network interface. Dual means that the system will be able to operate on both IP versions at the same time. This means that the system can have both an IPv4 and an IPv6 address at the same time.

NOTE: Restart the system after changing this setting.

Requires user role: ADMIN

Value space: <Dual/IPv4/IPv6>

Dual: When set to Dual, the network interface can operate on both IP versions at the same time, and can have both an IPv4 and an IPv6 address at the same time.

IPv4: When set to IPv4, the system will use IPv4 on the network interface.

IPv6: When set to IPv6, the system will use IPv6 on the network interface.

Example: Network 1 IPStack: IPv4

Network [1..1] IPv4 Assignment

Define how the system will obtain its IPv4 address, subnet mask and gateway address. This setting only applies to systems on IPv4 networks.

Requires user role: ADMIN

Value space: <Static/DHCP>

Static: The addresses must be configured manually using the Network IPv4 Address, Network IPv4 Gateway and Network IPv4 SubnetMask settings (static addresses).

DHCP: The system addresses are automatically assigned by the DHCP server.

Example: Network 1 IPv4 Assignment: DHCP

Network [1..1] IPv4 Address

Enter the static IPv4 network address for the system. This setting is only applicable when Network Assignment is set to Static.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address.

Example: Network 1 IPv4 Address: "192.0.2.2"

Network [1..1] IPv4 Gateway

Define the IPv4 network gateway. This setting is only applicable when the Network Assignment is set to Static.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address.

Example: Network 1 IPv4 Gateway: "192.0.2.1"

Network [1..1] IPv4 SubnetMask

Define the IPv4 network subnet mask. This setting is only applicable when the Network Assignment is set to Static.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: The valid IPv4 address format.

Example: Network 1 IPv4 SubnetMask: "255.255.255.0"

Network [1..1] IPv6 Assignment

Define how the system will obtain its IPv6 address and the default gateway address. This setting only applies to systems on IPv6 networks.

Requires user role: ADMIN

Value space: <Static/DHCPv6/Autoconf>

Static: The codec and gateway IP addresses must be configured manually using the Network IPv6 Address and Network IPv6 Gateway settings. The options, for example NTP and DNS server addresses, must either be set manually or obtained from a DHCPv6 server. The Network IPv6 DHCPOptions setting determines which method to use.

DHCPv6: All IPv6 addresses, including options, will be obtained from a DHCPv6 server. See RFC 3315 for a detailed description. The Network IPv6 DHCPOptions setting will be ignored.

Autoconf: Enable IPv6 stateless autoconfiguration of the IPv6 network interface. See RFC 4862 for a detailed description. The options, for example NTP and DNS server addresses, must either be set manually or obtained from a DHCPv6 server. The Network IPv6 DHCPOptions setting determines which method to use.

Example: Network 1 IPv6 Assignment: Autoconf

Network [1..1] IPv6 Address

Enter the static IPv6 network address for the system. This setting is only applicable when the Network IPv6 Assignment is set to Static.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv6 address.

Example: Network 1 IPv6 Address: "2001:0DB8:0000:0000:0000:0000:0002"

Network [1..1] IPv6 Gateway

Define the IPv6 network gateway address. This setting is only applicable when the Network IPv6 Assignment is set to Static.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv6 address.

Example: Network 1 IPv6 Gateway: "2001:0DB8:0000:0000:0000:0000:0001"

Network [1..1] IPv6 DHCPOptions

Retrieve a set of DHCP options, for example NTP and DNS server addresses, from a DHCPv6 server.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable the retrieval of DHCP options from a DHCPv6 server.

On: Enable the retrieval of a selected set of DHCP options from a DHCPv6 server.

Example: Network 1 IPv6 DHCPOptions: On

Network [1..1] DHCP RequestTFTPServerAddress

This setting is used only for video systems that are registered to a Cisco Unified Communications Manager (CUCM).

The setting determines whether the endpoint should ask the DHCP server for DHCP option 150, so that it can discover the address of the TFTP server (provisioning server) automatically.

If this setting is Off or the DHCP server does not support option 150, the TFTP server address must be set manually using the Provisioning ExternalManager Address setting.

Note: If the Network VLAN Voice Mode setting is Auto and the Cisco Discovery Protocol (CDP) assigns an ID to the voice VLAN, then a request for option 150 will always be sent. That is, the Network DHCP RequestTFTPServerAddress setting will be ignored.

Requires user role: ADMIN

Value space: <Off/On>

Off: The video system will not send a request for DHCP option 150 and the address of the TFTP server must be set manually. See the note above for any exception to this rule.

On: The video system will send a request for option 150 to the DHCP server so that it can automatically discover the address of the TFTP server.

Example: Network 1 DHCP RequestTFTPServerAddress: On

Network [1..1] DNS Domain Name

DNS Domain Name is the default domain name suffix which is added to unqualified names.

Example: If the DNS Domain Name is "company.com" and the name to lookup is "MyVideoSystem", this will result in the DNS lookup "MyVideoSystem.company.com".

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: String with a maximum of 64 characters.

Example: Network 1 DNS Domain Name: ""

Network [1..1] DNS Server [1..3] Address

Define the network addresses for DNS servers. Up to 3 addresses may be specified. If the network addresses are unknown, contact your administrator or Internet Service Provider.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address or IPv6 address.

Example: Network 1 DNS Server 1 Address: ""

Network [1..1] QoS Mode

The QoS (Quality of Service) is a method which handles the priority of audio, video and data in the network. The QoS settings must be supported by the infrastructure. Diffserv (Differentiated Services) is a computer networking architecture that specifies a simple, scalable and coarse-grained mechanism for classifying, managing network traffic and providing QoS priorities on modern IP networks.

Requires user role: ADMIN

Value space: <Off/Diffserv>

Off: No QoS method is used.

Diffserv: When you set the QoS Mode to Diffserv, the Network QoS Diffserv Audio, Network QoS Diffserv Video, Network QoS Diffserv Data, Network QoS Diffserv Signalling, Network QoS Diffserv ICMPv6 and Network QoS Diffserv NTP settings are used to prioritize packets.

Example: Network 1 QoS Mode: Diffserv

Network [1..1] QoS Diffserv Audio

Note: This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Audio packets should have in the IP network.

The priority for the packets ranges from 0 to 63 – the higher the number, the higher the priority. The recommended class for Audio is CS4, which equals the decimal value 32. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

Requires user role: ADMIN

Value space: <0..63>

Range: Select a value between 0 to 63 – the higher the number, the higher the priority. The default value is 0 (best effort).

Example: Network 1 QoS Diffserv Audio: 0

Network [1..1] QoS Diffserv Video

Note: This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Video packets should have in the IP network. The packets on the presentation channel (shared content) are also in the Video packet category.

The priority for the packets ranges from 0 to 63 – the higher the number, the higher the priority. The recommended class for Video is CS4, which equals the decimal value 32. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

Requires user role: ADMIN

Value space: <0..63>

Range: Select a value between 0 to 63 – the higher the number, the higher the priority. The default value is 0 (best effort).

Example: Network 1 QoS Diffserv Video: 0

Network [1..1] QoS Diffserv Data

Note: This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Data packets should have in the IP network.

The priority for the packets ranges from 0 to 63 – the higher the number, the higher the priority. The recommended value for Data is 0, which means best effort. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

Requires user role: ADMIN

Value space: <0..63>

Range: Select a value between 0 to 63 – the higher the number, the higher the priority. The default value is 0 (best effort).

Example: Network 1 QoS Diffserv Data: 0

Network [1..1] QoS Diffserv Signalling

Note: This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Signalling packets that are deemed critical (time-sensitive) for the real-time operation should have in the IP network.

The priority for the packets ranges from 0 to 63 – the higher the number, the higher the priority. The recommended class for Signalling is CS3, which equals the decimal value 24. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

Requires user role: ADMIN

Value space: <0..63>

Range: Select a value between 0 to 63 – the higher the number, the higher the priority. The default value is 0 (best effort).

Example: Network 1 QoS Diffserv Signalling: 0

Network [1..1] QoS Diffserv ICMPv6

Note: This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority ICMPv6 packets should have in the IP network.

The priority for the packets ranges from 0 to 63 – the higher the number, the higher the priority. The recommended value for ICMPv6 is 0, which means best effort. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

Requires user role: ADMIN

Value space: <0..63>

Range: Select a value between 0 to 63 – the higher the number, the higher the priority. The default value is 0 (best effort).

Example: Network 1 QoS Diffserv ICMPv6: 0

Network [1..1] QoS Diffserv NTP

Note: This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority NTP packets should have in the IP network.

The priority for the packets ranges from 0 to 63 – the higher the number, the higher the priority. The recommended value for NTP is 0, which means best effort. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

Requires user role: ADMIN

Value space: <0..63>

Range: Select a value between 0 to 63 – the higher the number, the higher the priority. The default value is 0 (best effort).

Example: Network 1 QoS Diffserv NTP: 0

Network [1..1] IEEE8021X Mode

The system can be connected to an IEEE 802.1X LAN network, with a port-based network access control that is used to provide authenticated network access for Ethernet networks.

Requires user role: ADMIN

Value space: <Off/On>

Off: The 802.1X authentication is disabled (default).

On: The 802.1X authentication is enabled.

Example: Network 1 IEEE8021X Mode: Off

Network [1..1] IEEE8021X TlsVerify

Verification of the server-side certificate of an IEEE802.1x connection against the certificates in the local CA-list when TLS is used. The CA-list must be uploaded to the video system. This can be done from the web interface.

This setting takes effect only when Network [1..1] IEEE8021X Eap Tls is enabled (On).

Requires user role: ADMIN

Value space: <Off/On>

Off: When set to Off, TLS connections are allowed without verifying the server-side X.509 certificate against the local CA-list. This should typically be selected if no CA-list has been uploaded to the codec.

On: When set to On, the server-side X.509 certificate will be validated against the local CA-list for all TLS connections. Only servers with a valid certificate will be allowed.

Example: xConfiguration Network 1 IEEE8021X TlsVerify: Off

Network [1..1] IEEE8021X UseClientCertificate

Authentication using a private key/certificate pair during an IEEE802.1x connection. The authentication X.509 certificate must be uploaded to the video system. This can be done from the web interface.

Requires user role: ADMIN

Value space: <Off/On>

Off: When set to Off client-side authentication is not used (only server-side).

On: When set to On the client (video system) will perform a mutual authentication TLS handshake with the server.

Example: Network 1 IEEE8021X UseClientCertificate: Off

Network [1..1] IEEE8021X Identity

The 802.1X Identity is the user name needed for 802.1X authentication.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: String with a maximum of 64 characters.

Example: Network 1 IEEE8021X Identity: ""

Network [1..1] IEEE8021X Password

The 802.1X Password is the password needed for 802.1X authentication.

Requires user role: ADMIN

Value space: <S: 0, 32>

Format: String with a maximum of 32 characters.

Example: Network 1 IEEE8021X Password: ""

Network [1..1] IEEE8021X AnonymousIdentity

The 802.1X Anonymous ID string is to be used as unencrypted identity with EAP (Extensible Authentication Protocol) types that support different tunneled identity, like EAP-PEAP and EAP-TTLS. If set, the anonymous ID will be used for the initial (unencrypted) EAP Identity Request.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: String with a maximum of 64 characters.

Example: Network 1 IEEE8021X AnonymousIdentity: ""

Network [1..1] IEEE8021X Eap Md5

Set the Md5 (Message-Digest Algorithm 5) mode. This is a Challenge Handshake Authentication Protocol that relies on a shared secret. Md5 is a Weak security.

Requires user role: ADMIN

Value space: <Off/On>

Off: The EAP-MD5 protocol is disabled.

On: The EAP-MD5 protocol is enabled (default).

Example: Network 1 IEEE8021X Eap Md5: On

Network [1..1] IEEE8021X Eap Ttls

Set the TTLS (Tunneled Transport Layer Security) mode. Authenticates LAN clients without the need for client certificates. Developed by Funk Software and Certicom. Usually supported by Agere Systems, Proxim and Avaya.

Requires user role: ADMIN

Value space: <Off/On>

Off: The EAP-TTLS protocol is disabled.

On: The EAP-TTLS protocol is enabled (default).

Example: Network 1 IEEE8021X Eap Ttls: On

Network [1..1] IEEE8021X Eap Tls

Enable or disable the use of EAP-TLS (Transport Layer Security) for IEEE802.1x connections. The EAP-TLS protocol, defined in RFC 5216, is considered one of the most secure EAP standards. LAN clients are authenticated using client certificates.

Requires user role: ADMIN

Value space: <Off/On>

Off: The EAP-TLS protocol is disabled.

On: The EAP-TLS protocol is enabled (default).

Example: Network 1 IEEE8021X Eap Tls: On

Network [1..1] IEEE8021X Eap Peap

Set the Peap (Protected Extensible Authentication Protocol) mode. Authenticates LAN clients without the need for client certificates. Developed by Microsoft, Cisco and RSA Security.

Requires user role: ADMIN

Value space: <Off/On>

Off: The EAP-PEAP protocol is disabled.

On: The EAP-PEAP protocol is enabled (default).

Example: Network 1 IEEE8021X Eap Peap: On

Network [1..1] MTU

Set the Ethernet MTU (Maximum Transmission Unit).

Requires user role: ADMIN

Value space: <576..1500>

Range: Select a value from 576 to 1500 bytes.

Example: Network 1 MTU: 1500

Network [1..1] Speed

Set the Ethernet link speed.

NOTE: If running older software versions than TC6.0, restart the system for any change to this setting to take effect.

Requires user role: ADMIN

Value space: <Auto/10half/10full/100half/100full/1000full>

Auto: Autonegotiate link speed.

10half: Force link to 10 Mbps half-duplex.

10full: Force link to 10 Mbps full-duplex.

100half: Force link to 100 Mbps half-duplex.

100full: Force link to 100 Mbps full-duplex.

1000full: Force link to 1 Gbps full-duplex.

Example: Network 1 Speed: Auto

Network [1..1] TrafficControl Mode

Set the network traffic control mode to decide how to control the video packets transmission speed.

Requires user role: ADMIN

Value space: <Off/On>

Off: Transmit video packets at link speed.

On: Transmit video packets at maximum 20 Mbps. Can be used to smooth out bursts in the outgoing network traffic.

Example: Network 1 TrafficControl: On

Network [1..1] RemoteAccess Allow

Filter IP addresses for access to ssh/telnet/HTTP/HTTPS.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters, comma separated IP addresses or IP range.

Example: Network 1 RemoteAccess Allow: "192.168.1.231, 192.168.1.182"

Network [1..1] VLAN Voice Mode

Set the VLAN voice mode. The VLAN Voice Mode will be set to Auto automatically if you choose Cisco UCM (Cisco Unified Communications Manager) as provisioning infrastructure via the Provisioning Wizard on the Touch controller.

Requires user role: ADMIN

Value space: <Auto/Manual/Off>

Auto: The Cisco Discovery Protocol (CDP), if available, assigns an id to the voice VLAN. If CDP is not available, VLAN is not enabled.

Manual: The VLAN ID is set manually using the Network VLAN Voice VlanId setting. If CDP is available, the manually set value will be overruled by the value assigned by CDP.

Off: VLAN is not enabled.

Example: Network 1 VLAN Voice Mode: Off

Network [1..1] VLAN Voice VlanId

Set the VLAN voice ID. This setting will only take effect if VLAN Voice Mode is set to Manual.

Requires user role: ADMIN

Value space: <1..4094>

Range: Select a value from 1 to 4094.

Example: Network 1 VLAN Voice VlanId: 1

NetworkServices settings

NetworkServices XMLAPI Mode

Not applicable in this version.

NetworkServices MultiWay Address

The MultiWay address must be equal to the Conference Factory Alias, as configured on the Video Communication Server. The Multiway™ conferencing enables video endpoint users to introduce a 3rd party into an existing call.

Multiway™ can be used in the following situations:

- 1) When you want to add someone else in to your existing call.
- 2) When you are called by a 3rd party while already in a call and you want to include that person in the call.

Requirements: The EX90/EX60 must run software version TC4.2 (or later), Video Communication Server (VCS) version X5 (or later) and Codian MCU version 3.1 (or later). Video systems invited to join the Multiway™ conference must support the H.323 routeToMC facility message if in an H.323 call, or SIP REFER message if in a SIP call.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters (a valid dial URI).

Example: NetworkServices MultiWay Address: "h323:multiway@company.com"

NetworkServices MultiWay Protocol

Determine the protocol to be used for MultiWay calls.

Requires user role: ADMIN

Value space: <Auto/H323/Sip>

Auto: The system will select the protocol for MultiWay calls.

H323: The H323 protocol will be used for MultiWay calls.

Sip: The SIP protocol will be used for MultiWay calls.

Example: NetworkServices MultiWay Protocol: Auto

NetworkServices H323 Mode

Determine whether the system should be able to place and receive H.323 calls or not.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable the possibility to place and receive H.323 calls.

On: Enable the possibility to place and receive H.323 calls (default).

Example: NetworkServices H323 Mode: On

NetworkServices HTTP Mode

Set the HTTP mode to enable/disable access to the system through a web browser. The web interface is used for system management, call management such as call transfer, diagnostics and software uploads.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: ADMIN

Value space: <Off/On>

Off: The HTTP protocol is disabled.

On: The HTTP protocol is enabled.

Example: NetworkServices HTTP Mode: On

NetworkServices HTTPS Mode

HTTPS is a web protocol that encrypts and decrypts user page requests as well as the pages that are returned by the web server.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: ADMIN

Value space: <Off/On>

Off: The HTTPS protocol is disabled.

On: The HTTPS protocol is enabled.

Example: NetworkServices HTTPS Mode: On

NetworkServices HTTPS VerifyServerCertificate

When the video system connects to an external HTTPS server (like a phone book server or an external manager), this server will present a certificate to the video system to identify itself.

Requires user role: ADMIN

Value space: <Off/On>

Off: Do not verify server certificates.

On: Requires the system to verify that the server certificate is signed by a trusted Certificate Authority (CA). This requires that a list of trusted CAs are uploaded to the system in advance.

Example: NetworkServices HTTPS VerifyServerCertificate: Off

NetworkServices HTTPS VerifyClientCertificate

When the video system connects to a HTTPS client (like a web browser), the client can be asked to present a certificate to the video system to identify itself.

Requires user role: ADMIN

Value space: <Off/On>

Off: Do not verify client certificates.

On: Requires the client to present a certificate that is signed by a trusted Certificate Authority (CA). This requires that a list of trusted CAs are uploaded to the system in advance.

Example: NetworkServices HTTPS VerifyClientCertificate: Off

NetworkServices HTTPS OCSP Mode

Define the support for OCSP (Online Certificate Status Protocol) responder services. The OCSP feature allows users to enable OCSP instead of certificate revocation lists (CRLs) to check the certificate status.

For any outgoing HTTPS connection, the OCSP responder is queried of the status. If the corresponding certificate has been revoked, then the HTTPS connection will not be used.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable OCSP support.

On: Enable OCSP support.

Example: NetworkServices HTTPS OCSP Mode: Off

NetworkServices HTTPS OCSP URL

Specify the URL of the OCSP responder (server) that will be used to check the certificate status.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters.

Example: NetworkServices HTTPS OCSP URL: "http://ocspserver.company.com:81"

NetworkServices NTP Mode

The Network Time Protocol (NTP) is used to synchronize the time of the system to a reference time server. The time server will subsequently be queried every 24th hour for time updates. The time will be displayed on the top of the screen. The system will use the time to timestamp messages transmitted to Gatekeepers or Border Controllers requiring H.235 authentication. The system will use the time to timestamp messages transmitted to Gatekeepers or Border Controllers that requires H.235 authentication. It is also used for timestamping Placed Calls, Missed Calls and Received Calls.

Requires user role: ADMIN

Value space: <Auto/Off/Manual>

Auto: The system will use the NTP server, by which address is supplied from the DHCP server in the network. If no DHCP server is used, or the DHCP server does not provide the system with a NTP server address, the system will use the static defined NTP server address specified by the user.

Off: The system will not use an NTP server.

Manual: The system will always use the static defined NTP server address specified by the user.

Example: NetworkServices NTP Mode: Manual

NetworkServices NTP Address

Enter the NTP Address to define the network time protocol server address. This address will be used if NTP Mode is set to Manual, or if set to Auto and no address is supplied by a DHCP server.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address, IPv6 address or DNS name.

Example: NetworkServices NTP Address: "1.ntp.tandberg.com"

NetworkServices SIP Mode

Determine whether the system should be able to place and receive SIP calls or not.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable the possibility to place and receive SIP calls.

On: Enable the possibility to place and receive SIP calls (default).

Example: NetworkServices SIP Mode: On

NetworkServices SNMP Mode

SNMP (Simple Network Management Protocol) is used in network management systems to monitor network-attached devices (routers, servers, switches, projectors, etc) for conditions that warrant administrative attention. SNMP exposes management data in the form of variables on the managed systems, which describe the system configuration. These variables can then be queried (set to ReadOnly) and sometimes set (set to ReadWrite) by managing applications.

Requires user role: ADMIN

Value space: <Off/ReadOnly/ReadWrite>

Off: Disable the SNMP network service.

ReadOnly: Enable the SNMP network service for queries only.

ReadWrite: Enable the SNMP network service for both queries and commands.

Example: NetworkServices SNMP Mode: ReadWrite

NetworkServices SNMP Host [1..3] Address

Enter the address of up to three SNMP Managers.

The system's SNMP Agent (in the codec) responds to requests from SNMP Managers (a PC program etc.), for example about system location and system contact. SNMP traps are not supported.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address, IPv6 address or DNS name.

Example: NetworkServices SNMP Host 1 Address: ""

NetworkServices SNMP CommunityName

Enter the name of the Network Services SNMP Community. SNMP Community names are used to authenticate SNMP requests. SNMP requests must have a password (case sensitive) in order to receive a response from the SNMP Agent in the codec. The default password is "public". If you have the Cisco TelePresence Management Suite (TMS) you must make sure the same SNMP Community is configured there too. NOTE: The SNMP Community password is case sensitive.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: NetworkServices SNMP CommunityName: "public"

NetworkServices SNMP SystemContact

Enter the name of the Network Services SNMP System Contact.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: NetworkServices SNMP SystemContact: ""

NetworkServices SNMP SystemLocation

Enter the name of the Network Services SNMP System Location.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: NetworkServices SNMP SystemLocation: ""

NetworkServices SSH Mode

SSH (or Secure Shell) protocol can provide secure encrypted communication between the codec and your local computer.

Requires user role: ADMIN

Value space: <Off/On>

Off: The SSH protocol is disabled.

On: The SSH protocol is enabled.

Example: NetworkServices SSH Mode: On

NetworkServices SSH AllowPublicKey

Secure Shell (SSH) public key authentication can be used to access the codec.

Requires user role: ADMIN

Value space: <Off/On>

Off: The SSH public key is not allowed.

On: The SSH public key is allowed.

Example: NetworkServices SSH AllowPublicKey: On

NetworkServices Telnet Mode

Telnet is a network protocol used on the Internet or Local Area Network (LAN) connections.

Requires user role: ADMIN

Value space: <Off/On>

Off: The Telnet protocol is disabled. This is the factory setting.

On: The Telnet protocol is enabled.

Example: NetworkServices Telnet Mode: Off

NetworkServices CTMS Mode

This setting determines whether or not to allow multiparty conferences controlled by a Cisco TelePresence Multipoint Switch (CTMS).

Video systems running software TC5.0 or later are able to initiate or join non-encrypted multiparty conferences controlled by CTMS version 1.8 or later. Encrypted conferences are supported as from software versions TC6.0 and CTMS 1.9.1. Encryption is addressed in the NetworkServices CTMS Encryption setting.

Requires user role: ADMIN

Value space: <Off/On>

Off: Multiparty conferencing via CTMS is prohibited.

On: Multiparty conferencing via CTMS is allowed.

Example: NetworkServices CTMS Mode: On

NetworkServices CTMS Encryption

This setting indicates whether or not the video system supports encryption when participating in a multiparty meeting controlled by a Cisco TelePresence Multipoint Switch (CTMS).

CTMS allows three security settings for meetings: non-secure (not encrypted), best effort (encrypted if all participants support encryption, otherwise not encrypted) and secure (always encrypted).

Requires user role: ADMIN

Value space: <Off/BestEffort>

Off: The video system does not allow encryption and therefore cannot participate in a secure CTMS meeting (encrypted). When participating in a best effort CTMS meeting, the meeting will be downgraded to non-secure (not encrypted).

BestEffort: The video system can negotiate encryption parameters with CTMS and participate in a secure CTMS meeting (encrypted). Do not use this value if the CTMS version is older than 1.9.1.

Example: NetworkServices CTMS Encryption: Off

Phonebook settings

Phonebook Server [1..1] ID

Enter a name for the external phone book.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: String with a maximum of 64 characters.

Example: Phonebook Server 1 ID: ""

Phonebook Server [1..1] Type

Select the phonebook server type.

Requires user role: ADMIN

Value space: <VCS/TMS/Callway/CUCM>

VCS: Select VCS if the phonebook is located on the Cisco TelePresence Video Communication Server.

TMS: Select TMS if the phonebook is located on the Cisco TelePresence Management Suite server.

Callway: Select Callway if the phonebook is to be provided by the WebEx TelePresence subscription service (formerly called CallWay). Contact your WebEx TelePresence provider for more information.

CUCM: Select CUCM if the phonebook is located on the Cisco Unified Communications Manager.

Example: Phonebook Server 1 Type: TMS

Phonebook Server [1..1] URL

Enter the address (URL) to the external phone book server.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters.

Example: Phonebook Server 1 URL: "http://tms.company.com/tms/public/external/phonebook/phonebookservice.asmx"

Provisioning settings

Provisioning Connectivity

This setting controls how the device discovers whether it should request an internal or external configuration from the provisioning server.

Requires user role: ADMIN

Value space: <Internal/External/Auto>

Internal: Request internal configuration.

External: Request external configuration.

Auto: Automatically discover using NAPTR queries whether internal or external configurations should be requested. If the NAPTR responses have the "e" flag, external configurations will be requested. Otherwise internal configurations will be requested.

Example: Provisioning Connectivity: Auto

Provisioning Mode

It is possible to configure a video system using a provisioning system (external manager). This allows video conferencing network administrators to manage many video systems simultaneously.

With this setting you choose which type of provisioning system to use. Provisioning can also be switched off. Contact your provisioning system provider/representative for more information.

Requires user role: ADMIN

Value space: <Off/TMS/VCS/CallWay/CUCM/Auto>

Off: The video system will not be configured by a provisioning system.

TMS: The video system will be configured using TMS (Cisco TelePresence Management System).

VCS: The video system will be configured using VCS (Cisco TelePresence Video Communication Server).

Callway: The video system will be configured using the WebEx TelePresence subscription service (formerly called Callway).

CUCM: The video system will be configured using CUCM (Cisco Unified Communications Manager).

Auto: The provisioning server will automatically be selected by the video system.

Example: Provisioning Mode: TMS

Provisioning LoginName

This is the user name part of the credentials used to authenticate the video system with the provisioning server. This setting must be used when required by the provisioning server. If Provisioning Mode is Callway (WebEx TelePresence), enter the video number.

Requires user role: ADMIN

Value space: <S: 0, 80>

Format: String with a maximum of 80 characters.

Example: Provisioning LoginName: ""

Provisioning Password

This is the password part of the credentials used to authenticate the video system with the provisioning server. This setting must be used when required by the provisioning server. If Provisioning Mode is Callway (WebEx TelePresence), enter the activation code.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: String with a maximum of 64 characters.

Example: Provisioning Password: ""

Provisioning HttpMethod

Select the HTTP method to be used for the provisioning.

Requires user role: ADMIN

Value space: <GET/POST>

GET: Select GET when the provisioning server supports GET.

POST: Select POST when the provisioning server supports POST.

Example: Provisioning HttpMethod: POST

Provisioning ExternalManager Address

Enter the IP Address or DNS name of the external manager / provisioning system.

If an External Manager Address (and Path) is configured, the system will send a message to this address when starting up. When receiving this message the external manager / provisioning system can return configurations/commands to the unit as a result.

When using CUCM or TMS provisioning, the DHCP server can be set up to provide the external manager address automatically (DHCP Option 242 for TMS, and DHCP Option 150 for CUCM). An address set in the Provisioning ExternalManager Address setting will override the address provided by DHCP.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: A valid IPv4 address, IPv6 address or DNS name.

Example: Provisioning ExternalManager Address: ""

Provisioning ExternalManager Protocol

Determine whether to use secure management or not.

Requires user role: ADMIN

Value space: <HTTP/HTTPS>

HTTP: Set to HTTP to disable secure management. Requires HTTP to be enabled in the NetworkServices HTTP Mode setting.

HTTPS: Set to HTTPS to enable secure management. Requires HTTPS to be enabled in the NetworkServices HTTPS Mode setting.

Example: Provisioning ExternalManager Protocol: HTTP

Provisioning ExternalManager Path

Set the Path to the external manager / provisioning system. This setting is required when several management services reside on the same server, i.e. share the same External Manager address.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters.

Example: Provisioning ExternalManager Path: "tms/public/external/management/SystemManagementService.asmx"

Provisioning ExternalManager Domain

Enter the SIP domain for the VCS provisioning server.

Requires user role: ADMIN

Value space: <S: 0, 64>

Format: String with a maximum of 64 characters.

Example: Provisioning ExternalManager Domain: "any.domain.com"

RTP settings

RTP Ports Range Start

Specify the first port in the range of RTP ports. Also see the H323 Profile [1..1] PortAllocation setting.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: ADMIN

Value space: <1024..65502>

Range: Select a value from 1024 to 65502.

Example: RTP Ports Range Start: 2326

RTP Ports Range Stop

Specify the last RTP port in the range. Also see the H323 Profile [1..1] PortAllocation setting.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: ADMIN

Value space: <1056..65535>

Range: Select a value from 1056 to 65535.

Example: RTP Ports Range Stop: 2486

Security settings

Security Audit Logging Mode

Determine where to record or transmit the audit logs. When using the External or ExternalSecure modes, you also must enter the address and port number for the audit server in the Security Audit Server Address and Security Audit Server Port settings.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: AUDIT

Value space: <Off/Internal/External/ExternalSecure>

Off: No audit logging is performed.

Internal: The system records the audit logs to internal logs, and rotates logs when they are full.

External: The system sends the audit logs to an external audit server (syslog server). The audit server must support TCP.

ExternalSecure: The system sends encrypted audit logs to an external audit server (syslog server) that is verified by a certificate in the Audit CA list. The Audit CA list file must be uploaded to the codec using the web interface. The common_name parameter of a certificate in the CA list must match the IP address of the audit server.

Example: Security Audit Logging Mode: Off

Security Audit Server Address

Enter the IP address of the audit server. Only valid IPv4 or IPv6 address formats are accepted. Host names are not supported. This setting is only relevant when Security Audit Logging Mode is set to External or ExternalSecure.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: AUDIT

Value space: <S: 0, 64>

Format: A valid IPv4 address or IPv6 address.

Example: Security Audit Server Address: ""

Security Audit Server Port

Enter the port of the audit server that the system shall send its audit logs to. The default port is 514. This setting is only relevant when Security Audit Logging Mode is set to External or ExternalSecure.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: AUDIT

Value space: <0..65535>

Range: Select a value from 0 to 65535.

Example: Security Audit Server Port: 514

Security Audit OnError Action

Determine what happens when the connection to the audit server is lost. This setting is only relevant when Security Audit Logging Mode is set to ExternalSecure.

NOTE: Restart the system for any change to this setting to take effect.

Requires user role: AUDIT

Value space: <Halt/Ignore>

Halt: If a halt condition is detected the system is rebooted and only the auditor is allowed to operate the unit until the halt condition has passed. When the halt condition has passed the audit logs are re-spoiled to the audit server. Halt conditions are: A network breach (no physical link), no audit server running (or wrong audit server address or port), TLS authentication failed (if in use), local backup (re-spooling) log full.

Ignore: The system will continue its normal operation, and rotate internal logs when full. When the connection is restored it will again send its audit logs to the audit server.

Example: Security Audit OnError Action: Ignore

Security Session ShowLastLogon

When logging in to the system using SSH or Telnet you will see the UserId, time and date of the last session that did a successful login.

Requires user role: ADMIN

Value space: <Off/On>

On: Show information about the last session.

Off: Do not show information about the last session.

Example: Security Session ShowLastLogon: Off

Security Session InactivityTimeout

Determine how long the system will accept inactivity from the user before he is automatically logged out.

Requires user role: ADMIN

Value space: <0..10000>

Range: Select a value between 1 and 10000 seconds; or select 0 when inactivity should not enforce automatic logout.

Example: Security Session InactivityTimeout: 0

SerialPort settings

SerialPort Mode

Enable/disable the serial port.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable the serial port.

On: Enable the serial port.

Example: SerialPort Mode: On

SerialPort BaudRate

Specify the baud rate (data transmission rate, bits per second) for the serial port. The default value is 38400.

Other connection parameters for the serial port are: Data bits: 8; Parity: None; Stop bits: 1; Flow control: None.

Requires user role: ADMIN

Value space: <9600/19200/38400/57600/115200>

Range: Select a baud rate from the baud rates listed (bps).

Example: SerialPort BaudRate: 38400

SerialPort LoginRequired

Determine if login shall be required when connecting to the serial port.

Requires user role: ADMIN

Value space: <Off/On>

Off: The user can access the codec via the serial port without any login.

On: Login is required when connecting to the codec via the serial port.

Example: SerialPort LoginRequired: On

SIP settings

SIP Profile [1..1] Ice

ICE (Interactive Connectivity Establishment, RFC 5245) is a NAT traversal solution that the endpoints can use to discover the optimized media path. Thus the shortest route for audio and video is always secured between the endpoints.

NOTE: ICE is not supported when registered to CUCM (Cisco Unified Communication Manager).

Requires user role: ADMIN

Value space: <Off/On>

Off: Set to Off to disable ICE.

On: Set to On, to enable ICE.

Example: SIP Profile 1 Ice: Off

SIP Profile [1..1] IceDefaultCandidate

This is the default IP address that the endpoint will receive media on until ICE has reached a conclusion about which media route to use (up to the first 5 seconds of a call).

Requires user role: ADMIN

Value space: <Off/On>

Host: The endpoint will receive media on its own IP address.

Rflx: The endpoint will receive media on its public IP address as seen by the TURN server.

Relay: The endpoint will receive media on the IP address and port allocated on the TURN server, and is used as a fallback until ICE has concluded.

Example: SIP Profile 1 IceDefaultCandidate: Host

SIP Profile [1..1] Turn Server

This is the address of the TURN (Traversal Using Relay NAT) server that the endpoints will use. It is used as a media relay fallback and it is also used to discover the endpoint's own public IP address.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: The preferred format is DNS SRV record (e.g. `_turn._udp.<domain>`), or it can be a valid IPv4 or IPv6 address.

Example: SIP Profile 1 Turn Server: "`_turn._udp.example.com`"

SIP Profile [1..1] Turn UserName

The user name needed for accessing the TURN server.

Requires user role: ADMIN

Value space: <S: 0, 128>

Format: String with a maximum of 128 characters.

Example: SIP Profile 1 Turn UserName: ""

SIP Profile [1..1] Turn Password

The password needed for accessing the TURN server.

Requires user role: ADMIN

Value space: <S: 0, 128>

Format: String with a maximum of 128 characters.

Example: SIP Profile 1 Turn Password: ""

SIP Profile [1..1] URI

The SIP URI (Uniform Resource Identifier) is the address that is used to identify the video system. The URI is registered and used by the SIP services to route inbound calls to the system. The SIP URI syntax is defined in RFC 3261.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with maximum 255 characters and compliant with the SIP URI syntax.

Example: SIP Profile 1 URI: "`sip:firstname.lastname@company.com`"

SIP Profile [1..1] DisplayName

When configured the incoming call will report the DisplayName instead of the SIP URI.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: String with a maximum of 255 characters.

Example: SIP Profile 1 DisplayName: ""

SIP Profile [1..1] Authentication [1..1] LoginName

This is the user name part of the credentials used to authenticate towards the SIP proxy.

Requires user role: ADMIN

Value space: <S: 0, 128>

Format: String with a maximum of 128 characters.

Example: SIP Profile 1 Authentication 1 LoginName: ""

SIP Profile [1..1] Authentication [1..1] Password

This is the password part of the credentials used to authenticate towards the SIP proxy.

Requires user role: ADMIN

Value space: <S: 0, 128>

Format: String with a maximum of 128 characters.

Example: SIP Profile 1 Authentication 1 Password: ""

SIP Profile [1..1] DefaultTransport

Select the transport protocol to be used over the LAN.

Requires user role: ADMIN

Value space: <TCP/UDP/Tls/Auto>

TCP: The system will always use TCP as the default transport method.

UDP: The system will always use UDP as the default transport method.

Tls: The system will always use TLS as the default transport method. For TLS connections a SIP CA-list can be uploaded to the video system. If no such CA-list is available on the system then anonymous Diffie Hellman will be used.

Auto: The system will try to connect using transport protocols in the following order: TLS, TCP, UDP.

Example: SIP Profile 1 DefaultTransport: Auto

SIP Profile [1..1] TlsVerify

For TLS connections a SIP CA-list can be uploaded to the video system. This can be done from the web interface.

Requires user role: ADMIN

Value space: <Off/On>

Off: Set to Off to allow TLS connections without verifying them. The TLS connections are allowed to be set up without verifying the x.509 certificate received from the server against the local CA-list. This should typically be selected if no SIP CA-list has been uploaded.

On: Set to On to verify TLS connections. Only TLS connections to servers, whose x.509 certificate is validated against the CA-list, will be allowed.

Example: SIP Profile 1 TlsVerify: Off

SIP Profile [1..1] Outbound

Turn on or off the client initiated connections mechanism for firewall traversal, connection reuse and redundancy. The current version supports RFC 5626.

Requires user role: ADMIN

Value space: <Off/On>

Off: Connect to the single proxy configured first in Proxy Address list.

On: Set up multiple outbound connections to servers in the Proxy Address list.

Example: SIP Profile 1 Outbound: Off

SIP Profile [1..1] Proxy [1.4] Address

The Proxy Address is the manually configured address for the outbound proxy. It is possible to use a fully qualified domain name, or an IP address. The default port is 5060 for TCP and UDP but another one can be provided. If SIP Profile Outbound is enabled, multiple proxies can be addressed.

Requires user role: ADMIN

Value space: <S: 0, 255>

Format: A valid IPv4 address, IPv6 address or DNS name.

Example: SIP Profile 1 Proxy 1 Address: ""

SIP Profile [1..1] Proxy [1..4] Discovery

Select if the SIP Proxy address is to be obtained manually or by using Dynamic Host Configuration Protocol (DHCP).

Requires user role: ADMIN

Value space: <Auto/Manual>

Auto: When Auto is selected, the SIP Proxy address is obtained using Dynamic Host Configuration Protocol (DHCP).

Manual: When Manual is selected, the manually configured SIP Proxy address will be used.

Example: SIP Profile 1 Proxy 1 Discovery: Manual

SIP Profile [1..1] Type

Enables SIP extensions and special behaviour for a vendor or provider.

Requires user role: ADMIN

Value space: <Standard/Alcatel/Avaya/Cisco/Microsoft/Nortel>

Standard: To be used when registering to standard SIP Proxy (tested with Cisco TelePresence VCS and Broadsoft)

Alcatel: To be used when registering to Alcatel-Lucent OmniPCX Enterprise. NOTE: This mode is not fully supported.

Avaya: To be used when registering to Avaya Communication Manager. NOTE: This mode is not fully supported.

Cisco: To be used when registering to Cisco Unified Communication Manager.

Microsoft: To be used when registering to Microsoft LCS or OCS. NOTE: This mode is not fully supported.

Nortel: To be used when registering to Nortel MCS 5100 or MCS 5200 PBX. NOTE: This mode is not fully supported.

Example: SIP Profile 1 Type: Standard

SIP Profile [1..1] Mailbox

When registered to a Cisco Unified Communications Manager (CUCM) you may be offered the option of having a private voice mailbox. Enter the number (address) of the mailbox in this setting, or leave the string empty if you do not have a voice mailbox.

Requires user role: ADMIN

Value space: <S: 0, 255>>

Format: String with a maximum of 255 characters.

Example: SIP Profile 1 Mailbox: "12345678"

SIP Profile [1..1] Line

When registered to a Cisco Unified Communications Manager (CUCM) the endpoint may be part of a shared line. This means that several devices share the same directory number. The different devices sharing the same number receive status from the other appearances on the line as defined in RFC 4235.

Note that shared lines are set up by CUCM, not by the endpoint. Therefore do not change this setting manually; CUCM pushes this information to the endpoint when required.

Requires user role: ADMIN

Value space: <Private/Shared>

Shared: The system is part of a shared line and is therefore sharing its directory number with other devices.

Private: This system is not part of a shared line (default).

Example: SIP Profile 1 Line: Private

SIP ListenPort

Turn on or off the listening for incoming connections on the SIP TCP/UDP ports. If turned off, the endpoint will only be reachable through the SIP registrar (CUCM or VCS). It is recommended to leave this setting at its default value.

Requires user role: ADMIN

Value space: <On/Off>

On: Listening for incoming connections on the SIP TCP/UDP ports is turned on.

Off: Listening for incoming connections on the SIP TCP/UDP ports is turned off.

Example: SIP ListenPort: On

Standby settings

Standby Control

Determine whether the system should go into standby mode or not.

Requires user role: ADMIN

Value space: <Off/On>

Off: The system will not enter standby mode.

On: Enter standby mode when the Standby Delay has timed out. NOTE: Requires the Standby Delay to be set to an appropriate value.

Example: Standby Control: On

Standby Delay

Define how long (in minutes) the system shall be in idle mode before it goes into standby mode.

NOTE: Requires the Standby Control to be enabled.

Requires user role: ADMIN

Value space: <1..480>

Range: Select a value from 1 to 480 minutes.

Example: Standby Delay: 10

SystemUnit settings

SystemUnit Name

Enter a System Name to define a name of the system unit. If the H.323 Alias ID is configured on the system then this ID will be used instead of the system name. The system name will be displayed:

- 1) When the codec is acting as an SNMP Agent.
- 2) Towards a DHCP server.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: SystemUnit Name: "Meeting Room"

SystemUnit MenuLanguage

Select the language to be used on the Touch controller.

Requires user role: USER

Value space: <English/ChineseSimplified/ChineseTraditional/Danish/Dutch/Finnish/French/German/Hungarian/Italian/Japanese/Korean/Norwegian/Polish/PortugueseBrazilian/Russian/Spanish/Swedish/Turkish>

Example: SystemUnit MenuLanguage: English

SystemUnit ContactInfo Type

Choose which type of contact information to show in the status field in the upper left corner of the Touch controller.

Requires user role: ADMIN

Value space: <Auto/None/IPv4/IPv6/H323Id/E164Alias/H320Number/SipUri/SystemName/DisplayName>

Auto: Show the address which another system can dial to reach this system. The address depends on the default call protocol and system registration.

None: Do not show any contact information in the status field.

IPv4: Show the IPv4 address as contact information.

IPv6: Show the IPv6 address as contact information.

H323Id: Show the H.323 ID as contact information (see the H323 Profile [1..1] H323Alias ID setting).

E164Alias: Show the H.323 E164 Alias as contact information (see the H323 Profile [1..1] H323Alias E164 setting).

H320Number: Show the H.320 number as contact information (only applicable if connected to a Cisco TelePresence ISDN Link gateway).

SipUri: Show the SIP URI as contact information (see the SIP Profile [1..1] URI setting).

SystemName: Show the system name as contact information (see the SystemUnit Name setting).

DisplayName: Show the display name as contact information (see the SIP Profile [1..1] DisplayName setting).

Example: SystemUnit ContactInfo Type: Auto

SystemUnit CallLogging Mode

Set the call logging mode for calls that are received or placed by the system. The call logs may then be viewed via the web interface.

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable logging.

On: Enable logging.

Example: SystemUnit CallLogging Mode: On



SystemUnit IrSensor

Not fully supported in this software version. Do not change this setting; it is included only for testing.

Time settings

Time Zone

Set the time zone where the system is located, using Windows time zone description format.

Requires user role: USER

Value space: <GMT-12:00 (International Date Line West)/GMT-11:00 (Midway Island, Samoa)/GMT-10:00 (Hawaii)/GMT-09:00 (Alaska)/GMT-08:00 (Pacific Time (US & Canada); Tijuana)/GMT-07:00 (Arizona)/GMT-07:00 (Mountain Time (US & Canada))/GMT-07:00 (Chihuahua, La Paz, Mazatlan)/GMT-06:00 (Central America)/GMT-06:00 (Saskatchewan)/GMT-06:00 (Guadalajara, Mexico City, Monterrey)/GMT-06:00 (Central Time (US & Canada))/GMT-05:00 (Indiana (East))/GMT-05:00 (Bogota, Lima, Quito)/GMT-05:00 (Eastern Time (US & Canada))/GMT-04:30 (Caracas)/GMT-04:00 (La Paz)/GMT-04:00 (Santiago)/GMT-04:00 (Atlantic Time (Canada))/GMT-03:30 (Newfoundland)/GMT-03:00 (Buenos Aires, Georgetown)/GMT-03:00 (Greenland)/GMT-03:00 (Brasilia)/GMT-02:00 (Mid-Atlantic)/GMT-01:00 (Cape Verde Is.)/GMT-01:00 (Azores)/GMT (Casablanca, Monrovia)/GMT (Coordinated Universal Time)/GMT (Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London)/GMT+01:00 (West Central Africa)/GMT+01:00 (Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna)/GMT+01:00 (Brussels, Copenhagen, Madrid, Paris)/GMT+01:00 (Sarajevo, Skopje, Warsaw, Zagreb)/GMT+01:00 (Belgrade, Bratislava, Budapest, Ljubljana, Prague)/GMT+02:00 (Harare, Pretoria)/GMT+02:00 (Jerusalem)/GMT+02:00 (Athens, Istanbul, Minsk)/GMT+02:00 (Helsinki, Kyiv, Riga, Sofia, Tallinn, Vilnius)/GMT+02:00 (Cairo)/GMT+02:00 (Bucharest)/GMT+03:00 (Nairobi)/GMT+03:00 (Kuwait, Riyadh)/GMT+03:00 (Moscow, St. Petersburg, Volgograd)/GMT+03:00 (Baghdad)/GMT+03:30 (Tehran)/GMT+04:00 (Abu Dhabi, Muscat)/GMT+04:00 (Baku, Tbilisi, Yerevan)/GMT+04:30 (Kabul)/GMT+05:00 (Islamabad, Karachi, Tashkent)/GMT+05:00 (Ekaterinburg)/GMT+05:30 (Chennai, Kolkata, Mumbai, New Delhi)/GMT+05:45 (Kathmandu)/GMT+06:00 (Sri Jayawardenepura)/GMT+06:00 (Astana, Dhaka)/GMT+06:00 (Almaty, Novosibirsk)/GMT+06:30 (Rangoon)/GMT+07:00 (Bangkok, Hanoi, Jakarta)/GMT+07:00 (Krasnoyarsk)/GMT+08:00 (Perth)/GMT+08:00 (Taipei)/GMT+08:00 (Kuala Lumpur, Singapore)/GMT+08:00 (Beijing, Chongqing, Hong Kong, Urumqi)/GMT+08:00 (Irkutsk, Ulaan Bataar)/GMT+09:00 (Osaka, Sapporo, Tokyo)/GMT+09:00 (Seoul)/GMT+09:00 (Yakutsk)/GMT+09:30 (Darwin)/GMT+09:30 (Adelaide)/GMT+10:00 (Guam, Port Moresby)/GMT+10:00 (Brisbane)/GMT+10:00 (Vladivostok)/GMT+10:00 (Hobart)/GMT+10:00 (Canberra, Melbourne, Sydney)/GMT+11:00 (Magadan, Solomon Is., New Caledonia)/GMT+12:00 (Fiji, Kamchatka, Marshall Is.)/GMT+12:00 (Auckland, Wellington)/GMT+13:00 (Nuku alofa)>

Range: Select a time zone from the list time zones. If using a command line interface; watch up for typos.

Example: Time Zone: "GMT (Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London)"

Time TimeFormat

Set the time format.

Requires user role: USER

Value space: <24H/12H>

24H: Set the time format to 24 hours.

12H: Set the time format to 12 hours (AM/PM).

Example: Time TimeFormat: 24H

Time DateFormat

Set the date format.

Requires user role: USER

Value space: <DD_MM_YY/MM_DD_YY/YY_MM_DD>

DD_MM_YY: The date January 30th 2010 will be displayed: 30.01.10

MM_DD_YY: The date January 30th 2010 will be displayed: 01.30.10

YY_MM_DD: The date January 30th 2010 will be displayed: 10.01.30

Example: Time DateFormat: DD_MM_YY

UserInterface settings

UserInterface TouchPanel DefaultPanel

Select whether to display the list of contacts, the list of scheduled meetings, or a dial pad on the Touch controller as default.

Requires user role: USER

Value space: <ContactList/MeetingList/Dialpad>

ContactList: The contact list (favorites, directory and history) will appear as default on the Touch controller.

MeetingList: The list of scheduled meetings will appear as default on the Touch controller.

Dialpad: A dial pad will appear as default on the Touch controller.

Example: UserInterface TouchPanel DefaultPanel: ContactList

Video settings

Video Input Source [1..3]/[1..2] Name

NOTE: EX90 has Video Input Source [1..3] and EX60 has Video Input Source [1..2].

Enter a name for the video input source.

Requires user role: ADMIN

Value space: <S: 0, 50>

Format: String with a maximum of 50 characters.

Example: Video Input Source 1 Name: ""

Video Input Source [1] Connector

Select which video input connector to be active on video input source 1.

Requires user role: ADMIN

Value space: <HDMI>/<DVI>

HDMI (EX90): Select HDMI when you want to use the HDMI as the video input source 1.

DVI (EX60): Select DVI when you want to use the DVI as the video input source 1.

Example: Video Input Source 1 Connector: HDMI

Video Input Source [2] Connector

Select which video input connector to be active on video input source 2.

Requires user role: ADMIN

Value space: <DVI>/<CAMERA>

DVI (EX90): Select DVI when you want to use the DVI-I as input source 2.

CAMERA (EX60): Select CAMERA when you want to use the camera as input source 2.

Example: Video Input Source 2 Connector: DVI

Video Input Source [3] Connector

NOTE: Applies only to EX90.

Select which input connector to be active on video input source 3.

Requires user role: ADMIN

Value space: <CAMERA>

CAMERA: Select CAMERA when you want to use the camera as input source 3.

Example: Video Input Source 3 Connector: CAMERA

Video Input Source [1..3]/[1..2] Type

NOTE: EX90 has Video Input Source [1..3] and EX60 has Video Input Source [1..2].

Set which type of input source is connected to the video input.

Requires user role: ADMIN

Value space: <other/camera/PC/DVD/document_camera>

Other: Select Other when some other type of equipment is connected to the selected video input.

Camera: Select Camera when you have a camera connected to the selected video input.

PC: Select PC when you have a PC connected to the selected video input.

DVD: Select DVD when you have a DVD player connected to the selected video input.

Document_Camera: Select Document_Camera when you have a document camera connected to the selected video input.

Example: Video Input Source 1 Type: PC

Video Input Source [1..3]/[1..2] PresentationSelection

In general, any input source can be used as a presentation source; normally, the main camera (self view) will not be used as a presentation source.

This setting is used to define whether to display the presentation source on the local video system's display automatically or not. To share the presentation with the far end always requires additional action (tap Start Presenting on the Touch controller).

EX60: The value for Source 1 is fixed to Automatic. The default value for Source 2 (camera) is Hidden.

EX90: The values for Source 1 and Source 2 are fixed to Automatic. The default value for Source 3 (camera) is Hidden.

Requires user role: ADMIN

Value space: <Manual/Automatic/Hidden>

Manual: The content on the input source will not be presented on the local video system's display before you select it. Use the Touch controller to choose which input source to present.

Automatic: Any content on the input source will be presented on the local video system's display automatically. If there is active content on more than one input source (which is set to Automatic) the most recent one will be used.

Hidden: The input source is not expected to be used as a presentation source.

Example: Video Input Source 1 PresentationSelection: Automatic

Video Input Source [1..3]/[1..2] CameraControl Mode

Indicates whether or not camera control is enabled for the selected video input source when the video input is active. In this product this value is fixed for all input sources.

Value space: <Off/On>

Off: Disable camera control.

On: Enable camera control.

Video Input Source [1..3]/[1..2] CameraControl Camerald

Indicates the ID of the camera. This value is fixed in this product.

Value space: <1>

Range: Indicates the ID of the camera.

Video Input Source [1..3]/[1..2] OptimalDefinition Profile

NOTE: EX90 has Video Input Source [1..3] and EX60 has Video Input Source [1..2].

The Video Input Source Quality setting must be set to Motion for the optimal definition settings to take any effect.

The optimal definition profile should reflect the lighting conditions in your room and the quality of the video input (camera); the better the lighting conditions and video input, the higher the profile. Then, in good lighting conditions, the video encoder will provide better quality (higher resolution or frame rate) for a given call rate.

Generally, we recommend using the Normal or Medium profiles. However, when the lighting conditions are good, the High profile can be set in order to increase the resolution for a given call rate.

Some typical resolutions used for different optimal definition profiles, call rates and transmit frame rates are shown in the table below. It is assumed that dual video is not used. The resolution must be supported by both the calling and called systems.

Use the Video Input Source OptimalDefinition Threshold60fps setting to decide when to use the 60 fps frame rate.

In order to allow a transmit frame rate of 60 fps, you must enable 60 Hz capture frequency on the camera with the Cameras Camera 1 FrameRate setting.

Typical resolutions used for different optimal definition profiles, call rates and frame rates								
Frame rate	Optimal Definition Profile	Call rate						
		256 kbps	768 kbps	1152 kbps	1472 kbps	2560 kbps	4 Mbps	6 Mbps
30 fps	Normal	512×288	1024×576	1280×720	1280×720	1920×1080	1920×1080	1920×1080
	Medium	640×360	1280×720	1280×720	1280×720	1920×1080	1920×1080	1920×1080
	High	768×448	1280×720	1280×720	1920×1080	1920×1080	1920×1080	1920×1080
60 fps	Normal	256×144	512×288	768×448	1024×576	1280×720	1280×720	1280×720
	Medium	256×144	768×448	1024×576	1024×576	1280×720	1280×720	1280×720
	High	512×288	1024×576	1280×720	1280×720	1280×720	1280×720	1280×720

Requires user role: ADMIN

Value space: <Normal/Medium/High>

Normal: Use this profile for a normally to poorly lit environment. Resolutions will be set rather conservative.

Medium: Requires good and stable lighting conditions and a good quality video input. For some call rates this leads to higher resolution.

High: Requires nearly optimal video conferencing lighting conditions and a good quality video input in order to achieve a good overall experience. Rather high resolutions will be used.

Example: Video Input Source 2 OptimalDefinition Profile: Normal

Video Input Source [1..3]/[1..2] OptimalDefinition Threshold60fps

NOTE: EX90 has Video Input Source [1..3] and EX60 has Video Input Source [1..2].

For each video input, this setting tells the system the lowest resolution where it should transmit 60 fps. So for all resolutions lower than this, the maximum transmitted frame rate would be 30 fps, while above this resolution 60 fps will also be possible, if the available bandwidth is adequate.

In order to allow a transmit frame rate of 60 fps, you must enable 60 Hz capture frequency on the camera with the Cameras Camera 1 FrameRate setting.

Requires user role: ADMIN

Value space: <512_288/768_448/1024_576/1280_720/1920_1080/Never>

512_288: Set the threshold to 512x288.

768_448: Set the threshold to 768x448.

1024_576: Set the threshold to 1024x576.

1280_720: Set the threshold to 1280x720.

1920_1080: Set the threshold to 1920x1080.

Never: Do not set a threshold for transmitting 60fps.

Example: Video Input Source 2 OptimalDefinition Threshold60fps: 1280_720

Video Input Source [1..3]/[1..2] Quality

NOTE: EX90 has Video Input Source [1..3] and EX60 has Video Input Source [1..2].

When encoding and transmitting video there will be a trade-off between high resolution and high framerate. For some video sources it is more important to transmit high framerate than high resolution and vice versa. The Quality setting specifies whether to give priority to high frame rate or to high resolution for a given source.

Requires user role: ADMIN

Value space: <Motion/Sharpness>

Motion: Gives the highest possible framerate. Used when there is a need for higher frame rates, typically when a large number of participants are present or when there is a lot of motion in the picture.

Sharpness: Gives the highest possible resolution. Used when you want the highest quality of detailed images and graphics.

Example: Video Input Source 2 Quality: Motion

Video MainVideoSource

Define which video input source shall be used as the main video source. The video input source is configured with the "Video Input Source [1..n] Connector" setting.

Requires user role: USER

Value space: <1/2/3>/<1/2>

Range: Select the source to be used as the main video source.

Example: Video MainVideoSource: 3

Video DefaultPresentationSource

Not applicable in this version.

Video Input HDMI [1..1] RGBQuantizationRange

NOTE: Applies only to EX90.

All devices with HDMI inputs should follow the rules for RGB video quantization range defined in CEA-861. Unfortunately some devices do not follow the standard and this configuration may be used to override the settings to get a perfect image with any source.

Requires user role: ADMIN

Value space: <Auto/Full/Limited>

Auto: RGB quantization range is automatically selected based on the RGB Quantization Range bits (Q0, Q1) in the AVI infoframe. If no AVI infoframe is available, RGB quantization range is selected based on video format according to CEA-861-E.

Full: Full quantization range. The R, G, B quantization range includes all code values (0 - 255). This is defined in CEA-861-E.

Limited: Limited Quantization Range. R, G, B quantization range that excludes some code values at the extremes (16 - 235). This is defined in CEA-861-E.

Example: Video Input 1 HDMI 1 RGBQuantizationRange: Auto

Video Input DVI [2]/[1] RGBQuantizationRange

NOTE: EX90 has the DVI 2 input connector and EX60 has the DVI 1 input connector.

All devices with DVI inputs should follow the rules for RGB video quantization range defined in CEA-861. Unfortunately some devices do not follow the standard and this configuration may be used to override the settings to get a perfect image with any source. The default value is set to Full because most DVI sources expects full quantization range.

Requires user role: ADMIN

Value space: <Auto/Full/Limited>

Auto: RGB quantization range is automatically selected based on video format according to CEA-861-E. CE video formats will use limited quantization range levels. IT video formats will use full quantization range levels.

Full: Full quantization range. The R, G, B quantization range includes all code values (0 - 255). This is defined in CEA-861-E.

Limited: Limited Quantization Range. R, G, B quantization range that excludes some code values at the extremes (16 - 235). This is defined in CEA-861-E.

Example: Video Input 1 DVI 2 RGBQuantizationRange: Full

Video Input DVI [2]/[1] Type

NOTE: EX90 has the DVI 2 input connector and EX60 has the DVI 1 input connector.

The official DVI standard supports both digital and analog signals. In most cases the default AutoDetect setting can detect whether the signal is analog RGB or digital. However, in some rare cases when DVI-I cables are used (these cables can carry both the analog and digital signals) the auto detection fails. This setting makes it possible to override the AutoDetect and select the correct DVI video input.

Requires user role: ADMIN

Value space: <AutoDetect/Digital/AnalogRGB/AnalogYPbPr>

AutoDetect: Set to AutoDetect to automatically detect if the signal is analog RGB or digital.

Digital: Set to Digital to force the DVI video input to Digital when using DVI-I cables with both analog and digital pins and AutoDetect fails.

AnalogRGB: Set to AnalogRGB to force the DVI video input to AnalogRGB when using DVI-I cables with both analog and digital pins and AutoDetect fails.

AnalogYPbPr: Set to AnalogYPbPr to force the DVI video input to AnalogYPbPr, as the component (YPbPr) signal cannot be auto detected.

Example: Video Input DVI 2 Type: AutoDetect

Video ControlPanel Brightness

Set the brightness level for the Touch controller.

Requires user role: ADMIN

Value space: <0..100>

Range: Select a value from 0 to 100.

Example: Video ControlPanel Brightness: 100

Video Layout Scaling

Define how the system shall adjust the aspect ratio for images or frames when there is a difference between the image and the frame it is to be placed in.

Requires user role: ADMIN

Value space: <Off/On>

Off: No adjustment of the aspect ratio.

On: Let the system automatically adjust aspect ratio.

Example: Video Layout Scaling: On

Video Layout ScaleToFrame

Define what to do if the aspect ratio of a video input source doesn't match the aspect ratio of the corresponding image frame in a composition. For example if you have a 4:3 input source (like XGA) to be displayed on a 16:9 output (like HD720).

Requires user role: ADMIN

Value space: <Manual/MaintainAspectRatio/StretchToFit>

Manual: If the difference in aspect ratio between the video input source and the target image frame is less than the Video Layout ScaleToFrameThreshold setting (in percent), the image is stretched to fit. If not, the system will maintain the original aspect ratio.

MaintainAspectRatio: Maintain the aspect ratio of the input source, and fill in black in the rest of the frame (letter boxing or pillar boxing).

StretchToFit: Stretch (horizontally or vertically) the input source to fit into the image frame.

NOTE: The general limitation is that you cannot upscale in one direction and at the same time downscale in the other direction. In such situations the codec will apply letterboxing.

Example: Video Layout ScaleToFrame: MaintainAspectRatio

Video Layout ScaleToFrameThreshold

Only applicable if the Video Layout ScaleToFrame setting is set to manual. If the difference in aspect ratio between the video input source and the target image frame is less than the ScaleToFrameThreshold setting (in percent), the image is stretched to fit. If not, the system will maintain the original aspect ratio.

Requires user role: ADMIN

Value space: <0..100>

Range: Select a value from 0 to 100 percent.

Example: Video Layout ScaleToFrameThreshold: 5

Video Selfview

Determine if the main video source (self view) shall be displayed on screen.
This setting is obsoleted by the Video SelfviewDefault Mode setting as from TC6.0.

Requires user role: USER

Value space: <Off/On>

Off: Do not display self view on screen.

On: Display self view on screen.

Example: Video Selfview: On

Video SelfviewController AutoResizing

The size of the self view frame can be configured to automatically change according to the following rules. The size is reduced from full screen to PiP (picture-in-picture) when there is a change in a frame that overlaps with the self view frame. The size is increased from PiP to full screen when nothing else is displayed on the monitor. The last rule does not apply to monitors with MonitorRole set to First.

Requires user role: ADMIN

Value space: <Off/On>

Off: Self view will not be automatically resized.

On: Self view is automatically resized as described above.

Example: Video SelfviewController AutoResizing: On

Video SelfviewDefault Mode

Determine if the main video source (self view) shall be displayed on screen after a call. The position and size of the self view window is determined by the Video SelfviewDefault PIPPosition and the Video Selfview FullscreenMode settings respectively.

This setting obsoletes the Video Selfview setting as from TC6.0.

Requires user role: ADMIN

Value space: <Off/Current/On>

Off: Self view is switched off when leaving a call.

Current: Self view is left as is, i.e. if it was on during the call, it remains on after the call; if it was off during the call, it remains off after the call.

On: Self view is switched on when leaving a call.

Example: Video SelfviewDefault Mode: Current

Video SelfviewDefault FullscreenMode

Determine if the main video source (self view) shall be shown in full screen or as a small picture-in-picture (PiP) after a call. The setting only takes effect when self view is switched on (see the Video SelfviewDefault Mode setting).

Requires user role: ADMIN

Value space: <Off/Current/On>

Off: Self view will be shown as a PiP.

Current: The size of the self view picture will be kept unchanged when leaving a call, i.e. if it was a PiP during the call, it remains a PiP after the call; if it was fullscreen during the call, it remains fullscreen after the call.

On: The self view picture will be shown in fullscreen.

Example: Video SelfviewDefault FullscreenMode: Current

Video SelfviewDefault PIPPosition

Determine the position on screen of the small self view picture-in-picture (PiP) after a call. The setting only takes effect when self view is switched on (see the Video SelfviewDefault Mode setting) and fullscreen view is switched off (see the Video SelfviewDefault FullscreenMode setting).

Requires user role: ADMIN

Value space: <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight >

Current: The position of the self view PiP will be kept unchanged when leaving a call.

UpperLeft: The self view PiP will appear in the upper left corner of the screen.

UpperCenter: The self view PiP will appear in the upper center position.

UpperRight: The self view PiP will appear in the upper right corner of the screen.

CenterLeft: The self view PiP will appear in the center left position.

CenterRight: The self view PiP will appear in the center right position.

LowerLeft: The self view PiP will appear in the lower left corner of the screen.

LowerRight: The self view PiP will appear in the lower right corner of the screen.

Example: Video SelfviewDefault PIPPosition: Current

Video SelfviewDefault OnMonitorRole

Determine which monitor/output to display the main video source (self view) on after a call. The value reflects the monitor roles set for the different outputs in the Video Output HDMI/Internal MonitorRole settings.

The setting applies both when self view is displayed in full screen, and when it is displayed as picture-in-picture (PiP), but only if the Video Monitors setting is set to Dual.

Requires user role: ADMIN

Value space: <First/Second/Current>

First: The self view picture will be shown on outputs with the Video Output LCD/Internal MonitorRole set to First.

Second: The self view picture will be shown on outputs with the Video Output LCD/Internal MonitorRole set to Second.

Current: When leaving the call, the self view picture will be kept on the same output as during the call.

Example: Video SelfviewDefault OnMonitorRole: Current

Video CamCtrlPip CallSetup Mode

This setting is used to switch on self view for a short while when setting up a call. The Video CamCtrlPip CallSetup Duration setting determines for how long it remains on. This applies when self view in general is switched off.

Requires user role: ADMIN

Value space: <Off/On>

Off: Self view is not shown automatically during call setup.

On: Self view is shown automatically during call setup.

Example: Video CamCtrlPip CallSetup Mode: Off

Video CamCtrlPip CallSetup Duration

This setting only has an effect when the Video CamCtrlPip CallSetup Mode setting is switched On. In this case, the number of seconds set here determines for how long self view is shown before it is automatically switched off.

Requires user role: ADMIN

Value space: <1..60>

Range: Choose for how long self view remains on. The valid range is between 1 and 60 seconds.

Example: Video CamCtrlPip CallSetup Duration: 10

Video PIP ActiveSpeaker DefaultValue Position

Determine the position on screen of the active speaker picture-in-picture (PiP). The setting only takes effect when using a video layout where the active speaker is a PiP, i.e. the Overlay layout, or possibly a Custom layout (see the Video Layout LocalLayoutFamily setting). The setting takes effect from the next call onwards; if changed during a call, it will have no effect on the current call.

Requires user role: ADMIN

Value space: <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

Current: The position of the active speaker PiP will be kept unchanged when leaving a call.

UpperLeft: The active speaker PiP will appear in the upper left corner of the screen.

UpperCenter: The active speaker PiP will appear in the upper center position.

UpperRight: The active speaker PiP will appear in the upper right corner of the screen.

CenterLeft: The active speaker PiP will appear in the center left position.

CentreRight: The active speaker PiP will appear in the center right position.

LowerLeft: The active speaker PiP will appear in the lower left corner of the screen.

LowerRight: The active speaker PiP will appear in the lower right corner of the screen.

Example: Video PIP ActiveSpeaker DefaultValue Position: Current

Video PIP Presentation DefaultValue Position

Determine the position on screen of the presentation picture-in-picture (PiP). The setting only takes effect when the presentation is explicitly minimized to a PiP, for example using the Touch controller. The setting takes effect from the next call onwards; if changed during a call, it will have no effect on the current call.

Requires user role: ADMIN

Value space: <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

Current: The position of the presentation PiP will be kept unchanged when leaving a call.

UpperLeft: The presentation PiP will appear in the upper left corner of the screen.

UpperCenter: The presentation PiP will appear in the upper center position.

UpperRight: The presentation PiP will appear in the upper right corner of the screen.

CenterLeft: The presentation PiP will appear in the center left position.

CentreRight: The presentation PiP will appear in the center right position.

LowerLeft: The presentation PiP will appear in the lower left corner of the screen.

LowerRight: The presentation PiP will appear in the lower right corner of the screen.

Example: Video PIP Presentation DefaultValue Position: Current

Video Layout LocalLayoutFamily

Select which video layout family to use locally.

Requires user role: ADMIN

Value space: <Auto/FullScreen/Equal/PresentationSmallSpeaker/PresentationLargeSpeaker/Prominent/Overlay/Single>

Auto: The default layout family, as given in the layout database provided by the system, will be used as the local layout.

FullScreen: The FullScreen layout family will be used as the local layout. It means that the active speaker or presentation will be shown in full screen. Using this value is not recommended as from TC6.0.

Equal: The Equal layout family will be used as the local layout. All videos have equal size, as long as there is space enough on the screen.

PresentationSmallSpeaker: The PresentationSmallSpeaker layout family will be used as the local layout. Using this value is not recommended as from TC6.0.

PresentationLargeSpeaker: The PresentationLargeSpeaker layout family will be used as the local layout. Using this value is not recommended as from TC6.0.

Prominent: The Prominent layout family will be used as the local layout. The active speaker, or the presentation if present, will be a large picture, while the other participants will be small pictures. Transitions between active speakers are voice switched.

Overlay: The Overlay layout family will be used as the local layout. The active speaker, or the presentation if present, will be shown in full screen, while the other participants will be small pictures-in-picture (PiP). Transitions between active speakers are voice switched.

Single: The active speaker, or the presentation if present, will be shown in full screen. The other participants are not shown. Transitions between active speakers are voice switched.

Example: Video Layout LocalLayoutFamily: Auto

Video Layout RemoteLayoutFamily

Select which video layout family to be used for the remote participants.

Requires user role: ADMIN

Value space: <Auto/FullScreen/Equal/PresentationSmallSpeaker/PresentationLargeSpeaker/Prominent/Overlay/Single>

Auto: The default layout family, as given by the local layout database, will be used as the remote layout.

FullScreen: The FullScreen layout family will be used as the remote layout. It means that the active speaker or presentation will be shown in full screen. It is recommended not to use this value as from TC6.0.

Equal: The Equal layout family will be used as the remote layout. All videos have equal size, as long as there is space enough on the screen.

PresentationSmallSpeaker: The PresentationSmallSpeaker layout family will be used as the remote layout. Using this value is not recommended as from TC6.0.

PresentationLargeSpeaker: The PresentationLargeSpeaker layout family will be used as the remote layout. Using this value is not recommended as from TC6.0.

Prominent: The Prominent layout family will be used as the remote layout. The active speaker, or the presentation if present, will be a large picture, while the other participants will be small pictures. Transitions between active speakers are voice switched.

Overlay: The Overlay layout family will be used as the remote layout. The active speaker, or the presentation if present, will be shown in full screen, while the other participants will be small pictures-in-picture (PiP). Transitions between active speakers are voice switched.

Single: The active speaker, or the presentation if present, will be shown in full screen. The other participants are not shown. Transitions between active speakers are voice switched.

Example: Video Layout RemoteLayoutFamily: Auto

Video Monitors

Set the monitor layout mode.

Requires user role: ADMIN

Value space: <Single/DualPresentationOnly>

Single: The same layout is shown on all monitors.

DualPresentationOnly: All participants in the call will be shown on the first monitor, while the presentation (if any) will be shown on the second monitor. This value is not supported on EX60.

Example: Video Monitors: Single

Video OSD Mode

Not applicable in this version.

Video OSD WallpaperSelection

Not applicable in this version.

Video OSD LanguageSelection

Not applicable in this version.

Video OSD MenuStartupMode

Not applicable in this version.

Video OSD VirtualKeyboard

Not applicable in this version.

Video OSD EncryptionIndicator

Define for how long the encryption indicator (a padlock) will be shown on screen. The setting applies to both encrypted and non-encrypted calls, i.e. both to secure and non-secure conferences. The icon for encrypted calls is a locked padlock, and the icon for non-encrypted calls is a crossed out locked padlock.

Requires user role: ADMIN

Value space: <Auto/AlwaysOn/AlwaysOff>

Auto: If the Conference Encryption Mode setting is set to BestEffort and the call is encrypted, the encryption indicator is shown during the first seconds of a call. If the Conference Encryption Mode setting is set to BestEffort and the call is non-encrypted, the crossed out encryption indicator is shown during the entire call. If the Conference Encryption Mode setting is NOT set to BestEffort, the encryption indicator is not shown at all.

AlwaysOn: The encryption indicator is displayed on screen during the entire call. This applies to both encrypted and non-encrypted calls for all Conference Encryption Mode settings.

AlwaysOff: The encryption indicator is never displayed on screen. This applies to both encrypted and non-encrypted calls for all Conference Encryption Mode settings.

Example: Video OSD EncryptionIndicator: Auto

Video OSD MissedCallsNotification

Not applicable in this version.

Video OSD AutoSelectPresentationSource

Not applicable in this version.

Video OSD TodaysBookings

Not applicable in this version.

Video OSD MyContactsExpanded

Not applicable in this version.

Video OSD Output

Not applicable in this version.

Video OSD InputMethod InputLanguage

Not applicable in this version.

Video OSD InputMethod Cyrillic

Not applicable in this version.

Video OSD LoginRequired

Not applicable in this version.

Video AllowWebSnapshots

Allow or disallow snapshots being taken of the local input sources, remote sites and presentation channel. If allowed, the web interface Call Control page will show snapshots both when idle and in a call.

NOTE: This feature is disabled by default, and must be enabled from the Touch controller.

Requires user role: ADMIN

Value space: <Off/On>

Off: Capturing web snapshots is not allowed.

On: Web snapshots can be captured and displayed on the web interface.

Example: Video AllowWebSnapshots: Off

Video Output HDMI [1] RGBQuantizationRange

NOTE: Applies only to EX90.

All devices with HDMI outputs should follow the rules for RGB video quantization range defined in CEA-861. Unfortunately some devices do not follow the standard and this configuration may be used to override the settings to get a perfect image with any display. The default value is set to Full because most HDMI displays expects full quantization range.

Requires user role: ADMIN

Value space: <Auto/Full/Limited>

Auto: RGB quantization range is automatically selected based on the RGB Quantization Range bits (Q0, Q1) in the AVI infoframe. If no AVI infoframe is available, RGB quantization range is selected based on video format according to CEA-861-E.

Full: Full quantization range. The R, G, B quantization range includes all code values (0 - 255). This is defined in CEA-861-E.

Limited: Limited Quantization Range. R, G, B quantization range that excludes some code values at the extremes (16 - 235). This is defined in CEA-861-E.

Example: Video Output HDMI 1 RGBQuantizationRange: Full

Video Output HDMI [1] CEC Mode

NOTE: Applies only to EX90.

The HDMI outputs support Consumer Electronics Control (CEC). When set to on (default is off), and the monitor connected to the HDMI output is CEC compatible and CEC is configured, the system will use CEC to set the monitor in standby when the system enters standby. Likewise the system will wake up the monitor when the system wakes up from standby. Please note that the different manufacturers uses different marketing names for CEC, for example Anynet+ (Samsung); Aquos Link (Sharp); BRAVIA Sync (Sony); HDMI-CEC (Hitachi); Kuro Link (Pioneer); CE-Link and Regza Link (Toshiba); RIHD (Onkyo); HDAVI Control, EZ-Sync, VIERA Link (Panasonic); EasyLink (Philips); and NetCommand for HDMI (Mitsubishi).

Requires user role: ADMIN

Value space: <Off/On>

Off: Disable CEC control.

On: Enable CEC control.

Example: Video Output HDMI 1 CEC Mode: Off

Video Output HDMI [1] MonitorRole

NOTE: Applies only to EX90, and only when the Dual Display option is installed.

Define which video stream to show on the monitor connected to the HDMI output connector. Do not change this setting manually; keep the default setting.

Value space: <Second>

Second: Show the presentation, if present, on the monitor connected to the HDMI output.

Video Output HDMI [1] OverscanLevel

NOTE: Applies only to EX90.

Some TVs or other monitors may not display the whole image sent out on the systems video output, but cuts the outer parts of the image. In this case this setting can be used to let the system not use the outer parts of video resolution. The video will be scaled in this case.

Requires user role: ADMIN

Value space: <Medium/High/None>

Medium: The system will not use the outer 3% of the output resolution.

High: The system will not use the outer 6% of the output resolution

None: The system will use all of the output resolution.

Example: Video Output HDMI 1 OverscanLevel: None

Video Output HDMI [1] Resolution

NOTE: Applies only to EX90.

Select the preferred resolution for the monitor connected to the video output HDMI connector. This will force the resolution on the monitor.

Requires user role: ADMIN

Value space: <Auto/640_480_60/800_600_60/1024_768_60/1280_1024_60/1280_720_50/1280_720_60/1920_1080_50/1920_1080_60/1280_768_60/1360_768_60/1366_768_60/1600_1200_60/1680_1050_60/1920_1200_60>

Auto: The system will automatically try to set the optimal resolution based on negotiation with the connected monitor.

Range: 640x480@60p, 800x600@60p, 1024x768@60p, 1280x1024@60p, 1280x720@50p, 1280x720@60p, 1920x1080@50p, 1920x1080@60p, 1280x768@60p, 1360x768@60p, 1366x768@60p, 1600x1200@60p, 1680x1050@60p, 1920x1200@60p

Example: Video Output HDMI 1 Resolution: Auto

Video Output LCD [2]/[1] Resolution

NOTE: EX90 has the LCD 2 connector and EX60 has the LCD 1 connector.

Set the screen resolution.

Requires user role: ADMIN

Value space: EX90: <1920_1200_60> EX60: <1920_1080_60>

Range: The screen resolution is 1920 x 1200 60 Hz for EX90 and 1920 x 1080 60 Hz for EX60.

Example: Video Output LCD 1 Resolution: 1920 _ 1080 _ 60

Video Output LCD [2]/[1] MonitorRole

NOTE: EX90 has the LCD 2 connector and EX60 has the LCD 1 connector.

Set the LCD monitor role. Do not change this setting manually; keep the default setting.

Value space: <InternalSetup>

InternalSetup: The internal setup as defined by the Touch controller will be used.

Video Output LCD [2]/[1] Brightness

NOTE: EX90 has the LCD 2 connector and EX60 has the LCD 1 connector.
Set the brightness level for the monitor.

Requires user role: ADMIN

Value space: <0..100>

Range: Select a value from 0 to 100.

Example: Video Output LCD 1 Brightness: 50

Video Output LCD [2]/[1] Red

NOTE: EX90 has the LCD 2 connector and EX60 has the LCD 1 connector.
Set the Red color level for the monitor.

Requires user role: ADMIN

Value space: <0..100>

Range: Select a value from 0 to 100.

Example: Video Output LCD 1 Red: 50

Video Output LCD [2]/[1] Green

NOTE: EX90 has the LCD 2 connector and EX60 has the LCD 1 connector.
Set the Green color level for the monitor.

Requires user role: ADMIN

Value space: <0..100>

Range: Select a value from 0 to 100.

Example: Video Output LCD 1 Green: 50

Video Output LCD [2]/[1] Blue

NOTE: EX90 has the LCD 2 connector and EX60 has the LCD 1 connector.
Set the Blue color level for the monitor.

Requires user role: ADMIN

Value space: <0..100>

Range: Select a value from 0 to 100.

Example: Video Output LCD 1 Blue: 50

Video Output Internal [3]/[2] MonitorRole

NOTE: EX90 has Internal 3 and EX60 has Internal 2.

Determine the role of the internal monitor and choose where to show the video stream and presentation. Do not change this setting manually; keep the default setting.

Value space: <First>

First: Show the main video stream and presentation on the internal monitor. For EX90, the presentation may be shown on a second monitor connected to the HDMI output (see the Video Output HDMI 1 MonitorRole setting).

Video Wallpaper

Select a background image (wallpaper) for the video screen when idle. A corresponding background image will be applied to the Touch controller.

Requires user role: USER

Value space: <None/Custom/Wallpaper01/Wallpaper02/Wallpaper03/Wallpaper04/Wallpaper05/Wallpaper06/Wallpaper07/Wallpaper08/Wallpaper09/Wallpaper10/Wallpaper11/Wallpaper12>

None: There is no background image on the screen, i.e. the background is black.

Wallpaper01 to Wallpaper12: The chosen background image is shown on both the video screen and the Touch controller.

Custom: Use the custom wallpaper that is stored on the system as background image on the screen. As default, there is no custom wallpaper stored and the background will be black. You can upload a custom wallpaper to the system using the web interface. The maximum supported resolution is 1920x1200.

Example: Video Wallpaper: Wallpaper01

Experimental settings

The Experimental settings are for testing only and should not be used unless agreed with Cisco. These settings are not documented and WILL change in later releases.

CHAPTER 4

SETTING PASSWORDS



Setting the system password

You need to sign in to be able to use the web interface of your system.

The video system is delivered with a default user account with full credentials. The user name is *admin*, and initially, no password is set for the default user.



We strongly recommend that you set a password for the admin user, and to any other user with similar credentials, to restrict access to system configuration.

Make sure to keep a copy of the password in a safe place. You have to factory reset the unit if you have forgotten the password.

Other user accounts

You can create as many user accounts as you like for your video system.

You can read more about how to create and manage user accounts in the ► [User administration](#) section.

Changing your own system password

Perform the following steps to change the system password.

If a password is currently not set, use a blank [Current password](#); to remove a password, leave the [New password](#) fields blank.

1. Sign in to the web interface with your user name and current password.
2. Click your user name in the upper right corner and choose [Change password](#) in the drop down menu.
3. Enter the [Current password](#), the [New password](#), and repeat the new password in the appropriate input fields.

The password format is a string with 0–64 characters.

4. Click [Change password](#).

Changing another user's system password

If you have administrator access rights, you can change all users' passwords by performing the following steps:

1. Sign in to the web interface with your user name and password.
2. Go to the [Maintenance](#) tab and select [User Administration](#).
3. Choose the appropriate user from the list.
4. Enter a new password and PIN code.
5. Click [Save](#).

Setting the menu password

When starting up the video conference system for the first time anyone can access the Administrator Settings menu with the Touch controller because the menu password is not set.



We strongly recommend that you set a menu password, because the administrator settings may severely affect the behavior of the system.

You should use the web interface to set the menu password; the Touch controller cannot be used.

Setting the menu password from the web interface

1. Sign in to the web interface with your user name and current password.
2. Go to [Configuration > System Configuration](#).
3. Click [Set/Change Administrator Settings menu password](#) to open the menu password dialog.
4. Enter the password in the input field.
5. Click [Save](#) to set/change the password.



To find the system's IP address tap [Settings \(⌘\) > System Information](#) on the Touch controller.

APPENDICES

The appendices section provides you with additional information that you may find useful as a system administrator for the EX60/EX90.



Cisco VCS provisioning

When using Cisco VCS (Video Communication Server) provisioning, a template containing all the settings that can be provisioned must be uploaded to Cisco TMS (TelePresence Management System). This is called the *Cisco TMS provisioning configuration template*.

All the system settings for your video system are included in this template. All settings except *SystemUnit Name* and *SIP Profile [1..1] URI* can be automatically provisioned to the video system.

The settings are described in the ► [System settings](#) chapter in this guide. Examples showing either the default value or an example value are included.

Downloading the provisioning configuration template

You can download the templates here:

► http://www.cisco.com/en/US/products/ps11327/prod_release_notes_list.html

For each software release there is one provisioning configuration template for every video system model. Take care to download the correct file.

Read the *Cisco TMS Provisioning Deployment Guide* to find how to upload the file to Cisco TMS, and how to set the desired values for the parameters to be provisioned. If not set by Cisco TMS, the default values will be used.

Audio outputs and microphones

The EX90/EX60 offers the choice of the following audio outputs:

- Built-in loudspeaker
- Headset (wired)
- Bluetooth headset (wireless)
- Handset on Touch controller

Available microphone options depends on the chosen audio output.

Microphone input / external microphone

The microphone input at the rear of the video system may be used only for one of the following options:

- Headset microphone
- Cisco TelePresence Table Microphone 20 (external microphone)







Other microphone types are not supported.

Note that the video system's internal microphone is disabled when a headset microphone or an external microphone is connected.

Headset output / external loudspeakers

The headset output is for headsets only. You should not connect external loudspeakers to the headset output.

Choosing audio output and microphone

To select an audio output, tap the [Audio output selector](#) (, , , ) and choose **Speaker**, **Headset**, **Bluetooth** or **Handset**.



Speaker

As a default, the built-in loudspeaker is used together with the internal microphone.

If an external microphone is connected, the internal microphone is disabled and the external microphone will be used instead.



Headset (wired)


Connect the headset to the headset output at the rear of the system. If the headset has an in-built microphone, connect it to the microphone input.

If the headset comes without a microphone, either the internal microphone or, if connected, the external microphone is used.

If you have connected both a wired headset and a Bluetooth headset, only the Bluetooth headset will be available in the selector.



Bluetooth headset (wireless)

Use the Touch controller to pair the headset with the video system (tap [Settings](#) () > [Bluetooth Headset](#) and set-up the connection).

The headset's microphone will be used.



Handset

The handset is automatically selected when you lift it off the hook.

Only the microphone in the handset is enabled. Neither the internal microphone nor an external microphone can be used.

Note that only the available options are shown, i.e. if you have not connected a headset (neither wired nor wireless), and you have not lifted the handset off the hook, only Speaker is present in the selector.



Optimal definition profiles

Under ideal lighting conditions the bandwidth (call rate) requirements can be substantially reduced.

The optimal definition profile should reflect the lighting conditions in your room and the quality of the video input (camera); the better the lighting conditions and video input, the higher the profile. Then, in good lighting conditions, the video encoder will provide better quality (higher resolution or frame rate) for a given call rate.

In general, we recommend the optimal definition profile set to Normal. However, if lighting conditions are good we recommend that you test the endpoint on the various Optimal Definition Profile settings before deciding on a profile.

Go to System Configuration on the web interface and navigate to [Video > Input > Source \[1..n\] > OptimalDefinition > Profile](#) to choose the preferred optimal definition profile.

You can set a resolution threshold to determine when to allow sending video at 60 fps. For all resolutions lower than this threshold, the maximum transmitted frame rate will be 30 fps; for higher resolutions, 60 fps will be possible if the available bandwidth is adequate.

Go to System Configuration on the web interface and navigate to [Video > Input > Source \[1..n\] > OptimalDefinition > Threshold60fps](#) to set the threshold.

The video input quality settings must be set to Motion for the optimal definition settings to take any effect. With the video input quality set to Sharpness, the endpoint will transmit the highest resolution possible, regardless of frame rate.

Go to System Configuration on the web interface and navigate to [Video > Input > Source \[1..n\] > Quality](#) to set the video quality parameter to Motion.

You can read more about the video settings in the [► System settings](#) chapter.



High

Typically used in dedicated video conferencing rooms. Requires very good lighting conditions and a good quality video input to achieve a good overall experience.

Under ideal conditions the bandwidth requirements can be reduced by up to 50% compared to Normal.



Medium

Typically used in rooms with good and stable lighting conditions and a good quality video input.

The bandwidth requirements can be reduced by up to 25% compared to Normal.



Normal

This setting is typically used in office environments where the room is normally to poorly lit.

Typical resolutions used for different optimal definition profiles, call rates and frame rates

Frame rate	Optimal Definition Profile	Call rate						
		256 kbps	768 kbps	1152 kbps	1472 kbps	2560 kbps	4 Mbps	6 Mbps
30 fps	Normal	512×288	1024×576	1280×720	1280×720	1920×1080	1920×1080	1920×1080
	Medium	640×360	1280×720	1280×720	1280×720	1920×1080	1920×1080	1920×1080
	High	768×448	1280×720	1280×720	1920×1080	1920×1080	1920×1080	1920×1080
60 fps	Normal	256×144	512×288	768×448	1024×576	1280×720	1280×720	1280×720
	Medium	256×144	768×448	1024×576	1024×576	1280×720	1280×720	1280×720
	High	512×288	1024×576	1280×720	1280×720	1280×720	1280×720	1280×720

ClearPath – Packet loss resilience

ClearPath introduces advanced packet loss resilience mechanisms that increase the experienced quality when you use your video system in an error prone environment.

We recommend that you keep ClearPath enabled on your video system.


Go to System Configuration (on the web interface):

- Navigate to [Conference 1 > PacketLossResilience > Mode](#)

Choose **Off** to disable ClearPath and **On** to enable ClearPath.

EX90 dimensions

The illustration shows the EX90 dimensions.

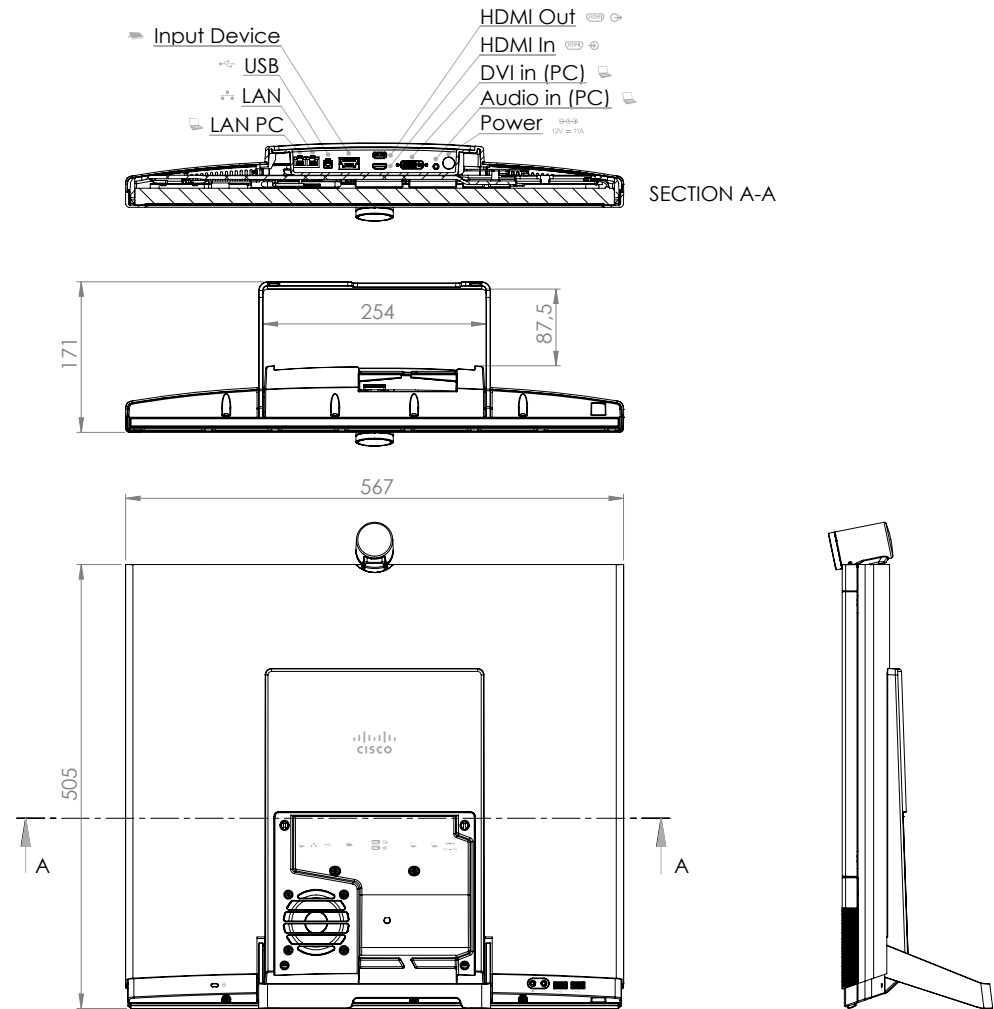


All dimensions are in mm.
EX90 weight: 11 kg (24.2lb)

EX60 dimensions - wall mounting and arm mounting

The EX60 can be attached to a variety of 100 mm × 100 mm VESA compatible wall mounts and arms.

When choosing a mounting solution, consider the mounting pattern, the EX60 dimensions and obstructions; not all VESA compatible products will easily fit with the EX60.

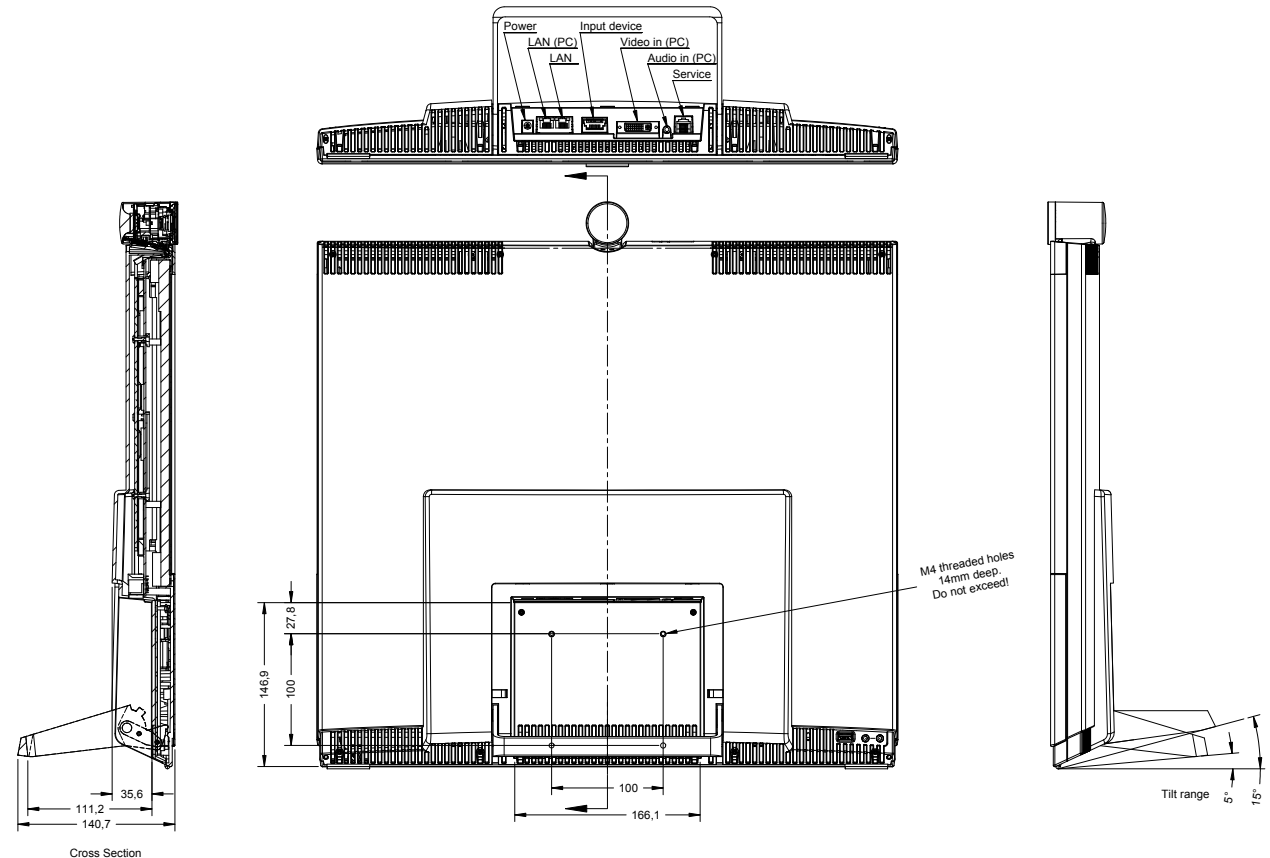

All dimensions are in mm.

EX60 weight: 5.85 kg (12.9 lb)

Factory resetting



It is not possible to undo a factory reset.

You should always backup the log files and the current configuration before you factory reset a system. Open the web interface, sign in, and follow these steps:

- Navigate to [Maintenance > System Recovery](#) and choose the [Save Data](#) tab.
- Click [Download logs](#) and [Download Configuration Backup](#) and follow the instructions to save the files on your computer.

If there is a severe problem with the video system, the last resort may be to reset it to its default factory settings.

Always consider reverting to the previously used software version before performing a factory reset. In many situations this will recover the system. Note that both the current and the previous software images reside on the system. Read about software swapping in the ► [System recovery](#) section.

We recommend that you use either a Touch controller or the web interface to factory reset the system. If these interfaces are not available, you can use the video system's power button.

When factory resetting the video system the following happens:

- The call logs will be deleted.
- Passwords will be reset to default.
- All system parameters will be reset to default values.
- All files that have been uploaded to the system will be deleted. This includes, but is not limited to, custom backgrounds, certificates, and the favorites list (My contacts).
- The previous (inactive) software image will be deleted.
- Release keys and option keys will **not** be affected.

The system restarts automatically after the reset. It is using the same software image as before.

Touch

1. Tap gently on the Touch screen if the unit is in sleep mode.
2. Navigate to [Settings \(⌘\) > Administrator Settings > Reset](#).
3. Tap the [Factory Reset](#) button.

The system reverts to the default factory settings and restarts automatically. This will take a few minutes.

The system confirms the factory reset by displaying a notification on the main screen when up and running again. The notification disappears after approximately 10 seconds.

Web



Tap [Settings \(⌘\) > System Information](#) on the Touch controller to find the system's IP address (IPv4 or IPv6).

1. Open a web browser and enter the IP address of the video system in the address bar.
2. Navigate to [Maintenance > System Recovery](#) and choose the [Factory Reset](#) tab.
3. Read the provided information carefully before you click [Perform a factory reset....](#)
4. Click the red [Yes](#) button to confirm that you want to perform a factory reset.

The system reverts to the default factory settings and restarts automatically. This will take a few minutes.

The system confirms the factory reset by displaying a notification on the main screen when up and running again. The notification disappears after approximately 10 seconds.

Power button

1. Power down the system by pressing and holding the power button until you see the shutdown message on screen. Release the button and wait for the system to shut down.
2. Press and hold the power button until the LED starts blinking slowly (approximately 10 seconds). Then release the button.
3. Within four seconds after the LED starts blinking, press the power button twice.

When the LED lights continuously, the system reverts to the default factory settings and restarts automatically. This will take a few minutes.

The system confirms the factory reset by displaying a notification on the main screen when up and running again. The notification disappears after approximately 10 seconds.



If you failed to press the power button twice within the four seconds, the system will not revert to the default factory settings, and you will not see the confirmation message. If this happens, go back to step 1 and try again.



Factory resetting the Touch 8" controller

You must use the New message indicator and Mute buttons to reset the Touch 8" controller to its default factory settings.

When factory resetting the Touch controller the logs will be cleared, and the configuration and pairing information are lost.

The Touch controller restarts after the reset and receives a new configuration automatically from the video system.



It is not possible to undo a factory reset.

Touch

1. Locate the *New message indicator* and *Mute* buttons.

The *New message indicator* is a bit hard to see, but it is the button with the exclamation mark on it.



2. Press and hold the *New message indicator* until it lights up (approximately 10 seconds).
3. Press the *Mute* button twice.
The Touch controller automatically reverts to the default factory settings and restarts.

Technical specifications

The EX90/EX60 units are delivered with a fully integrated codec, display, camera, microphone and loudspeakers, and a Touch controller with a detachable wide band handset.

PRODUCT COMPATIBILITY

- Fully compatible with standards-compliant telepresence and video systems

SOFTWARE COMPATIBILITY

EX90:

- Cisco TelePresence Software Version TC3.1 or later, and TE6.0 *

EX60:

- Cisco TelePresence Software Version TC4.0 or later, and TE6.0 *

COMPONENTS

- Fully integrated unit including codec, display, camera, microphone and loudspeakers
- Cables including: VGA-to-DVI-I cable, DVI-D cable, 3.5 mm jack audio cable, LAN cable, power adapter, and power cable

DISPLAY

EX90:

- 24 in. LCD monitor
- Resolution: 1920 × 1200 (16:10)
- Contrast ratio: 1000:1
- Viewing angle: 160°
- Response time: 5 ms
- Brightness: 300 cd/m²
- 5° - 15° tilt

EX60:

- 21.5 in. LCD monitor (with LED backlight)
- Resolution: 1920 × 1080 (16:9)
- Contrast ratio: 1000:1
- Viewing angle: 170°
- Response time: 5 ms
- Brightness: 225 cd/m²

CAMERA

- Cisco TelePresence PrecisionHD design
- Resolutions: 1080p30 and 720p60
- Auto focus
- Integrated privacy shutter
- Document camera mode
- Multicoated all-glass optics
- 1/3-in., 2.1 megapixel CMOS sensor

EX90:

- Horizontal field of view: 45°-65°
- Vertical field of view: 40°-27°
- Focus distance 0.3-infinity
- Optical, motorized zoom

EX60:

- Horizontal field of view: 50°
- Vertical field of view: 29°
- Focus distance 0.1-infinity

AUDIO SYSTEM

- Two stereo front speakers
- Integrated full-range microphone
- One 3.5 mm line-in jack for PC or other audio source
- Two 3.5 mm jack for headset
- Wideband handset
- Bluetooth version 2.1 + EDR

Only EX90:

- Integrated subwoofer
- Support for Cisco TelePresence Table Microphone 20
- HDMI audio input/output

PC AND SECOND SOURCE VIDEO INPUT

EX90:

- DVI-I
- HDMI In

EX60:

- DVI-I

SUPPORTED PC INPUT RESOLUTIONS

EX90:

- SVGA (800 × 600) to WUXGA (1920 × 1200)

EX60:

- SVGA (800 × 600) to 1080p (1920 × 1080)

USER INTERFACE

- Cisco TelePresence Touch 8 controller
- Eight-inch projected capacitive touch screen
- Resolution: 800 × 480

LANGUAGE SUPPORT

- Danish, Dutch, English, Finnish, French, German, Italian, Japanese, Korean, Norwegian, Portuguese-Brazilian, Russian, Simplified Chinese, Spanish, Swedish

POWER

- Autosensing power supply
- 100-240 VAC, 50/60 Hz

EX90:

- 150 W max

EX90 with Touch 8:

- In video call: 110 W
- In standby: 58 W

EX60:

- 75 W max

EX60 with Touch 8:

- In video call: 46 W
- In standby: 31 W

* TE6.0 is a CUCM-only release and does not support all non-CUCM features from software versions TC 5.x and earlier. TC6.0 does not support all CUCM features from software version TE6.0. Full feature parity in TC software is introduced in TC6.1.

OPERATING TEMPERATURE AND HUMIDITY

- Ambient temperature: 0° C to 35° C (32° F to 95° F)
- Relative Humidity (RH): 10 to 90%
- Storage and transport temperature at RH 10–90% (non-condensing): -20° C to 60° C (-4° F to 140° F)

MAIN UNIT DIMENSIONS

EX90:

- Height: 54.5 cm (21.4 in.)
- Length: 56.7 cm (22.3 in.)
- Depth: 17.3 cm (6.8 in.)
- Weight: 11.0 kg (24.2 lb)

EX60:

- Height: 50.8 cm (20.0 in.)
- Length: 52.0 cm (20.5 in.)
- Depth: 13.8 cm (5.4 in.)
- Weight: 5.85 kg (12.9 lb)

TOUCH SCREEN DIMENSIONS

Without handset:

- Height: 4.4 cm (1.7 in.)
- Length: 22.8 cm (9.0 in.)
- Depth: 14.5 cm (5.7 in.)
- Weight: 0.64 kg (1.4 lb)
- Cable length: 120 cm (47 in.)

With handset:

- Height: 7.7 cm (3.0 in.)
- Length: 29.0 cm (11.4 in.)
- Depth: 18.7 cm (7.4 in.)
- Weight: 0.94 kg (2.1 lb)
- Cable length: 120 cm (47 in.)

BANDWIDTH

- H.323/SIP up to 6 Mbps point-to-point

AUDIO STANDARDS

- G.711, G.722, G.722.1, G.729AB

EX90:

- 64 kbps and 128 kbps AAC-LD, mono and stereo

EX60:

- 64 kbps AAC-LD

AUDIO FEATURES

- CD quality 20 kHz stereo
- Acoustic echo canceling
- Automatic gain control
- Automatic noise reduction
- Active lip synchronization

VIDEO STANDARDS

- H.261, H.263, H.263+, H.264, H.264 SVC

VIDEO FEATURES

- Widescreen: 16:9
- Advanced screen layouts
- Intelligent video management
- Local auto layout

LIVE VIDEO RESOLUTIONS (ENCODE/DECODE)

- 176 × 144@30 fps (QCIF)
- 352 × 288@30 fps (CIF)
- 512 × 288@30 fps (w288p)
- 576 × 448@30 fps (448p)
- 768 × 448@30 fps (w448p)
- 704 × 576@30 fps (4CIF)
- 1024 × 576@30 fps (w576p)
- 640 × 480@30 fps (VGA)
- 800 × 600@30 fps (SVGA)
- 1024 × 768@30 fps (XGA)
- 1280 × 1024@30 fps (SXGA)
- 1280 × 720@30 fps (720p30)
- 1280 × 768@30 fps (WXGA)
- 1920 × 1080@30 fps (1080p30)*
- 1440 × 900@30 fps (WXGA+)*
- 1472 × 1080@30 fps (SXGA+)*
- 1680 × 1050@30 fps (WSXGA+)*
- 1600 × 1200@30 fps (UXGA)*
- 512 × 288@60 fps (w288p60)*
- 768 × 448@60 fps (w448p60)*
- 1024 × 576@60 fps (w576p60)*
- 1280 × 720@60 fps (720p60)*

Only EX90:

- 1920 × 1200@25fps (WUXGA)*

DUAL STREAM

- H.239 (H.323) dual stream
- BFCP (SIP) dual stream

EX90:

- Supports resolutions up to 1080p in both main stream and dual stream simultaneously

EX60:

- Supports resolutions up to 720p in both main stream and dual stream simultaneously

PROTOCOLS

- H.323
- SIP
- ISDN (requires Cisco TelePresence ISDN Link)

NETWORK INTERFACES

- Internal 2-port Ethernet switch
- 1 × LAN/Ethernet (RJ-45) 10/100/1000 Mbit for PC
- 1 × LAN/Ethernet (RJ-45) 10/100/1000 Mbit for LAN

OTHER INTERFACES

- Bluetooth

EX90:

- 2 × USB device for future applications

EX60:

- 1 × USB device for future applications

IP NETWORK FEATURES

- Domain Name System (DNS) lookup for service configuration
- Differentiated Services (QoS)
- IP adaptive bandwidth management (including flow control)
- Auto gatekeeper discovery
- Dynamic playout and lip-sync buffering
- H.245 DTMF tones in H.323
- Date and time support with Network Time Protocol (NTP)
- Packet loss based downspeeding
- DNS-based URI dialing
- TCP/IP
- Dynamic Host Configuration Protocol (DHCP)
- IEEE 802.1x network authentication
- IEEE 802.1q VLAN
- IEEE 802.1p QoS and class of service (CoS)
- ClearPath
- Medianet: Mediatrace and Metadata

IPV6 NETWORK SUPPORT

- Single call stack support for both H323 and SIP
- Dual-stack IPv4 and IPv6 for DHCP, SSH, HTTP, HTTPS, DNS, DiffServ
- Support for both static, autoconfiguration (stateless address autoconfiguration) and DHCPv6

* Requires premium resolution option

FIREWALL TRAVERSAL

- Cisco TelePresence Expressway Technology
- H.460.18 and H.460.19 Firewall Traversal
- SIP ICE (Interactive Connectivity Establishment)

EMBEDDED ENCRYPTION

- H.323/SIP point-to-point
- Standards-based: H.235v3 and Advanced Encryption Standard (AES)
- Automatic key generation and exchange
- Supported in dual stream

SECURITY FEATURES

- Management via Secure HTTP (HTTPS) and Secure Shell (SSH) protocol
- IP administration password
- Administrator menu password
- Disable IP services
- Network settings protection

MULTIPOINT SUPPORT

- Cisco TelePresence Multiway support (requires Cisco TelePresence Video Communication Server [Cisco VCS] and Cisco TelePresence MCU)
- Ability to natively join multipoint conferences hosted on Cisco TelePresence Multipoint Switch (CTMS)

Only EX90:

- Four-way embedded SIP/H.323 MultiPoint, reference MultiSite

MULTISITE

(embedded multipoint)

Only EX90:

- 4-way 720p30 Continuous Presence (CP) MultiSite
- Full individual audio and video transcoding
- Individual layouts for each participant (CP layout without self view feature)
- H.323/SIP/VoIP in the same conference
- Best Impression (Automatic CP layouts)
- H.264, encryption and dual stream from any site
- IP downsampling
- Dial in/Dial out

SUPPORTED INFRASTRUCTURE

- Cisco Unified Communications Manager 8.6.2 and newer
- Cisco TelePresence Video Communication Server (Cisco VCS)
- Cisco WebEx TelePresence Server

SYSTEM MANAGEMENT

- Support for the Cisco TelePresence Management Suite
- Total management through embedded Simple Network Management Protocol (SNMP), Telnet, SSH, XML, and Simple Object Access Protocol (SOAP)
- Remote software upload: through web server, Secure Copy Protocol (SCP), HTTP, and HTTPS

DIRECTORY SERVICES

- Support for local directories (My Contacts)
- Corporate directory
- Unlimited entries using server directory supporting
- Lightweight Directory Access Protocol (LDAP) and H.350
- Unlimited number for corporate directory (available with Cisco TelePresence Management Suite)
- Local directory: 200 numbers
- Received calls with date and time
- Placed calls with date and time
- Missed calls with date and time

MTBF PRODUCT RELIABILITY/MTBF

The predicted reliability is expressed in the expected random Mean Time Between Failures (MTBF) for the electronic components based on the Power On Hours:

- Power On Hours (POH) > 69 000 hours.
- Useful Life Cycle > 6 years.

ISO 9001 certificate is available upon request

All specifications are subject to change without notice, system specifics may vary.

All images in these materials are for representational purposes only, actual products may differ.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company.

June 2013

APPROVALS

EU/EEC

Directive 2006/95/EC (Low Voltage Directive)

- Standard EN 60950-1

Directive 2004/108/EC (EMC Directive)

- Standard EN 55022, Class A
- Standard EN 55024
- Standard EN 61000-3-2/-3-3

- Directive 2011/65/EU (RoHS)

Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

USA

Approved according to UL 60950-1

Complies with FCC15B Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canada

Approved according to CAN/CSA C22.2 No. 60950-1

This Class A digital apparatus complies with Canadian ICES-003

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada

Supported RFCs

The RFC (Request for Comments) series contains technical and organizational documents about the Internet, including the technical specifications and policy documents produced by the Internet Engineering Task Force (IETF).

Current RFCs and drafts supported

- RFC 1889 RTP: A Transport Protocol for Real-time Applications
- RFC 2190 RTP Payload Format for H.263 Video Streams
- RFC 2460 Internet protocol, version 6 (IPv6) specification
- RFC 2617 Digest Authentication
- RFC 2782 DNS RR for specifying the location of services (DNS SRV)
- RFC 2976 The SIP INFO Method
- RFC 3016 RTP Payload Format for MPEG-4 Audio/Visual Streams
- RFC 3261 SIP: Session Initiation Protocol
- RFC 3262 Reliability of Provisional Responses in SIP
- RFC 3263 Locating SIP Servers
- RFC 3264 An Offer/Answer Model with SDP
- RFC 3311 UPDATE method
- RFC 3361 DHCP Option for SIP Servers
- RFC 3420 Internet Media Type message/sipfrag
- RFC 3515 Refer method
- RFC 3550 RTP: A Transport Protocol for Real-Time Applications
- RFC 3551 RTP Profile for Audio and Video Conferences with Minimal Control
- RFC 3581 Symmetric Response Routing
- RFC 3605 RTCP attribute in SDP
- RFC 3711 The Secure Real-time Transport Protocol (SRTP)
- RFC 3840 Indicating User Agent Capabilities in SIP
- RFC 3890 A Transport Independent Bandwidth Modifier for SDP
- RFC 3891 The SIP "Replaces" Header
- RFC 3892 Referred-By Mechanism
- RFC 3960 Early Media
- RFC 3986 Uniform Resource Identifier (URI): Generic Syntax
- RFC 4028 Session Timers in SIP
- RFC 4145 TCP-Based Media Transport in the SDP
- RFC 4235 An INVITE-Initiated Dialog Event Package for the Session Initiation Protocol (SIP)
- RFC 4566 SDP: Session Description Protocol
- RFC 4568 SDP: Security Descriptions for Media Streams
- RFC 4574 The Session Description Protocol (SDP) Label Attribute
- RFC 4582 The Binary Floor Control Protocol
draft-ietf-bfcpbis-rfc4582bis-00 Revision of the Binary Floor Control Protocol (BFCP) for use over an unreliable transport
- RFC 4583 Session Description Protocol (SDP) Format for Binary Floor Control Protocol (BFCP) Streams
draft-ietf-bfcpbis-rfc4583bis-00 Session Description Protocol (SDP) Format for Binary Floor Control Protocol (BFCP) Streams
- RFC 4585 Extended RTP Profile for RTCP-Based Feedback
- RFC 4587 RTP Payload Format for H.261 Video Streams
- RFC 4629 RTP Payload Format for ITU-T Rec. H.263 Video
- RFC 4733 RTP Payload for DTMF Digits, Telephony Tones and Telephony Signals
- RFC 4796 The SDP Content Attribute
- RFC 4862 IPv6 stateless address autoconfiguration
- RFC 5104 Codec Control Messages in the RTP Audio-Visual Profile with Feedback (AVPF)
- RFC 5168 XML Schema for Media Control
- RFC 5245 Interactive Connectivity Establishment (ICE): A Protocol for Network Address Translator (NAT) Traversal for Offer/Answer Protocols
- RFC 5389 Session Traversal Utilities for NAT (STUN)
- RFC 5577 RTP Payload Format for ITU-T Recommendation G.722.1
- RFC 5589: SIP Call Control Transfer
- RFC 5626 Managing Client-Initiated Connections in the Session Initiation Protocol (SIP)
- RFC 5766 Traversal Using Relays around NAT (TURN): Relay Extensions to Session Traversal Utilities for NAT (STUN)
- RFC 5768 Indicating Support for Interactive Connectivity Establishment (ICE) in the Session Initiation Protocol (SIP)
- RFC 5905 Network Time Protocol Version 4: Protocol and Algorithms Specification
- RFC 6156 Traversal Using Relays around NAT (TURN) Extension for IPv6
- RFC 6184 RTP Payload Format for H.264 Video

User documentation on the Cisco web site

In general, user documentation for the Cisco TelePresence products is available here:

► <http://www.cisco.com/go/telepresence/docs>

You have to choose your product category in the right pane until you find your product. This is the path you have to follow:

TelePresence >

TelePresence Endpoints - Personal >

TelePresence Desktop >

Cisco TelePresence Systems EX Series

Alternatively, you can use the following short-link to find the documentation:

► <http://www.cisco.com/go/ex-docs>

The documents are organized in the following categories:

Installation guides:

Install and Upgrade > Install and Upgrade Guides

Getting started guide:

Install and Upgrade > Install and Upgrade Guides

Maintain and Operate > Maintain and Operate Guides

Administrator guides:

Maintain and Operate > Maintain and Operate Guides

User guides and Quick reference guides:

Maintain and Operate > End-User Guides

Knowledge base articles and frequently asked questions:

Troubleshoot and Alerts > Troubleshooting Guides

CAD drawings:

Reference Guides > Technical References

Video conferencing room guidelines:

Design > Design Guides

Software licensing information:

Software Downloads, Release and General Information > Licensing Information

Regulatory compliance and safety information:

Install and Upgrade > Install and Upgrade Guides

Software release notes:

Software Downloads, Release and General Information > Release Notes

Intellectual property rights

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

TANDBERG is now a part of Cisco. TANDBERG® is a registered trademark belonging to Tandberg ASA.

Cisco contacts

On our web site you will find an overview of the worldwide Cisco contacts.

Go to: ► <http://www.cisco.com/web/siteassets/contacts>

Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Dr.
San Jose, CA 95134 USA