



Preface

This preface describes the organization and conventions of the *Cisco CIMC Firmware Update Utility User Guide*.

Organization

This guide is organized as follows:

Chapter Number	Chapter Title	Description
1	Installing the CIMC Firmware Update Utility	Contains information on installing the Firmware Update binary file on the server.
2	Using the Firmware Update Utility	Contains information on using the Firmware Update Utility to update the firmware version on servers.
3	Troubleshooting	Contains information on error messages that are displayed and information on troubleshooting problems that might occur while working with the utility.

Related Documentation

Documentation for Cisco UCS C-Series Rack-Mount Servers is available at the following URL:

<http://www.cisco.com/go/unifiedcomputing/c-series-doc>

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.