



## INDEX

---

### B

booting in vKVM [2-3](#)  
booting UCS-SCU [2-2](#)  
burning an .iso CD [2-2](#)

---

### C

configure a server [3-5](#)

---

### E

entering vKVM [2-3](#)  
exiting UCS-SCU [2-3](#)

---

### G

get system updates [3-3](#)

---

### H

hardware and software requirements [2-2](#)

---

### I

integrated features in UCS-SCU [1-1](#)

---

### L

license agreement [3-1](#)  
Linux OS installation [3-10](#)

---

### M

My Server Information Box [3-2](#)  
My Server Page [3-2](#)

---

### O

OS installation [3-8](#)

---

### P

primary function buttons [3-2](#)

---

### R

RAID configuration [3-5](#)  
    automatic setup without redundancy [3-6](#)  
    automatic setup with redundancy [3-6](#)  
    create custom or multiple RAID arrays [3-6](#)  
related documentation [1-3](#)

---

### S

save logs [3-12](#)  
setting BIOS boot order [3-5](#)  
supported operating systems [2-1](#)  
supported platforms [2-1](#)  
supported RAID devices [3-5](#)  
support for third party drivers [3-12](#)

---

### U

UCS documentation [1-3](#)

***Send document comments to [ucs-docfeedback@cisco.com](mailto:ucs-docfeedback@cisco.com)***

UCS-SCU interface [3-1](#)

UCS-SCU toolbar [3-2](#)

updating firmware [3-3, 3-4](#)

---

## **W**

Windows OS installation [3-8](#)