cisco.

Cisco RF Gateway 1 Software Release Notes, Release 3.00.18

Overview

Introduction

The RF Gateway 1 software version 3.00.18 provides higher channel capacity with no hardware changes from its predecessor releases. The RF Gateway 1 remains fully SDV capable and the new 3.00.18 system release is primarily intended for support of SDV applications. Other video deployments can continue to use 2.02.XX and so forth as the preferred release.

Purpose

The purpose of this document is to notify RF Gateway 1 users of the enhancements included in the current release, and inform users of any special upgrade procedures needed for using Release 3.00.18.

Audience

This document is intended for system engineers or managers responsible for operating and/or maintaining this product.

Related Publications

Refer to the following documents for additional information regarding hardware and software.

- Cisco RF Gateway 1 Configuration Guide, part number 4025112
- Cisco RF Gateway 1 System Guide, part number 4024958

Safe Operation for Software Controlling Optical Transmission Equipment

If this document discusses software, the software described is used to monitor and/or control ours and other vendors' electrical and optical equipment designed to transmit video, voice, or data signals. Certain safety precautions should be observed when operating equipment of this nature.

For equipment specific safety requirements, refer to the appropriate section of the equipment documentation.

For safe operation of this software, refer to the following warnings.

WARNINGS:

- Ensure that all optical connections are complete or terminated before using this equipment to remotely control a laser device. An optical or laser device can pose a hazard to remotely located personnel when operated without their knowledge.
- Allow only personnel trained in laser safety to operate this software. Otherwise, injuries to personnel may occur.
- Restrict access of this software to authorized personnel only.
- Install this software in equipment that is located in a restricted access area.

In This Document

96 QAM Channels	3
Front Panel Enhancements	5
Known Issues	6
Licensing	7
Upgrade Information	9
Upgrade Procedure for Customers Running 1.02.09	10
IP Port Configuration Changes	12
IP Port Configuration Parameter Settings	
For Information	

96 QAM Channels

The 3.00.18 release provides up to 96 licensed QAM channels or 8 channels per RF port. This feature is fully functional with no hardware changes from the predecessor RF Gateway 1 releases. The new 96 QAM channel capability is enabled by simply applying the 8 channels per port license to the 3.00.18 release.

The RF Gateway 1 continues to operate as earlier 48 QAM versions without applying the 8 channels per port license and upgrading to system release 3.00.18. There is no configuration and/or operational differences operating with system release 3.00.18 in this mode. QAM channel numbering follows the 4 channel per port predecessor.

Full backward compatibility is ensured with RF Gateway 1 configuration databases used under the 1.03.XX and 2.02.XX RF Gateway 1 system release branches. See the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112 for additional information about operating in the 8 channels per port mode.



			rfgw1			Login B	eboot Save	Refresh Help	eisco
Sum	mary	Monitar	Alacms	QAHS	Нера	System		15:50:44	
ard	Port				Output Bar	wheelth			
		Ch:1	Ch:2	Ch:3	Ch:4	Ch:5	Ch:6	Ch:7	Ch:8

	1	7.9962 (21%)	19.8487 (51%)	7.9682 (21%)	7.9662 (21%)	18 8497 (61%)	19 8497 (51%)	19.8497 (51%)	19 8497 (619
	2	18.5497 (01%)	18.8497 (51%)	10.0407 (01%)	19.6497 (51%)	19.5437 (01%)	18.8497 (51%)	19.8497 (51%)	19 8497 (611
	1		*****						
	1	19.8497 (51%)	19.8497 (51%)	13.5497 (51%)	19.8497 (51%)	19.8497 (51%)	19.8497 (51%)	18.8497 (51%)	18.8497 (511
	2								
	÷	15.8497 (51%)	19.8497 (51%)	18.8487 (81%)	15.8497 (51%)	18.8497 (51%)	15.8497 (51%)	19.8497 (51%)	19.8497 (51

	1	15.5497 (51%)	19.8497 (01%)	19-5497 (51%)	19.8497 (51%)	19.6497 (01%)	19.8497 (51%)	19.8497 (51%)	19-8497 (51
	2	13.8497 (01%)	10.0407 (01%)	10.0457 (51%)	19.0497 (01%)	19.0457 (51%)	18.8497 (01%)	10.0497 (01%)	19.8497 (51
	÷	19.8497 (51%)	19.8497 (61%)	19.8497 (61%)	18.8497 (61%)	18.8497 (81%)	18.8497 (51%)	19.8497 (51%)	19.8497 (61
	2		*****		*****				
	4.	10.0407 (01%)	18.0407 (01%)	18.8497 (51%)	18.8497 (01%)	18.8497 (01%)	19.8497 (51%)	18.8497 (51%)	10.5497 (51
	1	19.0497 (51%)	19.8497 (51%)	19.0497 (51%)	19.8497 (51%)	19.0407 (01%)	19.0497 (51%)	18.8497 (51%)	19.0497 (51)
	2		*****		*****		*****		
	÷	18:8497 (51%)	19.8497 (51%)	19.8497 (01%)	18:8497 (01%)	19.8487 (51%)	15.8497 (51%)	15-8457 (51%)	19.8487 (61
	1								
	S	18.8497 (51%)	18-8497 (81%)	19.8497 (81%)	18.8497 (51%)	19.8497 (01%)	19.8497 (01%)	19.8497 (51%)	19.8497 (61
	2								
	*	19.8497 (01%)	19.8497 (51%)	10.0497 (01%)	10.0407 (01%)	10.0407 (01%)	18.8497 (01%)	10.0407 (01%)	19.8497 (51
				Display Hode:	G = (united and	CSession			

(a) Unlicensed 8 channels per port

(b) Licensed 8 channels per port

Miscellaneous Improvements

- System release file transfers performed over the management network now include enhanced error checking for downloaded release verification.
- The RF Gateway 1 web management user interface for QAMS and Maps now implement faster loading web pages, providing the user with minimal page load times when accessing these configuration pages.
- Clicking Advanced Settings under Maps/Video Stream Map now includes a quaternary source specification capability. See Chapter 4 of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112 for detailed information about configuring the RF Gateway 1.
- Additional monitoring of QAM module health has been added, including monitoring alarms and traps for QAM module voltages. In addition to enhanced monitoring, software version 3.00.18 removes a QAM module from service if a critical failure occurs.

Front Panel Enhancements

Software Release 1.03.19 provides the operator the ability to view RF port frequency and output power levels of the carriers on the front panel LCD. This allows easy access for users interested in confirming RF port status directly from an RF Gateway 1 unit.

The front panel *Info* submenu now includes an *RF* selection for entry into the RF port/channel display screens. The up and down arrow keys on the front panel keypad can be used to move from one RF port to the next and the left and right arrow keys from one carrier to the next. All carriers on an RF port have the same output level. If a carrier is muted or if the RF port is off, the string *mute* or *off*, respectively will be displayed instead of the power level. To exit these screens, the user must press the middle select button on the front panel keypad from any RF menu screen. Refer to examples below of the front panel display.



Known Issues

The following list identifies known limitations planned to be resolved as part of an upcoming GA release.

- The RF Gateway 1 web management interface provides no events or alarms informing a user about a missing 8 Channels per Port license. The user can easily observe the Summary page to view greyed out channel frequencies and the System/License Management page to confirm an unlicensed unit.
- Over provisioning an unlicensed QAM channel causes an alarm condition on the RF Gateway 1.
- The RF Gateway 1 web interface is not fully tested with IE-8 and FireFox-3.5.x or newer. The RF Gateway 1 web management interface is tested with IE-6 or FireFox-2.0.0.14 and above. Use of Java 1.6.x is also recommended.
- When using /31 IP addressing, although the RF Gateway 1 allows setting IP addresses and masks that correspond to this point-to-point protocol, the GbE ports will not respond to ICMP echo requests, nor will they properly resolve their link partner's MAC address via ARP. These limitations may adversely affect unicast operations when using /31 subnets.

Licensing

After an upgrade to 3.00.18, a new system license (8 channels per port) must be installed to access full 96 QAM channel support. For information regarding RF Gateway 1 licensing requirements and procedures, see the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112.

The following features require a system license:

- Third Party Encryption
- Data streams requiring use of the DOCSIS® Timing Interface
- DVB[®] Encryption
- PowerKEY[®] Encryption
- 8 channels per port

Most systems delivered with 1.02.20 or later using a data part number included a license file pre-installed at the factory. For these systems, an FTP transfer is not necessary.

All systems delivered prior to 1.02.20 and some systems delivered with release 01.02.20 will require that a license file be obtained from Cisco after an upgrade to 3.00.18. Contact your account representative for details on obtaining your license files.

Note: Performing an upgrade without a license file will not affect the configuration of a chassis already operating in release V01.03.XX, V02.02.XX, or V01.02.XX. The unit will continue to function as configured earlier until configuration or any license changes are made. No alarms or warnings are currently present that indicate the absence of the 8 channel per port license.

For systems requiring a license upgrade, a licensing-capable RF Gateway 1 provides the operator with a new tree menu item, *License Management*, located under the **System** tab. See the screen below. It provides an FTP mechanism to transfer license files to the device.

Licensing

Note: In Release 3.00.18, the RF Gateway 1 will not immediately warn the operator if the FTP transfer fails due to an incorrect filename. It is strongly recommended that the operator monitor the file transfer status using feedback from the FTP server.



Upgrade Information

An RF Gateway 1 unit running release 1.02.20 can be upgraded directly to 1.03.19. See Chapter 3, *General Configuration and Monitoring (Release Management)* of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112, for more information. The RF Gateway 1 reboots automatically at the end of the upgrade process. However, when upgrading to 1.03.19 from 1.02.09, an intermediate step of using the bridge release 1.02.19 to arrive at 1.02.20 and finally 3.00.18 must be followed. The bridge release designated as 1.02.19 has been created to provide a secure and robust upgrade path. Releases 1.02.19 (bridge) and 1.02.20 (final) have identical user features and functionality. See *Upgrade Procedure for Customers Running* 1.02.09 (on page 10).



WARNING:

Upgrading to 1.02.20 or 3.00.18 directly from 1.02.09 must not be attempted. This may cause the RF Gateway 1 to be non-operational.

Upgrade Procedure for Customers Running 1.02.09

WARNING:

Upgrading to 2.01.09 directly from 1.02.09 must not be attempted. This may cause the RF Gateway 1 to become non-operational.

- 1 Before starting the upgrade, back up the system configuration. See Chapter 3, *General Configuration and Monitoring (Configuration Backup)* of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112. Name the file appropriately to identify it as a configuration that corresponds to 1.02.09. This file will be necessary later if the user decides to revert back to 1.02.09.
- 2 Record the IP port configuration parameters by saving a screen capture of the *System/IP Network* page. See *Recording IP Port Configuration Settings* (on page 14).
- **3** Download and activate 1.02.19. See Chapter 3, *General Configuration and Monitoring (Release Management)* of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112. The RF Gateway 1 reboots automatically at the end of the upgrade process.
- 4 After reboot, display the *System/IP Network* page. See *Displaying IP Port Configuration Settings* (on page 13).
- 5 Verify the IP port configuration parameters by checking them against those recorded in step 2 (prior to the upgrade as done in step 3). The Negotiation Mode, Redundancy Mode, and Revert Mode parameter values are inverted. See *Displaying IP Port Configuration Settings* (on page 13). Change the differing parameter values to match those recorded before download and activation. Be sure to click **Apply** after making your changes.
- **6** Once step 5 is completed, save the configuration which includes the IP port configuration parameters. Going forward, these values will not change.
- 7 Validate/qualify/soak release 1.02.19 in its application to establish confidence the release is operating at the same level as 1.02.09. In the very unlikely event service is impacted by 1.02.19, reverting back to 1.02.09 may be done to reestablish operations. If reverting back to 1.02.09 is necessary, the IP port configuration parameters must be swapped back and the configuration saved in step 2 restored.

- 8 After satisfactory completion of step 7, upgrade from 1.02.19 to 1.02.20. These two releases have identical performance and behavior. Release 1.02.20 includes a boot code upgrade that readily supports future roadmap features/releases without the need for subsequent two-step bridge upgrade processes.
- **9** Download and activate 3.00.18. See Chapter 3, *General Configuration and Monitoring (Release Management)* of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112. The RF Gateway 1 reboots automatically at the end of the upgrade process.

IP Port Configuration Changes

There is a bug in 1.02.09 that causes the following IP port configuration parameters to have inverted values saved in the configuration file.

- Negotiation Mode (On/Off) one for each port (total 4)
- Redundancy Mode (Auto/Manual) one for each port pair (total 2)
- Revert Mode (Enable/Disable) one for each port pair (total 2)

For details on these parameters, see Chapter 3, *General Configuration and Monitoring* of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112.

This bug has been corrected in the configuration file in 1.02.19. Upon upgrade to 1.02.19, these three parameters will appear to have changed value as seen in the *System/IP Network* page of the web GUI. As a result, the IP ports may not be configured properly for operation immediately after upgrade (after the subsequent reboot that follows activation).

See *Upgrade Procedure for Customers Running* 1.02.09 (on page 10).

IP Port Configuration Parameter Settings

The RF Gateway 1 has four physical GbE input ports that receive video and data streams from the upstream network. These ports may be used independently (in software releases 02.02.11 or later) or configured to implement input redundancy. See Chapter 3, *General Configuration and Monitoring* of the *Cisco RF Gateway 1 Configuration Guide*, part number 4025112 for specific details.

Displaying IP Port Configuration Settings

Follow these instructions to display the *System/IP Network* page.

- 1 Launch your web browser.
- 2 In the IP Address field, enter the RF Gateway 1 IP address.
- 3 Click Enter.
- 4 Click the *System/IP Network* tab and review the IP settings. See the following screen.

		rfgw1		Login (Reb	oot Save Refresh	Help clack		
Advant ARP & Broutes Authentication Beckup Configuration Clock IP Network Logs Release Management Logs Release Management Logs Release Management Logs Release Management Logs Release Management Default Gateway ID 90 149 .57 ISO 158 225 250 Submet Mask Submet Mask Submet Mask Submet Mask Submet Mask Submet Mask Default Gateway ID 90 149 .1 Submet Mask Submet Mask S	Summary Non2	tor Alarma C	2015 Mage	System	17:	10:49		
ARP & Roules Management Conditional Access Authentication Port Control Off Bestup Configuration Address Selection Mode Static Imagement Lorene Management MAC Address 20.90.145.87 Static Imagement Lope Partoria 255.255.250 255.155.250 255.155.250 Subnet Mask 255.255.250 255.255.250 255.255.250 255.255.250 Somethar Default Gateway 20.90.145.1 150.156.232.250 255.255.250 Somethar Default Gateway 20.90.145.1 150.156.232.550 255.255.245 Somethar Port Configuration Port 1 Port 2 Port 3 Port 4 MAC Address 00.50.40.11.20.80		10/100 Ports						
Beskup Configuration Clock IP Network License Management Logs Relatese Management Release Management Restere Configuration Scrambler SiMP & Trape		Í.	Management	Conditional Access				
Clock IP Network Ucense Management Logs Release Management Logs Release Management Subnet Mask 255.255.255.0 Subnet Mask 255.255.255.0 Default Gateway 10.90.149.5 GbE Input Ports GbE Input Ports GbE Data Port Mode Duel Port 1 Port 2 Port 3 Port 4 MAC Address 0050401120ae 0050401120a 00 0 Port Pair Configuration Port Pair 1 Port Pair 2 VideoData IP 76.59.59.100 76.59.59.10 7 Kedundancy Node Manuel N Manual Primary Port 1 Redundancy N Redundancy Configuration Detection Mode Ethemet Link US Ethemet Link LOS Ethemet Link Ethemet Link Ethemet Link		Port Control		017				
License Management Logs Reliese Management Resoure Configuration Scrambler SWMP & Treps		Address Selection Mode	Static (*)	Static (K)				
Logs Release Management Release Management Retore Configuration Scrambler StMP 8. Treps GbE Data Port Mode Default Gateway Configuration Port Configuration Port 1 Port 2 Port 3 Port 4 MAC Address D0504b1120ae D		MAC Address	00 50 4b 11 2c ac	00:50:40:11:20:30				
Reisee Management Restore Configuration SWMP & Trape SWMP		IP Address	10.90.149.87	150.158.235.250				
Scrambler SUMP & Traps GbE Data Port Mode Duel Port Pairs Port Configuration Port 1 Port 2 Port 3 Port Configuration Port 1 Port 2 Port 3 Port Configuration Port 1 Port 2 Port 3 Port 4 MAC Address 0050/401120af 0050/401120af 1P Address 76.59.69.129 Subnet Mask 255.255.245 Subnet Mask 255.255.255.245 Subnet Mask 255.255.255.255 Port Pair Configuration Port Pair 1 Port Pair Configuration Port Pair 2 Video/Data IP 76.59.69.120 76.59.91.194 3 Current Active Port 3 Redundancy 3 Configuration 1 Detection Mode Ethemet Link Detection Mode Ethemet Link <td>Release Management</td> <td>Subnet Mask</td> <td>255.255.255.0</td> <td>255.255.255.0</td> <td></td> <td></td>	Release Management	Subnet Mask	255.255.255.0	255.255.255.0				
SIMP & Treps		Default Gateway	10.90.149.1	150.158.235.254				
GbE Data Port Mode Duel Port Pairs w Port Configuration Port 1 Port 2 Port 3 Port 4 MAC Address 5050/401120 ale 0050/401120 alf 0050/401120 bl 0050/401120 bl IP Address 75.59.99.129 150.158.222.252 76.59.91.195 150.158.224.25 Subnet Mask 255.255.255 255.255.252 255.255.258.248 255.255.255.25 Negotiation Mode On w On w On Port Pair Configuration Port Pair 1 Port Pair 2 Video/Data IP 76.59.69.120 76.59.91.194 Video/Data IP 76.59.69.120 76.59.91.194 Manual Manual Manual Primary Port 1 y 3 3 3 3 Current Active Port 1 y 3 3 3 3 3 Detection Mode Ethernet Link Y Ethernet Link LOS Timeout (s) 1 1 3		1			'			
Port Configuration Port 1 Port 2 Port 3 Port 4 MAC Address 00504b112cae 00504b112cae 00504b112cb0 00504b112cb1 IP Address 75.59.89.129 150.158.222.252 75.59.91.195 150.158.224.255 Subnet Mask 255.255.258.248 255.255.252 255.255.258.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.252.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.252.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.248 255.255.255.252 255.255.255.248 255.255.255.255.248 255.255.255.255.248 255.255.255.252 255.255.255.248 255.255.255.255.252 255.255.255.252 255.255.255.252 255.255.255.252 255.255.255.252 255.255.255.252 255.255.255.252 255.255.255.252 255.255.252 255.255.255.252 255.255.252 255.255		GbE Input Ports						
Port Configuration Port 1 Port 2 Port 3 Port 4 MAC Address 0050 4b 11 20 al 0050 4b 1120 al 00 al 00		GbE Data Port Mode						
IP Address 76.59.69.129 150.158.232.252 76.59.61.195 150.158.234.25 Subnet Mask 255.255.255.246 255.255.252 255.255.252 255.255.252.246 255.255.252.245 Negotiation Mode On On On On On On On Port Pair Configuration Port Pair 1 Port Pair 2 Video/Data IP 76.59.69.130 76.59.69.194 Redundancy Mode Manual Manual Manual Primary Port 1 3 3 Current Active Port 1 3 3 Current Active Port 1 3 3 Detection Mode Ethernet Link W Ethernet Link LOS Timeout (s) 1 1 1 1		Port Configuration	Port 1		Port 3	Port 4		
Subnet Mask 255.255.248 255.255.252 255.255.258 255.255.248 255.255.258 255.258.258 256.258 256.258 256.258 256.258.258 256.2		MAC Address	00 50 4b 11 2c ae	00:50:40:11:20:81	00 50 48 11 20 80	00 50.46 11 20 61		
Negotiation Mode On On On On Port Pair Configuration Port Pair 1 Port Pair 2 Video/Data IP 76.59.69.130 76.59.91.194 Redundancy Mode Manual Manual Primary Port 1 3 Current Active Port 1 3 Redundancy Configuration Ethermet Link Ethermet Link Detection Mode Ethermet Link Ethermet Link LOS Timeout (s) 1 1 Result To Primary Enabled		IP Address	75.59.89.129	150.158.232.252	76.59.91.195	150.156.234.250		
Port Pair Configuration Port Pair 1 Port Pair 2 Video/Data IP 76.59.59.130 76.59.59.194 Redundancy Mode Manual Manual Primary Port 1 1 Current Active Port 1 1 Redundancy Image: Configuration 1 Detection Mode Ethemet Link Ethemet Link LOS Timeout (s) 1 1 Reset To Primary Enabled		Subnet Mask	255.255.255.248	255.255.255.252	255.255.255.248	255.255.255.252		
Video/Data IP 76.59.59.130 76.59.51.194 Redundancy Mode Manual Manual Primary Port 1 3 Current Active Port 1 3 Redundancy Configuration 1 3 Detection Mode Ethernet Unix Ethernet Unix LOS Timeout (s) 1 1 Resent To Primary Enabled Enabled		Negotiation Mode	On 💌	On e	On 💌	On		
Redundancy Mode Manual Manual Primary Port 1 3 Current Active Port 1 3 Redundancy 3 3 Configuration 1 1 Detection Mode Ethemet Unix 2 LOS Timeout (s) 1 1 Result To Primary Enabled		Port Pair Configuration	Port	Pair 1	Port Pair 2			
Primary Port 1 3 Current Active Port 1 3 Redundancy Configuration 3 3 Detection Mode Ethemet Link 3 LOS Timeout (s) 1 1 Result To Primary Enabled Enabled		Video/Data IP	76.59.89.130		76.59.91.194	1		
Current Active Port 1 3 Redundancy Configuration Image: Configuration Image: Configuration Detection Mode Ethernet Link Image: Configuration LOS Timeout (s) 1 1 Resent To Primary Enabled Enabled		Redundancy Mode	Manual	×	Manual			
Redundancy Configuration Image: Configuration Detection Mode Ethernet Link LOS Timeout (s) 1 Resert To Primary Enabled		Primary Port	1	1	3			
Configuration Detection Mode Ethernet Link LOS Timeout (s) 1 Resert To Primary Enstlied		Current Active Port	1		3	1		
LOS Timeout (s) : Revert To Primary Enstited IV Enstited								
Revent To Primary Enabled (2011) Enabled		Detection Mode	Ethemet Link	(*)	Ethernet Link	1		
		LOS Timeout (s)	1		1			
Revert Check Time (s) 2		Revert To Primary	Enabled	(v)	Enabled			
		Revert Check Time (s)	2		2	Ţ.		

Recording IP Port Configuration Settings

Follow these instructions to record IP port configuration settings.

- **1** Navigate to the *System/IP Network* page.
- 2 Click the **Alt-PrtScrn** keys to copy the IP Network parameter settings to the clipboard.
- **3** Launch Microsoft Word (or WordPad if you don't have Microsoft Word) and paste the clipboard contents to page 1.
- 4 Save the Microsoft Word document as ipsettings.doc.

For Information

Support Telephone Numbers

This table lists the Technical Support and Customer Service numbers for your area.

Region	Centers	Telephone and Fax Numbers			
North America	Cisco Services	For Technical Support, call:			
	Atlanta,	Toll-free: 1-800-722-2009			
	Georgia	Local: 678-277-1120 (Press 2 at the prompt)			
	United States	For Customer Service, call:			
		Toll-free: 1-800-722-2009			
		Local: 678-277-1120 (Press 3 at the prompt)			
		• Fax: 770-236-5477			
		 Email: customer-service@cisco.com 			
Europe,	Belgium	For Technical Support, call:			
Middle East,	0	Telephone: 32-56-445-197 or 32-56-445-155			
Africa		■ Fax: 32-56-445-061			
		For Customer Service, call:			
		Telephone: 32-56-445-444			
		 Fax: 32-56-445-051 			
		Email: service-elc@cisco.com			
Japan	Japan	Telephone: 81-3-5908-2153 or +81-3-5908-2154			
Jupun	Jupun	■ Fax: 81-3-5908-2155			
Korea	Korea	Telephone: 82-2-3429-8800			
		• Fax: 82-2-3452-9748			
		Email: songk@cisco.com			
China (mainland)	China	Telephone: 86-21-2401-4433			
		■ Fax: 86-21-2401-4455			
		Email: xishan@cisco.com			
All other Asia Pacific	Hong Kong	 Telephone: 852-2588-4746 			
countries & Australia		• Fax: 852-2588-3139			
		 Email: saapac-support@cisco.com 			
Brazil	Brazil	 Telephone: 11-55-08-9999 			
		• Fax: 11-55-08-9998			
		Email: fattinl@cisco.com or ecavalhe@cisco.com			
Mexico, Mexico		For Technical Support, call:			
Central America,		 Telephone: 52-3515152599 			
Caribbean		• Fax: 52-3515152599			
		For Customer Service, call:			
		 Telephone: 52-55-50-81-8425 			
		Fax: 52-55-52-61-0893			
		Email: sa-latam-cs@cisco.com			

For Information

Region	Centers	Telephone and Fax Numbers
All other	Argentina	For <i>Technical Support</i> , call:
Latin America countries		Telephone: 54-23-20-403340 ext 109
		Fax: 54-23-20-403340 ext 103
		For Customer Service, call:
		 Telephone: 770-236-5662
		Fax: 770-236-5888
		Email: keillov@cisco.com

ılıılı cısco

5030 Sugarloaf Parkway, Box 465447 Lawrenceville, GA 30042 678.277.1000

Cisco, Cisco Systems, the Cisco logo, the Cisco Systems logo, and PowerKEY are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

DOCSIS is a registered trademark of Cable Television Laboratories, Inc.

DVB is a registered trademark of the DVB project.

All other trademarks mentioned in this document are the property of their respective owners. Product and service availability are subject to change without notice.

© 2009 Cisco Systems, Inc. All rights reserved. Printed in United States of America November 2009 Part Number 7019551 Rev A