


HomePlug Module

for DigiStar Ethernet over Coax Aggregation Point (AP)

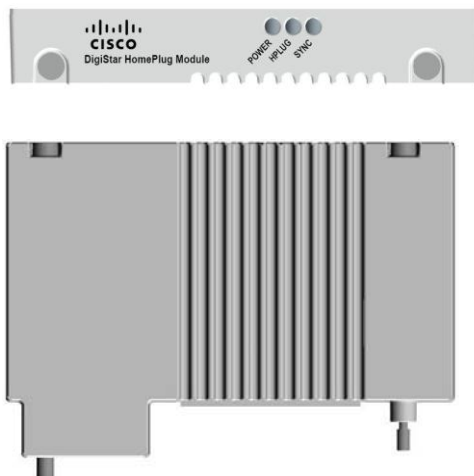

Introduction

This installation quick reference is intended for individuals responsible for installing the HomePlug module for the DigiStar Ethernet over Coax Aggregation Point (AP).


CAUTION

Power off the AP before removing or installing the HomePlug Module. Hot swapping the HomePlug Module may damage the AP and HomePlug Module. Do not force the HomePlug Module connector into the main board connector. It may damage the connectors on the HomePlug Module and the main board.

HomePlug Module Installation

Module 1 Installation


1. Power off the AP.
2. If HomePlug module 1 was previously installed, unscrew the two module screws, and gently remove the HomePlug module.
3. Place module 1 in a vertical position and align its Front Surface with Edge A of the metal cover as shown on the right.
4. Insert the two module screws into the screw holes and the single guide hole.
5. Gently adjust the module to align and guide the module connector into the main board connector.
6. Gently press module 1 and confirm that the module connector is inserted completely into the main board connector.
7. Do not force the module connector into the main board connector. Repeat steps 4-7 if you find it difficult to insert the module connector into the main board connector.
8. Tighten the two module screws with a flat-tip driver from 0.39 Nm to 0.98 Nm.

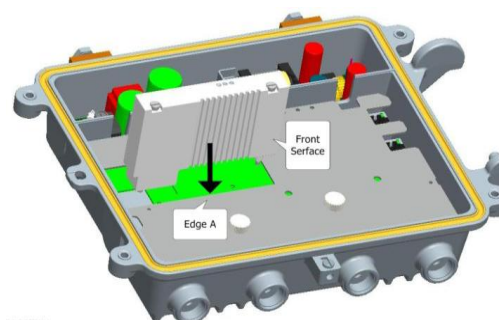

Module 1 Installation

Module 2 Installation

1. Power off the AP.
2. If the HomePlug Module 2 was previously installed, unscrew the two module screws, and gently remove the HomePlug Module.
3. Place Module 2 in a vertical position and align its Back Surface with Edge B of the white cover as shown below.
4. Insert the two module screws into the screw holes.
5. Gently adjust the module to align and guide the module connector into the main board connector.
6. Gently press Module 2 and confirm that the module connector is inserted completely into the main board connector.
7. Do not force the module connector into the main board connector. Repeat steps 4-7 if you find it difficult to insert the module connector into the main board connector.
8. Tighten the two module screws with a flat tip driver from 0.39 Nm to 0.98 Nm.

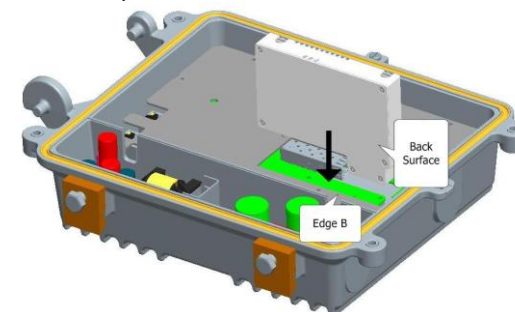


Module 2 Installation Module 3 and Module 4 Installation

Follow the instructions below if you need to install Module 3 and Module 4.

1. Perform the same steps of **Module 1 Installation** to install Module 3.
2. Perform the same process of **Module 2 Installation** to install Module 4.

用于 DigiStar 以太网同轴网络局端设备 (AP) 的

HomePlug 模块

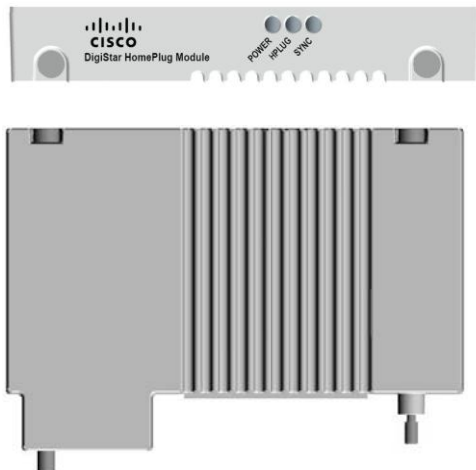

简介

本手册供负责在 DigiStar 以太网同轴网络局端设备 (AP) HomePlug 模块的安装人员参考。如需获得更多关于安全、安装和操作的信息。

⚠ 注意

卸下或安装 HomePlug 模块之前请关闭 AP 的电源。热插拔 HomePlug 模块可能会损坏 AP 主板和 HomePlug 模块。


请勿强行将 HomePlug 模块连接器插入主板连接器。它可能会损坏 HomePlug 模块上的连接器以及主板上的连接器。

HomePlug 模块安装

模块 1 安装

请按照以下步骤安装 HomePlug 模块 1。

- 1 确认 AP 已关闭电源。
- 2 将模块 1 垂直放置并将其正面与金属盖板的边沿 A 对齐，如右所示。
- 3 将 2 个模块螺丝分别与其螺孔及导孔对齐。
- 4 轻轻地调整模块，以对齐并引导模块连接器进入主板连接器。
- 5 轻轻地按压模块 1，并确认模块连接器已全部插入到主板连接器。
- 6 请勿强行将模块连接器插入主板连接器。如果您发现难以将模块连接器插入主板连接器，请重复第 4-5 步。
- 7 使用一字螺丝刀以 0.39 Nm 至 0.98 Nm 的扭力拧紧 2 个模块螺丝。

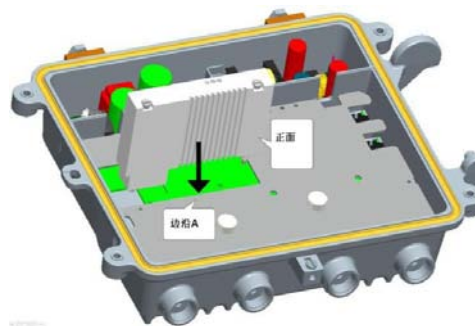


模块 1 安装

模块 2 安装

请按照以下步骤安装 HomePlug 模块 2。

- 1 关闭 AP 的电源。
- 2 将模块 2 垂直放置并将其背面与金属盖板的边沿 B 对齐，如下所示。
- 3 将 2 个模块螺丝分别与其螺孔对齐。
- 4 轻轻地调整模块，以对齐并引导模块连接器进入主板连接器。
- 5 轻轻地按压模块 2，并确认模块连接器已全部插入到主板连接器。
- 6 请勿强行将模块连接器插入主板连接器。如果您发现难以将模块连接器插入主板连接器，请重复第 4-5 步。
- 7 使用一字螺丝刀以 0.39 Nm 至 0.98 Nm 的扭力拧紧 2 个模块螺丝。

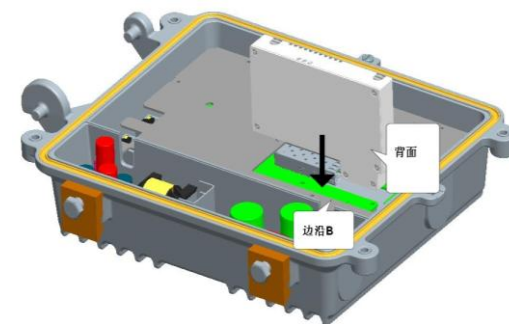

模块 2 安装

模块 3 和模块 4 安装

如需安装模块 3 和模块 4，参照如下方法安装。

1. 按照**安装模块 1**相同方式安装模块 3。
2. 按照**安装模块 2**相同方式安装模块 4。