


HPNA Module

for DigiStar Ethernet over Coax Aggregation Point (AP)

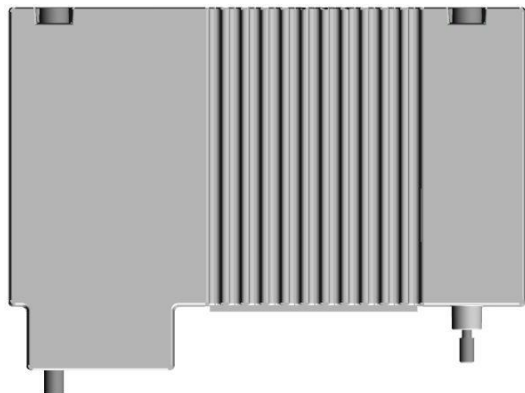

Introduction

This installation quick reference is intended for individuals responsible for installing the HPNA module for the DigiStar Ethernet over Coax Aggregation Point (AP). For complete information about Safety Instructions, Installation and Operation, see the ***DigiStar Ethernet over Coax (EoC) Aggregation Point (AP) E230 Installation and Operation Guide***, part number 4040978.

NOTE


Power off the AP before removing or installing the HPNA module. Hot swapping the HPNA module may damage the AP and HPNA module.
Do not force the HPNA module connector into the main board connector. It may damage the connectors on the HPNA module and the main board.

HPNA Module Installation

Module 1 Installation

Follow the instructions below to install HPNA module 1.

1. Power off the AP.
2. Place module 1 in a vertical position and align its Front Surface with Edge A of the white cover as shown on the right.
3. Insert the two module screws into the screw holes and the single guide hole.
4. Gently adjust the module to align and guide the module connector into the main board connector.
5. Gently press module 1 and confirm that the module connector is inserted completely into the main board connector.
6. Do not force the module connector into the main board connector. Repeat steps 4-5 if you find it difficult to insert the module connector into the main board connector.
7. Tighten the two module screws with a flat tip driver from 0.39 Nm to 0.98 Nm.

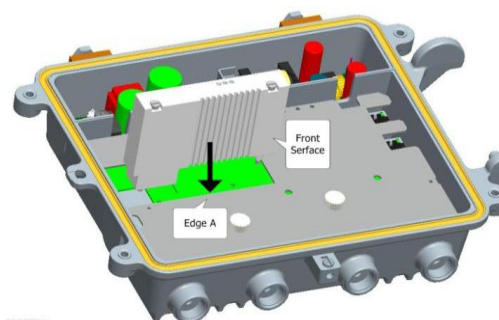


Module 1 Installation

Module 2 Installation

Follow the instructions below to install HPNA module 2.


1. Power off the AP.
2. Place module 2 in a vertical position and align its Back Surface with Edge B of the white cover as shown below.
3. Insert the two module screws into the screw holes.
4. Gently adjust the module to align and guide the module connector into the main board connector.
5. Gently press module 2 and confirm that the module connector is inserted completely into the main board connector.
6. Do not force the module connector into the main board connector. Repeat steps 4-5 if you find it difficult to insert the module connector into the main board connector.
7. Tighten the two module screws with a flat tip driver from 0.39 Nm to 0.98 Nm.

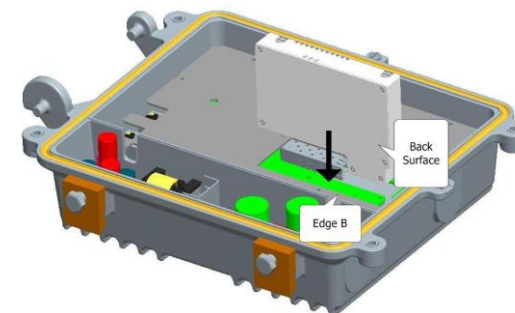

Module 2 Installation

用于 DigiStar 以太网同轴网络局端设备 (AP) 的

HPNA 模块

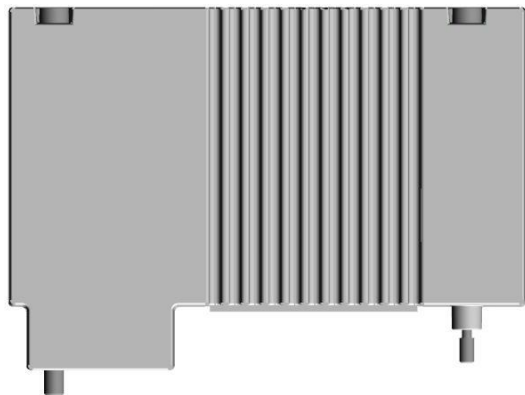

简介

此快速安装指南供负责在 DigiStar 以太网同轴网络局端设备 (AP) 中安装 HPNA 模块的人员参考。如需获得更多关于安全、安装和操作的信息,可参考 **DigiStar 以太网同轴网络 (EoC) 局端设备 (AP) E230 安装与操作手册**, 部件号 4040979。

注意

卸下或安装 HPNA 模块之前请关闭 AP 的电源。热插拔 HPNA 模块可能会损坏 AP 主板和 HPNA 模块。


请勿强行将 HPNA 模块连接器插入主板连接器。它可能会损坏 HPNA 模块上的连接器以及主板上的连接器。

HPNA 模块安装

模块 1 安装

请按照以下步骤安装 HPNA 模块 1。

1. 关闭 AP 的电源。
2. 将模块 1 垂直放置并将其正面与白色盖板的边沿 A 对齐, 如右所示。
3. 将 2 个模块螺丝分别与其螺孔及导孔对齐。
4. 轻轻地调整模块, 以对齐并引导模块连接器进入主板连接器。
5. 轻轻地按压模块 1, 并确认模块连接器已全部插入到主板连接器。
6. 请勿强行将模块连接器插入主板连接器。如果您发现难以将模块连接器插入主板连接器, 请重复第 4-5 步。
7. 使用一字螺丝刀以 0.39 Nm 至 0.98 Nm 的扭力拧紧 2 个模块螺丝。

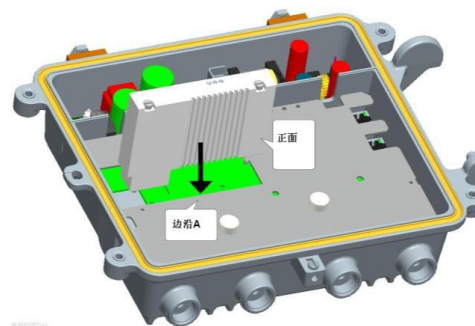


模块 1 安装

模块 2 安装

请按照以下步骤安装 HPNA 模块 2。

1. 关闭 AP 的电源。
2. 将模块 2 垂直放置并将其背面与白色盖板的边沿 B 对齐, 如下所示。
3. 将 2 个模块螺丝分别与其螺孔对齐。
4. 轻轻地调整模块, 以对齐并引导模块连接器进入主板连接器。
5. 轻轻地按压模块 2, 并确认模块连接器已全部插入到主板连接器。
6. 请勿强行将模块连接器插入主板连接器。如果您发现难以将模块连接器插入主板连接器, 请重复第 4-5 步。
7. 使用一字螺丝刀以 0.39 Nm 至 0.98 Nm 的扭力拧紧 2 个模块螺丝。

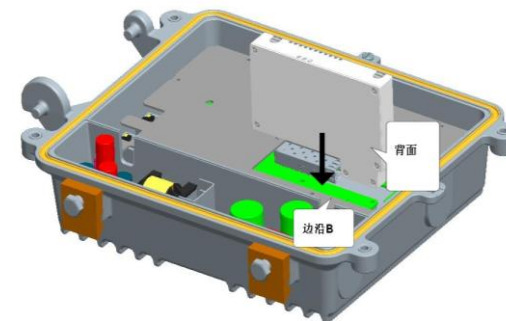

模块 2 安装