

# Preface

This preface describes the objectives and organization of this guide and contains the following sections:

- Document Revision History, page v
- Document Organization, page v
- Audience, page vi
- Conventions, page vi
- Related Documentation, page vi
- Obtaining Documentation and Submitting a Service Request, page vii

### **Document Revision History**

Table 1 records the technical changes to the Document Revision History.

#### Table 1 Document Revision History

<b>Document Version</b>	Date	Change Summary
OL-30192-01	May 25, 2013	This is the first release of this document.

## **Document Organization**

Table 2 describes the organization of the document.

#### Table 2 Document Organization

Chapter	Description
Chapter 1, "Command-Line Interface Command Summary"	This chapter describes how to use the VQE- $C^1$ CLI <sup>2</sup> to configure software features.
Chapter 2, "Cisco VQE-C Software Commands"	This chapter provides a complete list of Cisco VQE-C commands, listed alphabetically.

1. Visual Quality Experience - Client

2. CLI = command-line interface

### Audience

This document is intended as a reference for the VQE-C CLI commands. It assumes the reader is familiar with terms and concepts such as dropping packets, tuners, and error repair as they relate to VQE-C. More information on these topics can be found in the high-level VQE reference documents and the VQE-C System Integration Guide.

### Conventions

This publication uses various conventions to convey instructions and information.

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) means optional elements.
- Braces ( { } ) group required choices, and vertical bars ( | ) separate the alternative elements.
- Braces and vertical bars within square brackets ([{|}]) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in screen font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (<>).

Notes, cautions, and warnings use these conventions and symbols:

Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

### **Related Documentation**

These documents provide complete information about the CDS and are available from Cisco.com:

- Cisco CDA Visual Quality Experience Client System Configuration Guide
- Release Notes for Cisco CDA Visual Quality Experience Application, Release 3.7
- Cisco CDA Visual Quality Experience Application User Guide, Release 3.7
- Cisco Content Delivery Engine 205/220/250/420 Hardware Installation Guide
- Regulatory Compliance and Safety Information for the Cisco Content Delivery Engines
- Open Source Used in Visual Quality Experience 3.7

# **Obtaining Documentation and Submitting a Service Request**

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.