



## INDEX

---

### A

address settings  
    changing **3-3**

---

### C

Chinese **3-1**  
cold start **7-2, 7-4**  
configuration procedures  
    configure dynamic layouts **5-3**  
    configure H.323 gatekeeper settings **4-1**  
    configure PIN settings **5-9**  
    configure SIP Proxy settings **4-1**  
    import settings **9-2**  
    methods for creating conferences **5-2**  
    select language **3-1**

---

### D

dynamic layouts **5-3**

---

### E

encryption  
    support **5-7**  
English **3-1**  
external programs **3-4**

---

### F

factory default settings **9-2**  
FTP **3-4**

---

---

### H

HTTPS **3-4**  
    Import Certificate **3-4**  
    Manage Certificate **3-4**

---

### I

ICMP **3-4**  
importing configuration settings **9-2**

---

### J

Japanese **3-1**

---

### L

language support **3-1**  
layouts  
    display name in video layout frame **5-7**  
link down **7-1, 7-3**  
link up **7-1, 7-3**  
log notify level filter **9-5**

---

### M

MCU messages **6-3**  
media processor  
    registration failure **7-2, 7-4**

---

### P

PIN

settings **5-9**  
PIN Settings tab **5-9**  
Portuguese **3-1**  
presentation  
    view **5-7**  
protocol settings **4-1**

---

## W

warm start **7-1, 7-4**  
web server certificate  
    creating **3-4**  
    importing **3-4**

---

## R

restoring factory default settings **9-2**  
Russian **3-1**

---

## S

saving configuration settings **9-1**  
services configuration **5-3**  
Services tab **5-4**  
SIP Proxy  
    settings **4-1**  
SNMP **3-4**  
Spanish **3-1**  
system procedures  
    change address settings **3-3**  
    configure external program access **3-4**  
    configure security **3-4**

---

## T

Telnet **3-4**  
text-based commands  
    See advanced commands **9-3**

---

## U

user interface language **3-1**  
user types  
    administrators **8-2**  
    operators **8-2**