



INDEX

B

background download [17](#)
backup
 numbering scheme [31](#)
 procedure [31](#)
backup category command [32](#)
backup file commands [31](#)
backup server command [32](#)
boot helper installation [3](#)
boot loader [25](#)

C

Cisco Analog Video Gateway Module
 software files [12, 13, 19, 26, 27](#)
Cisco Analog Video Gateway Network Module software
website [12, 13, 18, 19, 26, 27](#)
clean installation [17](#)
clean installation, definition [2](#)
command
 backup category [32](#)
 backup server [32](#)
 configure terminal [32](#)
 continue [32](#)
 enable [32](#)
 exit [32](#)
 interface Service-Engine [8](#)
 ip address [8](#)
 ip unnumbered [8](#)
 offline [32, 35](#)
 reload [35](#)
 restore id [35](#)

 show backup history [32, 35](#)
 show backup server [32, 35](#)
 show software versions [15](#)
commands, file backup [31](#)
configure terminal command [32](#)
configuring server parameters [27](#)
continue command [32](#)

D

default gateway [7](#)
download, background [17](#)
downloading software image [29](#)

E

enable command [32](#)
erasing hard drive [17](#)
exit command [32](#)

F

feature navigator [5](#)
file storage [12, 14, 19, 29, 30](#)

G

graceful shutdown [3](#)

H

hard drive, erasing [17](#)

I

installation

- boot helper [3](#)
- clean [17](#)
- upgrade [2](#)

installing

- software image [26](#)
- upgrades [18](#)

interface Service-Engine command [8](#)ip address command [8](#)ip unnumbered command [8](#)

Llocal disk drive [12, 14, 19, 29, 30](#)

Mmodule command set [3](#)

Nnumbering scheme, backup files [31](#)

Ooffline command [32, 35](#)offline mode [31, 35](#)

Pprevious release, upgrading from [11](#)

Rreload command [35](#)restore id command [35](#)

Sserver parameter configuration [27](#)show backup history command [32, 35](#)show backup server command [32, 35](#)show software versions command [15](#)software center download website [5](#)software files [12, 13, 19, 26, 27](#)

software image

- downloading [29](#)
- installing [26](#)
- upgrading [11](#)

software install clean command [2](#)software install upgrade command [2](#)spare modules [7](#)

U

uninterruptible power supply. See also UPS

upgrade

- installation, definition [2](#)
- processes and procedures [2](#)

upgrading

- from a previous release [11](#)
- software image [11](#)

UPS [3](#)