



INDEX

C

checking Cisco IOS release [4](#)

Cisco IOS command

- CLI commands [23](#)
- service-module integrated-service-engine [27](#)
- show controller integrated-service-engine [29](#)
- show interfaces integrated-service-engine [34](#)

Cisco IOS software [2](#)

Cisco ISR [2](#)

CLI environment

- entering [5](#)
- exiting [6](#)

closing a module session [10](#)

command

- export mount-point [24](#)
- format storages [25](#)
- service-module [6](#)
- session [6](#)
- telnet [6](#)

configuration mode, definition [5](#)

configuring router/module interfaces [7](#)

D

disk partition SNMP threshold [20](#)

E

entering CLI environment [5](#)

exiting CLI environment [6](#)

export mount-point command [24](#)

F

format storages command [25](#)

free swap space SNMP threshold [20](#)

G

graceful shutdown [4](#)

I

idle CPU SNMP threshold [20](#)

IOS command. See Cisco IOS command.

L

Linux-based application [2](#)

location of module in router [4](#)

M

modes, user EXEC, privileged EXEC, and configuration [5](#)

module location in router [4](#)

N

nongraceful shutdown [4](#)

O

opening a module session [10](#)

P

privileged EXEC mode, definition [5](#)

S

service-module command [6](#)

service-module integrated-service-engine Cisco IOS
command [27](#)

session command [6](#)

show controller integrated-service-engine Cisco IOS
command [29](#)

show interfaces integrated-service-engine Cisco IOS
command [34](#)

shutting down the network module [14](#)

SNMP

 disk partition threshold [20](#)

 free swap space threshold [20](#)

 idle CPU threshold [20](#)

starting up the network module [14](#)

syslog [17](#)

T

telnet command [6](#)

Telnet session [5](#)

trace logs [17](#)

U

user EXEC mode, definition [5](#)

V

verifying system status [15](#)