



## Preface

This preface describes the objectives and organization of this guide and contains the following sections:

- [Document Revision History, page ix](#)
- [Document Organization, page ix](#)
- [Audience, page x](#)
- [Conventions, page x](#)
- [Related Documentation, page xi](#)
- [Obtaining Documentation and Submitting a Service Request, page xi](#)

## Document Revision History

[Table 1](#) records the technical changes to the Document Revision History.

**Table 1** *Document Revision History*

Document Version	Date	Change Summary
OL-29483-01	April,2013	This is the first release of this document.
OL-29483-02	May,2013	Updated the title to 1.0.1 and modified the release date.

## Document Organization

[Table 2](#) describes the organization of the document.

**Table 2** *Document Organization*

Chapter	Description
<a href="#">Chapter 1, “Command-Line Interface Command Summary”</a>	This chapter describes how to use the VDS-SB <sup>1</sup> CLI <sup>2</sup> to configure software features.
<a href="#">Chapter 2, “Cisco VDS Service Broker Release 1.0.1 Software Commands”</a>	This chapter provides a complete list of Cisco Internet Streamer commands, listed alphabetically.

**Table 2**      **Document Organization (continued)**

Chapter	Description
<a href="#">Appendix A, “Acronyms”</a>	This appendix lists the abbreviations and acronyms used in this guide.
<a href="#">Appendix B, “Standard Time Zones”</a>	This appendix lists all the standard time zones that you can configure on a CDE <sup>3</sup> and the offset from UTC <sup>4</sup> for each standard time zone.

1. VDS-SB = Videoscape Distribution Suite (VDS) Service Broker
2. CLI = command-line interface
3. CDE = content delivery engine
4. UTC = coordinated universal time

## Audience

This guide is for the networking professional using Cisco VDS Service Broker Release 1.0.1. Before using this guide, you should have experience working with the Cisco VDS Service Broker and the concepts and terminology of Ethernet and local area networking.

## Conventions

This publication uses various conventions to convey instructions and information.

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ( [ ] ) means optional elements.
- Braces ( { } ) group required choices, and vertical bars ( | ) separate the alternative elements.
- Braces and vertical bars within square brackets ( [ { | } ] ) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in `screen` font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (< >).

Notes, cautions, and warnings use these conventions and symbols:



### Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



### Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

## Related Documentation

These documents provide complete information about the VDS-SB and are available from [cisco.com](http://cisco.com):

- *Cisco VDS Service Broker 1.0.1 API Guide*
- *Cisco VDS Service Broker 1.0.1 Command Reference*
- *Cisco VDS Service Broker 1.0.1 Alarms and Error Messages Guide*
- *Release Notes for Cisco VDS Service Broker 1.0.1*
- *Open Sources Used in VDS Service Broker Release 1.0.*

You can access the software documents at the following URL:

[http://www.cisco.com/en/US/products/ps7127/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps7127/tsd_products_support_series_home.html)

These documents provide complete information about the installation and service of the C200 and C210 and are available from [cisco.com](http://cisco.com).

- Cisco UCS C200 Installation and Service Guide

[http://www.cisco.com/en/US/docs/unified\\_computing/ucs/c/hw/C200M1/install/c200M1.html](http://www.cisco.com/en/US/docs/unified_computing/ucs/c/hw/C200M1/install/c200M1.html)

- Cisco UCS C210 Installation and Service Guide

[http://www.cisco.com/en/US/docs/unified\\_computing/ucs/c/hw/C210M1/install/C210M1.html](http://www.cisco.com/en/US/docs/unified_computing/ucs/c/hw/C210M1/install/C210M1.html)

Cisco UCS B200 M3 Blade Server Installation and Service Note

[http://www.cisco.com/en/US/docs/unified\\_computing/ucs/hw/chassis/install/B200M3.html](http://www.cisco.com/en/US/docs/unified_computing/ucs/hw/chassis/install/B200M3.html)

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

