



A

- accounts, UOmni [1-12](#)
- adding
 - Bridge subscribers, with Bulk Import wizard [2-32](#)
 - Bridge subscribers, with the Bridge Administrator [2-33](#)
 - Bridge subscribers, with the Cisco Unity Administrator [2-33](#)
 - Bridge subscribers, with the Cisco Unity Bridge Mailbox Import tool [2-34](#)
 - delivery locations with Bulk Import wizard [2-13](#)
- addressing
 - Bridge subscribers [1-18](#)
 - message options [1-16](#)
 - messages, blind [1-17](#)
- automated attendant, setting search scope [2-37](#)

B

- backing up Bridge server [3-6](#)
- BANANA
 - about [2-22](#)
 - getting started [3-4](#)
 - installing [2-23](#)
 - test calls [2-24](#)
- blind addressing [1-17](#)
- Bridge Administrator
 - accessing [8-1](#)
 - adding password protection [2-18](#)
- bridgehead server [1-6](#)
- Bridge Mailbox Import tool [2-34](#)
- Bridge server
 - backing up [3-6](#)
 - configuring [2-16](#)

- directory list [8-14](#)
- line status [8-16](#)
- message delivery windows [8-13](#)
- Octel nodes [8-12](#)
- offline backup [3-7](#)
- online backup [3-6](#)
- queue status [8-18](#)
- restoring [3-7](#)
- system settings [8-1](#)
- Unity nodes [8-9](#)
- Bridge settings
 - delivery location prefix [7-4](#)
 - delivery location profile [7-1](#)
 - delivery location subscriber creation [7-5](#)
 - options [2-10](#)
 - subscriber creation options [7-6](#)
 - synchronization options [7-7](#)
- Bridge subscribers
 - appearance in Notes address book [1-24](#)
 - automatic creation, modification, and deletion, disabling [1-23](#)
 - call transfer settings [1-27](#)
 - creating subscriber accounts [2-27](#)
 - creation options settings [7-6](#)
 - deleting [1-22](#)
 - directory entries [1-11](#)
 - identified subscriber messaging [2-36](#)
 - limitations [1-18](#)
 - live reply [1-22](#)
 - overview [1-18](#)
- Bridge subscribers, licenses [1-18](#)
- Bridge Traffic Analyzer [3-5](#)
- Brooktrout traces [5-1](#)

Bulk Import wizard

- creating locations [2-12](#)
- errors, correcting [2-32](#)
- modifying existing delivery locations [2-14](#)
- overview [2-30](#)

C

- callers, identifying [1-21](#)
- call transfer settings for Bridge subscribers [1-27](#)
- codecs, supported by the Bridge [1-26](#)
- ConfigMgr.exe, using to install and configure components [2-9](#)
- CSV files
 - correcting delivery location import errors [2-13](#)
 - correcting import errors [2-32](#)
 - creating delivery locations [2-12](#)
 - preparing for import [2-30](#)

D

- deleting
 - Bridge subscribers [1-22](#)
 - UOmni mail file [1-12](#)
- delivery locations
 - correcting import errors [2-13](#)
 - creating [2-11](#)
 - creating, final tasks [2-25](#)
 - creating CSV files [2-12](#)
 - creating via Cisco Unity Administrator [2-11](#)
 - creating with Bulk Import wizard [2-13](#)
 - mailbox length [1-8](#)
 - modifying existing [2-14](#)
 - prefix [1-8](#)
- designating the bridgehead server [2-9](#)
- dial IDs
 - assigning [9-1](#)
 - changing minimum length [9-2](#)
 - guidelines for assigning [9-2](#)

- directories, synchronizing [1-12, 4-42](#)
- directory entries, correspondence to Bridge subscribers [1-11](#)
- directory information sharing [1-10](#)
- directory lookups, Asian and European names [1-28](#)
- directory messages, troubleshooting [4-42](#)
- disaster recovery [3-7](#)
- distribution lists [1-28](#)
- DNS [2-6](#)

E

- extension addresses [1-20](#)
- extensions
 - Bridge subscribers [1-19](#)
 - guidelines for assigning [9-2](#)

F

- failover and directory synchronization [1-13](#)
- Foreign domain
 - changing name [3-9](#)
 - name [1-15](#)

G

- glossary [A-1](#)

H

- HOSTS file [2-6](#)

I

- identified subscriber messaging
 - about [1-21](#)
 - about extending to include Bridge subscribers [2-36](#)
 - enabling [2-38](#)
 - extending to include Bridge subscribers [2-38](#)

inbound search scope [1-29](#)

Interop Gateway

- about [1-15](#)
- changing Foreign domain name [3-9](#)
- configuring [2-7](#)
- moving the mail file [3-11](#)
- verifying the configuration [2-8](#)

L

- licenses, Bridge subscribers [1-18](#)
- live reply, Bridge subscribers [1-22](#)
- locations
 - addressing options settings, reference [9-12](#)
 - Bridge [1-8](#)
 - Bridge delivery location profile settings [7-1](#)
 - delivery, creating [2-11](#)
 - delivery, creating, final tasks [2-25](#)
 - primary, addressing options settings, about [9-5](#)
 - primary, customizing [2-37](#)
 - primary, profile settings [9-3](#)
 - primary, profile settings, about [9-1](#)
 - settings overview [9-1](#)

M

- mailbox ID, adding to subscriber accounts [2-14](#)
- mailbox length [1-8](#)
- mail file, UOmni [1-12](#)
- maintenance [3-1](#)
- Max Ports per Node setting [3-2](#)
- message delivery window settings, adjusting [2-23](#)
- messages
 - address format [1-17](#)
 - addressing options [1-16](#)
 - delayed [1-29](#)
 - handling limitations [1-16](#)
 - leaving versus sending [1-21](#)

messaging protocols [1-4](#)

N

- NameNet emulation [1-10](#)
- name resolution [2-6](#)
- network settings
 - Bridge subscriber creation options [7-6](#)
 - Bridge synchronization options [7-7](#)
 - delivery locations profile [7-1](#)
 - location addressing options settings, reference [9-12](#)
 - primary location addressing options, about [9-5](#)
 - primary location profile settings, about [9-1](#)
 - primary location profile settings, reference [9-3](#)
- notable behavior [1-26](#)

O

- Octel analog network, testing [2-22](#)
- Octel nodes, representation in Cisco Unity [1-8](#)
- options settings
 - bridgehead server [2-10](#)
 - Bridge subscriber creation [7-6](#)
 - Bridge synchronization [7-7](#)

P

- password, Bridge Administrator [2-18](#)
- permissions required for identified subscriber
 - messaging [2-38](#)
- Person documents and connection to Bridge
 - subscribers [1-18](#)
- ports, controlling [3-1](#)
- prefixes [1-8](#)
- primary locations
 - addressing options settings, about [9-5](#)
 - addressing options settings, reference [9-12](#)
 - customizing [2-37](#)
 - profile settings, about [9-1](#)

profile settings, reference [9-3](#)
 settings overview [9-1](#)
 profile settings, Bridge delivery locations [7-1](#)

Q

Queued Call Threshold setting [3-2](#)

R

reference

settings on the Bridge server [8-1](#)
 settings on the Cisco Unity server [7-1](#)

relay server [2-4](#)

remote addresses [1-20](#)

removing

Bridge Networking completely [6-1](#)
 Bridge software [6-5](#)

resolving names and IP addresses [2-6](#)

restoring Bridge server [3-7](#)

S

search scopes

automated attendant, setting [2-37](#)
 how Cisco Unity searches for names [9-6](#)
 how Cisco Unity searches for numbers [9-6](#)
 inbound Bridge messages [1-29](#)

serial number, adding to subscriber accounts [2-14](#)

setup task list [2-2](#)

subscribers

addressing options [9-6](#)
 appearance in Notes address book [1-24](#)
 automatic creation, modification, and deletion,
 disabling [1-23](#)
 Bridge [1-18](#)
 call transfer settings [1-27](#)
 creating accounts [2-27](#)
 creation options [2-10](#)

creation options settings [7-6](#)

deleting [1-22](#)

directory entries [1-11](#)

experience with Bridge subscribers [1-21](#)

limitations [1-18](#)

overview [1-18](#)

synchronizing

Bridge subscribers with Octel node directories [4-45](#)

Cisco Unity subscribers with Unity node
 directories [4-46](#)

options [2-10](#)

T

testing

Octel analog network [2-22](#)
 setup [2-24](#)

troubleshooting

advanced [5-1](#)
 Brooktrout card [5-1](#)
 configuration problems [4-1](#)
 directory messages between Cisco Unity and the
 Bridge [4-42](#)
 directory synchronization tools [4-6](#)
 messages from Cisco Unity to Octel [4-7](#)
 messages from Octel to Cisco Unity [4-24](#)
 tools [4-4](#)

U

uninstalling Bridge software [6-5](#)

UOmni mail file [1-12](#)

utilities

BANANA [2-23](#)
 ConfigMgr.exe [2-9](#)

W

wizard, Bulk Import [2-30](#)