



INDEX

A

accounts, UOmni [1-16](#)

Active Directory

 changing the location in which automatically created
 VPIM subscribers are created [2-37](#)

 contacts [1-22](#)

 schema, extending [3-6](#)

adding

 Bridge subscribers, with Bulk Import wizard [2-33](#)

 Bridge subscribers, with the Bridge Administrator [2-35](#)

 Bridge subscribers, with the Cisco Unity
 Administrator [2-34](#)

 Bridge subscribers, with the Cisco Unity Bridge Mailbox
 Import tool [2-35](#)

 delivery locations with Bulk Import wizard [2-14](#)

addressing

 Bridge subscribers [1-22](#)

 message options [1-20](#)

 messages, blind [1-21](#)

alias, auto-created Bridge subscribers [1-16](#)

automated attendant, setting search scope [2-42](#)

B

backing up Bridge server [5-5](#)

BANANA

 about [2-23](#)

 getting started [5-3](#)

 installing [2-23](#)

 test calls [2-25](#)

blind addressing [1-21](#)

Bridge Administrator

 accessing [10-1](#)

adding password protection [2-19](#)

bridgehead server [1-9](#)

Bridge Mailbox Import tool [2-35](#)

Bridge server

 backing up [5-5](#)

 configuring [2-17](#)

 directory list [10-14](#)

 line status [10-16](#)

 message delivery windows [10-13](#)

 obtaining license file [3-4](#)

 Octel nodes [10-12](#)

 offline backup [5-6](#)

 online backup [5-6](#)

 queue status [10-18](#)

 restoring [5-7](#)

 system settings [10-1](#)

 Unity nodes [10-9](#)

Bridge settings

 delivery location prefix [9-5](#)

 delivery location profile [9-1](#)

 delivery location subscriber creation [9-5](#)

 options [2-11](#)

 subscriber creation options [9-6](#)

 synchronization options [9-8](#)

 unknown caller options [9-10](#)

Bridge subscribers

 alias [1-16](#)

 appearance in Outlook address book [1-29](#)

 automatic creation, modification, and deletion,
 disabling [1-28](#)

 call transfer settings [1-32](#)

 creating subscriber accounts [2-28](#)

 creation options settings [9-6](#)

- deleting [1-27](#)
- directory entries [1-15](#)
- identified subscriber messaging [2-40](#)
- licenses [1-22](#)
- limitations [1-22](#)
- live reply [1-26](#)
- overview [1-22](#)
- Bridge Traffic Analyzer [5-4](#)
- Brooktrout traces [7-1](#)
- Bulk Import wizard
 - creating locations [2-13](#)
 - errors, correcting [2-34](#)
 - modifying existing delivery locations [2-15](#)
 - overview [2-31](#)

- C**
- callers, identifying [1-25](#)
- call transfer settings for Bridge subscribers [1-32](#)
- codecs, supported by the Bridge [1-31](#)
- ConfigMgr.exe, using to install and configure components [2-10](#)
- contacts
 - and connection to Bridge subscribers [1-22](#)
 - appearance in Outlook address book [1-29](#)
- CSV files
 - correcting delivery location import errors [2-14](#)
 - correcting import errors [2-34](#)
 - creating delivery locations [2-13](#)
 - preparing for import [2-32](#)

- D**
- deleting
 - Bridge subscribers [1-27](#)
 - UOmni mailbox [1-16](#)
- delivery locations
 - correcting import errors [2-14](#)
 - creating [2-12](#)
- creating, final tasks [2-26](#)
- creating CSV files [2-13](#)
- creating via Cisco Unity Administrator [2-12](#)
- creating with Bulk Import wizard [2-14](#)
- mailbox length [1-12](#)
- modifying existing [2-15](#)
- prefix [1-12](#)
- designating the bridgehead server [2-10](#)
- dial IDs
 - assigning [11-1](#)
 - changing minimum length [11-2](#)
 - guidelines for assigning [11-2](#)
- directories, synchronizing [1-16, 6-44](#)
- directory entries, correspondence to Bridge subscribers [1-15](#)
- directory information sharing [1-14](#)
- directory lookups, Asian and European names [1-34](#)
- directory messages, troubleshooting [6-44](#)
- directory updates, changing the Active Directory location where VPIM subscribers are created [2-37](#)
- disaster recovery [5-7](#)
- distribution lists [1-34](#)
- DNS [2-6](#)

- E**
- e-mail
 - relaying through SMTP Virtual Server [2-7](#)
 - routing directly to the Bridge [2-7](#)
- Exchange
 - granting Bridge server e-mail relay permissions [2-7](#)
 - SMTP Connector [2-7](#)
- extension addresses [1-24](#)
- extensions
 - Bridge subscribers [1-23](#)
 - guidelines for assigning [11-2](#)

F

failover and directory synchronization [1-17](#)

G

glossary [A-1](#)

H

HOSTS file [2-6](#)

I

identified subscriber messaging

about [1-25](#)

about extending to include Bridge subscribers [2-40](#)

enabling [2-43](#)

extending to include Bridge subscribers [2-43](#)

IMCEA [1-19](#)

inbound search scope [1-35](#)

Internet Voice Connector. *See* Voice Connector

L

licenses

Bridge subscribers [1-22](#)

obtaining for Bridge server [3-4](#)

live reply, Bridge subscribers [1-26](#)

locations

addressing options settings, reference [11-12](#)

Bridge [1-12](#)

Bridge delivery location profile settings [9-1](#)

delivery, creating [2-12](#)

delivery, creating, final tasks [2-26](#)

primary, addressing options settings, about [11-6](#)

primary, customizing [2-41](#)

primary, profile settings [11-3](#)

primary, profile settings, about [11-1](#)

settings overview [11-1](#)

M

mailbox, UOmni [1-16](#)

mailbox ID, adding to subscriber accounts [2-15, 3-18](#)

mailbox length [1-12](#)

maintenance [5-1](#)

Max Ports per Node setting [5-2](#)

message delivery window settings, adjusting [2-24](#)

messages

address format [1-21](#)

addressing options [1-20](#)

delayed [1-35](#)

handling limitations [1-20](#)

leaving versus sending [1-25](#)

messaging protocols [1-7](#)

N

NameNet emulation [1-14](#)

name resolution [2-6](#)

network settings

Bridge subscriber creation options [9-6](#)

Bridge synchronization options [9-8](#)

delivery locations profile [9-1](#)

location addressing options settings, reference [11-12](#)

primary location addressing options, about [11-6](#)

primary location profile settings, about [11-1](#)

primary location profile settings, reference [11-3](#)

notable behavior [1-32](#)

O

Octel analog network, testing [2-23](#)

Octel nodes, representation in Cisco Unity [1-12](#)

options settings

bridgehead server [2-11](#)

Bridge subscriber creation [9-6](#)

Bridge synchronization [9-8](#)

P

password, Bridge Administrator [2-19](#)

permissions

creating Active Directory contacts [1-25](#)

required for identified subscriber messaging [2-42](#)

ports, controlling [5-1](#)

prefixes [1-12](#)

primary locations

addressing options settings, about [11-6](#)

addressing options settings, reference [11-12](#)

customizing [2-41](#)

profile settings, about [11-1](#)

profile settings, reference [11-3](#)

settings overview [11-1](#)

profile settings, Bridge delivery locations [9-1](#)

Q

Queued Call Threshold setting [5-2](#)

R

reference

settings on the Bridge server [10-1](#)

settings on the Cisco Unity server [9-1](#)

relay e-mail [2-7](#)

relay server [2-4](#)

remote addresses [1-24](#)

removing

Bridge Networking completely [8-1](#)

Bridge software [8-6](#)

resolving names and IP addresses [2-6](#)

restoring Bridge server [5-7](#)

S

search scopes

automated attendant, setting [2-42](#)

how Cisco Unity searches for names [11-6](#)

how Cisco Unity searches for numbers [11-7](#)

inbound Bridge messages [1-35](#)

serial number, adding to subscriber accounts [2-15, 3-18](#)

setup task list [2-2](#)

SMTP Connector [2-7](#)

SMTP Virtual Server, configuring [2-7](#)

subscribers

addressing options [11-6](#)

alias [1-16](#)

appearance in Outlook address book [1-29](#)

automatic creation, modification, and deletion,
disabling [1-28](#)

Bridge [1-22](#)

call transfer settings [1-32](#)

creating accounts [2-28](#)

creation options [2-11](#)

creation options settings [9-6](#)

deleting [1-27](#)

directory entries [1-15](#)

experience with Bridge subscribers [1-25](#)

limitations [1-22](#)

overview [1-22](#)

synchronizing

Bridge subscribers with Octel node directories [6-46](#)

Cisco Unity subscribers with Unity node
directories [6-47](#)

options [2-11](#)

T

testing

Octel analog network [2-23](#)

setup [2-25](#)
 troubleshooting
 advanced [7-1](#)
 Brooktrout card [7-1](#)
 configuration problems [6-1](#)
 directory messages between Cisco Unity and the Bridge [6-44](#)
 directory synchronization tools [6-5](#)
 Exchange tools [6-5](#)
 messages from Cisco Unity to Octel [6-5](#)
 messages from Octel to Cisco Unity [6-24](#)
 tools [6-3](#)
 Voice Connector logs [6-5](#)

W

Windows 2000 Script Host [2-9](#)
 wizard, Bulk Import [2-31](#)

U

uninstalling
 Bridge software [8-6](#)
 Voice Connector [8-6](#)
 UOmni mailbox [1-16](#)
 upgrading
 Bridge software [3-1](#)
 Cisco Unity software for Bridge Networking [4-1](#)
 utilities
 BANANA [2-23](#)
 ConfigMgr.exe [2-10](#)

V

Voice Connector
 about [1-19](#)
 determining version [3-13](#)
 installing [2-8](#)
 installing in another language [1-35](#)
 uninstalling [8-6](#)
 verify installation [2-9](#)

