

С

certificates deleting 6-2 displaying 6-2 downloading 6-2 downloading a signing request 6-7 expiration monitor fields (table) 6-9 managing 6-1 monitoring expiration dates 6-9 regenerating 6-2 uploading 6-4 Certificate Trust List See CTL cluster nodes fields (table) 3-1 procedure 3-1 CTL managing 6-1 uploading 6-4

Е

Ethernet settings 4-1

Η

ſ

hardware, status fields (table) 3-2 procedure 3-2

installed software fields (table) 3-4 procedure 3-3 IPSec changing policy 6-11 displaying policy 6-11 management 6-9 policy fields (table) 6-10 setting up new policy 6-9

L

logging in overview 2-1

Ν

network status fields (table) 3-3 nodes, cluster fields (table) 3-1 procedure 3-1 NTP server settings 4-2

0

operating system hardware status fields (table) 3-2 procedure 3-2 introduction 1-1

Cisco Unified Communications Operating System Administration Guide for Cisco Unity Connection Release 10.x

logging in 2-1 network status fields (table) 3-3 restart 5-1

Ρ

ping 8-1 publisher settings 4-2

R

remote support setting up 8-2 status fields (table) 8-2 restart current version 5-1

S

services ping 8-1 remote support overview 8-2 setting up 8-2 settings Ethernet fields (table) 4-2 procedure 4-1 IP 4-1 NTP servers 4-2 publisher 4-2 SMTP 4-3 time 4-4 shutdown, operating system 5-2 SMTP settings 4-3 software installed fields (table) 3-4

```
procedure 3-3

status

hardware

fields (table) 3-2

procedure 3-2

network

fields (table) 3-3

system

fields (table) 3-4

procedure 3-4

shutdown 5-2

status

fields (table) 3-4

procedure 3-4
```

Т

time settings 4-4

V

version, restart 5-1