



Cisco Unity Connection SRSV Administration - Networking Settings Interface

See the following sections:

- [Central Server Configuration, page 12-1](#)
- [Configuring Central Server in Cisco Unity Connection SRSV, page 12-1](#)

Central Server Configuration

Table 12-1 *Central Server Configuration Page*

Field	Description
Server Address	The Fully Qualified Domain Name (FQDN) address of the Cisco Unity Connection server, server host name or FQDN. To implement the Connection SRSV High Availability functionality, you must mention a common DNS A Record for both publisher and subscriber for central Unity Connection server.
Test	Confirms the connectivity with the central Unity Connection server. On the successful result, the status “Central Server Active” is displayed.

Configuring Central Server in Cisco Unity Connection SRSV

Do the following procedure.

To configure Conversation settings

- Step 1** In Cisco Unity Connection SRSV Administration, expand **Networking**, then select **Central Server Configuration**.
- Step 2** On the Central Server Configuration page, enter the applicable settings.
- Step 3** Select **Save**.

**Note**

A branch can be connected to only one central Unity Connection.
