



INDEX

A

adding a server to create a cluster [8-1](#)
associated components on which IP address of server must be changed [9-2](#)

C

changing
 IP address for publisher defined by host name [9-7](#)
 IP address for publisher defined by IP address [9-9](#)
 IP address for single server defined by an IP address (no cluster) [9-5](#)
 IP address for single server that is defined by a hostname (no cluster) [9-3](#)
 IP address for subscriber defined by host name [9-12](#)
 IP address for subscriber defined by IP address [9-14](#)
 language settings [6-7](#)
cluster
 replacing publisher and subscriber servers [7-9](#)
 replacing publisher server [7-2](#)
 replacing subscriber server [7-5](#)
 reverting servers to version on inactive partition [3-2](#)
COBRAS
 for migrating data from 1.x to 7.x [4-1](#)
 for migrating data from Cisco Unity 4.x to Connection 7.x [5-1](#)
 importing user data and messages from Cisco Unity 4.x to Connection 7.x [5-8](#)
conventions, documentation [-vii](#)
converting publisher to single server without a cluster [8-3](#)

D

database replication, resetting after reverting servers in a cluster to version on inactive partition [3-3](#)
documentation conventions [-vii](#)

E

effects of reverting to version on inactive partition [3-1](#)

H

hard disks
 replacing for 1.x to 7.x migration [4-5](#)
 replacing for 2.x or later upgrade to 7.x [2-3](#)
 replacing for Cisco Unity 4.x to Connection 7.x migration [5-5](#)
host name, determining whether servers are defined by [9-1](#)

I

importing user data and messages
 with 1.x to 2.x Migration Import tool [4-9](#)
 with Cisco COBRAS [5-8](#)
 with Cisco Unity 4.x to Connection 2.x Migration Import tool [5-9](#)
installing
 memory upgrade for 1.x to 7.x migration [4-5](#)
 memory upgrade for 2.x or later upgrade to 7.x [2-3](#)
 memory upgrade for Cisco Unity 4.x to Connection 7.x migration [5-5](#)
IP addresses
 changing for publisher defined by host name [9-7](#)

- changing for publisher defined by IP address [9-9](#)
- changing for single server defined by a hostname (no cluster) [9-3](#)
- changing for single server defined by an IP address (no cluster) [9-5](#)
- changing for subscriber defined by host name [9-12](#)
- changing for subscriber defined by IP address [9-14](#)
- changing on associated components [9-2](#)
- determining whether servers are defined by [9-1](#)

L

languages

- adding to a Connection cluster (task list) [6-2](#)
- adding to a Connection server without a cluster (task list) [6-1](#)
- changing settings [6-7](#)
- removing files [6-7](#)

M

memory upgrade

- installing for 1.x to 7.x migration [4-5](#)
- installing for 2.x or later upgrade to 7.x [2-3](#)
- installing for Cisco Unity 4.x to Connection 7.x migration [5-5](#)

messages, importing with COBRAS

- from Cisco Unity 4.x to Connection 7.x [5-8](#)

messages, importing with Migration Import tool

- from 1.x to 7.x [4-9](#)
- from Cisco Unity 4.x to Connection 7.x [5-9](#)

migrating

- from 1.x to 7.x, task list [4-2](#)
- from Cisco Unity 4.x to Connection 7.x, task list [5-2](#)

Migration Export tool

- for migrating data from 1.x to 7.x [4-2](#)
- for migrating data from Cisco Unity 4.x to Connection 7.x [5-2](#)

Migration Import tool

- importing user data and messages from 1.x to 7.x [4-9](#)

- importing user data and messages from Cisco Unity 4.x to Connection 7.x [5-9](#)

P

preparing to create user accounts with multiple templates

- for 1.x to 7.x migration [4-8](#)
- for Cisco Unity 4.x to Connection 7.x migration [5-8](#)

publisher server

- converting to single server without a cluster [8-3](#)
- renaming [10-3](#)
- replacing [7-2](#)
- replacing along with subscriber server [7-9](#)
- reverting to version on inactive partition [3-2](#)

R

removing language files [6-7](#)

renaming

- publisher server [10-3](#)
- single server without a cluster [10-1](#)
- subscriber server [10-6](#)

replacing

- hard disks for 1.x to 7.x migration [4-5](#)
- hard disks for 2.x or later upgrade to 7.x [2-3](#)
- hard disks for Cisco Unity 4.x to Connection 7.x migration [5-5](#)
- publisher and subscriber servers [7-9](#)
- publisher server [7-2](#)
- single server without Connection cluster [7-1](#)
- subscriber server [7-5](#)

resetting database replication in a cluster after reverting servers to version on inactive partition [3-3](#)

reverting

- effects of [3-1](#)
- server, or publisher server in a cluster to version on inactive partition [3-2](#)
- servers in a cluster to version on inactive partition [3-2](#)

subscriber server in a cluster to version on inactive partition [3-3](#)

S

servers

- adding to create a cluster [8-1](#)
- associated components on which IP address must be changed [9-2](#)
- changing IP address for publisher defined by host name [9-7](#)
- changing IP address for publisher defined by IP address [9-9](#)
- changing IP address for single defined by a hostname (no cluster) [9-3](#)
- changing IP address for single server defined by an IP address (no cluster) [9-5](#)
- changing IP address for subscriber defined by host name [9-12](#)
- changing IP address for subscriber defined by IP address [9-14](#)
- converting publisher to single server without a cluster [8-3](#)
- determining whether server is defined by host name or IP address [9-1](#)
- renaming publisher [10-3](#)
- renaming single without a cluster [10-1](#)
- renaming subscriber [10-6](#)
- replacing publisher [7-2](#)
- replacing publisher and subscriber [7-9](#)
- replacing single without Connection cluster [7-1](#)
- replacing subscriber [7-5](#)
- reverting to version on inactive partition in a cluster [3-2](#)

software, reverting to version on inactive partition [3-1](#)

subscriber server

- renaming [10-6](#)
- replacing [7-5](#)
- replacing along with publisher server [7-9](#)
- reverting to version on inactive partition [3-3](#)

T

task lists

- for adding languages to a Connection cluster [6-2](#)
- for adding languages to a Connection server without a cluster [6-1](#)
- for migrating from 1.x to 7.x [4-2](#)
- for migrating from Cisco Unity 4.x to Connection 7.x [5-2](#)
- for reverting servers in a cluster to version on inactive partition [3-2](#)
- for upgrading Connection 2.x software to shipping 7.x version [2-1](#)
- for upgrading Connection 7.x software to shipping 7.x version (no cluster) [1-1](#)
- for upgrading Connection 7.x software to shipping 7.x version in a Connection cluster [1-2](#)

tools for migrating data

- from 1.x to 7.x, about [4-1](#)
- from Cisco Unity 4.x to Connection 7.x, about [5-1](#)

U

upgrading

- Connection 2.x software to shipping 7.x version (task list) [2-1](#)
- Connection 7.x software to shipping 7.x version, no cluster (task list) [1-1](#)
- Connection 7.x software to shipping 7.x version in a Connection cluster (task list) [1-2](#)

user accounts, preparing to create with multiple templates

- for 1.x to 7.x migration [4-8](#)
- for Cisco Unity 4.x to Connection 7.x migration [5-8](#)

user data, importing with COBRAS

- from Cisco Unity 4.x to Connection 7.x [5-8](#)

user data, importing with Migration Import tool

- from 1.x to 7.x [4-9](#)
- from Cisco Unity 4.x to Connection 7.x [5-9](#)

