



## INDEX

---

### A

abbreviated extensions [6-10](#)

accounts

- Operator [19-6](#)
- UndeliverableMessagesMailbox [19-6](#)
- Unity Connection Messaging System [19-6](#)

adding

- alternate names for a system distribution list [27-5](#)
- AXL servers [29-5](#)
- Cisco Unified Communications Manager servers [29-10](#)
- description of message attachments [38-1](#)
- global nicknames to list [14-16](#)
- integration, phone system [29-2](#)
- members to system distribution lists [27-4](#)
- PIMG/TIMG units [29-15](#)
- port [29-17](#)
- port group [29-8](#)
- SIP server [29-13](#)
- system distribution lists [27-2](#)
- TFTP server [29-12](#)

All Hours schedule [10-1, 33-1](#)

All Voicemail Users distribution list [27-1](#)

alternate contact numbers, configuring for call handlers [6-9](#)

alternate conversations

- Optional Conversation 1 [13-3](#)
- overview [13-3](#)

alternate names, adding for system distribution lists [27-5](#)

application plug-ins [3-2](#)

Attempt Forward call routing rule [9-1](#)

Attempt Sign-In call routing rule [9-1](#)

audio format

changing for calls [16-1, 29-9](#)

changing for recordings [16-2, 17-5, 19-4](#)

authentication, configuring LDAP [41-10](#)

authentication rules

- default rules [18-2](#)
- overview [18-2](#)

automated attendant [4-9](#)

AXL servers

- adding [29-5](#)
- changing settings [29-7](#)
- deleting [29-6](#)

---

### B

backing up and restoring data [3-7](#)

backup and restore application for migrations (COBRAS) [3-2](#)

Broadcast Message Administrator

- setting up access [26-2](#)
- using [26-6](#)

broadcast messages

- changing default settings [26-7](#)
- overview [26-1](#)
- setting up access for sending [26-2](#)

Bulk Administration Tool, accessing [3-3](#)

---

### C

calendar integration

- about [34-1](#)
- creating with Cisco Unified MeetingPlace [34-16](#)
- creating with Cisco Unified MeetingPlace Express [34-21](#)
- creating with Exchange 2003 [34-9](#)

- creating with Exchange 2007 [34-2](#)
- Exchange contacts [34-1](#)
- caller input settings, changing user sign-in settings [14-11](#)
- caller options, user settings [13-6](#)
- call handlers
  - caller input and one-key dialing [6-9](#)
  - call transfer settings [6-15](#)
  - default [6-1](#)
  - deleting [6-16](#)
  - Goodbye [6-2](#)
  - greetings [6-6](#)
  - modifying [6-5](#)
  - Opening Greeting [6-1](#)
  - Operator [6-2](#)
  - overview [4-2](#)
  - Route From Next Call Routing Rule Action, using with routing rules [4-5](#)
  - taking messages [6-15](#)
  - templates, modifying [6-3, 6-4](#)
- call handler templates
  - creating [6-2](#)
  - default templates [6-2](#)
  - deleting [6-2](#)
  - modifying [6-2](#)
- Call Handler Traffic report, description [40-4](#)
- call holding, user settings in Connection Messaging Assistant [13-5](#)
- call loop detection [29-5](#)
- call management
  - creating a map [5-1](#)
  - implementing a plan [5-2](#)
  - managing call handlers [6-1](#)
  - managing call routing tables [9-1](#)
  - managing directory handlers [7-1](#)
  - managing interview handlers [8-1](#)
  - managing restriction tables [11-1](#)
  - managing schedules and holidays [10-1, 33-1](#)
  - overview [4-1](#)
  - planning [5-1](#)
- call routing tables
  - adding rules [9-2](#)
  - and the Route From Next Call Routing Rule action [4-5](#)
  - Attempt Forward rule [9-1](#)
  - Attempt Sign-In rule [9-1](#)
  - changing the order of rules [9-3](#)
  - default rules [9-1](#)
  - deleting rules [9-3](#)
  - modifying rules [9-2](#)
  - Opening Greeting rule [9-1](#)
  - overview [4-3](#)
- calls, changing the audio format (or codec) for [16-1, 29-9](#)
- call screening, user settings in Connection Messaging Assistant [13-5](#)
- call transfers
  - user settings in Connection conversation [13-6](#)
  - user settings in Connection Messaging Assistant [13-6](#)
- call waiting, configuring hold time [14-5, 14-6](#)
- capacity of hard disk, specifying maximum percentage [19-18](#)
- certificate, viewing for port [29-20](#)
- changing
  - addressing and recording order [14-2, 14-3](#)
  - addressing priority lists, how names are stored in [14-2](#)
  - AXL server settings [29-7](#)
  - call loop detection settings [29-5](#)
  - Cisco Unified Communications Manager server settings [29-11](#)
  - codec preference settings [29-9](#)
  - description of message attachments [38-2](#)
  - dial prefix settings for live reply to unidentified callers [14-7](#)
  - message deletion options [14-8](#)
  - message skipping during playback (Optional Conversation 1) [14-13](#)
  - MWI settings [29-10](#)
  - normalization setting [29-16](#)
  - phone system settings [29-3](#)
  - phone system trunk settings [29-21](#)

- PIMG/TIMG settings [29-15](#)
- port group advanced settings [29-16](#)
- port group settings [29-9](#)
- port settings [29-18](#)
- SIP server settings [29-14](#)
- SIP settings [29-16](#)
- system prompt language [14-9](#)
- TFTP server settings [29-13](#)
- user sign-in settings during user greeting [14-11](#)
- Cisco DirSync service, activating [41-4](#)
- Cisco Fax Server integration
  - about [32-1](#)
  - changing the Cisco Unity Connection configuration [32-8](#)
  - changing the user configuration [32-9](#)
  - configuring Cisco Unity Connection [32-6](#)
  - configuring single number for calls and faxes [32-10](#)
  - configuring the Cisco Fax Server [32-3](#)
  - configuring users [32-7](#)
  - creating [32-1](#)
  - requirements [32-2](#)
  - testing [32-8](#)
- Cisco PCA, securing access to Cisco Unity Connection [25-1](#)
- Cisco SIP Proxy Server
  - adding [29-13](#)
  - changing settings [29-14](#)
  - deleting [29-14](#)
- Cisco Unified Communications Manager
  - adding servers [29-10](#)
  - adding TFTP server [29-12](#)
  - AXL servers, adding [29-5](#)
  - AXL servers, deleting [29-6](#)
  - changing AXL server settings [29-7](#)
  - changing server settings [29-11](#)
  - changing TFTP server settings [29-13](#)
  - deleting servers [29-11](#)
  - deleting TFTP server [29-12](#)
  - port certificate [29-20](#)
  - root certificate for Connection [29-22](#)
- Cisco Unified MeetingPlace, creating a calendar integration [34-16](#)
- Cisco Unified MeetingPlace Express, creating a calendar integration [34-21](#)
- Cisco Unified Mobility Advantage integration
  - about [30-1](#)
  - configuring Cisco Unity Connection [30-2](#)
  - requirements [30-2](#)
  - task list for creating [30-1](#)
  - testing [30-3](#)
- Cisco Unified Real-Time Monitoring Tool (RTMT) [3-8](#)
- Cisco Unified Serviceability [3-8](#)
- Cisco Unified Serviceability services
  - configuring enterprise parameters [36-1](#)
  - configuring service parameters [35-1](#)
  - descriptions of enterprise parameters [36-2](#)
  - descriptions of service parameters [35-2](#)
- Cisco Unity Connection Administration
  - accessing [2-1](#)
  - configuring browsers [1-1](#)
  - finding records [2-3](#)
  - interface [2-2](#)
  - using Help [2-3](#)
- Cisco Unity Connection conversation [13-1](#)
- Cisco Unity Greetings Administrator
  - overview [17-2](#)
  - setting up [17-4](#)
  - using [17-3](#)
- Cisco Utilities Database Link for Informix [3-10](#)
- Cisco Voicemail Organization [ii-xix](#)
- Cisco Voice Technology Group Subscription tool [3-8](#)
- COBRAS backup and restore application [3-2](#)
- codec
  - changing for calls [16-1, 29-9](#)
  - changing for recordings [16-2, 17-5, 19-4](#)
  - changing preference settings [29-9](#)
  - effect on recording time available and disk space used [23-1](#)
- Connection 1.x, migrating from [3-2](#)

- Connection Administration, accessing [3-2](#)
  - Connection Serviceability [3-6](#)
  - Connection User Data Dump [3-10](#)
  - contact integration
    - about [34-2](#)
    - creating with Exchange 2003 [34-9](#)
    - creating with Exchange 2007 [34-2](#)
    - Exchange contacts [34-2](#)
  - contacts, user settings in Connection Messaging Assistant [13-8](#)
  - conversation
    - allowing voice recognition users to say their voicemail PINs [14-14](#)
    - alternate conversation versions [13-3](#)
    - caller options [13-1](#)
    - changing addressing and recording order [14-2, 14-3](#)
    - changing dial prefix settings for live reply to unidentified callers [14-7](#)
    - changing how names are stored in user addressing priority lists [14-2](#)
    - changing message deletion options [14-8](#)
    - changing PIN re-entry behavior [14-12](#)
    - Cisco Unity Connection, overview [13-1](#)
    - customizing by administrators [13-2](#)
    - customizing by users [13-5](#)
    - documenting for users [3-11](#)
    - easy sign-in [14-12](#)
    - sign-in [14-11](#)
    - specifying caller information before message playback [14-6](#)
    - user options [13-1](#)
    - user settings in Connection conversation [13-6](#)
    - user settings in Connection Messaging Assistant [13-6](#)
    - using voice commands [13-4](#)
  - creating
    - AXL servers [29-5](#)
    - call handler templates [6-2](#)
    - call management map [5-1](#)
    - call routing rules [9-2](#)
    - directory handlers [7-2](#)
    - holiday schedules [10-1, 33-2](#)
    - interview handlers [8-1](#)
    - restriction tables [11-2](#)
    - schedules [10-2, 33-3, 33-4](#)
    - user accounts [ii-xix](#)
  - credentials policies [18-1](#)
  - CUDLI [3-10](#)
  - Custom Keypad Mapping tool
    - accessing [15-2](#)
    - conversations that can be customized [15-3](#)
    - documenting keymap for users [15-12](#)
    - guidelines [15-2](#)
    - resetting [15-2](#)
    - using [15-1](#)
- 
- ## D
- Database Proxy [3-9](#)
  - deleting
    - AXL servers [29-6](#)
    - call handlers [6-16, 7-5](#)
    - call handler templates [6-2](#)
    - call routing rules [9-3](#)
    - Cisco Unified Communications Manager servers [29-11](#)
    - description of message attachments [38-2](#)
    - integration, phone system [29-2](#)
    - interview handlers [8-4](#)
    - members from system distribution lists [27-4](#)
    - phone system trunk [29-21](#)
    - PIMG/TIMG units [29-15](#)
    - port [29-18](#)
    - port group [29-8](#)
    - restriction tables [11-4](#)
    - schedules [10-3, 33-4](#)
    - SIP server [29-14](#)
    - TFTP server [29-12](#)
  - demonstration license files, about [42-4](#)
  - Dial Plan report, description [40-2](#)

Dial Search Scope report, description [40-2](#)

Digital Networking [ii-xix](#)

directory handlers

creating [7-2](#)

default [7-1](#)

deleting [7-5](#)

modifying [7-2](#)

overview [4-2](#)

System Directory Handler [7-1](#)

Disaster Recovery System [3-7](#)

disk space used, effect of codec on [23-1](#)

dispatch messages [19-7](#)

Distribution Lists report, description [40-3](#)

## E

easy sign-in conversation [14-12](#)

Edit Disk Capacity Configuration page [19-18](#)

email

configuring text-to-speech access to Exchange [39-1](#)

messages [19-2](#)

end of recording, configuring termination warning prompt [19-5](#)

enterprise parameters

configuring for Cisco Unified Serviceability services [36-1](#)

descriptions [36-2](#)

for Cisco Unified Serviceability services [36-1](#)

Exchange

configuring text-to-speech access to email [39-1](#)

configuring text-to-speech access to Exchange 2003 emails [39-6](#)

configuring text-to-speech access to Exchange 2007 emails [39-1](#)

Exchange 2003, creating a calendar and contact integration [34-9](#)

Exchange 2007, creating a calendar and contact integration [34-2](#)

Exchange contacts

enabling importing from Exchange 2003 [34-9](#)

enabling importing from Exchange 2007 [34-2](#)

extensions

adding prepended digits [6-10](#)

converting LDAP phone numbers into (Connection 8.0) [41-7](#)

converting LDAP phone numbers into (Connection 8.5) [41-5](#)

external message store, configuring access to emails in [39-1](#)

## F

fax

about the Cisco Fax Server integration [32-1](#)

changing the Cisco Unity Connection configuration [32-8](#)

changing the user configuration [32-9](#)

configuring Cisco Unity Connection [32-6](#)

configuring single number for calls and faxes [32-10](#)

configuring the Cisco Fax Server [32-3](#)

configuring users [32-7](#)

creating a Cisco Fax Server integration [32-1](#)

requirements for the Cisco Fax Server integration [32-2](#)

testing [32-8](#)

field definitions [2-3](#)

Firefox, configuring [1-1](#)

## G

G.711 A-Law codec

selecting for calls [16-1, 29-9](#)

selecting for recordings [16-2, 17-5, 19-4](#)

G.711 Mu-Law codec

selecting for calls [16-1, 29-9](#)

selecting for recordings [16-2, 17-5, 19-4](#)

G.729a codec

selecting for calls [16-1, 29-9](#)

selecting for recordings [16-2, 17-5, 19-4](#)

G726 codec, selecting for recordings [16-2, 17-5, 19-4](#)

## global nicknames

adding names to list [14-16](#)editing list [14-16](#)Goodbye call handler [6-2](#)Grammar Statistics tool, accessing [3-4](#)

## greetings

call handlers [6-6](#)changing audio format for recording [17-5](#)recording by using Media Master [17-1](#)user settings in Connection conversation [13-6](#)user settings in Connection Messaging Assistant [13-6](#)groupware email messages [19-2](#)

---

**H**hard disk, specifying maximum capacity [19-18](#)

## Help

page and field [2-3](#)using [2-3](#)

## holidays

designating [10-1, 33-2](#)holiday schedule [10-1, 33-1](#)

---

**I**identified user messaging [19-2](#)

## IMAP access

accessing email messages from Connection by using [19-2](#)configuration procedures [20-5, 21-5](#)configuration task list [20-3](#)Connection server configuration [20-6](#)security recommendations [20-3](#)SMTP message parameters [20-7](#)

## IMAP clients

integrated messaging example [20-2](#)securing access to Cisco Unity Connection [25-1](#)SMTP message handling [20-1](#)Import Users tool, accessing [3-4](#)installing license files [42-5](#)integrated messaging, example [20-2](#)

## integration

adding [29-2](#)adding phone system trunk [29-20](#)adding PIMG/TIMG units [29-15](#)adding port [29-17](#)adding port group [29-8](#)adding SIP certificate [29-23](#)adding SIP security profile [29-25](#)adding SIP server [29-13](#)adding TFTP server [29-12](#)AXL server, changing settings [29-7](#)AXL servers, adding [29-5](#)AXL servers, deleting [29-6](#)call loop detection, changing settings [29-5](#)changing Cisco Unified Communications Manager server settings [29-11](#)changing phone system trunk settings [29-21](#)changing PIMG/TIMG settings [29-15](#)changing port group advanced settings [29-16](#)changing port settings [29-18](#)changing SIP certificate [29-24, 29-25](#)changing SIP server settings [29-14](#)changing SIP settings [29-16](#)changing TFTP server settings [29-13](#)codec, changing preference settings [29-9](#)deleting [29-2](#)deleting Cisco Unified Communications Manager servers [29-11](#)deleting phone system trunk [29-21](#)deleting PIMG/TIMG units [29-15](#)deleting port [29-18](#)deleting SIP certificate [29-24](#)deleting SIP security profile [29-25](#)deleting SIP server [29-14](#)deleting TFTP server [29-12](#)enabling or disabling normalization [29-16](#)IPv6 [29-26](#)

- MWI, disabling the use of the same port for turning on and off [29-3](#)
- MWI, synchronizing [29-4](#)
- MWIs, changing settings [29-10](#)
- phone system, changing settings [29-3](#)
- phone system trunk description [29-20](#)
- port certificate [29-20](#)
- port description [29-17](#)
- port group, changing settings [29-9](#)
- port group, deleting [29-8](#)
- port group description [29-7](#)
- root certificate for Connection [29-23](#)
- security for ports [29-22](#)
- users associated with phone system [29-3](#)
- viewing root certificate for Connection [29-22](#)
- Internet Explorer, configuring [1-2](#)
- internetworking Cisco Unity Connection servers [ii-xix](#)
- interview handlers
  - creating [8-1](#)
  - deleting [8-4](#)
  - modifying [8-2](#)
  - overview [4-3](#)
- intrasite or intersite links [ii-xix](#)
- IPv6 [29-26](#)

---

## L

- language
  - changing system prompt language [14-9](#)
  - language settings for call handlers [6-12](#)
  - language settings for directory handlers [7-3](#)
  - language settings for interview handlers [8-3](#)
  - language settings for routing rules [9-3](#)
  - message subject line format [19-15](#)
- LDAP
  - activating the Cisco DirSync service [41-4](#)
  - adding configurations and synchronizing data [41-15](#)
  - changing LDAP directory configurations [41-16](#)
  - configuring authentication [41-10](#)

- converting LDAP phone numbers into Connection extensions (Connection 8.0) [41-7](#)
- converting LDAP phone numbers into Connection extensions (Connection 8.5) [41-5](#)
- deleting LDAP directory configurations [41-16](#)
- disabling authentication [41-10](#)
- enabling synchronization [41-4](#)
- task list for configuring [41-2](#)

## license files

- about using calculated MAC addresses on virtual servers [42-2](#)
- about using MAC addresses on physical servers [42-2](#)
- about using multiple license files [42-3](#)
- Cisco Unity, migrating from [42-4](#)
- Connection clusters [42-4](#)
- migrating from Cisco Unity [42-4](#)
- must be installed [42-4](#)
- obtaining and installing [42-5](#)
- parameters for Connection features [42-9](#)
- permanent, time-expiring, and demonstration [42-4](#)
- viewing reports [42-8](#)

## live record

- about [19-4](#)
- configuring [19-21](#)

- lockout policy [18-1](#)

---

## M

- mailboxes, moving [22-5](#)
- mailbox size quotas, setting systemwide and mailbox-store limits [23-1](#)
- Mailbox Store report, description [40-2](#)
- mailbox stores
  - backing up [22-3](#)
  - creating [22-4](#)
  - deleting [22-6](#)
  - disabling [22-7](#)
  - maximum size [22-3](#)
  - maximum size, changing [22-6](#)

- message handling when maximum size is exceeded [19-12](#)
- moving mailboxes [22-5](#)
- multiple [22-1](#)
- Maximum Delay for TTS Access Before Timeout [19-10](#)
- Media Master, recording greetings and names [17-1](#)
- MeetingPlace, creating a calendar integration [34-16](#)
- MeetingPlace Express, creating a calendar integration [34-21](#)
- message actions, configuring [19-14](#)
- message addressing
  - user settings in Connection conversation [13-7](#)
  - user settings in Connection Messaging Assistant [13-7](#)
- message aging [23-3](#)
- message aging alerts
  - about [23-3, 23-4](#)
  - configuration procedures [23-6, 23-7](#)
- message attachment
  - adding [38-1](#)
  - changing [38-2](#)
  - deleting [38-2](#)
- message locator, phone view [31-1](#)
- message notification
  - setting up, SMS (SMPP) [24-2](#)
  - setting up, SMTP [24-1](#)
  - user settings in Connection conversation [13-7](#)
  - user settings in Connection Messaging Assistant [13-7](#)
- message playback
  - user settings in Connection conversation [13-7](#)
  - user settings in Connection Messaging Assistant [13-7](#)
- message recording expiration [23-8](#)
- messages
  - actions, configuring [19-14](#)
  - aging [23-3](#)
  - aging alerts [23-3, 23-4](#)
  - dispatch messages [19-7](#)
  - expiration [23-8](#)
  - groupware email messages [19-2](#)
  - how Connection handles messages that are interrupted by disconnected calls [19-11](#)
  - how Connection handles messages that cannot be delivered [19-9](#)
  - how Connection handles messages when mailbox quotas are exceeded [19-12](#)
  - how Connection handles messages when maximum mailbox store size is exceeded [19-12](#)
  - how Connection handles messages when system components are unavailable [19-10](#)
  - interview messages [19-3](#)
  - live record [19-4](#)
  - message delivery [19-9](#)
  - message storage [19-18](#)
  - migrating from Connection 1.x [3-5](#)
  - migrating from Connection 1.x using COBRAS (recommended) [3-2](#)
  - migrating from Unity [3-5](#)
  - migrating from Unity using COBRAS (recommended) [3-2](#)
  - notifications [19-3](#)
  - outside caller voice messages [19-2](#)
  - receipts [19-3](#)
  - sensitivity [19-13](#)
  - shredding files for secure deletes [19-20](#)
  - subject line format [19-15](#)
  - system broadcast messages [19-2](#)
  - types of messages [19-1](#)
  - user to user voice messages [19-2](#)
- Message Traffic report, description [40-2](#)
- message waiting indicators, synchronizing for phone system [29-4](#)
- messaging overview [19-1](#)
- Migrate Messages utility, accessing [3-5](#)
- Migrate Users utility, accessing [3-6](#)
- migrating data and messages from Unity or Connection 1.x [3-2](#)
- modifying
  - call handlers [6-5](#)
  - call handler templates [6-2, 6-3, 6-4](#)
  - call routing rules [9-2](#)
  - directory handlers [7-2](#)
  - interview handlers [8-2](#)



- restriction tables [11-3](#)
- schedules [10-2, 33-3](#)
- system distribution lists [27-3, 27-5](#)

- multiple mailbox stores [22-1](#)

## MWIs

- changing settings [29-10](#)
- disabling the use of the same port for turning on and off [29-3](#)
- synchronizing for phone system [29-4](#)

## N

- names, recording by using Media Master [17-1](#)
- networking [ii-xix](#)
- normalization, enabling or disabling for port group [29-16](#)
- notification
  - setting up, SMS (SMPP) [24-2](#)
  - setting up, SMTP [24-1](#)
  - user settings in Connection conversation [13-7](#)
  - user settings in Connection Messaging Assistant [13-7](#)

## O

- obtaining license files [42-5](#)
- one-key dialing
  - configuring [6-9](#)
  - overview [6-9](#)
- Opening Greeting
  - call handler [6-1](#)
  - call routing rule [9-1](#)
- Operator call handler [6-2](#)
- Operator user [19-6](#)
- Optional Conversation 1
  - changing message skipping behavior [14-13](#)
  - overview [13-3](#)
- Outcall Billing Detail report, description [40-4](#)
- Outcall Billing Summary report, description [40-4](#)
- outside caller voice messages [19-2](#)

## P

- page Help [2-3](#)
- partitions
  - changing default [28-11](#)
  - creating [28-9](#)
  - default [28-3](#)
  - deleting [28-9](#)
  - finding objects in [28-11](#)
  - modifying [28-9](#)
  - overview [28-1](#)
- password policy [18-1](#)
- PCM codec, selecting for recordings [16-2, 17-5](#)
- permanent license files, about [42-4](#)
- personal call transfer rules, integration with Exchange contacts [34-2](#)
- personal settings
  - user settings in Connection conversation [13-8](#)
  - user settings in Connection Messaging Assistant [13-8](#)
- Phone Interface Failed Sign-In report, description [40-1](#)
- phone language, changing [14-9](#)
- phone system
  - adding AXL servers [29-5](#)
  - adding integration [29-2](#)
  - changing AXL server settings [29-7](#)
  - changing settings [29-3](#)
  - deleting AXL servers [29-6](#)
  - deleting integration [29-2](#)
  - disabling the use of the same port for turning on and off an MWI [29-3](#)
  - list of users associated with [29-3](#)
  - synchronizing MWIs [29-4](#)
- phone system trunk
  - changing settings [29-21](#)
  - deleting [29-21](#)
  - description [29-20](#)
- Phone View [29-4, 31-1](#)
- PIMG unit
  - adding [29-15](#)

- changing settings [29-15](#)
- deleting [29-15](#)
- PIN policy [18-1](#)
- plugins
  - application [3-2](#)
  - installing [37-1](#)
  - overview [37-1](#)
- Port Activity report, description [40-2](#)
- port group
  - adding [29-8](#)
  - changing advanced settings [29-16](#)
  - changing settings [29-9](#)
  - deleting [29-8](#)
  - description [29-7](#)
  - enabling or disabling normalization [29-16](#)
- port memory, disabling [29-3](#)
- ports
  - adding [29-17](#)
  - adding SIP certificate [29-23](#)
  - adding SIP security profile [29-25](#)
  - changing settings [29-18](#)
  - changing SIP certificate [29-24](#), [29-25](#)
  - deleting [29-18](#)
  - deleting SIP certificate [29-24](#)
  - deleting SIP security profile [29-25](#)
  - description [29-17](#)
  - port certificate for Connection [29-20](#)
  - root certificate for Connection [29-23](#)
  - security [29-22](#)
  - viewing root certificate for Connection [29-22](#)
- prepend digits for extensions [6-10](#)
- private lists
  - user settings in Connection conversation [13-8](#)
  - user settings in Connection Messaging Assistant [13-8](#)
- prompts
  - overview [13-2](#)
  - what you can change [13-2](#)

---

## Q

- quotas, message handling when exceeded [19-12](#)

---

## R

- recordings
  - changing the audio format (or codec) for [16-2](#), [17-5](#), [19-4](#)
  - configuring termination warning prompt [19-5](#)
  - greetings and names [17-1](#)
  - selecting device [17-2](#)
- recording time available, effect of codec on [23-1](#)
- relay settings for private and secure messages [20-5](#)
- Remote Administration Tools [3-9](#)
- reports
  - archiving data [40-5](#)
  - configuration parameters [40-4](#)
  - generating and viewing [40-5](#)
  - licenses [42-8](#)
  - overview [40-1](#)
- restriction tables
  - creating [11-2](#)
  - default [11-1](#)
  - Default Fax [11-1](#)
  - Default Outdial [11-1](#)
  - Default System Transfer [11-1](#)
  - Default Transfer [11-1](#)
  - deleting [11-4](#)
  - modifying [11-3](#)
  - overview [4-6](#)
- root certificate
  - saving as file [29-23](#)
  - viewing [29-22](#)
- Route From Next Call Routing Rule action [4-5](#)
- RSS Feeds [19-23](#)

## S

### schedules and holidays

- All Hours [10-1, 33-1](#)
- creating schedules [10-2, 33-3, 33-4](#)
- default [10-1, 33-1](#)
- deleting schedules [10-3, 33-4](#)
- designating holidays [10-1, 33-2](#)
- Holidays [10-1, 33-1](#)
- modifying schedules [10-2, 33-3](#)
- overview [4-8](#)
- Voice Recognition Update [10-1, 33-1](#)
- Weekdays [10-1, 33-1](#)

### search spaces

- and call handlers [28-7](#)
- and call routing rules [28-6](#)
- and contacts [28-8](#)
- and digital networking [28-8](#)
- and directory handlers [28-7](#)
- and interview handlers [28-7](#)
- and system distribution lists [28-7](#)
- and user objects [28-5](#)
- and VPIM locations [28-8](#)
- changing default [28-11](#)
- creating [28-10](#)
- default [28-3](#)
- deleting [28-10](#)
- example configurations [28-3](#)
- finding objects in [28-11](#)
- modifying [28-10](#)
- overview [28-2](#)

secure deletes, shredding message files for [19-20](#)

securing Cisco PCA and IMAP client access to Cisco Unity Connection [25-1](#)

### security

- adding SIP certificate [29-23](#)
- adding SIP security profile [29-25](#)
- changing SIP certificate [29-24, 29-25](#)
- deleting SIP certificate [29-24](#)

deleting SIP security profile [29-25](#)

description for ports [29-22](#)

policies [18-1](#)

port certificate [29-20](#)

relay settings for private and secure messages [20-5](#)

root certificate for Connection [29-23](#)

viewing root certificate for Connection [29-22](#)

### service parameters

configuring for Cisco Unified Serviceability services [35-1](#)

descriptions [35-2](#)

for Cisco Unified Serviceability services [35-1](#)

Session Initiation Protocol (SIP), changing settings [29-16](#)

session timeout setting, Cisco Unity Connection Administration [2-1](#)

### setting up

SMS (SMPP) message notifications [24-2](#)

SMTP message notifications [24-1](#)

Show Dependency Results [3-6](#)

shredding message files for secure deletes [19-20](#)

sign-in conversation [14-11](#)

sign-in policy [18-1](#)

simulating abbreviated extensions [6-10](#)

### SIP

adding SIP certificate [29-23](#)

adding SIP security profile [29-25](#)

changing SIP certificate [29-24, 29-25](#)

deleting SIP certificate [29-24](#)

deleting SIP security profile [29-25](#)

### SIP server

adding [29-13](#)

changing settings [29-14](#)

deleting [29-14](#)

SMS (SMPP) message notifications, setting up [24-2](#)

### SMTP

message notifications, setting up [24-1](#)

messages, overview [20-1](#)

speech to text [21-1](#)

SpeechView

- configuring [21-1](#)
- SpeechView Activity Report by User, description [40-4](#)
- SpeechView Activity Summary Report, description [40-4](#)
- SSL certificate, using to secure Cisco PCA and IMAP client access to Cisco Unity Connection [25-1](#)
- Subscriber Information Dump. See Connection User Data Dump.
- synchronizing MWIs for phone system [29-4](#)
- Synch Users Tool, accessing [3-4](#)
- System Configuration report, description [40-4](#)
- System Directory Handler [7-1](#)
- system distribution lists
  - adding alternate names [27-5](#)
  - adding and removing members [27-4](#)
  - creating [27-2](#)
  - default lists [27-1](#)
  - modifying [27-3, 27-5](#)
  - overview [27-1](#)
- system prompts
  - changing language [14-9](#)
  - customizing [13-2](#)
- system transfers, setting up [12-1](#)

## T

- Task Management tool, accessing [3-7](#)
- termination warning prompt, configuring [19-5](#)
- text to speech
  - about [39-1](#)
  - configuring access to Exchange 2003 emails [39-6](#)
  - configuring access to Exchange 2007 emails [39-1](#)
- TFTP server
  - adding [29-12](#)
  - changing settings [29-13](#)
  - deleting [29-12](#)
- time-expiring license files, about [42-4](#)
- timeouts in Cisco Unity Connection Administration [2-1](#)
- TIMG unit
  - adding [29-15](#)

- changing settings [29-15](#)
- deleting [29-15](#)
- tools, Custom Keypad Mapping [15-1](#)
- transcriptions [21-1](#)
- Transfer Call Billing report, description [40-3](#)
- trunk, phone system
  - adding [29-20](#)
  - changing settings [29-21](#)
  - deleting [29-21](#)

## U

- Undeliverable Messages distribution list [27-2](#)
- UndeliverableMessagesMailbox user [19-6](#)
- unidentified caller messages [19-2](#)
- Unity, migrating from [3-2](#)
- Unity Connection Messaging System user [19-6](#)
- Unused Voice Mail Accounts report, description [40-3](#)
- user accounts, creating [ii-xix](#)
- User Lockout report, description [40-3](#)
- User Message Activity report, description [40-3](#)
- User Phone Sign-In and MWI report, description [40-3](#)
- users
  - list of users associated with phone system [29-3](#)
  - migrating from Connection 1.x [3-6](#)
  - migrating from Connection 1.x using COBRAS (recommended) [3-2](#)
  - migrating from Unity [3-6](#)
  - migrating from Unity using COBRAS (recommended) [3-2](#)
  - Operator [19-6](#)
  - UndeliverableMessagesMailbox [19-6](#)
  - Unity Connection Messaging System [19-6](#)
- user speech recognition conversation [13-4](#)
- Users report, description [40-1](#)
- user to user voice messages [19-2](#)
- user workstations, setting up [ii-xix](#)
- utilities and tools
  - Bulk Administration Tool [3-3](#)

- Cisco Unified Serviceability [3-8](#)
- Cisco Voice Technology Group Subscription Tool [3-8](#)
- Connection Administration [3-2](#)
- Connection Serviceability [3-6](#)
- Disaster Recovery System [3-7](#)
- Grammar Statistics [3-4](#)
- Import Users [3-4](#)
- Migrate Messages [3-5](#)
- Migrate Users [3-6](#)
- plug-ins [3-2](#)
- RTMT [3-8](#)
- Synch Users [3-4](#)
- Task Management [3-7](#)

- voice to text [21-1](#)
- VPIM networking [ii-xix](#)

---

## W

- Wallet Card Wizard [3-11](#)
- warning prompt for end of recording, configuring [19-5](#)
- Weekdays schedule [10-1, 33-1](#)

---

## V

- ViewMail for Microsoft Outlook, integrated messaging example [20-2](#)
- voice commands, using [13-4](#)
- voice commands, using to call Exchange contacts [34-2](#)
- voice messages
  - delivery [19-9](#)
  - dispatch messages [19-7](#)
  - interviews [19-3](#)
  - live record [19-4](#)
  - notifications [19-3](#)
  - outside caller [19-2](#)
  - receipts [19-3](#)
  - system broadcast [19-2](#)
  - user to user [19-2](#)
- voice messaging port
  - adding [29-17](#)
  - changing settings [29-18](#)
  - deleting [29-18](#)
- voice recognition
  - allowing users to say their voicemail PINs [14-14](#)
  - Grammar Statistics tool [3-4](#)
- Voice Recognition Update schedule [10-1, 33-1](#)

