



CHAPTER 4

Managing Server Status and Ports in a Cisco Unity Connection 9.x Cluster

The Cluster Management page in Cisco Unity Connection Serviceability lets you change the status of servers in a Connection cluster, stop all ports on a server from taking new calls, and restart all ports on a server to take calls.

For the applicable procedures, see the “[Administering a Cisco Unity Connection 9.x Cluster](http://www.cisco.com/en/US/docs/voice_ip_comm/connection/9x/cluster_administration/guide/9xcuccagx.html)” chapter of the *Cluster Configuration and Administration Guide for Cisco Unity Connection Release 9.x* at http://www.cisco.com/en/US/docs/voice_ip_comm/connection/9x/cluster_administration/guide/9xcuccagx.html.



Note

The Connection cluster feature is not supported for use with Cisco Unified Communications Manager Business Edition.
