



CHAPTER 8

Managing System Distribution Lists in Cisco Unity Connection SRSV

System distribution lists are used to send voice messages to multiple users. The members of a system distribution list typically are users who need the same information on a regular basis, such as employees in a department or members of a team. At branch, sending a message to a distribution list is supported only when the distribution list is selected in the **Message Recipient** property of the call handler.

When you send a message to a distribution list, you receive the notification confirming that the message has been sent to the distribution list. However, the members of the distribution list will receive the message only after the restoration of WAN outage and successful upload of the message on the central Connection server.



Note

Composing a new message that address to a distribution list is not supported at branch.

Search Distribution Lists

Table 8-1 **Search Distribution Lists Page**

Field	Description
Alias	(<i>Display only</i>) A unique text name of the distribution list. Select the Alias to go to the specific page for the distribution list.
Extension	(<i>Display only</i>) The extension that the phone system uses to connect to the object.
Display Name	(<i>Display only</i>) The name of the distribution list.

Edit Distribution List Basics

See [Table 8-2](#) for information about the fields on the Edit Distribution List Basics page.

Table 8-2 ***Edit Distribution List Basics Page***

Field	Description
Alias	<i>(Display Only)</i> Displays the text name of the distribution list.
Display Name	<i>(Display Only)</i> Displays the descriptive name for the distribution list.
Extension	<i>(Display Only)</i> Displays the extension that the phone system uses to connect to the distribution list.
Partition	<i>(Display Only)</i> Displays the partition to which the object belongs.