



CHAPTER 11

Cisco Unity Connection SRSV Administration - Networking Settings Interface

See the following sections:

- [Central Server Configuration, page 11-1](#)
- [Configuring Central Server in Cisco Unity Connection SRSV, page 11-1](#)

Central Server Configuration

Table 11-1 *Central Server Configuration Page*

| Field | Description |
|----------------|---|
| Server Address | The Fully Qualified Domain Name (FQDN) address of the Cisco Unity Connection server, server host name or FQDN. To implement the Connection SRSV High Availability functionality, you must mention a common DNS A Record for both publisher and subscriber for central Connection server. |
| Test | Confirms the connectivity with the central Connection server. On the successful result, the status “Central Server Active” is displayed. |

Configuring Central Server in Cisco Unity Connection SRSV

Do the following procedure.

To configure Conversation settings

- Step 1** In Cisco Unity Connection SRSV Administration, expand **Networking**, then select **Central Server Configuration**.
- Step 2** On the Central Server Configuration page, enter the applicable settings.
- Step 3** Select **Save**.

**Note**

A branch can be connected to only one central Connection.
