



INDEX

A

AAR

- overview [28-1](#)

abbreviated dial

- configuration settings (table) [70-23](#)

accessibility

- accessing buttons and icons [1-7](#)

admission control

- implementing with locations [15-1](#)

analog access gateways and ports

- adding [69-11](#)

Annunciator

- updating [3-2](#)

annunciator [53-1](#)

- configuration settings (table) [53-3](#)

- configuring [53-1](#)

- resetting [53-4](#)

- updating [53-2](#)

application dial rules

- adding [29-2](#)

- configuring [29-1](#)

- deleting [29-4](#)

- finding [29-1](#)

- reprioritizing [29-4](#)

- updating [29-2](#)

application server

- configuration [23-1](#)

- configuration settings (table) [23-3](#)

- configuring [23-1](#)

- deleting [23-2](#)

- finding [23-3](#)

application user

- adding [86-3](#)

- application profiles [86-7](#)

- associating devices to an application user [86-8](#)

- changing password [86-7](#)

- configuration [86-1](#)

- configuration settings (table) [86-3](#)

- finding [86-1](#)

autogenerated device profiles

- configuring directory numbers [75-7](#)

automated alternate routing groups

- configuration settings (table) [28-3](#)

- configuring [28-2](#)

- deleting [28-4](#)

- finding [28-1](#)

- overview [28-1](#)

auto-registration

- configuration settings (table) [27-3](#)

- configuring [27-1](#)

- disabling [27-2](#)

- enabling [27-1](#)

- reusing auto-registration numbers [27-4](#)

B

BAT

- application overview [94-1](#)

BLF/SpeedDial

- configuration settings [70-24](#)

BRI

- gateway configuration [69-33](#)

- ports, adding [69-7](#)

browsing

Cisco CallManager 1-2

security

hypertext transfer protocol 1-4

C

call display restrictions

configuring in translation pattern 46-7

configuring in user device profile 75-3

phone configuration 70-11

calling search spaces

adding 43-2

configuration settings (table) 43-3

configure display in drop-down list box 49-23

configuring 43-1

deleting 43-5

finding 43-1

updating 66-2

call routing

directory numbers

configuration overview 49-1

call waiting

configuration settings 49-22

Cisco CallManager

benefits 1-1

browsing into 1-2

configuration settings (table) 3-3

configuring 3-1

finding 3-1

groups

adding 4-3

configuration overview 4-1

configuration settings (table) 4-3

deleting 4-4

finding 4-1

introduction 1-1

key features 1-1

log off 1-3

logon 1-3

more information 1-8

overview 1-1

server configuration 2-1

Cisco CallManager Administration

navigating 1-6

Cisco CallManager Administration Guide

audience xxiv

conventions xxv

organization xxiv

purpose xxiii

related documentation xxv

Cisco CallManager server configuration

software conference bridge 54-3

Cisco IP Manager Assistant (IPMA)

configuration wizard for proxy line 81-1

Cisco IP Phones

configuration overview 70-1

configuring 70-2

deleting 70-5

directory numbers 49-1

displaying MAC address 70-4

finding and listing 70-28

resetting 70-4

templates, phone button

configuring 76-1

Cisco IP Phone Services

adding a service parameter 78-5

configuration settings (table) 78-4

configuring 70-24, 78-1

configuring a service 78-3

deleting a service 78-4

deleting a service parameter 78-7

dependency records 78-4

finding a service 78-2

parameter settings (table) 78-6

subscribing 70-24

unsubscribing 70-26

updating 70-25

- updating a service parameter [78-5](#)
- Cisco SIP IP Phones
 - third-party SIP device differences [C-1](#)
- Cisco Unity
 - upgrading to Cisco CallManager 4.0 or later [B-1, B-3](#)
 - user configuration voice mailbox [87-3](#)
 - voice-mail port adjustments [B-1](#)
 - voice-mail port changes [B-1](#)
 - voice-mail port failover [B-3](#)
 - voice-mail port setup [B-3](#)
- Cisco Unity Connection
 - user configuration voice mailbox [87-3](#)
- Cisco Unity or Cisco Unity Connection voice mailbox
 - directory numbers [49-4](#)
- Cisco uOne
 - MWI device, configuring [64-3](#)
- Cisco voice mail
 - adding a new server and ports [63-1](#)
 - adding ports [62-3](#)
 - adding ports with the wizard [63-5](#)
 - configuring [62-1](#)
 - configuring message waiting [64-1](#)
 - configuring port wizard [63-1](#)
 - configuring profile [66-1](#)
 - copying ports [62-3](#)
 - deleting ports [62-6](#)
 - deleting ports with the wizard [63-6](#)
 - finding a message waiting number [64-1](#)
 - finding ports [62-1](#)
 - port configuration settings (table) [62-4](#)
 - port wizard device information configuration settings [63-2](#)
 - port wizard directory number configuration settings [63-3](#)
 - updating ports [62-3](#)
- Cisco voice-mail pilot
 - configuring [65-1, 65-3](#)
 - deleting [65-4](#)
 - finding [65-1](#)
- CMLocal date/time group [6-1](#)
- common phone profiles
 - configuration settings (table) [80-3](#)
 - configuring [80-1, 80-2](#)
 - deleting [80-3](#)
 - dependency records [80-3](#)
 - finding [80-1](#)
- conference bridges
 - adding a Cisco Conference Bridge (WS-SVC-CMM) [54-8](#)
 - adding a Cisco IOS device [54-5](#)
 - adding a Cisco video conference bridge device [54-6](#)
 - adding a hardware device [54-4](#)
 - Cisco Conference Bridge (WS-SVC-CMM)
 - configuration settings (table) [54-9](#)
 - Cisco IOS configuration settings (table) [54-6](#)
 - Cisco video configuration settings (table) [54-7](#)
 - configuring [54-1](#)
 - copying a meet-me number pattern [50-2](#)
 - deleting a conference device [54-10](#)
 - deleting a meet-me number pattern [50-4](#)
 - finding [54-2](#)
 - finding a meet-me number pattern [50-1](#)
 - hardware configuration settings (table) [54-5](#)
 - software configuration settings (table) [54-3](#)
 - updating a conference device [54-10](#)
- conventions [xxv](#)
- CTI
 - route points
 - adding [67-2](#)
 - configuration settings (table) [67-3](#)
 - configuring [67-1](#)
 - deleting [67-4](#)
 - finding [67-1](#)
 - resetting [67-5](#)
- custom phone button templates
 - adding [76-2](#)
 - creating 7914 expansion module [76-3](#)

deleting 76-5

finding 76-1

D

date/time groups

adding 6-3

configuration settings (table) 6-4

configuring 6-1

deleting 6-5

finding 6-1

using NTP server configuration with 21-1, 22-1, 91-1, 92-1, 93-1

using phone NTP reference configuration with 8-1

defaults

devices

configuration settings (table) 72-2

configuring 72-1, 73-1

updating 72-1

with non-firmware loads 73-1

dependency records

accessing A-2

buttons A-4

Cisco IP Phone Services 78-4

common phone profile 80-3

disabling A-2

enabling A-1

enterprise parameter A-1

overview A-1

route filters 32-5

user device profile 75-5

voice-mail pilot numbers 65-4

voice-mail ports 62-6

voice-mail profile 66-3

device defaults

configuration settings (table) 72-2

configuring 72-1, 73-1

updating 72-1

device pools

adding 9-3

configuration settings (table) 9-4

configuring 9-1

deleting 9-7

finding 9-1

device profile defaults

adding 74-1

configuration settings 74-2

configuring 74-1

deleting 74-5

subscribing a service 74-5

device profiles

adding a user 75-2

configuring 75-1

configuring directory numbers for autogenerated device profiles 75-7

deleting a user profile 75-5

finding 75-2

updating a user profile 75-2

updating autogenerated profile 75-6

devices

Cisco IP Phones

configuration overview 70-1

configuring 70-2

defining common characteristics 9-1

gatekeepers, configuring 68-1

gateways 69-1

MWI configuration settings (table) 64-3

trunks, configuring 71-1

with non-default firmware loads 73-1

DHCP

activating DHCP monitor service 10-1

server

configuration settings (table) 10-4

configuring 10-4

deleting 10-5

finding 10-2

starting DHCP monitor service 10-2

- subnet
 - configuration settings (table) [11-3](#)
 - configuring [11-2](#)
 - deleting [11-4](#)
 - finding [11-1](#)
 - dial plans
 - configuring route pattern details for a non-NANP dial plan [52-4](#)
 - editing [52-3](#)
 - finding [52-2](#)
 - installing [52-3](#)
 - restarting Cisco CallManager Service [52-6](#)
 - uninstalling [52-6](#)
 - upgrading [52-4](#)
 - dial rules
 - configuring a directory lookup rule [30-2](#)
 - deleting a directory lookup rule [30-3](#)
 - directory lookup configuration settings [30-3](#)
 - directory lookup rule configuration [30-1](#)
 - pattern formats [31-5](#)
 - updating a directory lookup rule [30-2](#)
 - digest authentication
 - enabling for SIP third-party phones [C-2](#)
 - Digital Access PRI ports [69-7](#)
 - Digital Access T1
 - ports [69-6](#)
 - directory
 - Cisco Unity or Cisco Unity Connection voice mailbox [87-3](#)
 - directory lookup dial rules
 - configuration [30-1](#)
 - configuration settings [30-3](#)
 - configuring [30-2](#)
 - deleting [30-3](#)
 - updating [30-2](#)
 - directory numbers
 - calling search space list [49-23](#)
 - call waiting configuration settings [49-22](#)
 - configuration overview [49-1](#)
 - configuration settings (table) [49-6](#)
 - configuring [49-2](#)
 - creating Cisco Unity or Cisco Unity Connection voice mailbox [49-4](#)
 - deleting unassigned [51-3](#)
 - finding [49-2](#)
 - related topics [49-23](#)
 - removing from phone [49-4](#)
 - updating unassigned [51-3](#)
 - document
 - audience [xxiv](#)
 - conventions [xxv](#)
 - organization [xxiv](#)
 - purpose [xxiii](#)
 - documentation
 - related [xxv](#)
 - Domain Name System (DNS) [2-1](#)
 - domains, MLPP
 - overview [17-1](#)
-
- ## E
- end user
 - adding [87-3](#)
 - adding with phone [90-2](#)
 - associating devices to an end user [87-10](#)
 - changing password [87-8](#)
 - changing PIN [87-9](#)
 - configuration [87-1](#)
 - configuration settings (table) [87-5](#)
 - configuring with phone [90-1](#)
 - deleting [87-12](#)
 - extension mobility [87-12](#)
 - finding [87-1](#)
 - user-related information [87-9](#)
 - end user and device
 - configuration settings (table) [90-2](#)
 - enterprise parameters
 - configuring [18-1](#)

dependency records [A-1](#)

extension mobility

end user [87-12](#)

external phone number mask [27-4](#)

F

firmware loads, devices with non-default [73-1](#)

FXO ports [69-5](#)

FXS ports [69-4](#)

G

gatekeepers

configuration settings (table) [68-3](#)

configuring [68-1](#)

configuring a gatekeeper [68-3](#)

deleting [68-4](#)

finding [68-1](#)

resetting [68-5](#)

gateways

adding [69-1](#)

analog access configuration settings (table) [69-53](#)

analog access gateway, adding [69-11](#)

BRI configuration settings (table) [69-33](#)

Cisco IOS SCCP gateway configuration settings (table) [69-57](#)

Cisco VG224/VG248 analog gateway, adding [69-12](#)

Cisco VG224/VG248 analog ports, adding [69-12](#)

Cisco VG248 configuration settings (table) [69-56](#)

configuration settings (table) [69-13](#)

configuring [69-1](#)

deleting [69-74](#)

Digital Access PRI configuration settings (table) [69-20](#)

E & M port configuration settings (table) [69-63](#)

finding and listing [69-66](#)

FSX/FXO configuration settings (table) [69-16](#)

ground start port configuration settings (table) [69-63](#)

H.323, adding [69-10](#)

H.323 configuration settings (table) [69-44](#)

ISDN [69-21](#)

ISDN BRI [69-33](#)

loop start port configuration settings (table) [69-62](#)

MGCP

BRI, configuring [69-33](#)

BRI ports, adding [69-7](#)

Cisco IOS, adding [69-2](#)

configuration settings (table) [69-14](#)

Digital Access PRI ports, adding [69-7](#)

FXO ports, adding [69-5](#)

FXS ports, adding [69-4](#)

ports, adding [69-4](#)

T1 ports, adding [69-6](#)

modifying [69-74](#)

non-IOS, adding [69-9](#)

port configuration settings (table) [69-59](#)

ports, adding [69-11](#)

POTS port configuration settings (table) [69-60](#)

PRI [69-21](#)

resetting [69-75](#)

restarting [69-75](#)

SCCP

Cisco IOS, adding [69-8](#)

searching

by calling search space [69-69](#)

by description [69-67](#)

by device name [69-66](#)

by device pool [69-70](#)

by device type [69-72](#)

by directory number [69-68](#)

by route group [69-71](#)

by route pattern [69-68](#)

updating [69-76](#)

groups

Cisco CallManager

configuration settings (table) [4-3](#)

configuring [4-1](#)

date/time
 configuration settings (table) [6-4](#)
 overview [6-1](#)
 presence, configuring [5-1](#)

H

H.323, adding gateways [69-10](#)
 HTTPS
 HTTP over secure sockets layer [1-4](#)
 hunt lists
 adding [37-3](#)
 adding line groups [37-4](#)
 changing the order of line groups [37-5](#)
 configuring [37-1](#)
 deleting [37-6](#)
 finding [37-1](#)
 removing line groups [37-4](#)
 hunt pilots
 configuration settings (table) [38-4](#)
 configuring [38-1, 38-3](#)
 deleting [38-4](#)
 finding [38-1](#)

I

introduction to Cisco CallManager [1-1](#)
 IP address [2-1](#)
 IP Phones, Cisco
 configuration overview [70-1](#)
 configuring [70-2](#)
 IP Phone Services, Cisco
 configuring [70-24](#)
 subscribing [70-24](#)
 unsubscribing [70-26](#)
 updating [70-25](#)
 ISDN, gateway configuration [69-21](#)
 ISDN BRI, gateway configuration [69-33](#)

K

keypad templates, configuring [76-1](#)

L

LDAP

authentication
 configuration settings (table) [14-2](#)
 configuring [14-1](#)
 directory
 configuration settings (table) [13-3](#)
 configuring [13-1, 13-2](#)
 deleting [13-5](#)
 finding [13-1](#)
 system
 configuration settings (table) [12-2](#)
 configuring [12-1](#)
 updating LDAP authentication information [14-1](#)
 updating LDAP System information [12-1](#)

licensing

calculating license units [25-1](#)
 generating license unit report [24-1](#)
 license file
 contents [26-2](#)
 obtaining license file [26-1](#)
 sample license files [26-2](#)
 uploading [26-3](#)

line groups

adding devices [36-7](#)
 configuration settings (table) [36-3](#)
 configuring [36-2](#)
 deleting [36-8](#)
 finding [36-1](#)
 overview [36-1](#)
 removing devices [36-8](#)

locations

adding [15-3](#)
 configuration settings (table) [15-3](#)

- configuring [15-1](#)
- copying [15-3](#)
- deleting [15-5](#)
- finding [15-1](#)
- resynching bandwidth [15-6](#)
- updating [15-3](#)
- log off
 - Cisco CallManager [1-3](#)
- logon
 - Cisco CallManager [1-3](#)

M

- max list box enterprise parameter
 - calling search space [49-23](#)
- media resource group lists
 - adding [61-2](#)
 - configuration settings (table) [61-3](#)
 - configuring [61-1](#)
 - copying [61-2](#)
 - deleting [61-4](#)
 - finding [61-1](#)
 - updating [61-2](#)
- media resource groups
 - adding [60-3](#)
 - configuration settings (table) [60-4](#)
 - configuring [60-1](#)
 - copying [60-3](#)
 - deleting [60-5](#)
 - finding [60-1](#)
 - updating [60-3](#)
- Media Termination Point (MTP) [55-1](#)
- meet-me number patterns
 - configuration settings (table) [50-3](#)
 - configuring [50-1](#)
 - copying [50-2](#)
 - deleting [50-4](#)
 - finding [50-1](#)

- MGCP
 - BRI
 - gateway configuration settings (table) [69-33](#)
 - Cisco IOS, adding [69-2](#)
 - Digital Access PRI ports, adding [69-7](#)
 - Digital Access T1 ports [69-6](#)
 - FXO ports, adding [69-5](#)
 - FXS ports, adding [69-4](#)
 - gateways, adding [69-2](#)
 - non-IOS gateway, adding [69-9](#)
 - ports, adding [69-4](#)

- MLPP domains
 - configuration settings (table) [17-3](#)
 - configuring [17-2](#)
 - deleting [17-3](#)
 - finding [17-1](#)
 - overview [17-1](#)

- MTP
 - adding [55-3](#)
 - configuring [55-1](#)
 - deleting [55-4](#)
 - finding [55-2](#)

- IOS MTP configuration settings (table) [55-4](#)
- multilevel administration access (MLA)
 - assigning privileges to user groups [89-6](#)
 - deleting users from user groups [89-6](#)

- MWI
 - MWI device configuration settings (table) [64-3](#)
 - MWI device for uOne [64-3](#)

N

- navigating
 - Cisco CallManager Administration [1-6](#)
- nonstandard softkey templates
 - adding [77-2](#)
 - adding application softkeys [77-3](#)
 - finding [77-1](#)
 - softkey positions [77-4](#)

NTP server [21-1, 22-1, 91-1, 92-1, 93-1](#)

number patterns, meet-me

copying [50-2](#)

deleting [50-4](#)

finding [50-1](#)

O

organization [xxiv](#)

overview

BAT application [94-1](#)

overview of Cisco CallManager [1-1](#)

P

parameters

configuring [19-1](#)

configuring for a service [19-2](#)

displaying for a service [19-3](#)

enterprise [18-1](#)

partitions

adding [42-2](#)

configuring [42-1](#)

deleting [42-3](#)

finding [42-1](#)

searching [42-6](#)

phone button templates

adding [76-2](#)

configuration settings (table) [76-4](#)

configuring [76-1](#)

creating 7914 expansion module [76-3](#)

deleting [76-5](#)

finding [76-1](#)

modifying button items [70-27](#)

phone NTP reference [8-1](#)

configuration settings (table) [8-3](#)

configuring [8-2](#)

deleting [8-4](#)

phones

adding with end user [90-2](#)

Cisco IP Phone Services

adding a service parameter [78-5](#)

configuration settings (table) [78-4](#)

configuring [78-1](#)

configuring a service [78-3](#)

deleting a service [78-4](#)

deleting a service parameter [78-7](#)

finding a service [78-2](#)

parameter settings (table) [78-6](#)

updating a service parameter [78-5](#)

configuration settings (table) [70-6](#)

configuring with end user [90-1](#)

deleting [70-5](#)

directory numbers, configuring [49-1](#)

displaying MAC address [70-4](#)

finding and listing [70-28](#)

resetting [70-4](#)

plugins

configuring [85-1](#)

installing [85-1](#)

ports

adding [62-3](#)

copying [62-3](#)

deleting [62-6](#)

Digital Access T1 configuration settings (table) [69-40](#)

finding [62-1](#)

modifying [69-74](#)

updating [69-76](#)

updating Cisco voice mail [62-3](#)

presence groups

configuring [5-1](#)

PRI, gateway configuration [69-21](#)

privileges

assigning to user groups [89-6](#)

R

regions

- adding [7-2](#)
- configuration settings (table) [7-5](#)
- configuring [7-1](#)
- deleting [7-7](#)
- finding [7-1](#)

related documentation [xxv](#)

roles

- configuration settings (table) [88-4](#)
- configuring [88-3](#)
- deleting [88-4](#)
- described [88-1](#)
- finding [88-2](#)
- viewing a user's [89-7](#)

route filters

- adding clauses [32-4](#)
- configuration settings (table) [32-4](#)
- configuring [32-3](#)
- deleting [32-5](#)
- dependency records [32-5](#)
- finding [32-1](#)
- operators

- described (table) [32-8](#)
- explained [32-8](#)

overview [32-1](#)

removing clauses [32-5](#)

tags

- described (table) [32-7](#)
- explained [32-6](#)

route groups

- adding devices [33-5](#)
- configuration settings (table) [33-3](#)
- configuring [33-2](#)
- deleting [33-6](#)
- finding [33-1](#)
- overview [33-1](#)
- removing devices [33-6](#)

route lists

- adding [34-3](#)
- adding route groups [34-4](#)
- changing the order of route groups [34-6](#)
- configuring [34-1](#)
- deleting [34-6](#)
- finding [34-1](#)
- removing route groups [34-5](#)

route patterns

- configuration settings (table) [35-4](#)
- configuring [35-3](#)
- configuring a SIP pattern [39-3](#)
- deleting [35-10](#)
- deleting a SIP pattern [39-6](#)
- finding [35-1](#)
- finding a SIP pattern [39-1](#)
- overview [35-1](#)

route plans

report

- configuring [51-1](#)
- deleting unassigned directory numbers [51-3](#)
- updating unassigned directory numbers [51-3](#)
- viewing in a file [51-4](#)
- viewing records [51-1](#)

S

SCCP

- Cisco IOS, adding [69-8](#)
- gateways, adding [69-8](#)

servers

- configuration settings (table) [2-4](#)
- configuring [2-1, 2-2](#)
- deleting [2-3](#)
- finding [2-1](#)
- updating [2-2](#)

service parameters

- configuring [19-1](#)
- adding Cisco IP Phone Services [78-5](#)

- deleting Cisco IP Phone Services [78-7](#)
 - updating Cisco IP Phone Services [78-5](#)
 - configuring for a service [19-2](#)
 - displaying for a service [19-3](#)
 - services
 - Cisco IP Phone configuration settings (table) [78-4](#)
 - Cisco IP Phone parameter settings (table) [78-6](#)
 - configuring
 - Cisco IP Phone Services [78-3](#)
 - deleting Cisco IP Phone Services [78-4](#)
 - finding Cisco IP Phone Services [78-2](#)
 - service URL button
 - adding [70-26](#)
 - SIP
 - configuration differences [C-1](#)
 - configuring third-party devices [C-1](#)
 - third-party SIP phone configuration checklist (table) [C-3](#)
 - third-party SIP phones and TFTP [C-2](#)
 - SIP dial rules
 - configuration settings [31-3](#)
 - configuring [31-1, 31-3](#)
 - deleting [31-6](#)
 - dial plan examples [31-6](#)
 - finding [31-1](#)
 - pattern formats [31-5](#)
 - resetting [31-7](#)
 - updating [31-3](#)
 - SIP phones
 - enabling digest authentication
 - third-party phones [C-2](#)
 - SIP profiles
 - adding [79-2](#)
 - configuration settings [79-2](#)
 - configuring [79-1](#)
 - copying [79-2](#)
 - deleting [79-8](#)
 - finding [79-1](#)
 - resetting [79-8](#)
 - updating [79-2](#)
 - SIP route patterns
 - configuration settings (table) [39-3](#)
 - configuring [39-1, 39-3](#)
 - deleting [39-6](#)
 - finding [39-1](#)
 - related topics [39-7](#)
 - softkey templates
 - assigning [77-8](#)
 - configuring [77-1](#)
 - deleting [77-6](#)
 - renaming [77-5](#)
 - updating [77-7](#)
 - software conference bridge
 - configuring [54-3](#)
 - speed dial
 - configuration settings (table) [70-23](#)
 - speed-dial buttons
 - configuring [70-22](#)
 - SRST
 - configuration settings (table) [16-4](#)
 - configuring [16-1, 16-2](#)
 - deleting [16-3](#)
 - finding [16-1](#)
 - Survivable Remote Site Telephony (SRST)
 - configuring [16-1](#)
-
- ## T
- T1 ports, adding [69-6](#)
 - TFTP
 - third-party SIP phones [C-2](#)
 - time periods
 - configuration settings (table) [40-4](#)
 - configuring [40-1, 40-2](#)
 - deleting [40-3](#)
 - finding [40-1](#)
 - time schedules
 - configuration settings (table) [41-4](#)

- configuring [41-1, 41-2](#)
 - deleting [41-3](#)
 - finding [41-1](#)
 - time zones [6-1](#)
 - transcoders
 - configuration settings (table) [59-5](#)
 - configuring [59-1, 59-3](#)
 - deleting [59-4](#)
 - overview [59-1](#)
 - resetting [59-3](#)
 - translation patterns
 - configuration settings (table) [46-4](#)
 - configuring [46-3](#)
 - deleting [46-9](#)
 - finding [46-1](#)
 - overview [46-1](#)
 - trunks
 - adding [71-2](#)
 - configuration settings (table) [71-3](#)
 - configuring [71-1](#)
 - deleting [71-26](#)
 - finding and listing [71-1](#)
 - modifying [71-2](#)
 - resetting [71-26](#)
-
- ## U
- unassigned directory numbers
 - deleting [51-3](#)
 - updating [51-3](#)
 - uOne, Cisco
 - MWI device, configuring [64-3](#)
 - user
 - application
 - adding [86-3](#)
 - application profiles [86-7](#)
 - associating devices to an application user [86-8](#)
 - changing password [86-7](#)
 - configuration [86-1](#)
 - configuration settings (table) [86-3](#)
 - finding [86-1](#)
 - end
 - adding [87-3](#)
 - adding with phone [90-2](#)
 - associating devices to an end user [87-10](#)
 - changing password [87-8](#)
 - changing PIN [87-9](#)
 - configuration [87-1](#)
 - configuration settings (table) [87-5](#)
 - configuring with phone [90-1](#)
 - deleting [87-12](#)
 - extension mobility [87-12](#)
 - finding [87-1](#)
 - user-related information [87-9](#)
 - user/phone add
 - adding [90-2](#)
 - configuration [90-1](#)
 - user and device
 - configuration settings (table) [90-2](#)
 - user device profile
 - dependency records [75-5](#)
 - user groups
 - adding [89-3](#)
 - adding users [89-4](#)
 - assigning privileges [89-6](#)
 - deleting [89-3](#)
 - deleting users [89-6](#)
 - described [89-1](#)
 - finding [89-1](#)
 - viewing a user's roles [89-7](#)
 - user information
 - configuration settings (table) [85-3](#)

V

video

conference bridges [54-6](#)

voice gateways [69-1](#)

voice mail

adding a new server and ports [63-1](#)

adding ports [62-3](#)

adding ports with the wizard [63-5](#)

configuring [62-1](#)

configuring message waiting [64-1](#)

configuring port wizard [63-1](#)

configuring profile [66-1](#)

copying ports [62-3](#)

deleting ports [62-6](#)

deleting ports with the wizard [63-6](#)

finding a message waiting number [64-1](#)

finding ports [62-1](#)

port configuration settings (table) [62-4](#)

port wizard device information configuration
settings [63-2](#)

port wizard directory number configuration
settings [63-3](#)

updating ports [62-3](#)

voice-mail pilot

configuration settings (table) [65-3](#)

configuring [65-1](#), [65-3](#)

deleting [65-4](#)

finding [65-1](#)

voice-mail pilot numbers

dependency records [65-4](#)

voice-mail ports

adjustments for Cisco Unity [B-1](#)

changes for Cisco Unity [B-1](#)

dependency records [62-6](#)

voice-mail profiles

configuration settings (table) [66-3](#)

copy [66-2](#)

delete [66-3](#)

dependency records [66-3](#)

find [66-1](#)

list [66-1](#)

